



COMAND

Supplement



1665848707

Order no. P000 0163 13 Part no. 166 584 87 07 Edition B-2018

COMAND Supplement

Mercedes-Benz



Symbols


In this Operator's Manual you will find the following symbols:


WARNING

Warning notes make you aware of dangers which could pose a threat to your health or life, or to the health and life of others.

Environmental note

Environmental notes provide you with information on environmentally aware actions or disposal.

 Notes on material damage alert you to dangers that could lead to damage to your vehicle.

 Practical tips or further information that could be helpful to you.

- ▶ This symbol indicates an instruction that must be followed.
- ▶ Several of these symbols in succession indicate an instruction with several steps.

(▷ This symbol tells you where you can find more information about a topic.)

Dis- This text indicates a message in the
play multimedia display.

Parts of the software in the vehicle are protected by copyright © 2005 The FreeType Project <http://www.freetype.org>. All rights reserved.

Publication details

Internet

Further information about Mercedes-Benz vehicles and about Daimler AG can be found on the following websites:

<http://www.mbusa.com> (USA only)

<http://www.mercedes-benz.ca> (Canada only)

Editorial office

You are welcome to forward any queries or suggestions you may have regarding this Operator's Manual to the technical documentation team at the following address:

Daimler AG, HPC: CAC, Customer Service,
70546 Stuttgart, Germany

©Daimler AG: Not to be reprinted, translated or otherwise reproduced, in whole or in part, without written permission from Daimler AG.

Vehicle manufacturer

Daimler AG
Mercedesstraße 137
70327 Stuttgart
Germany

Welcome to the world of Mercedes-Benz

First of all, familiarize yourself with your multimedia system. Read these operating instructions, particularly the safety and warning notes, before you drive off.

This will help you to obtain the maximum pleasure from your multimedia system and avoid endangering yourself and others.

The equipment level and functions of your multimedia system may differ depending on:

- Model
- Order
- Country specification
- Availability

Mercedes-Benz therefore reserves the right to introduce changes in the following areas:

- design
- equipment
- technical features

The equipment in your vehicle may therefore differ from that shown in the descriptions and illustrations.

Consult an authorized Mercedes-Benz Center if you have further questions.

The Operator's Manual and all supplements are integral parts of the vehicle. You should always keep it in the vehicle and pass it on to the new owner if you sell the vehicle.

The technical documentation team at Daimler AG wishes you safe and pleasant motoring.

Mercedes-Benz USA, LLC

Mercedes-Benz Canada, Inc.

A Daimler Company

Index	4	Destination entry	56
Introduction	14	Personal POIs and routes	67
Operating safety	14	Route guidance	70
Data stored in the vehicle	15	Real-time traffic reports	76
Information on copyright	17	Storing destinations	80
Your multimedia system equipment	17	Map functions	82
Overview and operation	18	Navigation functions	87
Overview	18	Problems with the navigation system	88
Touchpad	23	Telephone	90
Basic functions	28	Your multimedia system equipment	90
Character entry (telephony)	29	Important safety notes	90
Character entry (navigation)	30	General notes	90
Favorites	32	Telephone menu overview	91
System settings	34	Connecting/disconnecting a mobile phone	91
Your multimedia system equipment	34	Setting the reception and transmis- sion volume	95
Important safety notes	34	Using the telephone	95
Display settings	34	Mobile phone voice recognition	99
Time settings	35	Phone book	99
Text reader settings	37	Address book	102
Voice Control System settings	37	Importing contacts	107
Wi-Fi	37	Call lists	109
Bluetooth® settings	40	Speed dial lists	111
Setting the system language	41	Messages (text messages and e- mails)	111
Calling up the favorite functions	41	Dictation function	117
Importing/exporting data	42	Apple CarPlay™	118
Reset function	43	Android Auto	120
Vehicle functions	44	Online and Internet functions	122
Your multimedia system equipment	44	Your multimedia system equipment ...	122
Important safety notes	44	Important safety notes	122
Vehicle settings	44	Conditions for access	122
Seats	46	Establishing/ending the connection ...	122
360° camera	47	Mercedes-Benz Apps	123
Rear view camera	48	Web browser	123
DYNAMIC SELECT	49	Radio	128
Driving dynamics	51	Your multimedia system equipment ...	128
Navigation	52	Switching on the radio	128
Your multimedia system equipment	52	Overview	128
Introduction	52	Sets the waveband	129
Basic settings	54	Station	129
		Tagging music tracks	130

Displaying station information	130
Calling up sound settings	130
Displaying information	130
Satellite radio	131

Media 136

Your multimedia system equipment	136
Activating media mode	136
Audio/video mode	137
Media search	143
Bluetooth® audio mode	145
Operation with the Media Interface	149
Video DVD mode	151
Picture viewer	155

Sound 157

Your multimedia system equipment	157
Sound settings	157
Harman/kardon® Logic 7® surround sound system	157
Bang & Olufsen BeoSound	159

SIRIUS Weather 161

Your multimedia system equipment	161
Weather forecasts	161

Rear Seat Entertainment System 169

Your multimedia system equipment	169
Overview	169
Basic functions	173
System settings	175
Audio CD/DVD and MP3 mode	175
Video DVD mode	179
Active COMAND media source mode ..	182
AUX mode	184

1, 2, 3 ...**360° camera**

- Displaying images 47
- Opening the camera cover for cleaning (COMAND) 48
- Settings 48

A**Activating media mode**

- General notes 136

Adding bookmarks 124**Address book**

- Adding a new contact 104
- Adding information to a contact 104
- Automatically importing contacts from the phone 107
- Browsing 103
- Calling up 103
- Changing the category of an entry .. 106
- Changing the display and sorting criteria for contacts 106
- Deleting contacts 107
- Deleting imported contacts 108
- Displaying contact details 104
- Editing a contact 105
- Importing contacts 107
- Introduction 102
- Making a call 105
- Receiving vCards 108
- Saving a contact 107
- Searching for a contact 103
- Sending e-mails 105
- Sending text messages 105
- Starting route guidance 105
- Storing a phone number as a speed dial number 106
- Voice tags 106

Address entry menu 56**Adjusting the volume**

- COMAND 28
- Traffic announcements 28

Alternative Route 74**Ambient lighting**

- Setting (COMAND) 44

Android Auto

- Activating voice control 121

- Changing the sound settings 121
- Connecting 120
- Ending the connection 121
- Transmitted vehicle data 121

Apple CarPlay™

- Activating 119
- Changing the activation mode 119
- Connecting 119
- Ending 119
- Requirements 119
- Transmitted vehicle data 119

Armrest

- Adjusting (COMAND) 46

Audio CD/DVD and MP3 mode

- Switching to (Rear Seat Entertainment System) 176

Audio CD/MP3 mode

- Switching to 136

Audio CDs

- Saving 143

Automatic time

- Switching on/off 35

AUX jacks

- CD/DVD drive 171

Avoiding an area 85**B****Back button** 22**Bang & Olufsen sound system**

- Balance/Fader 160
- Calling up the sound menu 159
- Equalizer 160
- Features 159
- Sound profile 160
- VIP selection 160

Bluetooth®

- Activating audio mode 146
- Activating/deactivating 41
- Audio device mode and searching for mobile phones 149
- Authorization using Secure Simple Pairing 93
- Basic display (audio mode) 146
- Connecting a different mobile phone 94
- Connecting audio devices 146

- De-authorizing (de-registering) a device 149
 - Device list 146
 - Displaying connection details 95
 - Displaying details 147
 - Entering the passcode 93
 - External authorization (audio device) 147
 - Increasing the volume using COMAND 148
 - Interface 90
 - Playback options 148
 - Preparation 145
 - Reconnecting an audio device 149
 - Searching for a mobile phone 92
 - Selecting a playback option 148
 - Selecting a track 148
 - Starting and stopping playback 147
 - Starting playback if the Bluetooth® audio device has been stopped 148
 - Telephony 91
 - Telephony notes 90
 - Buttons and controller** 22
- C**
- Call lists**
 - Displaying details 109
 - Opening and selecting an entry 109
 - Saving an entry in the address book 110
 - Camera**
 - 360° camera (COMAND) 47
 - Rear view camera 48
 - Car pool lanes** 56
 - Category list (music search)** 144
 - CD**
 - Fast forward/fast rewind 142
 - Inserting 139
 - Inserting/loading (DVD changer) ... 139
 - Inserting/loading (Rear Seat Entertainment System) 176
 - Notes on discs 139
 - Removing/ejecting (Rear Seat Entertainment System) 176
 - Selecting a track 142
 - CD mode**
 - Playback options 141
 - Character entry**
 - Phone book 29
 - Characters**
 - Entering (navigation) 30
 - Clear button** 22
 - Climate control**
 - Ionization (COMAND) 45
 - COMAND**
 - Active multicontour seat 46
 - Basic functions 28
 - Components 18
 - Control panel 21
 - Controller 22
 - Display 19
 - Functions 18
 - Multicontour seat 46
 - Seat functions 46
 - Switching on/off 28
 - COMAND display**
 - Cleaning instructions 19
 - Setting 34
 - Contacts**
 - Deleting 107
 - Importing 107
 - Controller** 22
 - Cordless headphones**
 - Changing batteries 173
 - Indicator lamp 172
 - Rear Seat Entertainment System ... 171
 - Selecting the screen 172
- D**
- Date format, setting** 36
 - Day design, setting** 34
 - Delayed switch-off**
 - Interior lighting 45
 - Delayed switch-off time**
 - Setting (COMAND) 45
 - Destination**
 - Saving to an SD card 80
 - Storing in the address book 80
 - Destination (navigation)**
 - Entering a destination using the map 63
 - Entering a point of interest 61

- Entering using geo-coordinates 66
 - Entering using Mercedes-Benz Apps 66
 - Keyword search 59
 - Saving 80
 - Selecting an address book contact as a destination 61
 - Selecting from the list of last destinations 60
 - Dialing a number (telephone)** 96
 - Display**
 - Selecting the design 34
 - Switching on/off 35
 - Displaying energy consumption and generated electrical energy (COMAND)** 45
 - Driving Dynamics**
 - Displaying 51
 - DVD**
 - Inserting/loading (DVD changer) ... 139
 - Inserting/loading (Rear Seat Entertainment System) 176
 - Notes on discs 139
 - Removing/ejecting (DVD changer) 140
 - Removing/ejecting (Rear Seat Entertainment System) 176
 - DVD video**
 - Rear Seat Entertainment System ... 179
 - DYNAMIC SELECT**
 - Configuration via the DYNAMIC SELECT controller 49
 - Configuring individual drive program 49
 - Configuring using the DYNAMIC SELECT button 49
 - Displaying engine data 49
 - Setting options 50
- E**
- E-mail**
 - Answering 116
 - Calling up the settings menu 112
 - Changing the name of the e-mail account 113
 - Configuring an e-mail account 113
 - Configuring the e-mails displayed .. 112
 - Deactivating the e-mail function 113
 - Deleting 117
 - Displaying details 114
 - Downloading e-mails manually 113
 - Editing text templates 116
 - Forwarding 116
 - Inbox 114
 - Reading 113
 - Settings 112
 - Storing the sender as a new entry in the address book 117
 - Using a phone number in the text .. 117
 - Using text templates 116
 - Writing 115
 - Entering the address (example)** 57
 - Entering the city** 57
- F**
- Factory setting (reset function)** 43
 - Favorites**
 - Adding 32
 - Adding (predefined) 32
 - Adding (your own) 32
 - Deleting 33
 - Displaying and calling up 32
 - Moving 33
 - Overview 32
 - Renaming 33
 - Favorites (Internet)** 126
 - Favorites button** 41
 - Fuel consumption (COMAND)** 45
- G**
- GPS reception** 52
 - Gracenote® Media Database** 142
- H**
- Handwriting recognition**
 - Switching text reader function on/off 25
 - Touchpad 25
 - Harman kardon® Logic 7® surround sound system**
 - Balance/Fader 158
 - Calling up the sound menu 158
 - Equalizer 158

Features	157
Surround sound	159
Heading up (navigation)	82
Home address	
Entering and saving	58

I

Incident (traffic report)	76
Intermediate destinations	
Accepting for the route	66
Creating	64
Editing	65
Entering	64
Searching for a gas station when the fuel level is low	66
Internet	
Conditions for access	122
Creating favorites	126
Entering the URL	123
Favorites manager	126
Favorites menu	127
Menu functions	124
Options menu	124

K

Keyword search (navigation)	
Entering keywords	59
Online search	60
Selecting search options	60
Selecting search results	59

L

Lane recommendations	
Explanation	71
Presentation	71
Lights	
Activating/deactivating the exterior lighting delayed switch-off	45
Setting the ambient lighting (COMAND)	44
Locator lighting	
Setting (COMAND)	45
Lumbar support	
Adjusting (COMAND)	46

M

Making a call	
Using speed dial	97
Using the call lists	96
Using the number keypad	96
Using the phone book	96
Map	
Selecting map content	82
Map (navigation)	
Adjusting the scale	82
Building images	85
Displaying the next intersection	84
Heading	82
Map settings	82
Moving	53
North orientation	82
Notes	82
Rotating the 3D map	84
Selecting POI symbols on the map	83
Selecting text information on the map	83
Showing the map version	84
Switching highway information on/off	84
Traffic Sign Assist	84
Updating	87
Map functions	82
Message	
Selecting a program	47
Media Interface	
Basic display	150
Mode	149
Playback options	151
Search	150
Selecting a music file	150
Supported devices	150
Supported file formats	150
Switching to Media Interface	150
Video function	151
Media mode	
Bluetooth® Audio	145
Connections for external media sources	136
Switching on	136
Media search	
By folder	144

- Category list 144
- Current track list 144
- General notes 143
- Keyword search 144
- Music genres 144
- Selecting by cover 144
- Starting the media search 143
- Menu overview**
- CD audio and MP3 mode 139
- Mercedes-Benz Apps**
- Calling up 123
- Voice-operated control system 123
- Microphone, switching on/off** 97
- Mobile phone**
- Authorizing 93
- Connecting (Bluetooth® inter-
face) 91
- Connecting another mobile
phone 94
- De-authorizing 95
- Displaying Bluetooth® connection
details 95
- MP3**
- Copyright 138
- Fast forward/fast rewind 142
- Notes 137
- Safety notes 137
- Stop and playback function 142
- N**
- Navigation**
- Adjusting the volume of the navi-
gation announcements 28
- Alternative route 74
- Avoiding an area 85
- Basic settings 54
- Blocking a route section affected
by a traffic jam 75
- Calling up the compass display 88
- Calling up the menu 87
- Entering a destination 56
- Entering a destination using the
map 63
- Entering a point of interest 61
- Entering characters (character
bar) 30
- GPS reception 52
- Important safety notes 52
- Info on navigation 88
- Lane recommendation 71
- Off-road/Off-map (off-road desti-
nation) 76
- Online map display 87
- Reading out traffic reports 79
- Repeating announcements 73
- Selecting a destination from the
list of last destinations 60
- Setting route options (avoiding:
highways, toll roads, tunnels, fer-
ries) 54
- Setting the route type (short
route, fast route, dynamic route or
economic route) 54
- Showing/hiding the menu 53
- Starting route calculation 58
- Switching announcements
on/off 73
- Switching to 53
- Navigation announcements**
- Switching off 28
- North orientation (navigation)** 82
- O**
- Off-road** 76
- Online and Internet functions**
- Ending the connection 123
- Establishing a connection 122
- Mercedes-Benz Apps 123
- Web browser 123
- P**
- Pause function**
- Video DVD 155
- Personal POIs and routes**
- Alert when approaching (personal
POI) 67
- Editing 68
- Importing via Mercedes-Benz
Apps 68
- Recording the route 69
- Saving 67
- Selecting 68
- Settings for personal POIs 67

Phone book

- Adding a new contact 101
- Adding information to a contact 101
- Automatically importing contacts
from the mobile phone 102
- Calling up 99
- Deleting a contact 102
- Displaying the details of an entry ... 101
- Entering characters 29
- Saving a contact 102
- Searching for a contact 100
- Symbol overview 100

Phone call

- Dialing 96

Picture viewer

- Changing view 155
- Displaying pictures 155
- Exiting the picture viewer 156

POI (navigation)

- Category 62
- Defining the position for the POI
search 61
- Entering 61
- Selecting 63

Previous destinations (navigation) 81**R****Radio**

- Activating/deactivating the sta-
tion presets display 129
- Deleting a station 130
- Displaying information 130
- Displaying station information 130
- Displaying the artist and track 130
- Moving stations 130
- Overview 128
- Setting the waveband 129
- Sound settings (balance, bass,
treble) 130
- Storing stations 129
- Switching on 128
- Tagging music tracks (download-
ing/purchasing tracks from the
iTunes Store®) 130

Read-aloud function

- Automatic 79

Read-aloud function for e-mails 114**Reading out**

- Traffic reports on the route 79

Real-time traffic reports 76**Rear Seat Entertainment System**

- Active COMAND source 183
- Adjusting sound settings 174
- Adjusting the brightness 174
- Adjusting the color 174
- Adjusting the contrast 174
- AUX mode 184
- CD/DVD audio and MP3 mode 175
- Changing the batteries 172
- Changing the picture format 175
- Control menu 179
- Cordless headphones 171
- DVD video mode 179
- Multiple users 174
- Operating with the headphones 173
- Picture settings 174
- System settings 175
- Using the main loudspeaker 174

Rear view camera

- Displaying the image 48
- Opening the camera cover for
cleaning (COMAND) 48
- Switching on/off (COMAND) 48

Rear-compartment screens 169**Receiving vCards 108****Redialing (telephone) 96****Remote control**

- Button lighting 170
- Changing batteries 173
- Rear Seat Entertainment System ... 170

Reserve fuel level

- Switching the function on/off in
COMAND 55

Resetting (factory settings) 43**Route (navigation)**

- Selecting an alternative route 74
- Setting route options (avoiding:
highways, toll roads, tunnels, fer-
ries) 54
- Setting the route type (short
route, fast route, dynamic route or
economic route) 54
- Starting calculation 58

Route guidance

Continue	74
Freeway information	72
General notes	70
Lane recommendations	71
Off-road	76
Traffic reports	76

S**Safety notes**

Audio CD and MP3 mode	137
Using the telephone	90

Satellite radio

Displaying information	134
Overview	132
Presets menu view	133
Registering	131
Switching to	132

SatRadio

Channel list updates	135
Memory functions	133
Music and sports alerts	134
Notes	131
Selecting a category	132
Selecting a channel	132
Tagging music tracks	134

Screen

Selecting for the remote control	170
---------------------------------------	-----

SD card

Inserting	141
Inserting/removing	140
Removing	141

Seat cushion

Adjusting (COMAND)	46
--------------------------	----

Seats

Active multicontour seat (COMAND)	46
Adjusting the lumbar support (COMAND)	46
Balance (seat heating)	47
Massage function (COMAND)	46
Massage programs (COMAND)	46
Resetting settings	47
Seat functions (COMAND)	46
Selecting for adjustment (COMAND)	46

Setting the driving dynamics

(COMAND)	46
----------------	----

Selecting stations

Radio	129
-------------	-----

Sending DTMF tones 98**Setting the audio format**

Rear Seat Entertainment System ...	181
------------------------------------	-----

Setting the language

COMAND	41
Rear Seat Entertainment System ...	181

Setting the night design 34**Setting the text reader speed** 37**Setting the volume**

Telephone calls	28
-----------------------	----

Settings

Sound settings	157
----------------------	-----

Short message

see Text messages (SMS)

SIRIUS weather display

5-day forecast	161
Daily forecast	161
Detail information	162
Information chart	161
Selecting a location for the weather forecast	162
Switching on/off	161
Weather map	164

SIRIUS weather map

Storm Guide	168
Storm Watch Box	168

Sound

Switching on/off	28
------------------------	----

Sound settings

Balance/fader	157
Calling up the sound menu	157
Equalizer	157

Speed dial

Deleting	111
Setting up	111

State/province

Selecting	57
-----------------	----

Station presets (radio)

Deleting marked stations	130
--------------------------------	-----

Storing stations

Radio	129
-------------	-----

Switching between summer time

and standard time	35
-------------------------	----

Switching on media mode

- Using the Media button 136
- Via the device list 137
- Via the main function bar 136
- Via the number keypad 137

System settings

- Bluetooth® 40
- Date 35
- Importing/exporting data 42
- Language 41
- Text reader speed 37
- Time 35
- Time zone 35
- Voice Control System 37

T**Telephone**

- Accepting a call (COMAND) 95
- Adding a call 97
- Adjusting the volume for calls 28
- Android Auto 120
- Apple CarPlay™ 118
- Authorizing a mobile phone (connecting) 93
- Call lists 109
- Call waiting 98
- Calls with several participants 98
- Conference calls 98
- Connecting a mobile phone (general information) 91
- De-authorizing (disconnecting) a mobile phone 95
- Deleting a speed dial preset 111
- Deleting messages 117
- Dictation function for text messages and e-mails 117
- Displaying Bluetooth® connection details 95
- Downloading messages manually .. 113
- E-mail 111
- E-mail requirements 111
- E-mail settings 112
- Ending an active call 99
- Entering a number 96
- Entering phone numbers 96
- Establishing the connection from the mobile phone 94

- Function restrictions 91
- Functions available during a call 97
- General notes 90
- Incoming call during an existing call 98
- Making a call 96
- Message conditions 111
- Message settings 112
- Operating options 90
- Phone book 99
- Reading messages 113
- Reception and transmission volume 95
- Reconnecting a mobile phone automatically 94
- Rejecting a call (COMAND) 96
- Safety notes 90
- Sending DTMF tones 98
- Setting up a speed dial 111
- Switching between calls (call waiting) 98
- Switching between mobile phones 94
- Switching the microphone on/off 97
- Telephone menu overview 91
- Text message conditions 111
- Text message settings 112
- Text messages (SMS) 111
- Toggling 98
- Using the telephone 95
- Voice recognition 99
- Writing e-mails 115
- Writing text messages 115

Telephone number

- Entering 96

Text messages (SMS)

- Calling the sender 117
- Calling up the settings menu 112
- Configuring the text messages displayed 112
- Deleting 117
- Displaying details 114
- Downloading manually 113
- Editing text templates 116
- Inbox 114
- Reading 113
- Reading aloud 114
- Settings 112

- Storing the sender as a new address book entry 117
 - Using a phone number in the text .. 117
 - Using text templates 116
 - Writing 115
 - Time**
 - Setting the format 36
 - Setting the time manually 36
 - Setting the time zone 35
 - Setting the time/date format 36
 - Switching automatic time on/off 35
 - Touchpad**
 - Calling up quick access for audio 24
 - Changing the audio source 27
 - Changing the input language for handwriting recognition 27
 - Changing the station/music track 27
 - Character suggestions 26
 - Deleting characters 26
 - Entering a space 26
 - Entering characters 26
 - Gesture control 23
 - Handwriting recognition 25
 - Operating the touchpad 23
 - Overview 23
 - Quick access for Audio 27
 - Switching 23
 - Switching input line 26
 - Track information** 178
 - Traffic jam function** 75
 - Traffic reports**
 - Calling up a list 77
 - Real-time traffic report 78
- U**
- Updating the digital map** 87
 - USB audio mode**
 - Selecting a track 142
 - USB devices**
 - Connecting to the Media Interface 141
- V**
- Vehicle**
 - Data acquisition 15
 - Vehicle settings**
 - Calling up 44
 - Video**
 - see Video DVD
 - Video DVD**
 - Changing the picture format 153
 - Control option 152
 - DVD functions 154
 - DVD menu 154
 - DVD's control menu 153
 - Full-screen mode 153
 - Function restrictions 152
 - Notes on discs 152
 - Operation 151
 - Overview 153
 - Pause function 155
 - Picture settings 153
 - Playing conditions 152
 - Safety notes 151
 - Selecting a scene/chapter 155
 - Stop function 155
 - Switching to 152
 - Video menu 154
 - Voice Control System**
 - Settings 37
 - Volume, adjusting**
 - Navigation messages 28
- W**
- Weather map (SIRIUS)**
 - Activating/deactivating display levels 165
 - Calling up 164
 - Legend 167
 - Moving 164
 - Showing/hiding the menu 164
 - Time stamp 167
 - Weather memory (SIRIUS)**
 - Selecting an area 164
 - Storing an area 164
 - Web browser**
 - Entering a web address 123
 - Wi-Fi**
 - Changing the SSID name (USA) 39
 - Connecting the device (Canada) 40
 - Connecting the device (USA) 38
 - General notes (Canada) 40

General notes (USA)	38
Generating a new security key (USA)	39
Overview (Canada)	38
Overview (USA)	37
WiFi	
Activating (Canada)	38
Activating (USA)	38
Connecting a device via WPS PBC (CANADA)	40
Connecting a device via WPS PBC (USA)	39
Connecting a device via WPS PIN (CANADA)	40
Connecting a device via WPS PIN (USA)	38
Selecting a hotspot	40

Operating safety

Important safety notes

WARNING

If you operate information systems and communication equipment integrated in the vehicle when driving, you may be distracted from the traffic situation. You could also lose control of the vehicle. There is a risk of an accident.

Only operate this equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

The multimedia system calculates the route to the destination without taking account of the following, for example:

- traffic lights
- stop and yield signs
- merging lanes
- parking or stopping in a no parking/no stopping zone
- other road and traffic rules and regulations
- narrow bridges

The multimedia system may provide incorrect navigation recommendations if the actual street/traffic situation does not correspond with the digital map's data. Digital maps do not cover all areas nor all routes in an area. For example, a route may have been diverted or the direction of a one-way street may have changed. For this reason, you must always observe road and traffic rules and regulations during your journey. Road and traffic rules and regulations always have priority over the system's driving recommendations.

Navigation announcements are intended to direct you while driving without diverting your attention from the road and driving.

Please always use this feature instead of consulting the map display for directions. Looking at the icons or map display can distract you from traffic conditions and driving, and increase the risk of an accident.

Bear in mind that at a speed of only 30 mph (approximately 50 km/h), your vehicle covers a distance of 44 feet (approximately 14 m) every second.

This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65.

This equipment has very low levels of RF energy that is deemed to comply without maximum permissive exposure evaluation (MPE). However, it is recommended to install it at a distance of at least 8 inches (approx. 20 cm) between the radiation source and a person's body (not including limbs such as hands, wrists, feet and legs).

WARNING

Modifications to electronic components, their software as well as wiring can impair their function and/or the function of other networked components. In particular, systems relevant to safety could also be affected. As a result, these may no longer function as intended and/or jeopardize the operating safety of the vehicle. There is an increased risk of an accident and injury.

Never tamper with the wiring as well as electronic components or their software. You should have all work to electrical and electronic equipment carried out at a qualified specialist workshop.

Declarations of conformity

Vehicle components which receive and/or transmit radio waves

USA only: The wireless devices of this vehicle comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) These devices may not cause interference, and
- 2) These devices must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Canada only: The wireless devices of this vehicle comply with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1) These devices may not cause interference, and
- 2) These devices must accept any interference, including interference that may cause undesired operation of the device.

Correct use

You need to observe the following information when using the multimedia system:

- the safety notes in this manual
- traffic rules and regulations
- laws and safety standards pertaining to motor vehicles

Using roof carriers may impair the correct functioning of a roof antenna (phone, satellite radio, GPS).

Attaching metalized retrofit film to the windshield may affect radio reception. This can have a negative impact on all other antennas (e.g. emergency call antenna) in the vehicle interior.

Protection against theft: this device is equipped with technical provisions to protect it against theft. Further information on protection against theft can be obtained from an authorized Mercedes-Benz Center.

Qualified specialist workshop

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Function restrictions

For safety reasons, some functions are restricted or unavailable while the vehicle is in motion. You will notice this, for example, because either you will not be able to select certain menu items or a message will appear to this effect.

Data stored in the vehicle

Data recording

A wide range of electronic components in your vehicle contain data memories.

These data memories temporarily or permanently store technical information about:

- the vehicle's operating state
- events
- malfunctions

In general, this technical information documents the state of a component, a module, a system or the surroundings.

These include, for example:

- operating conditions of system components, e.g. fluid levels
- the vehicle's status messages and those of its individual components, e.g. number of wheel revolutions/speed, deceleration in movement, lateral acceleration, accelerator pedal position
- malfunctions and defects in important system components, e.g. lights, brakes
- vehicle reactions and operating conditions in special driving situations, e.g. air bag deployment, intervention of stability control systems
- ambient conditions, e.g. outside temperature

This data is of an exclusively technical nature and can be used to:

- assist in detecting and rectifying faults and defects
- analyze vehicle functions, e.g. after an accident
- optimize vehicle function

The data cannot be used to trace the vehicle's movements.

When your vehicle is serviced, technical information can be read from the event data memory and fault data memory.

Services include, for example:

- repair services
- service processes
- warranty events
- quality assurance

The vehicle is read out by employees of the service network (including the manufacturer) using special diagnostic testers. You can obtain more information there, if required.

After a malfunction has been rectified, the information is deleted from the malfunction memory or is continually overwritten.

When operating the vehicle, situations are conceivable in which this technical data, in connection with other information (if necessary, after consultation with an authorized expert), could be traced to a person.

Examples include:

- accident reports
- damage to the vehicle
- witness statements

Further additional functions that have been contractually agreed upon with the customer allow certain vehicle data to be conveyed by the vehicle as well. The additional functions include, for example, vehicle location in case of an emergency.

COMAND/mbrace

If the vehicle is equipped with COMAND or mbrace, additional data about the vehicle's operation, the use of the vehicle in certain situations, and the location of the vehicle may be compiled through COMAND or the mbrace system.

For additional information please refer to the COMAND User Manual and/or the mbrace Terms and Conditions.

Event data recorders

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record data that will assist in understanding how a vehicle's systems performed in certain crash or near crash-like situations, such as during air bag deployment or when hitting a road obstacle. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

The EDR in this vehicle is designed to record such data as:

- how various systems in your vehicle are operating
- whether or not the driver and passenger seat belts are fastened

- how far (if at all) the driver is depressing the accelerator and/or brake pedal and
- how fast the vehicle is traveling

This data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data is recorded by your vehicle only if a non-trivial crash situation occurs; no data is recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, can combine the EDR data with the type of personal identification data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties that have the special equipment, such as law enforcement, can read the information by accessing the vehicle or the EDR.

EDR data may be used in civil and criminal matters as a tool in accident reconstruction, accident claims, and vehicle safety. Since the Crash Data Retrieval CDR tool that is used to extract data from the EDR is commercially available, Mercedes-Benz USA, LLC ("MBUSA") expressly disclaims any and all liability arising from the extraction of this information by unauthorized Mercedes-Benz personnel.

MBUSA will not share EDR data with others without the consent of the vehicle owners or, if the vehicle is leased, without the consent of the lessee. Exceptions to this representation include responses to subpoenas by law enforcement; by federal, state or local government; in connection with or arising out of litigation involving MBUSA or its subsidiaries and affiliates; or, as required by law.

Warning: The EDR is a component of the Supplemental Restraint System ("SRS") Module. Tampering with, altering, modifying or removing the EDR component may result in a malfunction of the SRS Module and other systems.

State laws or regulations regarding EDRs that conflict with federal regulation are pre-empted. This means that in the event of such conflict, the federal regulation governs. As of February 2013, 13 states have enacted laws relating to EDRs.

Information on copyright

Information on licenses for free and Open Source software used in your vehicle and in the electronic components can be found on this website: <http://www.mercedes-benz.com/opensource>.


Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Overview

Components

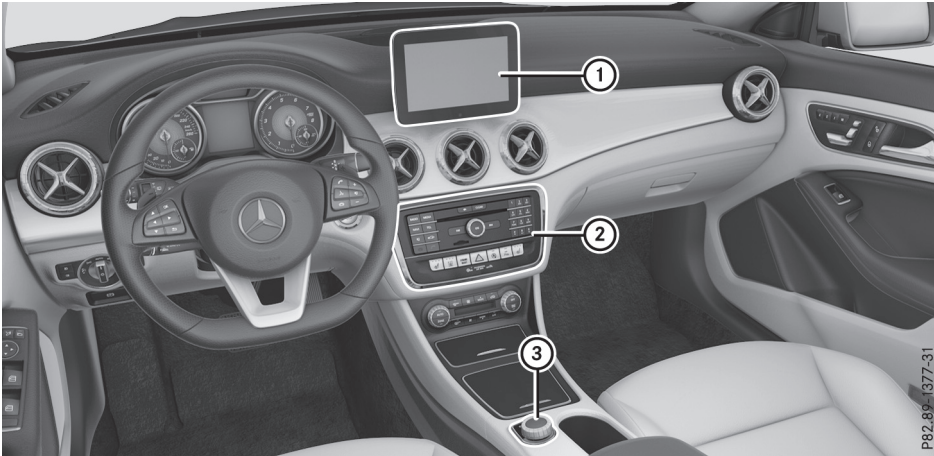

- ① Display (▷ page 19)
- ② Control panel (▷ page 21)
- ③ Controller and buttons (▷ page 22)

The multimedia system consists of:

- the display
 - the control panel with a single drive or DVD changer
 - the control panel with a single drive
 - the controller and buttons
 - the touchpad
 - two connection options for USB devices or via Media Interface in the center console
- An iPod® is connected via a USB cable.

Functions

- **HD FM radio and HD AM radio/satellite radio**
- **Media**
 - Media support: audio CD, MP3 CD, DVD video, two connection options for USB or via Media Interface, SD card, Bluetooth® audio

An iPod®, for example, can be connected directly to the USB via the integrated Media Interface.

 - Media search
- **Sound system**

You can select from two sound systems:

- Harman Kardon® Logic7® surround sound system
- Bang & Olufsen BeoSound AMG sound system
- **Navigation system**
 - Navigation via the hard drive
 - Destination entry, for example using keyword search
 - Realistic 3D map with textured city models
 - Personal POIs and routes using SD memory card
 - Dynamic route guidance with traffic reports via SIRIUS satellite radio
 - Additional navigation system functions, e.g. compass display

• Communication

- Address book
- Messaging functions (text messages, e-mail)
- Dictation function
- Apple CarPlay™
- Android Auto
- Internet browser
- Mercedes-Benz Apps with functions, such as online search, destination and route download, Facebook, stock prices, and news
- Mercedes-Benz Mobile Website
- Wi-Fi interface for the connection of a smartphone to the multimedia system
- Wi-Fi hotspot functionality to connect a tablet PC or laptop in order to enable access to the Internet using the customer's mobile phone

• SIRIUS Weather

- Weather data as an information chart (current forecast, 5-day preview, detailed information)
- Weather data on the weather map, e.g. rain radar data, storm characteristics and the track of tropical cyclones (hurricanes, tornadoes)

• Vehicle functions

- Vehicle settings, e.g. fuel consumption
- Ionization
- 360° camera
- Rear view camera
- Seat functions
- DYNAMIC SELECT (individual drive program)
- Driving dynamics display in the multimedia system for vehicles with the Off-Road Engineering package (see the vehicle Operator's Manual)

• Favorites button

- Fast access to favorites functions using the favorites button on the controller

Display

General notes

! Do not use the space in front of the display for storage. Objects placed here could damage the display or impair its function. Avoid any direct contact with the display surface. Pressure on the display surface may result in impairments to the display, which could be irreversible.

Wearing polarized sunglasses may impair your ability to read the display.

The display has an automatic temperature-controlled switch-off feature. The brightness is automatically reduced if the temperature is too high. The display may then temporarily switch off completely.

Overview



In the status bar at the top you will see the time and other displays, depending on the settings.

Below it you will see the main display field.

The climate control status display is briefly displayed when you operate the climate control system.

The example shows media playback in SD card mode.

Cleaning instructions


! Do not touch the display. The display has a very sensitive high-gloss surface; there is a risk of scratching. If you have to clean the screen, however, use a mild cleaning agent and a soft, lint-free cloth.

The display must be switched off and have cooled down before you start cleaning. Clean the display screen, when necessary, with a commercially available microfiber cloth and cleaning agent for TFT and LCD displays. Do not apply

pressure to the display surface when cleaning it, as this could cause irreversible damage to the display. Then, dry the surface with a dry micro-fiber cloth.

Avoid using alcoholic thinners, gasoline or abrasive cleaning agents. These could damage the display surface.

Control panel

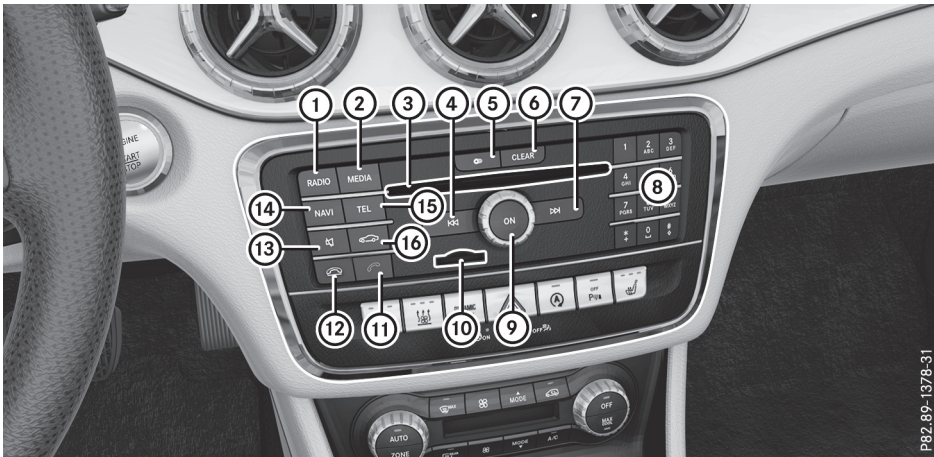


P82.89-1378-31

	Function	Page		Function	Page
①	Switches to radio mode Sets the waveband	128 129	⑧	Number pad <ul style="list-style-type: none"> Saves a station Authorizes (connects) a mobile phone Telephone number entry Searches for a contact Character entry # Displays the current track being played (if the data medium supports track information) * Selects stations by entering the frequency manually * Selects a track	129 93 96 100 30 137 129 142
②	Switches to the last selected media mode Calls up the Media menu	136 136	⑨	Switches the multimedia system on/off Adjusts the volume	28 28
③	Inserts/removes a CD/DVD into/from the single drive Inserts a CD/DVD into the DVD changer Removes a CD/DVD from the DVD changer	139 139 140	⑩	Inserts/removes the SD card	140
④	Selects the previous station from the station list Skips back to a track Rewinds	129 142 142	⑪	Accepts a call Makes a call Redial number Accepts a new call when a call is being made (call waiting)	95 96 96 98
⑤	Inserts/removes a CD/DVD ▲ Single drive ● DVD changer	139 139	⑫	Rejects a call Ends an active call	96 99
⑥	Clear button <ul style="list-style-type: none"> Deletes characters Deletes an entry 	22			
⑦	Selects the next station from the station list Skips forwards to a track Fast forward	129 142 142			

	Function	Page
13	Switches the mute function on/off	28
	Switches off navigation announcements	28
14	Switches to navigation mode	53
	Calls up the navigation system menu	87


Buttons and controller

Overview

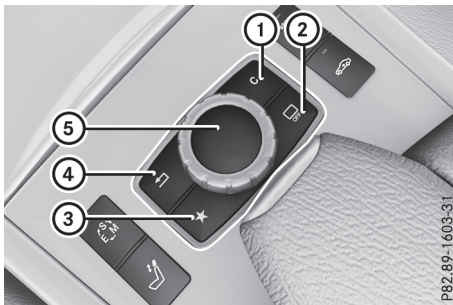

- ① Clear button
- ② Switches off the display
- ③ Favorites button
- ④ Back button
- ⑤ Controller

The controller may be equipped as follows:

- with the  button instead of button ② for the seat settings
- with a further favorites button instead of button ②
- as a 2 button controller with back button ④ and favorites button ③ in combination with a touchpad
- as a 2 button controller with back button ④ and favorites button ③

For Mercedes-AMG vehicles: the controller is equipped with back button ④ and clear button ①.

Controller






The controller in the center console lets you:

- select menu items on the display
- enter characters


	Function	Page
15	Calls up the telephone menu	91
16	Calls up vehicle settings	44


- select a destination on the map
- save entries

The controller can be:

- turned 
- slid left or right 
- slid forwards or back 
- slid diagonally 
- pressed briefly or pressed and held 

 Back button

 You can use the  button to exit a menu or to call up the main menu of the current operating mode.

- ▶ **To exit the menu:** briefly press the  button.


The multimedia system changes to the next higher menu level in the current operating mode.

- ▶ **To call up the main menu:** press the  button for longer than two seconds.

The multimedia system changes to the main menu of the current operating mode.

Clear button

The clear button is on the control panel and on the controller.

- ▶ **To delete individual characters:** briefly press the  button on the control panel.

or


- ▶ Briefly press the  clear button on the controller.

- ▶ **To delete an entire entry:** press and hold the  button on the control panel.


or

- ▶ Press and hold the  clear button on the controller.


Favorites button

You can assign predefined functions using the  favorites button and call them up by pressing the button (▷ page 41).

Display off button

You can switch off the display using the  button.


Seat button

If the controller is equipped with the  button, you can call up the menu for the seat settings (▷ page 46).

Touchpad

Touchpad overview

! Do not use any sharp objects on the touchpad. This could damage the touchpad.

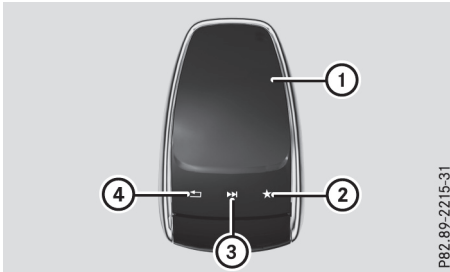

- ① Touch-sensitive surface
- ② Favorites button
- ③ Calling up quick access for audio
- ④ Back button

 

Using the touchpad, you can:

- select menu items in the display (▷ page 23).
- enter characters (handwriting recognition) (▷ page 25).
- control the active audio source (▷ page 27).
- create, manage and call up favorites (▷ page 32).
- enter destinations in navigation
- save entries

Further information on operating the touchpad (▷ page 23).


Do not press your fingers too hard on the touchpad. This could cause malfunctions.

Switching the touchpad on/off

- ▶ Press the  button. The vehicle menu is displayed.
- ▶ To select **System Settings**: slide ↓, turn and press the controller. A menu appears.
- ▶ Select **Touchpad** if the touchpad is equipped with handwriting recognition.
- ▶ Select **Activate Touchpad**. The touchpad is switched on or off .

Operating the touchpad


Selecting a menu item

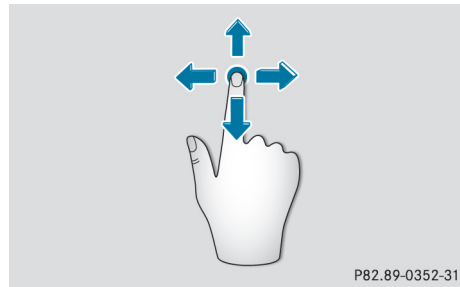

- ▶ Use one finger to touch the touch-sensitive surface.
- ▶ Swipe your finger up, down, to the left or right. The selection in the display moves in accordance with the direction of movement.


You can navigate in lists or menus in this way.

Confirming a selection

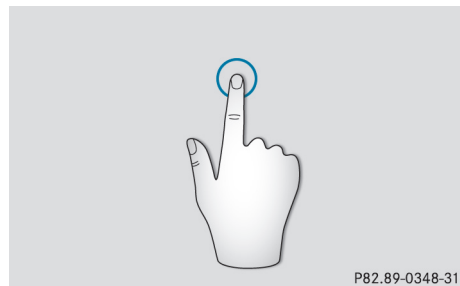

- ▶ Use one finger to press the touch-sensitive surface until you reach the pressure point. A menu, an option or an application is started.


Calling up quick access for audio

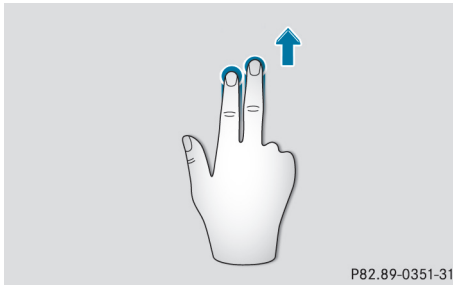

- ▶ Use two fingers to touch the lower part of the touch-sensitive surface.
- ▶ Swipe your fingers up. Quick access is displayed.


Further information on quick access for audio (▶ page 27).

Hiding quick access for audio

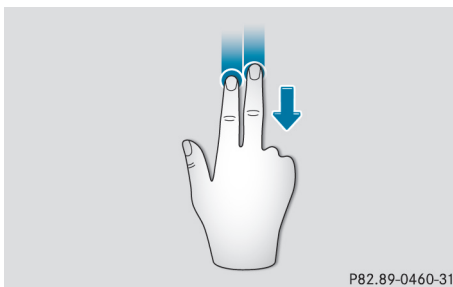


- ▶ Use two fingers to touch the touch-sensitive surface.
- ▶ Swipe your fingers down. Quick access is hidden.

Operating the control for vehicle and sound settings

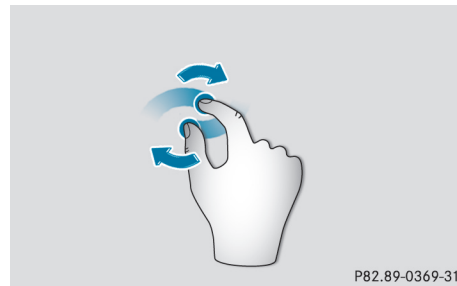


- ▶ Touch the touch-sensitive surface with two fingers, spaced slightly apart.
 - ▶ Turn both fingers clockwise. The control setting is increased.
- or
- ▶ Turn both fingers counter-clockwise. The control setting is decreased.

Moving the map

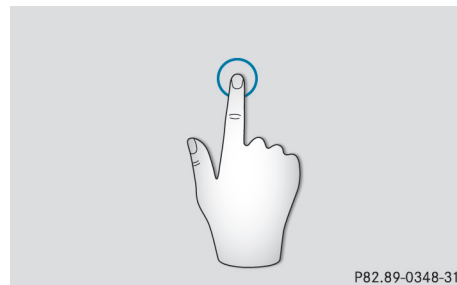


- ▶ Use one finger to press the touch-sensitive surface until you reach the pressure point. The crosshair is shown.

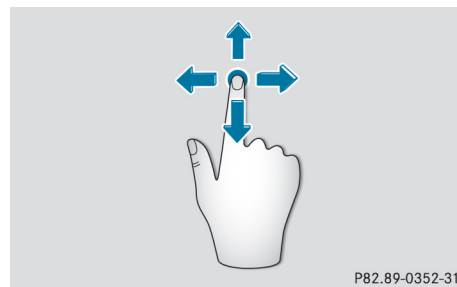


- ▶ Touch the touch-sensitive surface again with one finger.
- ▶ Swipe your finger in any direction. The map is moved in the direction of movement.

Zooming in on the map

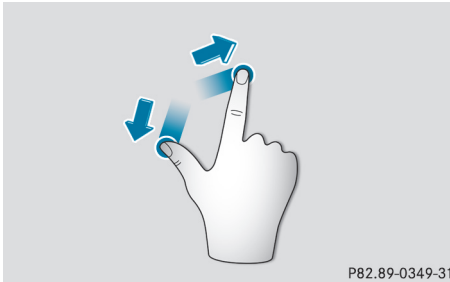

- ▶ Touch the touch-sensitive surface with two fingers, spaced slightly apart.
- ▶ Glide your fingers away from each other. The map scale is magnified.

Zooming out of the map

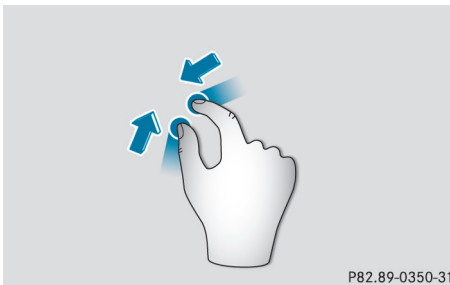


- ▶ Touch the touch-sensitive surface with two fingers, spaced far apart.
- ▶ Glide your fingers towards each other. The map scale is reduced.

Handwriting recognition

Handwriting recognition overview

This function is only available if the touchpad is equipped with handwriting recognition.


You can use handwriting recognition for text, numbers or characters in any input line.

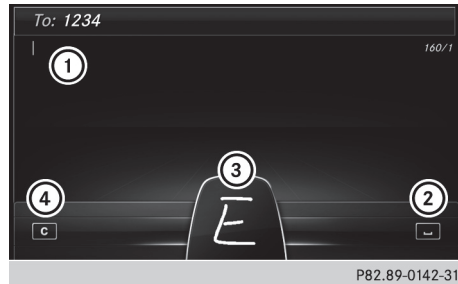

- ① Active input line
- ② To insert a space (▶ page 26)
- ③ Illustration of the touch-sensitive surface
- ④ To delete characters (▶ page 26)

If the character that you have entered can be interpreted in different ways, these options are displayed. More information on the character suggestions (▶ page 26).

You can also switch the text reader function of the handwriting recognition on and off (▶ page 25).

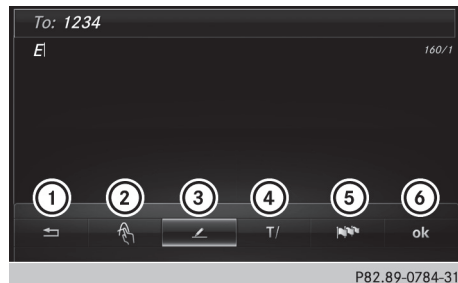



- ① To exit the menu
- ② To return to handwriting recognition
- ③ To use the phone book or text templates
- ④ To change the input line or the position of the cursor
- ⑤ To change the input language
- ⑥ To finish character entry

▶ **To display the menu:** press the touchpad.

Switching the text reader function of the handwriting recognition on/off

 You can switch the text reader function of the handwriting recognition on or off.

- ▶ Press the  button. The vehicle menu is displayed.
- ▶ To select **System Settings**: slide , turn and press the controller. A menu appears.
- ▶ To select **Touchpad**: turn and press the controller.
- ▶ Select **Read Out Handwriting Recognition**. The text reader function is switched on or off .

Entering characters

Requirement: an input line for text, numbers or characters has been selected.

- ▶ Use one finger to draw the desired character on the touch-sensitive surface. The character recognized is entered in the input line. You can draw the next character on the touch-sensitive surface.

If the character can be interpreted in different ways, these options are displayed.

More information on the character suggestions (> page 26).

Character suggestions



- ① Character recognized
- ② Character suggestions

- ▶ To select a character suggestion: turn the controller. The selected character is entered instead of the automatically recognized character. Character entry can be continued.

Inserts a space

Requirement: an input line for text, numbers or characters has been selected.


- ▶ Use your finger to touch the touch-sensitive surface and swipe to the right. A space is entered into the input line.


Deletes characters

Requirement: an input line for text, numbers or characters has been selected.

- ▶ Use your finger to touch the touch-sensitive surface and swipe to the left. The character last entered is deleted.

Switching input lines

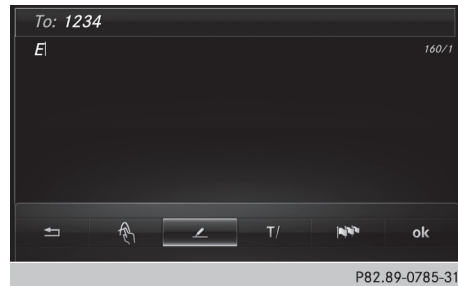

- ▶ Press the touchpad. A symbol is shown.
- ▶ To select : glide your finger to the left or right and press.
- ▶ To select the input line: swipe up or down and press. The selected input line is active and character entry can be continued.

Moving the cursor within the input line



- ▶ Press the touchpad.
A symbol is shown.
- ▶ To select **[T]**: glide your finger to the left or right and press.
- ▶ To move the cursor: glide to the left or right.

Changing the input language for handwriting recognition

Requirement: an input line for text, numbers or characters has been selected.

- ▶ Press the touchpad.
A symbol is shown.
- ▶ To select **[🌐]**: swipe your finger to the left or right and press.
The list of available input languages appears.
- ▶ To select a language: swipe up or down and press.
The input language for handwriting recognition has been changed.

Searching in lists

The phone book search is used as an example. You determine the first letter of the contact you are looking for with the first character you enter.

- ▶ Draw the letter on the touchpad surface.
The first contact with the selected first character is highlighted in the phone book.
Further information on handwriting recognition on the touchpad (▷ page 25).
- ▶ Draw additional letters on the touchpad surface one after another.
- ▶ **To complete the search and return to the phone book:** press the touchpad.


Selecting the touchpad or controller for character entry

Requirement: an input line for text, numbers or characters has been selected.

- ▶ **To switch to character entry on the touchpad:** press the touchpad with your finger.
Handwriting recognition on the touchpad is active.
- ▶ **To switch to character entry with the controller:** press the controller.
Character entry with the controller is active.

Quick access for audio

Changing the station or music track

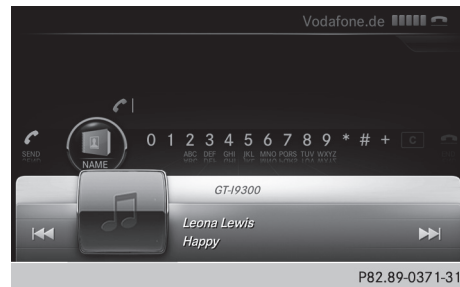

Depending on the audio source that is currently activated, you can use this function to select the next station or music track.

- ▶ Call up quick access (▷ page 24).
The current audio source is displayed.
- ▶ To select the previous or next station or music track: swipe to the left or right.
The selected station or music track is played.


Changing the audio source



- ▶ Call up quick access (▷ page 24).
The current audio source is displayed.
- ▶ **To display the available audio sources:** glide down with one finger.
- ▶ **To select an audio source:** glide your finger to the left or right and press.
The selected audio source is played.


 

Basic functions

Switching the multimedia system on/off

- ▶ Press the  control knob. When you switch the multimedia system on, a warning message will appear. The multimedia system calls up the previously selected menu. If you switch the multimedia system off, playback of the current media source will also be switched off.


 

Adjusting the volume

Adjusting the volume for media sources

- ▶ Turn the  control knob.
- or
- ▶ Press the  or  button on the multifunction steering wheel. The volume of the media source currently selected changes.

Adjusting the volume for traffic announcements and navigation announcements


 

During traffic or navigation announcements:

- ▶ Turn the  control knob.
- or
- ▶ Press the  or  button on the multifunction steering wheel.

- i** You can set the volume for navigation announcements to be different from the volume of the respective media source.

Adjusting the volume for phone calls


 
You can adjust the volume for hands-free mode during a telephone call.

- ▶ Turn the  control knob.
- or
- ▶ Press the  or  button on the multifunction steering wheel.

- i** Setting the volume for the Voice Control System voice output; see the separate operating instructions.

 
Switching the sound on or off

Media source sound

- ▶ Press the  button on the control panel or on the multifunction steering wheel. The sound is switched off. If the audio output is switched off, the status line will show the  symbol. If you switch the media source or change the volume, the sound is automatically switched on.

- i** Even if the sound is switched off, you will still hear navigation system announcements.

Switching navigation announcements off and on again


- ▶ **To switch navigation announcements off:** press the  button during an announcement. The **Spoken driving recommendations have been deactivated.** message appears.

- ▶ **To switch navigation announcements on again:** switch the multimedia system off and then on again (▷ page 28).

 or






- ▶ Start a new route calculation (▷ page 58).

or

- ▶ Select : while route guidance is active, show the menu and press the controller (▷ page 73).

Function menu



- ▶ Press the  button or the , , , or  button. **Navigation:** the map displays the current vehicle position.

Radio: the display of the radio mode last set appears.

Media: the display for the media source last set appears. In the example, Media Interface mode is set.

Telephone/Internet: the display of the last communication function set appears (telephone, address book, Internet).

Vehicle: the display appears.

- ▶ **To show the menu:** slide $\uparrow\odot\downarrow$ the controller. The menu for the selected functions appears. Depending on the operation, the marking is shown:

- in the main function bar at the top or
- below in the menu bar

- ▶ **To select a menu item:** turn and press the controller.



If you have selected a menu item from the main function bar, switch to the last menu set for the selected function.

The menu bar features options within the currently set function.

Selecting the operating mode for a main function

For the main functions, e.g. communication or media, you can choose from the available operating modes.

In the communication menu, you can:

- switch to telephone mode
 - call up the address book
 - call up the Internet
 - call up the Digital Operator's Manual for **Te1**/
 - ▶ Press the **TEL** button. The phone menu appears.
 - ▶ **To call up the menu:** press the **TEL** button again.
- or
- ▶ To select **Te1**/: slide $\uparrow\odot$ and press the controller. The communication menu appears. **Phone** is at the front.
 - ▶ To select a menu option: turn and press the controller.

Character entry (telephony)

Entering characters using the character bar



In the example, a new entry is added to the phone book (▷ page 101). The new entry has three input lines for entering the last name, first name and phone number. The input line for the surname is selected automatically.

Entering characters

- ▶ Turn and press the controller. The character selected in character bar ② is entered into surname input line ①.
- ▶ Enter the complete last name.

Deleting individual characters


- ▶ To switch to the bottom line of the character bar: slide $\odot\downarrow$ the controller.
- ▶ To select **[c]**: turn and press the controller. The character last entered is deleted.

Deleting an entire entry

- ▶ To switch to the bottom line of the character bar: slide $\odot\downarrow$ the controller.
- ▶ To select **[c]**: turn and hold the controller until the entire entry has been deleted.

Switching input lines

- ▶ To switch to the bottom line of the character bar: slide $\odot\downarrow$ the controller.
- ▶ To select **[v]**: turn and press the controller. The input line for the first name is selected. You can enter the characters for the first name.

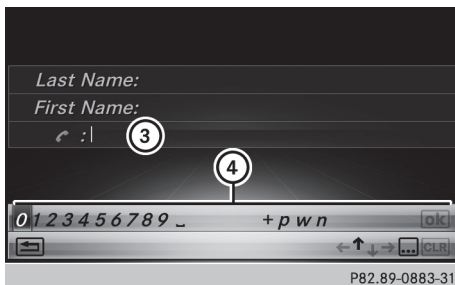

When the telephone number input line is selected, the character bar is adapted for entering digits.

Entering characters

- ▶ Turn and press the controller.
The character selected in character bar ④ is entered into telephone number input line ③.

Finishing an entry and saving a contact

- ▶ To select **ok** : turn and press the controller.

Further functions available in the character bar

Symbol	Function
...	Switches the character bar for entering characters, digits and symbols
ABC	Switches the character bar to upper-case or lower-case letters
🌐	Changes the country setting for the character bar
c	Deletes a character or an entry
↑, ↓	Selects the input line
←, →	Moves the cursor within the input line
OK	Confirms an entry
↩	Cancels input
↵	Inserts a line break (when writing text messages)

Entering characters using the number keypad

If an input line for text or numbers is selected, the number keypad is used for the character entry.


- ▶ For example, to enter the letter **c**: press the **2** number key briefly three times in succession.

An additional display area is shown with all the available characters. Press the key repeatedly to go through the characters until **C** is highlighted.

- ▶ Wait until the character display goes out.
The letter **C** is entered in the input line.

Character entry (navigation)

Entering characters using the character bar

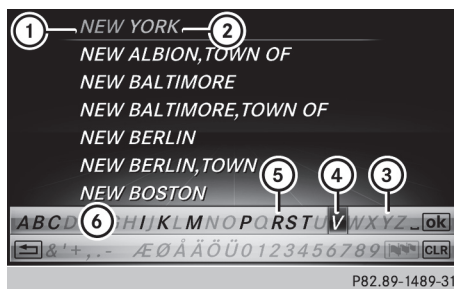









- ① Characters **NEW** (orange color) entered by the user
- ② Characters automatically added by the multimedia system **YORK**
- ③ Characters not currently available
- ④ Currently selected character
- ⑤ Characters currently available
- ⑥ Character bar


The example shows the address entry (▷ page 57).

- ▶ **To enter a character:** turn, slide **⊙**↓ or ↑**⊙** and press the controller.
Selected character ① is entered in the upper line. The multimedia system adds the missing characters and shows the entry that best matches the current input.





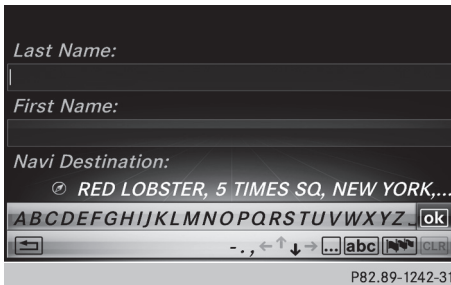


The characters are available ⑤ or not ③, depending on the characters already entered and the data stored in the digital map.


The  symbol indicates that an entry exists more than once.



- ▶ **To delete a character:** slide  and turn the controller, then press it after selecting .
 - ▶ **To delete an entire entry:** slide  and turn the controller; then after selecting  press and hold down the controller until the entire entry is deleted.
 - ▶ **To confirm an entry:** slide  and turn the controller, then press it after selecting .
- or
- ▶ Slide  the controller repeatedly until the character bar disappears. The location selection list appears. The selected entry is highlighted.



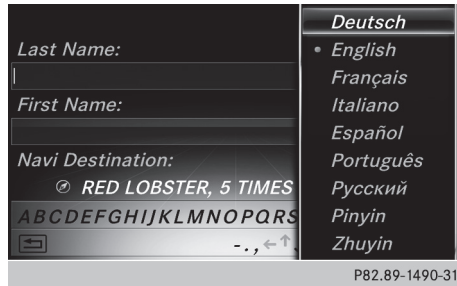


 
 
 

 

The example shows the character entry when you save a destination as a navigable contact in the address book (> page 58). The cursor is located in the input line.

- ▶ **To select an input line:** slide  and turn the controller, then press it after selecting  or .
- or
- ▶ Slide  the controller repeatedly until the character bar disappears.
 - ▶ **To move the cursor:** select the input line.
 - ▶ Turn and press the controller.
- or
- ▶ Slide  and turn the controller, then press it after selecting  or .




- ▶ **To change the character bar language:** slide  and turn the controller, then press it after selecting . A menu appears.
- ▶ Turn and press the controller. The character set for the selected language is set.

The character bar entry functions are listed in the table.

Symbol	Function
	Switches between digits and symbols
	Switches the character bar from uppercase to lowercase letters
	Changes the character bar language
	Deletes a character or an entry
	Switches to keyword search (> page 59)
	Selects the input line
	Moves the cursor within the input line
	Confirms an entry
	Cancels input

 Entering characters using the number keypad


- ▶ Press one of the number keypad buttons, e.g. , once or repeatedly in quick succession. The character appears at the bottom of the display when the key is pressed. The first available letter is highlighted.

You see which characters you can enter with that key. Each time the key is pressed, the next character is selected.

- ▶ Wait until the character display goes out. The entries matching your input are shown in the list.

Favorites

Overview of favorites

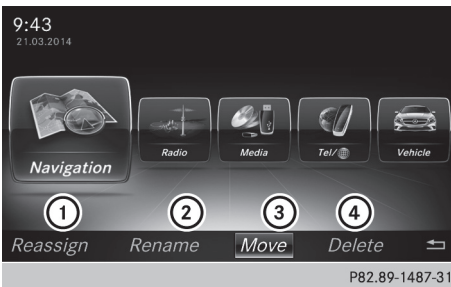

- ① Assigns new favorites (▶ page 32)
- ② Renames a selected favorite (▶ page 33)
- ③ Moves a selected favorite (▶ page 33)
- ④ Deletes a selected favorite (▶ page 33)

- ▶ **To display the favorites overview:** press the favorites button on the controller. The favorites are displayed.
- ▶ **To show the menu bar:** slide the controller.

You can manage a total of 20 favorites. Further information on how to select and display a favorite (▶ page 32).

Displaying and selecting favorites

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ **To call up a favorite:** turn and press the controller.

Adding favorites

Adding predefined favorites

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ **To show the menu bar:** slide the controller.
- ▶ To select **Reassign:** turn and press the controller. The categories for the available favorites are displayed.
- ▶ **To select a category:** turn and press the controller. The corresponding favorites are displayed.
- ▶ **To select a favorite:** turn and press the controller.
- ▶ **To add a favorite at the desired position:** turn and press the controller. If there is already a favorite at this position, then this will be deleted.

Adding your own favorites


You can create your own favorites to help you to use these functions, for example:

- Calling up telephone numbers from the telephone book
- Selecting a radio station
- Skipping to a specific place in a track or an audio book
- Calling up favored media
- Selecting navigation destinations for route calculation

The example describes how to add a contact's telephone number as a favorite.


- ▶ Call up the phone book (▶ page 99).
- ▶ Select the contact.
- ▶ **To add a telephone number as a favorite at the desired position:** press and hold the favorites button on the controller until the favorites are displayed.
- ▶ Turn and press the controller. If there is already a favorite at this position, it will be deleted and replaced by a new one.


Renaming favorites

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ **To select a favorite to be renamed:** turn the controller.
- ▶ **To show the menu bar:** slide  the controller.
- ▶ To select **Rename** , turn and press the controller.
- ▶ Enter characters using the controller.
- ▶ **To finish the entry:** select **OK** . The favorite is renamed.


- ▶ To select **Delete**: turn and press the controller.
- ▶ To select **Yes** or **No** : turn and press the controller. If you select **Yes** the favorite is deleted. **No** cancels the procedure.

Moving favorites

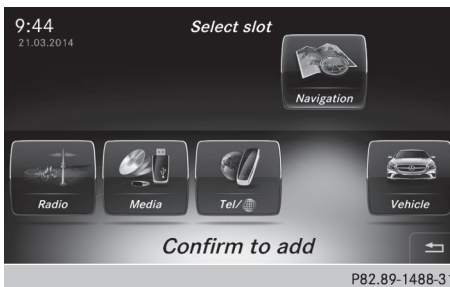

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ **To select the favorite to be moved:** turn the controller.
- ▶ **To show the menu bar:** slide  the controller.
- ▶ To select **Move** , turn and press the controller.
- ▶ **To store the favorite in the desired position:** turn and press the controller. If there is already a favorite at this position, then this will be deleted.

Deleting favorites

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ **To select the favorite to be deleted:** turn the controller.
- ▶ **To show the menu bar:** slide  the controller.

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Important safety notes

WARNING

If you operate mobile communication equipment when driving, you may be distracted from the traffic situation. You could also lose control of the vehicle. There is a risk of an accident.

Only operate this equipment when the vehicle is stationary.

WARNING

SD cards are small parts. They can be swallowed and cause choking. This poses an increased risk of injury or even fatal injury.


Keep the SD card out of the reach of children. If a SD card is swallowed, seek medical attention immediately.


 
You must observe the legal requirements for the country in which you are currently driving when operating mobile communications equipment in the vehicle.

Display settings

Setting the brightness


 
The brightness detected by the display light sensor affects the setting options for this function.

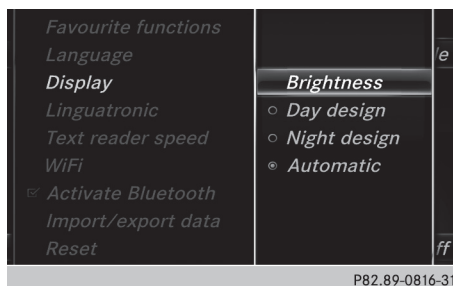

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.
- ▶ To select **Display**: turn and press the controller. A menu appears.
- ▶ Select **Brightness** . A control appears.
- ▶ **To select the desired brightness**: turn and press the controller.

Display design



The display features optimized designs for day-time and night-time operation. You can set the design by manually selecting day or night design or opt for an automatic setting.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.
- ▶ To select **Display** : turn and press the controller. A menu appears.
- ▶ To select **Day Mode, Night Mode** or **Auto** : turn and press the controller. The • dot indicates the current setting.

Design	Explanation
Day Mode	The display is set permanently to day design.
Night Mode	The display is set permanently to night design.
Auto	The multimedia system evaluates the data of the light sensor and automatically switches over the display design.

Switching the display on/off

 Switching off the display

- ▶ Press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Display Off**: turn and press the controller.
The display goes out.
- ▶ **To switch the display on again**: press the controller.

Time settings

General information

The multimedia system can automatically set the time and date.

 
The following navigation system functions require the time, time zone and summer/standard time to be set correctly in order to work properly:

- route guidance on routes with time-dependent traffic guidance
- calculation of expected time of arrival

Switching automatic time on and off



The **Automatic Time Settings** function is used to activate or deactivate the automatic setting of the time and date. This function is activated when the vehicle leaves the factory.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.

- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Time**: turn and press the controller.
A menu appears.
- ▶ To switch **Automatic Time Settings** on or off : press the controller.

Setting the time zone

  
To set the time zone, the **Automatic Time Settings** function must be activated.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Time**: turn and press the controller.
A menu appears.
- ▶ To select **Time Zone**: turn and press the controller.
A list of countries appears. The • dot indicates the current setting.
- ▶ **To select the country in which you are currently driving**: turn and press the controller.
The country is accepted. A time zone list may also be displayed, depending on the country selected.
- ▶ **To select the desired time zone**: turn and press the controller.
The time zone is accepted.
A list of available options for setting summer time appears (▷ page 35).

Setting summer and standard time

The **Daylight Saving Time** function is not available in all countries.

Using the **Daylight Saving Time** function, you can set the automatic changeover to summer time or switch the summer time settings on and off. The changeover to summer time advances the time by one hour.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.

- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **Time**: turn and press the controller. A menu appears.
- ▶ To select **Daylight Saving Time**: turn and press the controller. A list with options appears.
- ▶ To select **Automatic, On** or **Off**: turn and press the controller.

Setting	Function
Automatic	The summer and standard time are automatically changed over.
On	The clock is advanced one hour ahead of standard time.
Off	The standard time for the chosen time zone is selected.

Setting the time manually



- i** Using the manual time settings, you can set the time forward or back by up to several hours.

- ▶ Press the button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **Time**: turn and press the controller. A menu appears.
- ▶ To select **Set Time Manually**: turn and press the controller. An analog clock appears.

- ▶ **To set the hour**: turn the controller.
- ▶ **To highlight the minutes**: slide the controller.
- ▶ **To set the minutes**: turn and press the controller. The time is accepted. The **Automatic Time Settings** function is deactivated . If **Automatic** is set for the summer time changeover, you will see a prompt asking whether the automatic changeover should be maintained between summer and winter time.

- i** If **Automatic Time Settings** is reactivated, the previous settings for time zone and summer time changeover are restored.

Setting the time and date format



Use this function to set the time and date format for all displays in the vehicle.

- ▶ Press the button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **Time**: turn and press the controller. A menu appears.
- ▶ To select **Format**: turn and press the controller.
- ▶ **To select the desired date format**: turn and press the controller. The **•** dot indicates the current setting.
- ▶ **To select the desired time format**: turn and press the controller. The **•** dot indicates the current setting.

Abbreviation	Meaning
DD.MM.YYYY	Day.Month.Year date format, year (all four digits)
DD/MM/YYYY	Day/Month/Year date format, year (all four digits)
YYYY/MM/DD	Year/Month/Day date format, year (all four digits)

Abbreviation	Meaning
YYYY-MM-DD	Year - Month - Day date format, year (all four digits)
YY/MM/DD	Year/Month/Day date format, year (two digits)
MM/DD/YYYY	Month/Day/Year date format, year (all four digits)
HH:MM (24 hrs)	Hours : Minutes (24 hour time format)
HH:MM (AM/PM)	Hours : Minutes (AM/PM time format)

  Text reader settings

- ▶ Press the  button on the control panel. or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.
- ▶ To select **Text Reader Speed**: turn and press the controller. A list appears.
- ▶ Select **Fast**, **Medium** or **Slow**. The • dot indicates the current setting.

 
 
Voice Control System settings

Opening/closing the help window

- i** If the set system language is not supported by the Voice Control System, English will be selected.

The help window also shows you information on audible instructions:

- during individualization
- during subsequent operation of the Voice Control System

- ▶ Press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.
- ▶ To select **Voice Control**: turn and press the controller.
- ▶ To activate or deactivate **Help Window**: press the controller.

Further information on the Voice Control System; see the separate operating instructions.

Individualization

Using individualization, you can fine-tune the Voice Control System to your own voice. This will help improve voice recognition; see the separate operating instructions.

Wi-Fi

Overview (USA)

Establishing a Wi-Fi connection between the multimedia system and a Wi-Fi-enabled device, such as a tablet computer or smartphone, requires the following:


- Wi-Fi must be activated on the multimedia system and on the device to be connected.
- If the multimedia system is to be used as a Wi-Fi hotspot:
- The multimedia system must be connected to an Internet-enabled mobile phone via Bluetooth® or USB.
 - The Internet access data for the mobile phone network provider is selected or set in the multimedia system.
 - An Internet connection must be established on the multimedia system.

Overview (Canada)

The following requirements for establishing a Wi-Fi connection between the multimedia system and a Wi-Fi hotspot of a Wi-Fi-enabled device, such as a smartphone, or another hotspot must be met:

- Wi-Fi must be enabled on the multimedia system.
- Switch on Wi-Fi hotspot on the external device; see the manufacturer's operating instructions.


Activating Wi-Fi (USA)

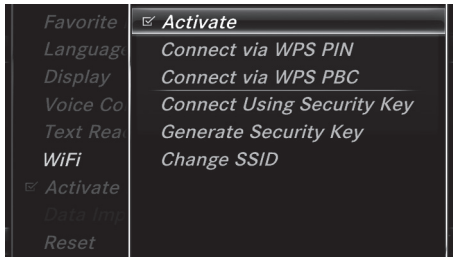

P82.89-0806-31

- ▶ Press the button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **System Settings**: press the controller.
- ▶ To select **WiFi**: turn and press the controller. The Wi-Fi menu appears.
- ▶ To select **Activate**: press the controller.

Activating Wi-Fi (Canada)

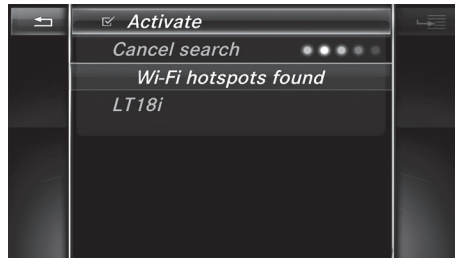

P82.89-0812-31

- ▶ Press the button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **System Settings**: press the controller.
- ▶ To select **WiFi**: turn and press the controller. The Wi-Fi menu appears.
- ▶ To switch **Activate** on : press the controller. Available Wi-Fi hotspots are searched for and displayed.

Connecting the device (USA)

General notes

The exact Wi-Fi connection procedure may vary depending on the device to be connected. Follow the instructions that are shown in the display. Further information; see the manufacturer's operating instructions.

Connecting a device via WPS PIN (USA)

 

Requirement: for this type of connection, the device to be connected must support "Connect using WPS PIN".

- ▶ Select **Connect via WPS PIN**.
- ▶ Select the vehicle from the device to be connected and "Connect using WPS PIN". The vehicle is displayed with the SSID **MB Hotspot XXXXX**. The device to be connected generates a PIN.

- ▶ Also enter this PIN into the multimedia system.
- ▶ To confirm the entry: press the controller.



Connecting a device via WPS PBC (USA)

Requirement: for this type of connection, the device to be connected must support "Connect via push button".

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ Select **System Settings**.
- ▶ Select **WiFi**. The Wi-Fi menu appears.
- ▶ Select **Connect via WPS PBC**.
- ▶ Select the vehicle from the device to be connected and **Connect via WPS PBC**. The vehicle is displayed with the SSID **MB Hotspot XXXXX**.
- ▶ To confirm the entry: press the controller.

Generating a new security key (USA)







- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ Select **System Settings**.
- ▶ To select **WiFi**: turn and press the controller. The Wi-Fi menu appears.
- ▶ To select **Generate Security Key**: turn and press the controller.

- ▶ To select **Regenerate**: press the controller. A new security key is generated.
- ▶ To save the security key: turn the controller and select **Save**. The Wi-Fi menu appears. The new security key will now be displayed and verified when a connection is established via the security key. The connection must be re-established with the newly created security key.

i Device connections established using the previous security key will no longer work after the security key is changed. You have to reconnect these devices (▷ page 38).

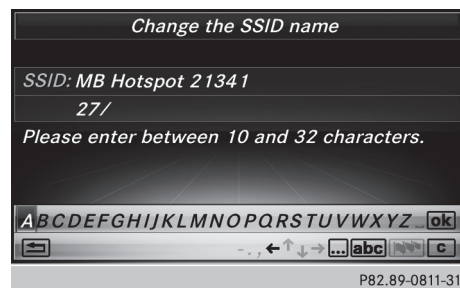Changing the name of the SSID (USA)

 

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ Select **System Settings**.
- ▶ To select **WiFi**: turn and press the controller. The Wi-Fi menu appears.
- ▶ To select **Change SSID**: turn and press the controller. A dialog for entering the SSID appears.
- ▶ Enter the new SSID.
- ▶ To select  : turn and press the controller. The new SSID is shown on the device to be connected and in the **Connect Using Security Key** menu.

 
 
i Device connections established using the previous SSID will no longer work after the SSID is changed. You have to reconnect these devices (▷ page 38).

Connecting the device (Canada)

General notes



The exact Wi-Fi connection procedure may vary depending on the device to be connected. Follow the instructions that are shown in the display. Further information; see the manufacturer's operating instructions.

Selecting a hotspot (Canada)

  - ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.
- ▶ To select **WiFi**: turn and press the controller. The Wi-Fi menu appears. A search for hotspots is carried out.
- ▶ To select a hotspot: turn and press the controller.


 
Connecting a device via WPS PBC (Canada)

Requirement: for this type of connection, the device to be connected must support "Connect via push button".

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ Select **System Settings**.
- ▶ Select **WiFi**. The Wi-Fi menu appears.
- ▶ To select one of the hotspots that has been found: turn and press the controller.
- ▶ Select **Connect via WPS PBC**.
- ▶ Press the push button on the device to be connected.
- ▶ To confirm the entry: press the controller.

Connecting a device via WPS PIN (Canada)

Requirement: for this type of connection, the device to be connected must support "Connect using WPS PIN".

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ Select **System Settings**.
- ▶ To select **WiFi**: turn and press the controller. The Wi-Fi menu appears.
- ▶ To select one of the hotspots that has been found: turn and press the controller.
- ▶ Select **Connect via WPS PIN**.
- ▶ Enter the WPS PIN generated by the multimedia system into the device.
- ▶ To confirm the entry: press the controller.

Bluetooth® settings

General information about Bluetooth®

Bluetooth®-capable devices, e.g. mobile phones, need to comply with a certain profile in order to be connected to the multimedia system. Every Bluetooth® device has its own specific Bluetooth® name.

 

Bluetooth® technology is a standard for short-range wireless data transmissions up to approximately 10 m.

You can use Bluetooth® to connect your mobile phone to the multimedia system, for example:

- use the hands-free system
- establish an Internet connection
- listen to music using Bluetooth® Audio
- exchange vCards

Bluetooth® is a registered trademark of Bluetooth Special Interest Group (SIG) Inc.

Activating/deactivating Bluetooth®

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.
- ▶ To switch **Activate Bluetooth** on or off : turn and press the controller.



Setting the system language

General information

This function allows you to determine the language for the menu displays and the navigation messages. The selected language affects the characters available for entry.

- i** The navigation announcements are not available in all languages. If a language is not available, the navigation announcements will be in English.
- i** When you set the system language, the language of the Voice Control System will change accordingly. If it is not supported by the Voice Control System, English will be selected.

Setting the system language

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.



- ▶ To select **Language**: turn and press the controller. The list of languages appears. The ● dot indicates the current setting.
- ▶ Select the desired language. The multimedia system loads the selected language and sets it.

Calling up the favorite functions

The favorites function can be called up as follows:

- via the **System Settings** menu
- via the Favorites button on the controller (▷ page 22)
- via the Favorites button on the touchpad (▷ page 23)

Calling up the Favorites function via the system menu

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.
- ▶ To select **Favorite Functions**: press the controller. The favorites are displayed.
- ▶ To select the desired function, e.g. **Phone-book**: turn and press the controller. A menu appears.

Calling up the Favorites function using the controller

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ To select the desired function, e.g. **Phone-book**: turn and press the controller.

Calling up the Favorites function via the touchpad

- ▶ Press the favorites button on the touchpad. The favorites are displayed.
- ▶ To select the desired function, e.g. **Phone-book**: turn and press the controller.

Exiting the Favorites function

- ▶ Press the Favorites button again.
- or
- ▶ Press the  button.

Further information on the Favorites function (▷ page 32).

Importing/exporting data**General notes**


! Never remove the stick or card when writing data to the USB stick or the memory card. You may otherwise lose data.

i Please remember that the NFTS file system is not supported. The FAT32 file system is recommended.



Using this function you can do the following with your personal data:

- transfer your data from one multimedia system to another multimedia system (The transfer may be limited or not possible, depending on the vehicle's equipment.)
- make a backup copy of your personal data (export data) and load it again (import data)
- protect your data from unwanted export by activating a pin prompt (presetting: deactivated)

You can either use an SD card or a USB storage device (e.g. a USB stick) as temporary storage. Further information on importing and exporting data can be obtained at a qualified specialist workshop.

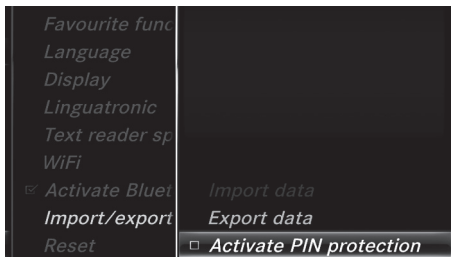Activating/deactivating PIN protection

  P82.89-0817-31

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.
- ▶ To select **Data Import/Export**: turn and press the controller.
- ▶ To switch **Activate PIN Protection** on or off : turn and press the controller. When activating PIN protection, you will be prompted to enter a PIN.
- ▶ To enter the 4-digit PIN and select **ok** : turn and press the controller. You will be prompted to enter the PIN again.
- ▶ Enter the PIN again and select **ok** . The PIN prompt now protects your personal data from unwanted export.


i If you deactivate your PIN protection, you will first be prompted to enter your PIN. If you have forgotten your PIN, a qualified specialist workshop can deactivate the PIN protection for you. Alternatively, you can deactivate PIN protection by resetting your personal data (▷ page 43).


 
Importing/exporting data**Connecting a USB storage device**

- ▶ Insert the SD memory card (▷ page 141).
- or
- ▶ Connect a USB device (e.g. a USB memory stick) (▷ page 141).

Importing/exporting data

i If you import data such as address data, the existing data on the multimedia system is overwritten. You will see a message to this effect. The multimedia system is restarted after the data import.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.

- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.
A menu appears.
- ▶ To select **Data Import/Export**: turn and press the controller.
- ▶ Select **Import Data** or **Export Data**.
If PIN protection is activated, a PIN prompt appears when you select **Export Data**.
- ▶ To enter the 4-digit PIN and select  : turn and press the controller.
PIN protection is deactivated.
- ▶ To select **Memory Card, USB 1** or **USB 2**: turn and press the controller.
This function exports all the data to the selected disc.

i You can export address data, bookmarks, system settings that you have made and radio station lists, for example.
Mercedes-Benz is not liable for any loss of data.

Reset function

General information



You can reset the multimedia system to the factory settings. This includes the deletion of all of your personal data on the multimedia system. These include:

- Station presets
- Entries in the destination memory
- Entries in the list of previous destinations in the navigation system
- Entries in the address book
- Authorized telephone

In addition, an activated PIN protection, which you have used to protect your data against unwanted export, will be deactivated. Resetting is recommended before selling or transferring ownership of your vehicle, for example.

Mercedes-Benz is not liable for any loss of data.

Resetting the multimedia system

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings** : turn and press the controller.
- ▶ To select **Reset** : turn and press the controller.
A prompt appears asking whether you wish to reset.
- ▶ Select **Yes**.
A prompt appears again asking whether you really wish to reset.
- ▶ Select **Yes**.
The multimedia system is reset to the factory settings and restarted.

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Important safety notes

WARNING


If you operate mobile communication equipment when driving, you may be distracted from the traffic situation. You could also lose control of the vehicle. There is a risk of an accident.

Only operate this equipment when the vehicle is stationary.



You must observe the legal requirements for the country in which you are currently driving when operating mobile communications equipment in the vehicle.

Vehicle settings

Calling up vehicle settings

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **Vehicle Settings**: turn and press the controller.
- ▶ To select the desired vehicle setting: turn and press the controller. The main area with the setting element is active.

Selecting a different vehicle setting:

- ▶ To activate the menu for selecting the vehicle setting: slide   the controller.

Exiting the vehicle settings:

- ▶ To select : slide  and press the controller.

Ambient lighting

General notes

You can set the following for the ambient lighting:

- Brightness
This setting changes the brightness of the ambient lighting.
- Color
This setting changes the color of the ambient lighting.
- Interior welcome light
When the driver's door is opened, the ambient lighting is activated for a short time.

Setting the brightness

- ▶ Call up **Vehicle Settings** (▷ page 44).
- ▶ To select **Ambient Light Brightness**: turn and press the controller. The setting element is active.
- ▶ To change the brightness value: turn and press the controller.

You can find further information on the interior lighting in the vehicle Operator's Manual.

Setting the color

- ▶ Call up **Vehicle Settings** (▷ page 44).
- ▶ To select **Ambient Light Color**: turn and press the controller. The setting element is active.
- ▶ To select a color: turn and press the controller.

You can find further information on the interior lighting in the vehicle Operator's Manual.

Setting the interior welcome light

- ▶ Call up **Vehicle Settings** (▷ page 44).
- ▶ To select **Interior Welcome Light**: turn and press the controller.
- ▶ Press the controller. The function is switched on or off, depending on the previous status.

You can find further information on the interior lighting in the vehicle Operator's Manual.

Switching locator lighting on/off

When the **Locator Lighting** function is active, the exterior lighting is activated for 40 seconds after the vehicle is unlocked. The light switch must be set to **AUTO**.

When you start the engine, the locator lighting is switched off and the automatic driving lights are activated.

You can find further information on the automatic headlamp mode in the vehicle Operator's Manual.

- ▶ Call up **Vehicle Settings** (▷ page 44).
- ▶ To select **Locator Lighting**: turn and press the controller.
- ▶ Press the controller.
The function is switched on or off, depending on the previous status.

You can find further information on the locking feature in the vehicle Operator's Manual.

- ❗ There may be fewer settings or none depending on your vehicle's equipment.

Setting the switch-off delay time

Interior lighting switch-off delay time

The interior lighting is activated for the duration of the switch-off delay time when the SmartKey is removed from the ignition lock.

- ▶ Call up **Vehicle Settings** (▷ page 44).
- ▶ To select **Interior Lighting Delayed Switch-off**: turn and press the controller.
The setting element is active.
- ▶ To change the delayed switch-off time: turn and press the controller.

You can find further information on the interior lighting in the vehicle Operator's Manual.

Exterior lighting switch-off delay time

If you switch on the **Exterior Lighting Delayed Switch-off** function, the exterior lighting is switched on for a short time after the engine is switched off. The light switch must be set to **AUTO**.

The exterior lighting remains lit for 60 seconds after the engine is switched off. If you close all the doors and the tailgate, the exterior lighting switches off after the set time.

- ▶ Call up **Vehicle Settings** (▷ page 44).
- ▶ To select **Exterior Lighting Delayed Switch-off**: turn and press the controller.
The setting element is active.
- ▶ To change the delayed switch-off time: turn and press the controller.

Displaying energy consumption and generated electrical energy

A bar graph displays the energy consumption and the generated electrical energy.

- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.
- ▶ To select **Consumption**: turn and press the controller.
The energy consumption and the generated electrical energy for the last 15 minutes of the journey is shown.

For further information on energy consumption, see the vehicle Operator's Manual.


Displaying the fuel consumption

A bar graph displays the fuel consumption.

- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.
- ▶ To select **Consumption**: turn and press the controller.
The fuel consumption for the last 15 minutes of the journey is shown.

Switching the ionization on/off

The ionization has a cleansing effect on the air in the vehicle interior. Further information (see the vehicle Operator's Manual).

- ▶ Call up **Vehicle Settings** (▷ page 44).
- ▶ To select **Ionization**: turn and press the controller.
The ionization is switched on or off, depending on the previous status: press and turn the controller.
- ▶ **To exit the menu**: press the  button.

Seats

Overview

You can configure the following seat functions in the menu:

- Backrest side bolsters
- Lumbar
- Seat cushion
- Massage
- Dynamics
- Seat heating balance

i There may be fewer settings or none depending on your vehicle's equipment.



Selecting the adjustment function and seat

▶ Press the  button.

or


- ▶ To select **Vehicle** from the main function bar: turn and press the controller. The vehicle menu is displayed.
- ▶ To select **Seat Settings**: turn and press the controller. The seat settings menu is shown.

or

- ▶ Press the  button on the controller. The menu for the seat setting appears.
- ▶ To select the required seat function: turn and press the controller.
- ▶ To switch between **Driver** and **Front Passenger**: slide  the controller.

 


Adjustment functions

Adjusting the backrest side bolsters



- ▶ Call up the seat functions (▷ page 46).
- ▶ To select **Backrest Sides**: turn and press the controller.
- ▶ To change the setting: turn the controller. You will see the changes you have made in the settings display.
- ▶ **To exit the menu**: press the  button.

Adjusting the seat contour in the lumbar region of the seat backrest


This function allows you to adjust the air cushions in the lumbar region of the backrest (4-way lumbar support).


- ▶ Call up the seat functions (▷ page 46).
- ▶ To select **Lumbar**: turn and press the controller.
- ▶ To activate the setting element: press the controller.
- ▶ To change the setting: slide  or  the controller. The change will be visible in the setting element.
- ▶ **To exit the menu**: press the  button.

 Adjusting the seat cushion

- ▶ Call up the seat functions (▷ page 46).
- ▶ To select **Seat Surface**: turn and press the controller.
- ▶ To select a seat: slide  the controller.
- ▶ To change the setting: turn the controller. You will see the changes you have made in the settings display.
- ▶ **To exit the menu**: press the  button.

Adjusting the driving dynamics

- ▶ Call up the seat functions (▷ page 46).
 - ▶ To select **Dynamic Multicontour Seat**: turn and press the controller.
 - ▶ To select a seat: slide  the controller.
- You can select:

- **OFF**:
- **1**: Level 1 (weak)
- **2**: Level 2 (strong)
- ▶ To select the setting: turn the controller.
- ▶ **To exit the menu**: press the  button.

Massage programs

Overview

You can select the following massage programs:

- **Relaxing Massage**

Massage the entire back, rising waves, soothing downward movements

- **Activating Massage**

Mobilizing massage and rising and descending dynamic waves


- **Classic Massage**

Single and twin waves moving upwards across the entire back

- **Mobilizing Massage**

Mobilization via stronger single and twin waves moving upwards across the entire back

Selecting a massage program

- ▶ Call up the seat functions (▷ page 46).
- ▶ To select **Massage**: turn and press the controller.
- ▶ To select a seat: slide ←⊙→ the controller.
- ▶ To select massage programs: turn and press the controller.
The massage program runs for approximately 15 to 25 minutes, depending on the setting.
- ▶ **To exit the menu**: press the  button.


Seat heating balance

The balance function controls the distribution of heat for the seat backrest and seat cushion.

The balance function influences the currently set heating level of the seat heating (see the vehicle Operator's Manual).

- ▶ Call up the seat functions (▷ page 46).
- ▶ To select **Seat Heating Balance**: turn and press the controller.
- ▶ To select a seat: slide ←⊙→ the controller.
- ▶ To change the setting: turn the controller.
You will see the changes you have made in the settings display.

The settings represent the following:

- **0** – the backrest and seat cushion are evenly heated according to the setting selected with the seat heating button.
- **1 to 3** increasing – the heat output to the seat cushion is reduced one level at a time.
- **1 to 3** decreasing – the heat output to the backrest is reduced one level at a time.
- ▶ **To exit the menu**: press the  button.

Resetting all adjustments

- ▶ Call up the seat functions (▷ page 46).
- ▶ To select **Reset**: turn and press the controller.
- ▶ To select a seat: slide ←⊙→ the controller.
- ▶ To reset: press the controller.
A prompt appears.
- ▶ To select **Yes** or **No**: turn and press the controller.
If you select **No** the process is canceled.
After selecting **Yes** all seat adjustments are reset to the default values (factory setting).

360° camera

General notes

The 360° camera covers the immediate surroundings of the vehicle and assists you, for instance when parking or at exits with reduced visibility.

The 360° camera is only an aid. It is not a replacement for your attention to your immediate surroundings. You are always responsible for safe maneuvering and parking. Make sure that no persons or animals are in the maneuvering range.

Further information on the 360° camera can be found in the vehicle Operator's Manual.

Displaying the 360° camera image

The 360° camera image can be displayed if:

- your vehicle is equipped with a 360° camera
- the **360° Camera** function is switched on (see the vehicle Operator's Manual)
- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.
- ▶ Select **360° Camera** .
The 360° camera image appears in split-screen mode.

You will see the previous view on the display if, when the function is switched on:

- turn the SmartKey to position **1** in the ignition lock
- you select transmission position **P**
- when you are driving at moderate speeds

Switching the display off manually


- ▶ To select : slide  and press the controller.

Switching the display on automatically

- ▶ You can switch on the 360 camera display automatically using the reverse gear (> page 48).

Switching the 360° camera automatic mode on/off

This function activates the 360° camera when reverse gear is engaged.

- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.
- ▶ To select **360° Camera**: turn and press the controller. The **360° Camera** menu appears.
- ▶ Select **Activation by R gear**. The function is switched on or off .

Opening the camera cover for cleaning

- ▶ To select **Open Camera Cover** in the 360° camera menu: turn the controller and press to confirm. The **Please Wait...** message appears for approximately three seconds. The camera cover opens.

The camera cover closes automatically if:

- the ignition is switched off
- the vehicle exceeds a moderate speed

i Depending on the vehicle's equipment, this function is not available.

Rear view camera**General notes**

The rear view camera covers the immediate surroundings behind the vehicle and assists you when parking.

 

The rear view camera is only an aid. It is not a replacement for your attention to your immediate surroundings. You are always responsible for safe maneuvering and parking. Make sure that there are no persons, animals or objects in the maneuvering area while maneuvering and parking in parking spaces.

There may be fewer settings depending on your vehicle's equipment.

You can find further information about the rear view camera in the vehicle Operator's Manual.

Switching the rear view camera automatic mode on/off

This function activates the rear view camera when reverse gear is engaged.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ Slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.
- ▶ Select **Rear View Camera**. The **Rear View Camera** menu appears.
- ▶ Select **Activation by R gear**. The function is switched on or off , depending on the previous status.

When you start the vehicle and engage reverse gear, the area behind the vehicle is shown with guide lines in the display. For further information on the rear view camera; see the vehicle Operator's Manual.

Opening the camera cover for cleaning

- ▶ To select **Open Camera Cover** in the rear view camera menu: turn and press the controller. The **Please Wait...** message appears for approximately three seconds. The camera cover opens.

The camera cover closes automatically if:

- the ignition is switched off
- the vehicle pulls away

DYNAMIC SELECT

General notes

Press **DYNAMIC SELECT** to configure the following settings and values for the Individual drive program:

- Drive system
- Suspension
- Steering
- Climate control
- ECO start/stop function

i In a few countries, the ECO start/stop function is deactivated at the factory due to the available fuel grade. In this case, the ECO start/stop function is not available regardless of the display in the multimedia system display.

For Mercedes-AMG vehicles, you can configure the following settings and adjustment values for the Individual drive program:

- Drive system
- Suspension
- Transmission
- ESP® (Electronic Stability Program)

There may be fewer settings or set values, or none, depending on your vehicle's equipment.

For further information on the Individual drive program; see the vehicle Operator's Manual.

Configuration using the DYNAMIC SELECT button

- ▶ Use the DYNAMIC SELECT button to select the Individual drive program (see the vehicle Operator's Manual).
A window appears after a short while.
- ▶ To confirm **Adjust**: press the controller. The **Individual Configuration** menu for setting the drive program appears.
- ▶ To select **Drive, Suspension, Steering, Climate Control** or **Eco Start/Stop Function**: turn and press the controller.
- ▶ Select individual settings.
The menu symbol, text and image show the selected setting.

Configuration via the DYNAMIC SELECT controller

The DYNAMIC SELECT Controller is available for Mercedes-AMG vehicles.

- ▶ Use the DYNAMIC SELECT controller to select the Individual drive program; see the vehicle Operator's Manual.
A window appears after a short while.
- ▶ To confirm **Adjust**: press the controller. The **Individual Configuration** menu for setting the drive program appears.
- ▶ To select **Drive, Suspension, Transmission** or **ESP**: turn and press the controller.
- ▶ Select individual settings.
The menu symbol, text and image show the selected setting.

Displaying vehicle data

- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.
- ▶ To select **DYNAMIC SELECT**: turn and press the controller.
- ▶ Select **Vehicle Data**.
Updates of the following data are displayed:
 - Road type analogous to the selected drive program
 - G-force display of longitudinal and lateral acceleration
 - Accelerator and brake pedal activity
 - Activity of the suspension struts
 - Wheel angle
 - Vehicle level display (Mercedes-AMG vehicles)

The G-force display is not available in all of the drive programs.

Daytime or night-time view is shown depending on the automatic light sensor.

Displaying engine data

- i** There may be fewer displays depending on your vehicle's equipment.

- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
 - ▶ To select **DYNAMIC SELECT**: turn and press the controller. The **Individual Configuration** and **Engine Data** menus appear.
 - ▶ Select **Engine Data**. The following current data is displayed:
 - Engine output
 - Engine torque
 - Engine oil temperature
 - Transmission oil temperature (Mercedes-AMG vehicles)
 - On-board electrical system voltage
- i** The values for engine output and engine torque may deviate from the nominal values. Items that can influence this are, for example:
- Engine speed
 - Sea level
 - Fuel grade
 - Outside temperature

Setting options

You can choose from the following settings for the drive:

C	Comfort
S	Sport
S+	Sport Plus
M	Manual
E	Eco

You can make the following settings for the suspension:

C	Comfort
S	Sport
S+	Sport Plus

You can make the following settings for the steering:

C	Comfort
S	Sport

You can choose from the following settings for climate control:

E	Eco
C	Comfort

You can choose from the following settings for the ECO start/stop function:

On	Switches the ECO start/stop function on
Off	Switches the ECO start/stop function off

Setting options (Mercedes-AMG vehicles)

You can choose from the following settings for the drive:

R	Race
C	Comfort
S	Sport
S+	Sport Plus

You can make the following settings for the suspension:

C	Comfort
S	Sport

You can choose from the following settings for the transmission:

D	Automatic
M	Manual

You can choose from the following settings for the ESP® (Electronic Stability Program):

S	Sport
On	Activates ESP® (Electronic Stability Program)

You can choose from the following settings for the ECO start/stop function:

On	Switches the ECO start/stop function on
Off	Switches the ECO start/stop function off

Driving dynamics

General notes

In the **Driving Dynamics** menu you can call up current vehicle and engine data. There may be less or no data and displays depending on your vehicle's equipment.

Displaying engine data

- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To select **Driving Dynamics**: turn and press the controller.
- ▶ Select **Engine Data**. The following current data is displayed:
 - Engine output
 - Engine torque
 - Engine oil temperature
 - Transmission oil temperature (Mercedes-AMG vehicles)
 - On-board electrical system voltage
- ❗ The values for engine output and engine torque may deviate from the nominal values. Items that can influence this are, for example:
 - Engine speed
 - Sea level
 - Fuel grade
 - Outside temperature

Displaying vehicle data

- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
 - ▶ To select **Driving Dynamics**: turn and press the controller.
 - ▶ Select **Vehicle Data**. Updates of the following data are displayed:
 - Road type analogous to the selected drive program
 - G-force display of longitudinal and lateral acceleration
 - Accelerator and brake pedal activity
 - Activity of the suspension struts
 - Wheel angle
 - Vehicle level display (Mercedes-AMG vehicles)
- The G-force display is not available in all of the drive programs.
- Daytime or night-time view is shown depending on the automatic light sensor.

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Introduction

Important safety notes

WARNING

If you operate information systems and communication equipment integrated in the vehicle when driving, you may be distracted from the traffic situation. You could also lose control of the vehicle. There is a risk of an accident.

Only operate this equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

The multimedia system calculates the route to the destination without taking account of the following, for example:

- traffic lights
- stop and yield signs
- merging lanes
- parking or stopping in a no parking/no stopping zone
- other road and traffic rules and regulations
- narrow bridges

The multimedia system may provide incorrect navigation recommendations if the actual street/traffic situation does not correspond with the digital map's data.

Examples of such deviations include:

- a diverted route
- a change in the direction of a one-way street

Digital maps do not cover all areas nor all routes in an area.

For this reason, you must always observe road and traffic rules and regulations during your journey. Road and traffic rules and regulations always have priority over the system's driving recommendations.

Navigation announcements are intended to direct you while driving without diverting your attention from the road and driving.

Please always use this feature instead of consulting the map display for directions. Looking at the icons or map display can distract you from traffic conditions and driving, and increase the risk of an accident.


General notes

Operational readiness of the navigation system

The navigation system must determine the position of the vehicle before first use or whenever operational status is restored. Therefore, you may have to drive for a while before precise route guidance is possible.


GPS reception

Among other things, correct functioning of the navigation system depends on GPS reception. In certain situations, GPS reception may be impaired, there may be interference or there may be no reception at all, e.g. in tunnels or parking garages.

 Using roof carriers may impair the correct functioning of a roof antenna (phone, satellite radio, GPS).

Entry restriction

For vehicles in certain countries, there is a data entry restriction.


Entries can be made when the selector lever is in position  or the vehicle is stationary.

When the restriction is active, certain entries cannot be made. This will be indicated by the fact that certain menu items are grayed out and cannot be selected.

The following entries are not possible, for example:

- entering the destination city and street
- POI entry via a name search
- editing and saving of entries

Other entries are however possible, such as a keyword search and entering POIs in the vicinity of the destination or current position.

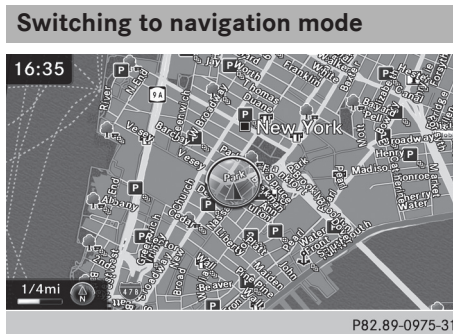

- ▶ Press the **NAVI** button.
The map shows the vehicle's current position.

or

- ▶ Slide **↑** the controller (e.g. in radio mode).
- ▶ To select **Navi**, turn and press the controller.
The map shows the vehicle's current position.
- ▶ **To call up the map while navigation mode is switched on:** press the **NAVI** button in any menu.
The navigation menu appears.
- ▶ Press the controller.
The map shows the vehicle's current position.



Using the menu, you can make a destination entry or select the navigation settings, for example.

- ▶ **To show:** slide **⊙↓** the controller when the map appears.

If there has been no route calculated, **Destination** is marked.


If a route has been calculated, **⏏** is marked.



- ▶ **To hide:** press the **⏏** button.

or

- ▶ Slide **↑** the controller.
Full screen symbol **①** appears.
- ▶ Press the controller.

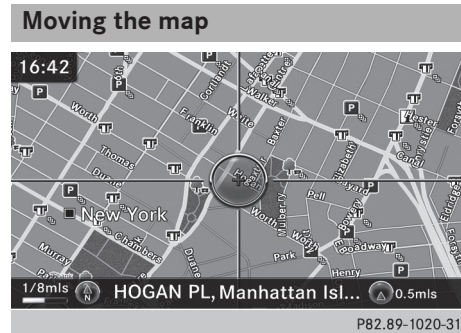


Requirement: the map is in full screen mode, the menu is faded out (▷ page 53).

- ▶ Press the controller.
The crosshair is shown.
- ▶ Slide **←**, **→**, **↑**, **↓** or **↻** the controller.
The map moves in the corresponding direction under the crosshair.
- ▶ Press the controller to show the menu.
- ▶ Select **Menu**.

Basic settings

Selecting the route type

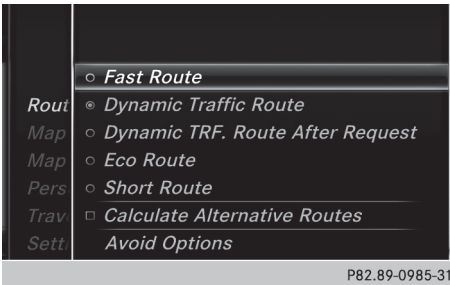

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙** the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Route Settings**: press the controller.
- ▶ To select the route type: turn and press the controller.
 - A filled circle indicates the current selection.
 - With active route guidance, the navigation system calculates a new route.
 - Route guidance active: a destination has been entered and the route has been calculated.
 - If there has been no route calculated, the navigation system uses the selection as the new basic setting.

Fast Route	The navigation system calculates a route with a short journey time.
Dynamic Traffic Route	Based on the Fast Route route type and includes traffic reports on the route for the route guidance.
Dynamic TRF. Route After Request	If there are traffic reports, a prompt appears asking whether these reports should be considered in the route calculation.


Eco Route	The navigation system calculates an economic route. The journey may take slightly longer compared to taking the fast route.
Short Route	The navigation system calculates a route with a short distance.

The route types **Dynamic Traffic Route** and **Dynamic TRF. Route After Request** use real-time traffic reports from SIRIUS satellite radio.

Further Information on real-time traffic reports (> page 76).

- ▶ **To calculate alternative routes:** select **Calculate Alternative Routes**. Switch the function on or off .
 - Function activated: after each route calculation, route alternatives are offered that correspond to the local conditions (> page 74).
 - If desired, you can have the navigation system calculate alternative routes even during route guidance (> page 74).

Setting route options

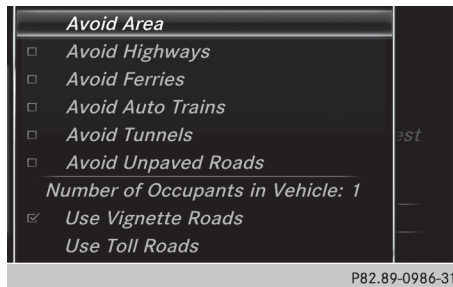

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙** the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Route Settings**: press the controller.

▶ **To avoid/use route options:** select **Avoid Options**.

A menu appears.

▶ Select one of the options.

: using or avoiding route options is enabled

: using or avoiding route options is disabled

• **Avoid Area** (▷ page 85)

You can define areas that you would like to avoid.

• **Avoid Highways**

• **Avoid Ferries**

• **Avoid Auto Trains**

• **Avoid Tunnels**

• **Avoid Unpaved Roads**

The function is not available in all countries.

• **Use Toll Roads**


The route calculation includes roads which require you to pay a usage fee (toll).

• **Number of Occupants in the Vehicle:**

If your vehicle meets the access conditions for carpool lanes, you can use this function.

Navigation includes carpool lanes if the carpool lanes option is activated.

Depending on local conditions, the navigation system may not always be able to include all route options. A route may include a ferry, for instance, even though **Avoid Ferries** is enabled. The navigation system will notify you of this visually and through a navigation message.

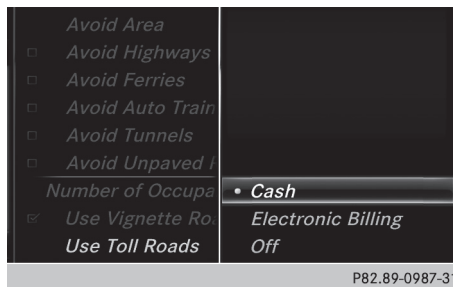

▶ **To use toll roads:** turn and press the controller.


A menu appears.

▶ Select an option.

The options include using roads that require cash payment or electronic billing, or switching off the function.

▶ **To exit a menu:** slide ←(○)→ the controller.

Selecting announcements

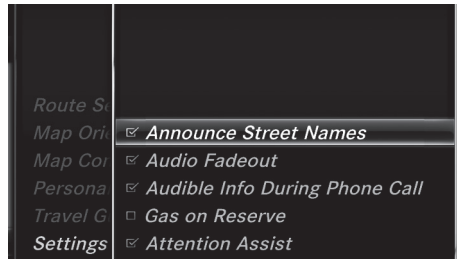

▶ **To switch to navigation mode:** press the **NAVI** button.

▶ **To show the menu:** slide (○)↓ the controller.

▶ To select **Options:** turn and press the controller.

▶ Select **Settings**.

▶ Select an option.

Switch the option on or off .

Announce Street Names	The navigation system announces the names of the roads onto which the upcoming change of direction leads.
Audio Fadeout	The volume of an active media source is automatically reduced during a navigation announcement.
Audible Info During Phone Call	The navigation message is also given during telephone calls.
Gas on Reserve	Function activated: once the reserve fuel tank level is reached, a message appears to help you start a gas station search.
Attention Assist	Function activated: if ATTENTION ASSIST displays a warning in the multifunction display, a message appears in the multimedia system display when you drive on a highway. This can help you start a rest stop search. For further information on ATTENTION ASSIST, see the vehicle Operator's Manual.

Using car pool lanes

You can include carpool lanes (HOV or car sharing lanes) in the route calculation.


If you use HOV or carpool lanes, please observe the applicable laws as well as the local and time limitation conditions.

Carpool lanes may only be used under certain conditions. They can normally be used when there are two people in the vehicle. However, there are also carpool lanes which can only be used when there are three or more people in the vehicle. In California, single drivers may also use the carpool lanes if the vehicle's emission or consumption values are below the prescribed levels.

Carpool lanes may be reserved for specific times (e.g. during the peak period).

Carpool lanes are indicated by a diamond symbol on specific road signs and on the road surface. The road signs may also include the designation CARPOOL. The lanes are arranged as a separate lane next to the others or are built as a physically separate lane.

Depending on the setting under **Number of Occupants in the Vehicle:**, the navigation system uses carpool lanes when calculating the route. During route guidance, visual and audible driving directions provide guidance into and out of carpool lanes.

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Options:** turn and press the controller.
- ▶ Select **Route Settings**.
- ▶ Select **Avoid Options**.
- ▶ Select **Number of Occupants in the Vehicle:**.
A menu appears. The • dot indicates the current setting.
- ▶ To select the number: turn and press the controller.

Destination entry

Important safety notes

WARNING

If you operate information systems and communication equipment integrated in the vehicle when driving, you may be distracted from the traffic situation. You could also lose control of the vehicle. There is a risk of an accident.


Only operate this equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.


You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

Destination entry may be blocked while driving, depending on the country specifications.

Using an address

Calling up the address entry menu

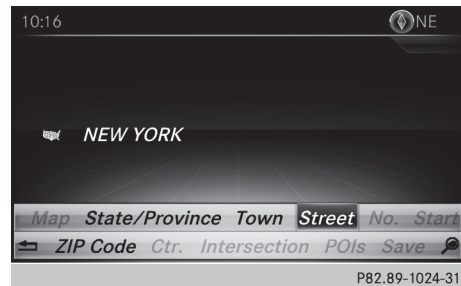

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Destination:** turn and press the controller.
- ▶ Select **Address Entry**.


Address entry options

Examples of how you can enter an address:

- city or ZIP code, street, house number
- city or ZIP code, street
- city or ZIP code, center
- city or ZIP code, street, intersection
- street, city or ZIP code, house number
- street, city or ZIP code, intersection

The address can be entered faster by entering the street before the city if the address has an unusual street name.

While entering an address in the character bar, you can call up other destination entry options:


- keyword search using  (> page 59)
- the map via **Map** (> page 63)
- POIs via **POIs** (> page 61)


Entering an address




The example shows you how to enter a city, street and house number for an address, e.g. for your home address.


- ▶ In the address entry menu, select **Street**: press the controller (> page 56).
The city in which the vehicle is currently located is at the top of the list.
- ▶ Enter **BROADWAY**. Character entry (> page 30).

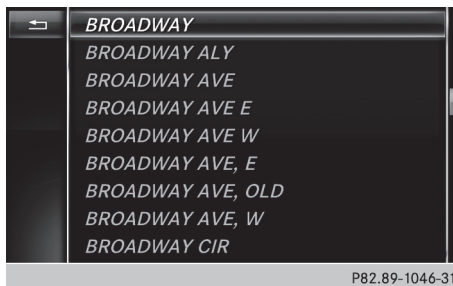

- ▶ **To call up the list**: slide  the controller repeatedly until the character bar disappears.

or

- ▶ To select the  symbol: turn and press the controller.

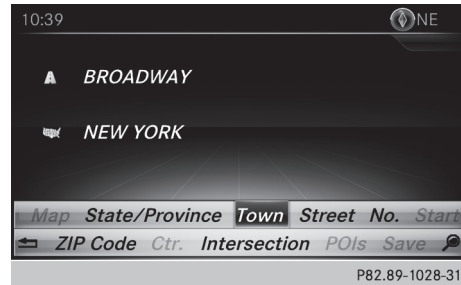

- ▶ To select **City**: press the controller.
- ▶ Enter the city, e.g. **New York**. Then call up the list and select an entry. Proceed in the same way as when entering a street.
- ▶ To select **No.**: press the controller.
- ▶ Enter the house number. Then call up the list and select an entry. Proceed in the same way as when entering a street.
The address entry menu shows the address.

The city in which the vehicle is currently located (current vehicle position) is at the top of the list of cities. When destinations are entered using the character bar, the locations for which route guidance has already been carried out are more prominently available.

You can enter any of the cities, streets, ZIP codes, etc. which are stored in the digital map. However, ZIP codes are not available for some countries.

State/province and city are sufficient to start navigating. You can enter either a city or a ZIP code. The street and house number complete the destination address.

Entering additional address data

You can enter additional address data:

- State/province
You can use **Last Used** to select the last selected state (USA) or province (Canada). You can also select Mexico and The Bahamas.
- ZIP code
Entering a ZIP code will delete a previously entered city.
- Center

Entering a center will delete a previously entered street.

- Intersection

Entering an intersection will delete a previously entered house number.

- ▶ Select the address entry menu (▷ page 56).
- ▶ To select **State/Province, ZIP Code, Ctr.** or **Intersection**: turn, slide Ⓞ↓ and press the controller.
- ▶ Select an entry (▷ page 57).


Saving an address

You can store the address entered as:


- a home address in the address book
- a navigable address book contact

For further information on the address book, see (▷ page 103)

- a personal destination on the SD card (▷ page 80)

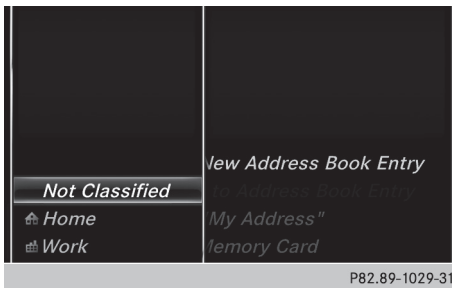


- ▶ Call up the address entry menu (▷ page 56).
- ▶ To select **Save**: slide Ⓞ↓, turn and press the controller.
- ▶ **As the home address**: select **As "My Address"**.
The home address is stored in the list of contacts under the entry **My Address**.

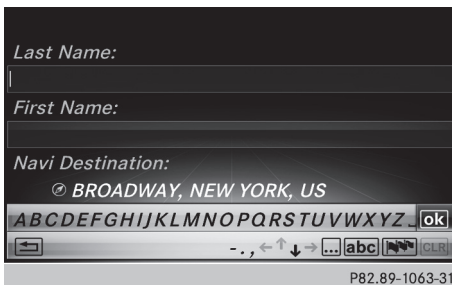

- ▶ **As a contact**: select **As New Address Book Entry**.
- ▶ Select **Not Classified, Home** or **Work**.
- ▶ Enter a surname and first name (▷ page 30).
- ▶ To select the **OK** symbol: turn and press the controller.
The destination address is saved in the address book as a navigable contact.

Starting route calculation

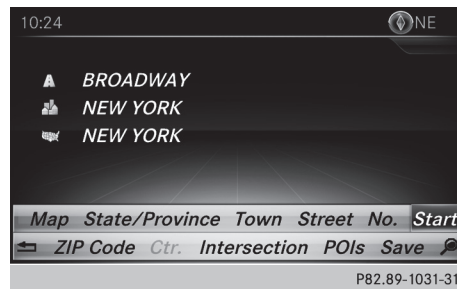

The entered destination appears in the address entry menu.


- ▶ To confirm **Start** or **Continue**: press the controller.
If you select **Start**: the route is calculated with the current route settings (▷ page 54). While route calculation is in progress, an arrow will indicate the direction to your destination. Once the route has been calculated, route guidance begins. If the vehicle is traveling on a non-digitized road, the system displays the linear distance to the destination, the direction to the destination and the **Road Not Mapped** message.
Selection **Continue**: If **Calculate Alternative Routes** is activated, alternative routes are calculated (▷ page 54). You can display these and select them for route guidance (▷ page 74).
If route guidance has already been activated, a prompt will appear asking whether you wish to end the current route guidance.
- ▶ To select **Cancel Active Route Guidance** or **Set as Intermediate Destination**: turn and press the controller.
Cancel Active Route Guidance cancels the current route guidance and starts route calculation to the new destination.
Set as Intermediate Destination adds the new destination in addition to the existing

destination and opens the intermediate destinations list.

- i** The route is calculated using the digital map data. The calculation time depends on the distance from the destination, for example. The route may differ from the ideal route, e.g. due to incomplete map data. Please also refer to the notes about the digital map (> page 87).

Keyword search

Entering keywords

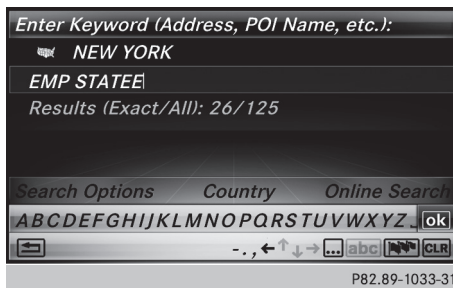

The keyword search is used to help find destinations using fragments of words. If you enable the appropriate setting in the search options, the keyword search is tolerant of errors (> page 60).

It can be used for an address or a POI. For example, you can search for the Empire State Building in New York.

The keyword search finds geographically tolerant hits. If, for example, you are searching for a street located on the edge of a major city, the search will also cover adjacent smaller cities.

The keyword search supports the character sets of the system languages available.

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙** the controller.
- ▶ To select **Destination**: turn and press the controller.
- ▶ Select **Keyword Search**.
- ▶ Enter the first few letters of the city and street, e.g. **NEW** and **EMP**.
While entering the information, the number of exact matches and total number of matches is shown.

---/--- is displayed if fewer than three characters have been entered.

999+ is displayed if there are too many hits.


- ▶ Select the **ok** symbol.
The search results are displayed (> page 59).

Selecting search results



The search results are divided into categories, such as addresses. The number of exact matches and total number of matches is shown in brackets.

Further search results are displayed, if **POI Search** and/or **Fuzzy Search** are activated in the search options (> page 60).

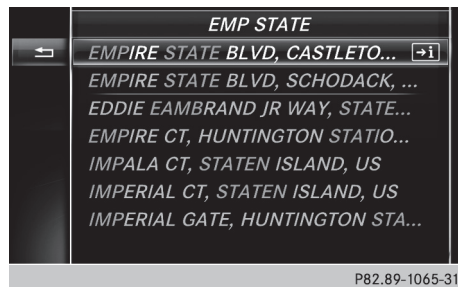

- ▶ **To select an address:** press the controller.
The search results are displayed.

Exact hits are shown at the very top of the list. Hits are listed alphabetically. The search term that you entered is highlighted in orange in the entries.

- ▶ Select an entry: turn and press the controller.
The address entry menu appears, showing the destination address.
- ▶ To start route calculation: select **Start**.

- ▶ **To select POI:** select **POIs in the Vicinity** or **All POIs** by turning and pressing controller.

A list appears. The search results are displayed according to the linear distance, starting with those closest.
- ▶ Select a POI.

The POI is shown.
- ▶ To start route calculation: select **Start**.
- ▶ **To select online search:** select **Online Search** by turning and pressing the controller.

The search switches to the online functions. Online search requirement (USA): mbrace must be activated for Internet access (▷ page 122). Requirement for the online map display (Canada): a mobile phone is connected to the multimedia system via Bluetooth® (▷ page 91) or USB (▷ page 150).

Selecting search options

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide $\odot \downarrow$ the controller.
- ▶ To select **Destination:** turn and press the controller.
- ▶ Select **Keyword Search**.
- ▶ To select **Search Options:** slide $\uparrow \odot$, turn and press the controller.
- ▶ Select **Fuzzy Search** or **POI Search**.

Switch the setting on or off .

The error-tolerant search is useful if parts of the address are incomplete or the spelling is unclear.

The POI search takes into account points of interest in the search.

Selecting a state/province

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide $\odot \downarrow$ the controller.
- ▶ To select **Destination:** turn and press the controller.
- ▶ Select **Keyword Search**.

- ▶ To select **State/Province:** slide $\uparrow \odot$, turn and press the controller.

The states or provinces are sorted alphabetically.
- ▶ To select a state/province: turn and press the controller.

Using online search


Requirement (USA): mbrace must be activated for Internet access (▷ page 122).

Requirement (Canada): a mobile phone is connected to the multimedia system via Bluetooth® (▷ page 91) or USB (▷ page 150).

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide $\odot \downarrow$ the controller.
- ▶ To select **Destination:** turn and press the controller.
- ▶ Select **Keyword Search**.
- ▶ Enter the first few letters of the city and street.
- ▶ To select **Online Search:** slide $\uparrow \odot$, turn and press the controller.

The search switches to the online functions.

Selecting a destination from the list of last destinations

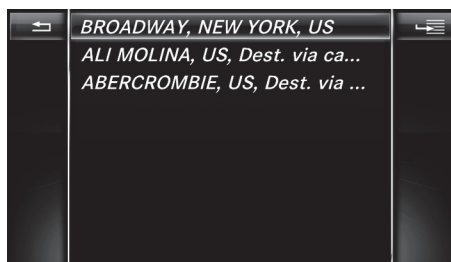


P82.89-1398-31


The last 50 destinations are stored automatically.


- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide $\odot \downarrow$ the controller.
- ▶ To select **Destination:** turn and press the controller.
- ▶ Select **From Last Destinations**.

- ▶ Select the destination.
The address entry menu appears, showing the destination address.
- ▶ **To start route calculation:** select **Start**.

Selecting an address book contact as a destination

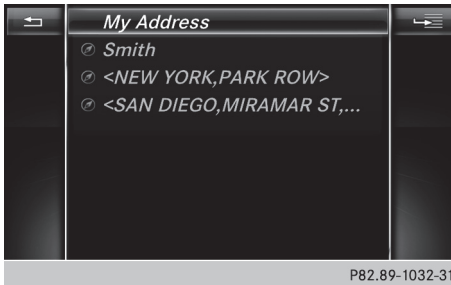


You can select navigable address book contacts as the destination. These are identified by the  symbol. If you have already entered and saved your home address, you can select this as the destination by using **My Address**.


- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Destination**: turn and press the controller.

- ▶ Select **From Contacts**.
- ▶ Select the destination.
The address entry menu appears, showing the contact and associated destination address.
- ▶ **To start route calculation:** select **Start**.

Selecting a destination from POIs


Calling up the POI menu

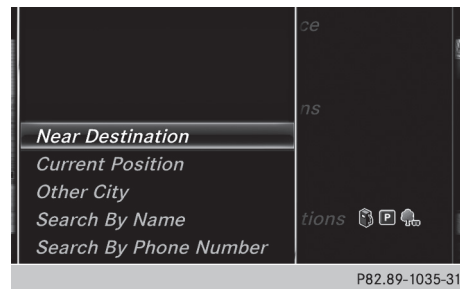


- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Destination**: turn and press the controller.
- ▶ Select **From POIs**.

Defining the position for the POI search

Selection	Instructions
Near Destination (when route guidance is active)	<ul style="list-style-type: none"> ▶ Call up the POI menu (▷ page 61). ▶ To select Near Destination: press the controller. ▶ Select a POI category (▷ page 62).
Current Position Searches in the vicinity of the current vehicle position.	<ul style="list-style-type: none"> ▶ Call up the POI menu (▷ page 61). ▶ To select Current Position: turn and press the controller. ▶ Select a POI category (▷ page 62).


Selection	Instructions
<p>Other City</p> <p>After entering a city, the search is performed within the city's boundaries</p>	<p>Option 1</p> <ul style="list-style-type: none"> ▶ Call up the POI menu (▷ page 61). ▶ To select Other City: turn and press the controller. ▶ Select the state/province (▷ page 57), if desired. ▶ Enter the city (▷ page 57). ▶ Select a POI category (▷ page 62). <p>Option 2</p> <ul style="list-style-type: none"> ▶ Enter a city in the address entry menu (▷ page 57). ▶ To select POIs: slide , turn and press the controller. ▶ Select a POI category (▷ page 62).
<p>Search By Name</p> <p>Searches for all POIs on the digital map or around one of the three previously specified positions</p>	<ul style="list-style-type: none"> ▶ Call up the POI menu (▷ page 61). ▶ To select Search By Name: turn and press the controller. ▶ Select All POIs or one of the three previously selected positions. The POI list with character bar appears. ▶ Enter a name. <p>or</p> <ul style="list-style-type: none"> ▶ To select Mercedes-Benz Service: turn and press the controller.
<p>Search By Phone Number</p> <p>All POIs with a telephone number can be selected.</p>	<ul style="list-style-type: none"> ▶ Call up the POI menu (▷ page 61). ▶ To select Search By Phone Number: turn and press the controller. You will see a list of phone numbers. ▶ Enter the telephone number. <p>The telephone number consists of:</p> <ul style="list-style-type: none"> • the country code (international dialing code) • the area code <p>When entering the area code, omit the leading "0"</p> <ul style="list-style-type: none"> • the telephone number of the participating caller

Selecting a POI category

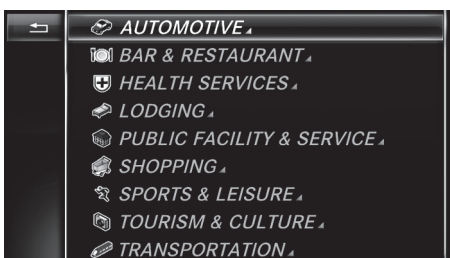

P82.89-1036-31

POI categories appear after choosing the menu items **Near Destination**, **Current Position** and after entering another city.


- ▶ Turn and press the controller.
The  symbol after an entry shows that further categories are available.
- ▶ Select a sub-category.
The POI search covers a 240 mi (400 km) radius around the selected position.
Once the search is completed, the POI list is displayed.
The search results display the following information:
 - an arrow that shows the linear direction to the POI (search around vehicle position)
 - the linear distance to the POI
 - the name of the POI
- ▶ Select a POI.
The complete address of the POI is shown.

Selecting a POI

Requirement for "Calling up a POI": a mobile phone must be connected to the multimedia system (▷ page 91).

Requirements for "Viewing the vicinity of the destination" and "Loading data from the Internet" (USA): mbrace must be activated for Internet access (▷ page 122).

Requirements for "Viewing the vicinity of the destination" and "Loading data from the Internet" (Canada): a mobile phone must be connected to the multimedia system via Bluetooth® (▷ page 91) or USB (▷ page 150).

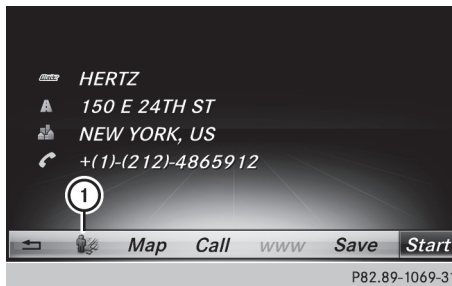







The complete address of the POI is shown.

- ▶ **To view the vicinity of the destination:** select ① by turning and pressing the controller.
If street images are available, the street in the vicinity of the destination address is shown.
- ▶ **To call up the map:** select **Map**.
- ▶ Move the map, change the map scale (▷ page 63) and select the POI.

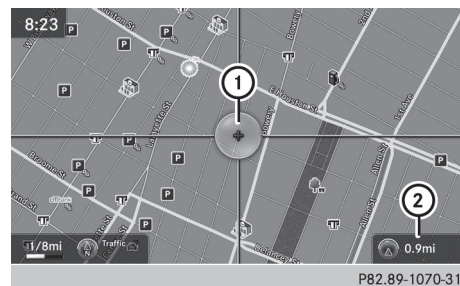- ▶ **To call up a POI:** select **Call**.
If a phone number is available, the multimedia system switches to the telephone function.
- ▶ **To load data from the Internet:** select **www**.
If an Internet address is available, data is loaded from the Internet.
- ▶ **To store a POI:** select **Save**.
The POI can be saved as:
 - home address
 - a navigable address book contact (▷ page 103)
 - a personal destination on the SD card (▷ page 80)
- ▶ **To start route calculation:** to select **Start** or **Continue**: turn and press the controller.
If **Calculate Alternative Routes** is enabled in the basic settings, the menu item **Continue** is displayed instead of **Start** (▷ page 54).

 
Using the map



- ① Crosshair
- ② Distance of crosshair position from current vehicle position
- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Destination**: turn and press the controller.
- ▶ Select **Using Map**.
The map with crosshair is shown.
- ▶ **To move the map:** slide , ,  or  the controller.
- ▶ **To change the map scale:** turn the controller until the desired map scale is selected.
The scale is displayed at the bottom of the display.

To enlarge the map: turn the controller counter-clockwise.

To zoom the map out: turn the controller clockwise.

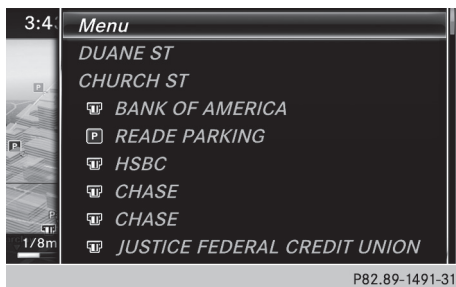

- ▶ **To select a destination:** press the controller. If several destinations are available in the area around the crosshair, these are displayed. The list may show the **Menu** menu item.
- ▶ Press the controller to show the menu.
- ▶ To select a destination from the selection list: turn and press the controller. If the digital map provides navigable address data, you will see the destination address in the address entry menu.
- ▶ **To start route calculation:** select **Start**.

Entering intermediate destinations

Introduction

You can also map the route to the destination yourself by entering up to four intermediate destinations. The sequence of the intermediate destinations can be changed at any time.

The multimedia system provides a selection of predefined POI categories, e.g. **Restaurants** for a quick selection. You can also use the destination entry options to enter intermediate destinations.

Creating intermediate destinations

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Destination:** turn and press the controller.
- ▶ Select **Intermediate Destinations**.


- ▶ To select a POI category or **Other:** turn and press the controller. After selecting one of the POI categories, available POIs are displayed:

- along the route
- in the vicinity

The multimedia system first searches for destinations on the route. The search for destinations is then initiated in the area around the current vehicle position.

- ▶ After selecting **Other**, select one of the destination entry options.

Selection	Step
Address Entry	▶ Enter a destination by address (▷ page 57).
Keyword Search	▶ Select a destination using a keyword search (▷ page 59).
From Last Destinations	▶ Select a destination from the list of last destinations (▷ page 60).
From Contacts	▶ Select a contact from the address book as the destination (▷ page 61).
From POIs	▶ Select a point of interest (▷ page 61).
Using Map	▶ Enter a destination using the map (▷ page 63).
From Memory Card	▶ Select a personal POI (▷ page 68).
From Mercedes-Benz Apps	▶ Enter a destination from Mercedes-Benz Apps (▷ page 66).
Using Geo-Coordinates	▶ Enter a destination using the geo-coordinates (▷ page 66).

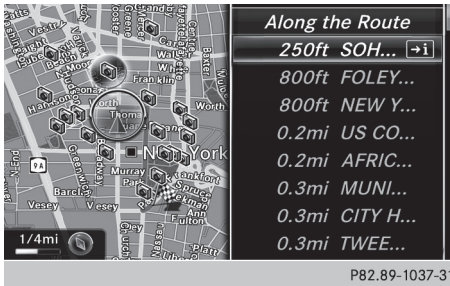

P82.89-1037-31

- ▶ To select a POI: turn the controller and press to confirm.

After selecting a POI or entering a destination, the address of the intermediate destination is displayed.

After entering a destination using the map, the address entry menu is displayed. **Start** is highlighted.



P82.89-1038-31


- ▶ **To call up a map:** select **Map** by turning and pressing the controller. You can move the map and select the destination.
- ▶ **To make a call:** select **Call**. If the intermediate destination has a telephone number and a mobile phone is connected to the multimedia system (▷ page 91), the call is connected.
- ▶ **To load data from the Internet:** select **www**. If an Internet address is available, data is loaded from the Internet.
- ▶ **To store an intermediate destination in the destination memory:** select **Save** (▷ page 80).
- ▶ **To accept an intermediate destination:** select **OK** by pressing the controller. The destination is entered in the intermediate destinations menu. **Start Route Guidance** is highlighted.

- ▶ **To enter another intermediate destination:** slide ↑⊙ the controller and highlight **Add New**.
- ▶ Press the controller.
- ▶ Proceed as described above.

Editing intermediate destinations

The following editing options are available:

- You can change intermediate destinations.
- You can switch the sequence of the intermediate destinations in the intermediate destinations menu.
- You can delete intermediate destinations.

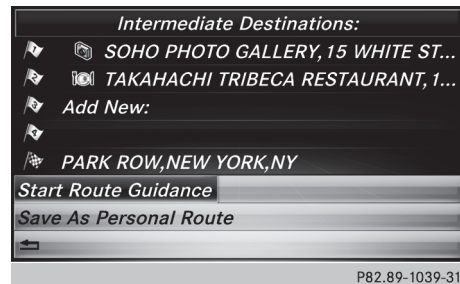

P82.89-1039-31

- ▶ To select an intermediate destination in the intermediate destinations menu: turn and press the controller. A menu appears.
 - ▶ **To change an intermediate destination:** select **Edit** in the menu.
 - ▶ Select a new intermediate destination from a category or via **Other**.
 - ▶ To select **OK**: turn and press the controller. The intermediate destinations menu appears and displays the changed intermediate destination.
- You can change the order of the intermediate destinations entered and the destination. To change the order, at least one intermediate destination and the destination must have been entered.
- ▶ **To change the order:** in the menu, select **Move**.
 - ▶ Turn the controller and move the intermediate destination or destination to the desired position.
 - ▶ Press the controller.
 - ▶ **To delete an intermediate destination:** select **Delete** in the menu.

Accepting intermediate destinations for the route

- ▶ To select **Start Route Guidance** in the intermediate destinations menu: press the controller.
The route is calculated with the entered intermediate destinations.
If **Calculate Alternative Routes** is enabled in the basic settings, the **Continue** menu item is displayed (▷ page 54).
If an intermediate destination was passed during route guidance, a green tick mark will be entered in the intermediate destinations menu. Once the route has been recalculated, the intermediate destination is deleted from the intermediate destinations menu.

Saving as a personal route

- ▶ Insert the SD memory card (▷ page 141).
- ▶ To select **Save As Personal Route** in the intermediate destinations menu: turn and press the controller.
The route is saved on the SD card under **Personal Routes**.

Searching for a gas station when the fuel level is low

Requirement: the setting **Gas on Reserve** must be enabled (▷ page 55).

If the fuel tank reserve level is displayed, you will see the **Reserve Fuel Would you like to start a search for surrounding gas stations?** message.

- ▶ To select **Yes** or **No**: turn and press the controller.
If you select **Yes**: the gas station search starts. When the search is complete, a list of the gas stations available along the route or in the vicinity is displayed.
If you select **No**: the search is canceled.
- ▶ Select the gas station.
The address of the gas station is displayed.
- ▶ To select **Start**: press the controller.
The gas station selected is set in the intermediate destinations menu as the next intermediate destination not yet reached. Route guidance begins.

Entering a destination from Mercedes-Benz Apps

Requirement (USA): mbrace is activated for the Mercedes-Benz Apps (▷ page 122).

Requirement (Canada): a mobile phone is connected to the multimedia system via Bluetooth® (▷ page 91) or USB (▷ page 150).

- ▶ **To switch to navigation mode**: press the **NAVI** button.
- ▶ **To show the menu**: slide **⊙↓** the controller.
- ▶ To select **Destination**: turn and press the controller.
- ▶ Select **From Mercedes-Benz Apps**.
The list of Mercedes-Benz Apps appears.

Using geo-coordinates

- ▶ **To switch to navigation mode**: press the **NAVI** button.
 - ▶ **To show the menu**: slide **⊙↓** the controller.
 - ▶ To select **Destination**: turn and press the controller.
 - ▶ Select **Using Geo-Coordinates**.
Geo-coordinates are entered in degrees, minutes and seconds.
 - ▶ **To enter the latitude and longitude coordinates**: turn the controller to change the value.
 - ▶ To move the selection within the line: slide **←⊙→** the controller.
 - ▶ To move the selection between lines: slide **↑⊙↓** the controller.
 - ▶ To confirm the value: press the controller.
 - ▶ **To save a destination**: to select **Save Current Station/Channel**: turn and press the controller.
The destination can be stored as:
 - a home address in the address book
 - a navigable address book contact
For further information on the address book, see (▷ page 103)
 - a personal destination on the SD card (▷ page 80)
- ### Starting route calculation
- ▶ To select **Start Route Guidance**: turn and press the controller.

Personal POIs and routes

General notes

The use of personal POIs for displaying traffic surveillance equipment is not permitted in every country. Please observe the country-specific regulations and always drive at a suitable speed.

Personal POIs are filed in categories:

- ▶ **Not Classified**
Standard entry for personal POIs
- ▶ **Mercedes-Benz Apps**
Personal POIs (destinations, routes) that you have imported via the online functions
- ▶ Categories which you have created yourself, e.g. on your PC

Personal routes are not categorized.


Settings for personal POIs

Displaying on the map

Requirements: an SD card with personal POIs is inserted (▷ page 141).

All personal POIs of the selected category are displayed on the map with a corresponding symbol.

If the "Alert when approaching" function (▷ page 67) is activated, the symbols are displayed up to a map scale of 2 km (2 mi).


- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Options:** turn and press the controller.
- ▶ Select **Personal POIs**.
- ▶ Select **Show on Map**.
The menu displays the categories available on the SD card.
- ▶ **To select a category:** turn and press the controller.
All personal POIs in the selected category are displayed or not displayed , depending on the previous status.

Alert when approaching

Requirements: an SD card with personal POIs is inserted (▷ page 141).

If the vehicle is approaching a personal POI and the functions are enabled, the personal POI is highlighted on the map and an audible signal sounds.

For this purpose, both the corresponding function **Alert When Approaching** and the category containing the personal POI must be activated.

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Options:** turn and press the controller.
- ▶ Select **Personal POIs**.
- ▶ Select **Alert When Approaching**.
The menu displays the categories available on the SD card.
- ▶ Select **Audible** or **Optical**.
The function is switched on or off , depending on the previous status.
- ▶ **To select a category:** turn and press the controller.
The function is switched on or off , for all personal POIs of this category, depending on the previous setting.

Saving personal POIs and routes

General notes

Personal POIs and routes are geodata which are saved in open GPX format (GPS Exchange format) on the SD card.

Personal POI from current vehicle position or crosshair position

- ▶ Insert the SD memory card (▷ page 141).
- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ When the map is displayed, press the controller until a message appears.
The current vehicle position is saved to the **Not Classified** category on the SD card and also stored in the "Last destinations" memory (▷ page 81).
If the "Move map" function is selected (▷ page 53), the crosshair position is saved.
- ▶ **i** If no SD card is inserted, the personal POI will only be stored in the "Last destinations" memory.

Personal POI from destination address

- ▶ Insert the SD memory card (▷ page 141).
- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ Call up the address entry menu and enter the destination address (▷ page 56).
- ▶ To select **Save**: slide **⊙**↓ the controller.
- ▶ Turn and press the controller.
- ▶ To select **To Memory Card**: turn and press the controller.
- ▶ Enter the name.
The current address is saved in the **Not Classified** category on the SD card.

- ❶ You can select a destination from the **From Last Destinations** or **From Contacts** memories and save it on the SD card.
 - **From Last Destinations** (▷ page 60)
 - **From Contacts** (▷ page 61)

Personal route from a tour including intermediate destinations

- ▶ Insert the SD memory card (▷ page 141).
- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ Enter a destination, e.g. by address (▷ page 56).
- ▶ Start route calculation (▷ page 58).
- ▶ Create intermediate destinations (▷ page 64).
- ▶ To select **Save As Personal Route** in the intermediate destinations menu: turn and press the controller.
The route is saved in the **Personal Routes** folder on the SD card.

Importing personal POIs and routes via Mercedes-Benz Apps

You can use Mercedes-Benz Apps (e.g. Download POI) to import destinations to the navigation system. These have their own symbol and are filed in the **Mercedes-Benz Apps** category. You can save the imported destinations and routes as personal POIs and routes (▷ page 67). When importing routes, please note:

- The Mercedes-Benz Apps may generate a route based on a different map from the one used by the multimedia system. Points on the

route may therefore be situated off the digital roads.

- The Mercedes-Benz Apps minimize the number of route points offered.
For this reason an imported route commenced in the multimedia system may deviate from the original route from the Mercedes-Benz Apps.

Selecting and editing personal POIs and routes


Selecting

- ▶ Insert the SD memory card (▷ page 141).
- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙**↓ the controller.
- ▶ To select **Destination**: turn and press the controller.
- ▶ Select **From Memory Card**.
- ▶ To select a category or **Personal Routes**: turn and press the controller.
The available personal POIs or route entries are displayed.
- ▶ Select personal POI or personal route.
The address of the personal POI appears or the personal route is displayed in the map.


 
If a large number of entries are stored, a register for quick selection appears. Personal POIs and routes can be stored with different character sets (e.g. Latin, Cyrillic, Arabic).

- ▶ **To select a register:** slide **⊙**▶ the controller.
- ▶ Select a character by turning the controller.

Editing

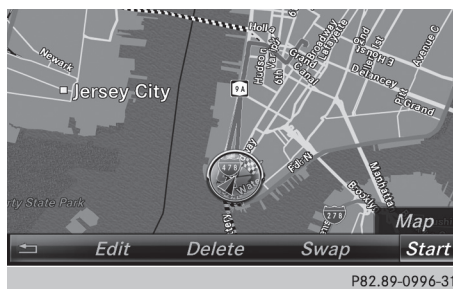

The example shows a personal route.

- ▶ Select personal POI or personal route (▷ page 68).
- ▶ **To explore a personal POI or route:** slide  and press the controller to select **Map**. The map with the crosshair appears and shows the destination.
- ▶ Scroll the map (▷ page 53).
- ▶ Set the map scale (▷ page 82).
- ▶ To return to the menu: press the  button.
- ▶ **To call the personal POI:** turn and press the controller to select **Call**. If a mobile phone is connected to the multimedia system and the telephone number is available, the call is connected (▷ page 97).
- ▶ **To change the name:** turn and press the controller to select **Edit**.
 - ▶ Select **Change Name** or **Edit Icon**.
 - ▶ To change name: enter character (▷ page 30).
- ▶ **To delete a personal POI or route:** turn and press the controller to select **Delete**. A prompt will appear.
- ▶ Select **Yes** or **No**. If you select **Yes**, the personal destination or personal route is deleted.
- ▶ **To select the outward and return routes:** select **Swap** by turning and pressing the controller. The starting and destination positions of your personal route, and thus the direction for route guidance, are switched round. One-way streets or restricted intersections are taken into consideration. Therefore, the outward and return routes may differ from each other.
- ▶ **To save a personal POI:** turn and press the controller to select **Save**.
- ▶ Continue saving (▷ page 80).
- ▶ **To start route guidance:** select **Start** by turning and pressing the controller.



Recording the route

General notes

When recording the route, bear in mind the following:



- If the SD card is inserted, it must not be removed during recording.
- If route recording is started manually, it must be finished manually before the multimedia system is switched off.
- The multimedia system minimizes the number of route points recorded. Therefore when the recorded route is subsequently commenced, it may differ from the route that was originally recorded.

Starting/finishing route recording

- ▶ Insert the SD memory card (▷ page 141).
- ▶ **To switch to navigation mode:** press the  button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Destination:** turn and press the controller.
- ▶ Select **From Memory Card**.
- ▶ Select **Start Route Recording**. The route is recorded and **REC** appears at the bottom edge of the screen.
- ▶ To stop recording, select **End Route Recording** from the menu. The route is stored under **Personal Routes**.

Displaying/editing the recorded route



- ▶ Insert the SD memory card (▷ page 141).
- ▶ **To switch to navigation mode:** press the  button.
- ▶ **To show the menu:** slide  the controller.

- ▶ To select **Destination**: turn and press the controller.
- ▶ Select **From Memory Card**.
- ▶ Select **Personal Routes**.
Previously recorded routes are displayed.
- ▶ To select a route: turn and press the controller.
The map appears with a menu. The recorded route is shown on the map in blue.
- ▶ **To start route calculation**: select **Start**.
- ▶ **To change the name and symbol**: select **Edit**.
- ▶ Select **Change Name** or **Edit Icon**.
- ▶ To change name: enter character (▷ page 30).
- ▶ To change symbol: select a symbol.
The symbol is saved.

Route guidance

General notes

Always observe the traffic regulations when driving. Road and traffic rules and regulations always have priority over system driving recommendations.

The multimedia system calculates the route to the destination without taking account of the following, for example:

- traffic lights
- stop and yield signs
- parking or stopping restrictions
- road narrowing
- temporary traffic rules and regulations

The multimedia system may give differing navigation commands if the actual street/traffic situation does not correspond with the digital map's data. For example, if the road layout or the direction of a one-way street has been changed.

Route guidance begins once a route has been calculated (▷ page 58).

The multimedia system guides you to your destination by means of navigation announcements in the form of audible navigation announcements and route guidance displays.

Navigation messages guide you during the journey without distracting you from traffic conditions or driving. Please always use this feature instead of consulting the map display for direc-

tions. The symbols or the map display could distract you from traffic conditions and driving.

The route guidance displays can be seen if navigation mode is switched on.

If you do not follow the navigation announcements or if you leave the calculated route, the multimedia system automatically calculates a new route to the destination.

If the digital map contains the corresponding information, the following applies:

- During route guidance, the multimedia system tries to avoid roads with restricted access. These include, for example, roads which are closed to through-traffic.
- Roads that have time restrictions (e.g. closed on Sundays and public holidays) are considered for route guidance on days when they are open. For this purpose, the relevant times must be correctly stored in the database.

Change of direction

Overview

Changes of direction have three phases:


- Preparation phase
- Announcement phase
- Change-of-direction phase

Changes in direction are also shown in the multifunction display of the instrument cluster (see the vehicle Operator's Manual).

Preparation phase

The multimedia system prepares you for the upcoming driving maneuver, e.g. with the announcement "Prepare to turn right". You see the full-screen map.

Announcement phase

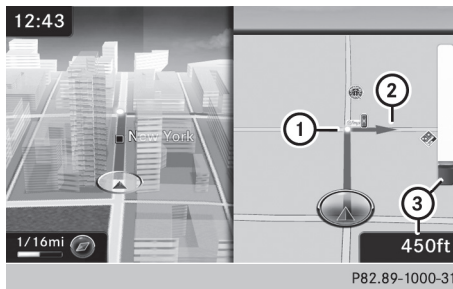


- ① Point at which the change of direction takes place (white dot)
- ② Change of direction (turn right here)
- ③ Distance to the next change of direction

The multimedia system announces the imminent change of direction. The change of direction is announced ahead of time, with the announcement "Turn right in 300 meters", for example.

The display is now split into two sectors. The map is shown on the left side of the display, and a detailed image of the intersection or a 3D image of the imminent change of direction is shown on the right side of the display.

Change-of-direction phase

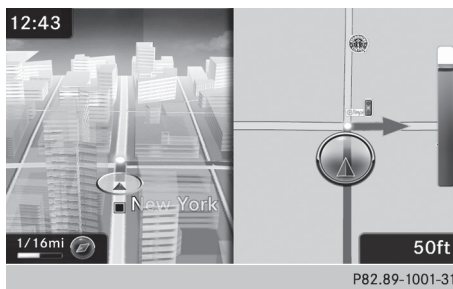


The multimedia system announces the immediate change of direction. The change of direction is announced ahead of time, e.g. with the announcement "Now turn right".

The display is split in two like in the announcement phase.

The change of direction is performed when the light-colored bar on the right drops down to 0 ft and the current vehicle position symbol has reached the white change-of-direction point.

When the change of direction is completed, the map will appear in full screen mode again.

Display on highways

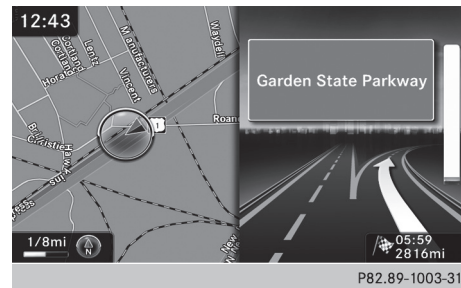

The image shows an example of route guidance at a highway intersection when driving on a highway.

Lane recommendations

Display on multi-lane roads



- ① Lanes not recommended (dark gray)
- ② Possible lane (light gray)
- ③ Recommended lanes (white)

If the digital map contains the relevant data, the multimedia system can display lane recommendations on multi-lane roads for the next change of direction.


Lane not recommended ①: you will not be able to complete the next change of direction if you stay in this lane.

Possible lane ②: you will be able to complete the next change of direction in this lane.

Recommended lane ③: in this lane you will be able to complete the next change of direction and the one after that.

Lane recommendations are also shown in the multifunction display of the instrument cluster (see the vehicle Operator's Manual).

Approaching new lanes

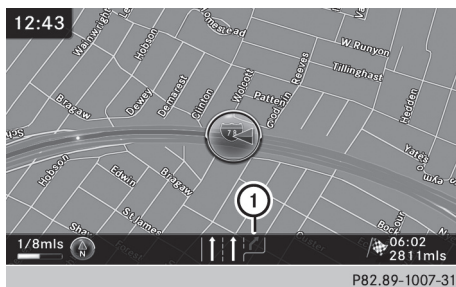


① Approaching new lane

During the change of direction, new lanes may be added. These will be shown in the display of lane recommendations with a lower boundary line.

Highway information

Display mode

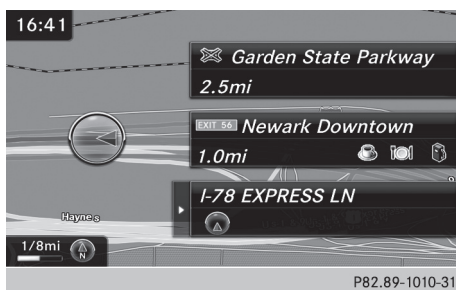

Requirement: the **Highway Information** map content must be enabled (▷ page 84).

While driving on the highway, gas stations, rest stops, rest areas and highway exits are displayed along with their immediate distances from the current vehicle position.

Calling up the selection mode



- ▶ When highway information is displayed, slide the controller. The marker is on the highway information. The associated position is highlighted on the map.
- ▶ To select the desired rest stop/freeway exit: turn and press the controller. The available POIs are displayed.

Starting route guidance to a POI



Highway information enables route guidance to a POI and other functions.

- ▶ To select a POI: turn the controller and press to confirm. The POI details are displayed. You can perform the following functions:
 - Store in the address book (▷ page 80)
 - Save to the SD card (▷ page 80)
 - View on the map (▷ page 85)
 - Call, if a mobile phone is connected and a phone number is available (▷ page 97)
 - View the vicinity of the destination
 - Requirements USA: street images are available and mbrace is activated for Internet access (▷ page 122).
 - Requirements Canada: street images are available and a mobile phone is connected

to the multimedia system via Bluetooth® (▷ page 91) or USB (▷ page 150).


- Load data from the Internet
Requirements USA: an Internet address is available and mbrace is activated for Internet access (▷ page 91).
Requirements Canada: an Internet address is available and a mobile phone is connected to the multimedia system via Bluetooth® (▷ page 91) or USB (▷ page 150).
- Select for route guidance and calculate a route to it (▷ page 58)

Using the traffic jam function



Highway information enables the use of the traffic jam function. The remaining route on the highway in this case is blocked in the direction of travel from the selected exit.

- ▶ To select **Detour**: turn and press the controller.
The traffic jam function appears (▷ page 75).

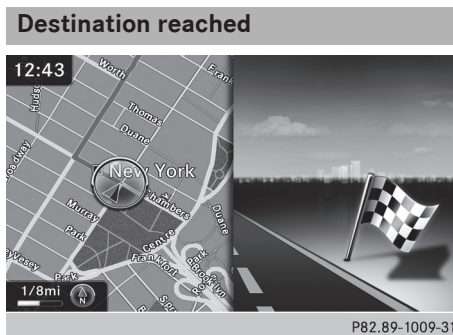

Once the destination is reached, you will see the checkered flag. Route guidance is finished.

Navigation announcements

Repeating navigation announcements

If you missed the current navigation announcement, you can call it up again.

- ▶ **To switch to navigation mode**: press the button.
- ▶ **To show the menu**: slide the controller.
- ▶ To select : turn and press the controller.

i If you previously assigned the **Repeat Spoken Driving Recomm.** function to the Favorites button, you can select the function using the Favorites button instead (▷ page 41).

Setting the volume manually

- ▶ During a navigation announcement, turn the control knob.
- i** When you start the engine, the volume will be at its lowest setting.

Switching navigation announcements on/off

- ▶ **To deactivate navigation announcements**: during a navigation announcement, press the button on the control panel.

or

- ▶ During a navigation announcement, press the button on the multifunction steering wheel.
The **Spoken driving recommendations have been deactivated.** message appears.

- ▶ **To switch navigation announcements back on**: slide the controller.

- ▶ To select : turn and press the controller.


The multimedia system automatically switches the navigation announcements back on when:

- a new route is calculated
- the multimedia system is switched back on
- the vehicle is started


A navigation message is given if the route is recalculated during dynamic route guidance due to new traffic reports (▷ page 76).


Canceling/continuing route guidance

Canceling route guidance

- ▶ Slide  the controller. The menu is shown.
- ▶ To select **Destination**, turn and press the controller.
- ▶ Select **Cancel Route Guidance**. The blue route line is no longer shown on the map.

Resuming route guidance

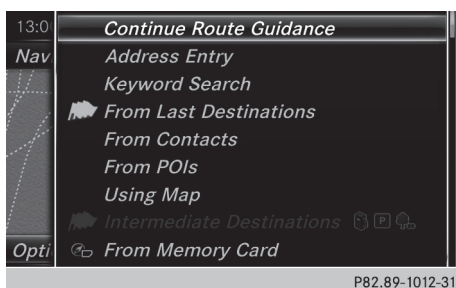


- ▶ Slide  the controller. The menu is shown.
- ▶ To select **Destination**: turn and press the controller.
- ▶ Select **Continue Route Guidance**. The multimedia system calculates the route.

Route information

Destination information



- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Route**: turn and press the controller.

- ▶ Select **Destination Information**.

The destination and existing intermediate destinations are displayed with distances, travel time and arrival time.


- ▶ **To select destination or intermediate destination:** turn and press the controller.

The address appears.

You can use these functions for the destination or intermediate destination:

- Store in the address book (▶ page 80)
- Save to the SD card (▶ page 80)
- View on the map (▶ page 85)
- Call if a mobile phone is connected and a phone number is available (▶ page 97)
- View the vicinity of the destination
 - Requirements USA: street images are available and mbrace is activated for Internet access (▶ page 122).
 - Requirements Canada: street images are available and a mobile phone is connected to the multimedia system via Bluetooth® (▶ page 91) or USB (▶ page 150).
- Load data from the Internet
 - Requirements USA: an Internet address is available and mbrace is activated for Internet access (▶ page 91).
 - Requirements Canada: an Internet address is available and a mobile phone is connected to the multimedia system via Bluetooth® (▶ page 91) or USB (▶ page 150).

Taking an alternate route

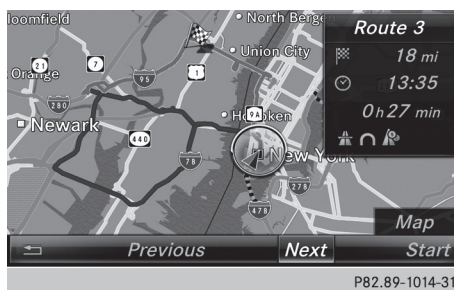


If the **Calculate Alternative Routes** setting is activated , different routes will be offered each time a route is calculated (▶ page 54).

You can call up alternative routes to the current route.

Route 1 is calculated with the current settings for the route type and route options and shown with a dark blue line.


Routes 2 and 3 are alternatives to route 1 and also displayed with a dark blue line.

Route 4 is the most economic route and is displayed with a green line.


- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Route**, turn and press the controller.
- ▶ Select **Alternative Route**.
- ▶ To display additional routes: select **Next** or **Prev..**
- ▶ **To start a new route guidance:** select **Start**.


Route list




- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Route**, turn and press the controller.
- ▶ Select **Route List**.
The route list shows the next change of direction and the immediate distances from the current vehicle position.
- ▶ **To display additional route sections:** turn the controller.
The position of the change of direction that belongs to the respective route section is indicated on the map with a direction arrow.


Where am I?

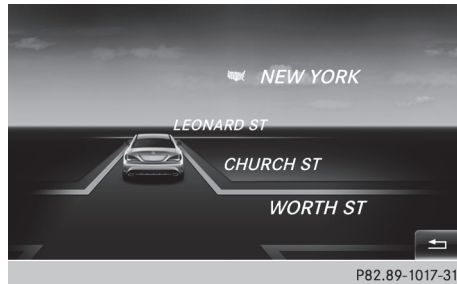

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Position**, turn and press the controller.
- ▶ Select **Where am I?**.
The street you are currently on and the previous and next intersections are displayed.

 Traffic jam function

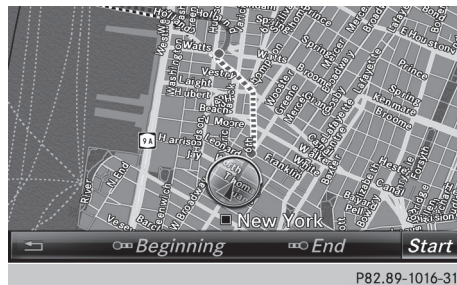

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Route**, turn and press the controller.
- ▶ Select **Detour**.
- ▶ **To specify the start of the traffic jam section:** select **Beginning**.
The next possible traffic jam section starting point is marked.
- ▶ Turn the controller.
The marking moves along the route to the next starting position.
- ▶ Press the controller.
The start of the traffic jam is set.

- ▶ **To specify the end of a traffic jam section:** select **End**.

The next possible traffic jam section end point is marked.

- ▶ Turn the controller.
The marking moves along the route to the next end position.
- ▶ Press the controller.
The end of the traffic jam is determined.
- ▶ **To calculate the detour:** select **Start**.

Off-road

General notes

The multimedia system may guide you to off-road routes that your vehicle cannot drive on without causing damage to the tires and wheels, or the vehicle itself. It is the driver's sole responsibility to determine the suitability of the route. The state and navigability of off-road routes may be influenced, for example, by factors such as time of day, time of year and current weather conditions. The multimedia system cannot judge these factors or take them into account for route guidance.

Route guidance to an off-road destination

The multimedia system can guide you to destinations which are within the area of the digital map, but which are not themselves on the map. These destinations are known as off-road destinations, which you can enter using the map, for example. In these cases, the multimedia system guides you for as long as possible with navigation announcements and displays on roads known to the system.

If the vehicle reaches an area which is not part of the digital map, the display appears as a split-screen view. On the right, an arrow appears that points to the off-road destination. You hear the announcement: "Please follow the arrow on the display". As the vehicle approaches the destination, you will see a display to this effect.

Route guidance from an off-road location to a destination

Off-road location: the vehicle's position is on the digital map, but the map does not contain any information about that location. The multimedia

system is able to guide you to a destination even from an off-road location.

At the start of route guidance, you will see the **Road Not Mapped** message, an arrow and the distance to the destination. The arrow shows the compass heading to the actual destination. As soon as the vehicle is back on a road known to the system, route guidance continues in the usual way.

Off-road during route guidance

Due to road construction, for example, there may be differences between the data on the digital map and the actual course of the road.

In such cases, the system will temporarily be unable to locate the vehicle position on the digital map. The vehicle is therefore in an off-road position.

In the display, you will then see the **Road Not Mapped** message, an arrow and the distance to the destination. The direction arrow shows the compass heading to the destination.

As soon as the system can assign the vehicle position to the map again, route guidance continues in the usual way.

Real-time traffic reports

Requirements

In order to receive real-time traffic reports via satellite radio, you need to subscribe to SIRIUS XM Satellite Radio Traffic Message Service.

Further information on satellite radio (> page 131).


The multimedia system can receive traffic reports via satellite radio and take account of these for route guidance in the navigation system. Received traffic reports are displayed on the map either as text or as symbols.

Real-time traffic reports on the map



Traffic reports are shown on the map with symbols and colored lines. The symbols indicate the type of traffic report and the colored lines show the extent of the area affected by the traffic incident. The symbols are shown in map scales from 1/32 miles (20 m) to 10 miles (10 km). When ① is displayed, traffic reports can be received or traffic reports are available. If it is not displayed, no reception is possible.

- ▶ **To hide the menu:** slide and press the controller. The map can be seen in the full-screen display.
- ▶ **To set the map scale:** turn the controller until the desired map scale is selected. The legend shows the symbolic traffic messages on the map.

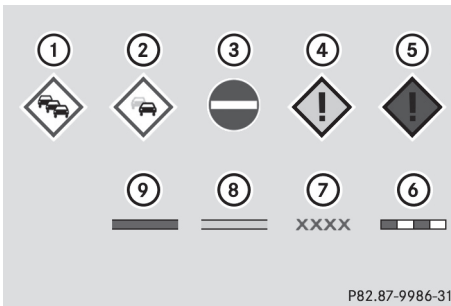


- ① Traffic jam on the route
- ② Slow-moving traffic on the route
- ③ Road blocked
- ④ Traffic jam
- ⑤ Traffic warning
- ⑥ Dashed red and white line delimiting the traffic warning
- ⑦ Road block (red crosses along the affected road)

- ⑧ Slow-moving traffic (orange line along the affected route)
- ⑨ Traffic jam (red line along the affected route)

Displaying real-time traffic reports

Starting a search for traffic reports

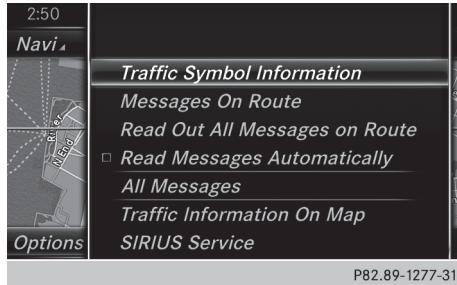


- ▶ **To switch to navigation mode:** press the button.
- ▶ **To show the menu:** slide the controller.
- ▶ To select **Traffic:** turn and press the controller.
- ▶ **To close the report:** press the controller.

Traffic symbol information



- ① Affected roads with indication of direction
- ② Symbol for report type, e.g. traffic flow message
- ▶ **To switch to navigation mode:** press the button.
- ▶ **To show the menu:** slide the controller.
- ▶ To select **Traffic:** turn and press the controller.


- ▶ To select **Traffic Symbol Information**: turn and press the controller. The map appears and shows the available traffic information as icons. The first traffic information is highlighted.
- ▶ To highlight additional traffic symbols, select **Next** or **Previous**.
- ▶ To **move the map**: select **Map**. You can move the map to enable further traffic information to be displayed.

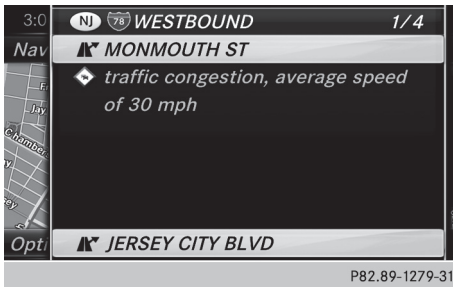


You can have the traffic report relevant to a traffic icon shown.

- ▶ To select **Details**: turn and press the controller.

The report shows the following information:




- State/province, road and display of the affected direction
- Section of the road to which the traffic report applies
- Traffic icon and traffic report
- ▶ To **close the detailed display**: press the  button.

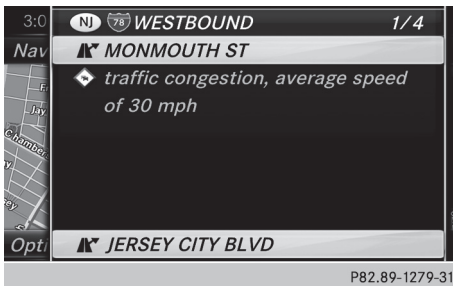Displaying reports on the route






The function is only available while route guidance is active. It shows the available traffic reports affecting the current route.


If there are no reports for the route or the function is not supported in the selected language: the **Messages On Route** menu item is gray and cannot be selected.

- ▶ To **switch to navigation mode**: press the  button.
- ▶ To **show the menu**: slide  the controller.
- ▶ To select **Traffic**: turn and press the controller.
- ▶ To select **Messages On Route**: turn and press the controller. The traffic report window appears. Several traffic reports may be available for the calculated route, marked for example by 1/4. The report shows the following information:
 - State/province, road and display of the affected direction
 - Section of the road to which the traffic report applies
 - Traffic icon and traffic report
- ▶ To **display the next/previous traffic report**: turn the controller.
- ▶ To **close the display**: press the  button.

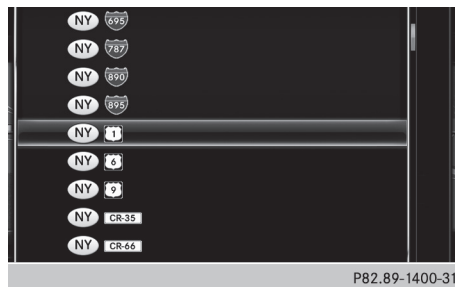Displaying all traffic reports





- ▶ To **switch to navigation mode**: press the  button.
- ▶ To **show the menu**: slide  the controller.
- ▶ To select **Traffic**: turn and press the controller.
- ▶ To select **All Messages**: turn and press the controller. A list is shown containing all roads, areas or regions affected by traffic reports. Roads, areas or regions not on the route also appear in the list.

- ▶ To select the road, area or region: turn the controller and press to confirm. The traffic report is displayed (▷ page 78). There may be several traffic reports for the affected road.
- ▶ **To close the display:** press the  button.

Activating/deactivating traffic information on the map

You can switch the following traffic information on the map on/off:

- Incidents
- Speed & Flow
- Free Flow
- ▶ **To switch to navigation mode:** press the  button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Traffic:** turn and press the controller.
- ▶ To select **Traffic Information On Map:** turn and press the controller.
- ▶ Select **Incidents, Map with Uncongested Roads** or **Free Flow**.
The display is on or off .

Reading out traffic reports on the route

Introduction

The text reader function is only available while route guidance is active. It reads out traffic reports affecting the current route.

You can select from the following text reader properties:

- Language (▷ page 41)
- Text reader speed (▷ page 37)



You can start the text reader function manually or set it to automatic.

Starting the text reader function manually

- ▶ **To switch to navigation mode:** press the  button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Traffic:** turn and press the controller.

- ▶ Select **Read Out All Messages on Route**. The multimedia system reads out the reports in sequential order.
If there are no reports for the route, the **Read Out All Messages on Route** menu item is gray and cannot be selected.
- ▶ To cancel the read-aloud function: select **Cancel Read-Aloud Function**. The multimedia system reads the current report aloud and then exits the read-aloud function.

Automatic text reader function

- ▶ **To switch to navigation mode:** press the  button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Traffic:** turn and press the controller.
- ▶ Select **Read Messages Automatically**. Depending on the previous state, switch the option on or off .

Recalculating the route dynamically

Route types **Dynamic Traffic Route** and **Dynamic TRF. Route After Request** take into account all of the traffic reports they receive for the current route when calculating the route (▷ page 54).

If you have selected **Dynamic Traffic Route** as the route type, the multimedia system guides you to your destination along the updated route.

If you have selected the route type **Dynamic TRF. Route After Request**, a prompt will first appear.

You can now decide whether to:

- accept the detour proposed by the multimedia system or
- continue along the original route
- ▶ To accept the proposed detour: press the controller.
- ▶ To reject the proposed detour and continue with the original route: turn the controller and press to confirm.
The original route is continued.

Storing destinations

General notes

In the "Last destinations" memory, the following are stored:

- destinations and intermediate destinations according to the route calculation
- the current vehicle position or the crosshair position, if these are saved
- personal routes

If the memory is full, the oldest destination is overwritten.

You can save destinations permanently in the address book (▷ page 80) and on an SD card (▷ page 80). For instance, this is possible immediately after entering an address.

For further information on the address book, see (▷ page 102)

Storing the destination in the address book

Storing as a new contact



The example shows a POI.

- ▶ To select **Save**: turn and press the controller. A menu appears.
- ▶ Select **As New Address Book Entry**.
- ▶ Select **Not Classified, Home** or **Work**. An input menu shows the destination address.
- ▶ Enter a surname and first name. Character entry (▷ page 29).
- ▶ To select **OK**: turn and press the controller. The **Saving Successful** message appears. The destination address is saved in the address book as a navigable contact.

Adding to a contact



The example shows a POI.

Requirement: the address book contains contacts.

- ▶ To select **Save**: turn and press the controller. A menu appears.
- ▶ Select **Add to Address Book Entry**.
- ▶ Select **Not Classified, Home** or **Work**. The address book appears.
- ▶ Search for a contact (▷ page 103).
- ▶ Press the controller. The **Saving Successful** message appears. The destination address is allocated to a contact in the address book. Telephone numbers are not transferred to the telephone number fields of the address book. After selecting the destination address from the address book for navigation, the associated telephone number will be displayed. If the contact already has two destination addresses, a prompt will appear asking if a destination address should be overwritten.
- ▶ Select **Yes** or **No**. If you select **Yes**, a list showing both destination addresses appears.
- ▶ To select the destination address: turn and press the controller. The destination address is overwritten.

Saving a destination to an SD card

- ▶ Insert the SD memory card (▷ page 141).
- ▶ Display a POI, for example.
- ▶ To select **Save**: turn and press the controller. A menu appears.
- ▶ Select **To Memory Card**.

- ▶ Select **Not Classified** or, if available, select a category that you have created yourself. An input menu appears.
- ▶ Enter a surname and first name. Character entry (> page 30).
- ▶ Select **OK**.
The **Saving Successful** message appears. The destination is saved to the SD card.

- ▶ To select **Position**: turn and press the controller.
- ▶ Select **Save**.
The current crosshair position is saved to the "Last destinations" memory.
If an SD card is inserted, the current crosshair position will also be saved in the **Not Classified** category.

Saving the current vehicle position

Using the map

- ▶ **To switch to navigation mode**: press the **NAVI** button.
- ▶ When the map is shown, press and hold the COMAND controller until you hear a tone. The current vehicle position is saved to the "Last destinations" memory.
If an SD card is inserted, the current vehicle position will also be saved in the **Not Classified** category.

Using the menu

- ▶ **To switch to navigation mode**: press the **NAVI** button.
- ▶ **To show the menu**: slide $\odot \downarrow$ the controller.
- ▶ To select **Position**: turn and press the controller.
- ▶ Select **Save**.
- ▶ Store the destination in the address book (> page 80).
- ▶ Save the destination to the SD card (> page 80).

Saving the crosshair position

- ▶ **To switch to navigation mode**: press the **NAVI** button.
- ▶ **To display the crosshair**: press the controller.
- ▶ Move the map to the desired position (> page 53).
- ▶ **To show the menu**: press the controller.

Editing the last destinations

	RED LOBSTER, 5 TIME	Details
	BROADWAY, NEW YORK, L	Delete
	ALI MOLINA, US, Dest. fro	Delete All
	ABERCROMBIE, US, Dest.	

P82.89-1078-31

- ▶ **To switch to navigation mode**: press the **NAVI** button.
- ▶ **To show the menu**: slide $\odot \downarrow$ the controller.
- ▶ To select **Destination**: turn and press the controller.
- ▶ Select **From Last Destinations**.
The "Last destinations" memory appears.
- ▶ **To save the destination**: select the destination.
The destination address appears.
- ▶ Store the destination in the address book (> page 80).
- ▶ Save the destination to the SD card (> page 80).
- ▶ **To view the details**: while in the "Last destinations" memory, turn the controller and highlight the entry.
- ▶ Slide $\odot \rightarrow$ the controller.
A menu appears.
- ▶ To select **Details**: press the controller.
- ▶ **i** The destination address can be changed if desired.
- ▶ **To delete one or all destinations**: while in the "Last destinations" memory, turn the controller and highlight the entry.
- ▶ Slide $\odot \rightarrow$ the controller.
A menu appears.

- ▶ To select **Delete** or **Delete All**: turn and press the controller. A prompt appears.
- ▶ Select **Yes** or **No**.
Selecting **Yes** deletes the selected destination or all destinations.

Map functions

General notes

Company logos displayed on the map are trademarks of the respective companies and used solely for the purpose of indicating the locations of these companies. The use of such logos on the map does not indicate approval of, support of or advertising by these companies for the navigation system itself.

Navigation

Map settings

Setting the map scale



Requirement: the map is in full screen mode, the menu is faded out (▷ page 53).


The lower left-hand section of the map shows the currently set map scale and compass needle.

Right-hand-drive vehicles: the currently set map scale and compass needle are displayed in the lower right-hand section of the map.


- ▶ **To show the map in full screen mode:** to hide the menu, push the button.
- or
- ▶ Slide the controller to the center of the map and press to confirm.

- ▶ **To set the map scale:** as soon as you turn the controller, the scale bar appears on the bottom of the display.
- ▶ Turn the controller until the needle points to the desired map scale.
Once you are finished selecting a map scale, the new map scale will be shown.

Selecting map orientation

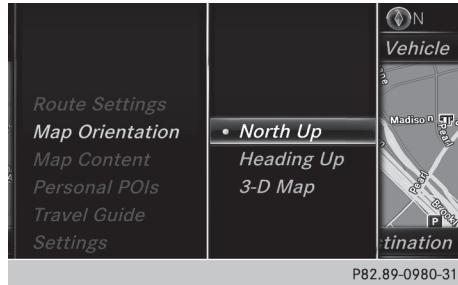


- ▶ **To switch to navigation mode:** press the button.
- ▶ **To show the menu:** slide the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Map Orientation**.
The • dot indicates the current setting.
- ▶ Turn and press the controller.
The map orientation is set.

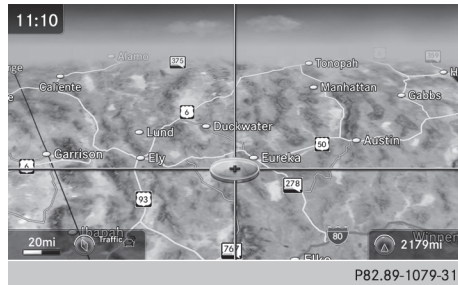

The image is an example of the 3D map display with crosshair.

Change map direction	Explanation
North Up	ⓘ The map view is displayed so that north is always up.
Heading Up	ⓘ The map view is aligned to the direction of travel. The direction of travel is always at the top; the red tip of the symbol points north.
3-D Map	ⓘ The map view is aligned to the direction of travel. The map displays a 3D oblique view with elevation; the red tip of the symbol points north.

Selecting POI symbols on the map

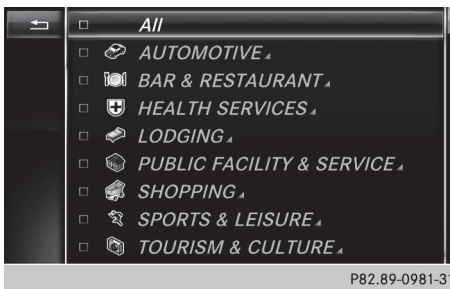

POIs can be displayed as symbols in the map display. POIs include, for example, gas stations, hotels and restaurants.

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Options:** turn and press the controller.
- ▶ Select **Map Content**.
- ▶ Select **POI Symbols On Map**.
The • dot indicates the current setting.
- ▶ Turn and press the controller.
Default Symbols shows symbols of predefined categories in the map.
Custom Symbols allows symbols to be selected from other/all available categories.
- ▶ Turn and press the controller.
You have the option of selecting symbols to be displayed or not displayed on the map.

The list shows all symbols that are contained on the digital map across all countries. However, not all points of interest are available in all countries. As a result, certain point of interest symbols may not be displayed on the map, even if the symbol display is switched on.

Selecting text information on the map

At the bottom of the display, you can specify whether to display geo-coordinates or not to display text information for the street you are currently on.

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Options:** turn and press the controller.
- ▶ Select **Map Content**.
- ▶ Select **Text Information On Map**.
The • dot indicates the current setting.
- ▶ Turn and press the controller.
Current Street shows the current street at the bottom of the display.
Geo-coordinates shows the longitude and latitude, elevation and number of satellites received.
The elevation shown may deviate from the actual elevation.
- ▶ Turn and press the controller.

Displaying the range on the map


The range can be displayed on the map for electric vehicles. A circle appears around the current vehicle position.

For further information on range, see the vehicle Operator's Manual.

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Options:** turn and press the controller.
- ▶ Select **Map Content**.
- ▶ Select **Range on Map**.
Switch the display in the map on or off .

Switching highway information on/off


While driving on the highway, gas stations, rest stops, rest areas and highway exits are displayed along with their immediate distances from the current vehicle position (▷ page 72).

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Options:** turn and press the controller.
- ▶ Select **Map Content**.
- ▶ Select **Highway Information**.
Switch the display in the map on or off .

Traffic Sign Assist


The function is available depending on the equipment installed in the vehicle.

The map shows traffic signs detected by Traffic Sign Assist (see the vehicle Operator's Manual).


- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Options:** turn and press the controller.
- ▶ Select **Map Content**.
- ▶ Select **Traffic Sign Assist**.
Switch the display in the map on or off .

Displaying the next crossroads

If route guidance is not active, the next crossroads can be displayed at the upper edge of the display.

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Options:** turn and press the controller.
- ▶ Select **Map Content**.
- ▶ Select **Next Intersecting Street**.
Switch the display in the map on or off .

Showing the map version

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.

- ▶ To select **Options:** turn and press the controller.

- ▶ Select **Map Content**.


- ▶ Select **Map Version**.

Information on the current map version is shown. Information about new versions of the digital map can be obtained from an authorized Mercedes-Benz Center.

Rotating the 3D map



You can use this function to explore the vicinity of the destination in a 3D view. The function is available in all map scales.


- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Position:** turn and press the controller.
- ▶ Select **3D Map Rotation**.
- ▶ Turn the controller to change to the 3D map perspective.

Additional functions:

- Moving the map (▷ page 53)

Map display

Displaying the navigation map

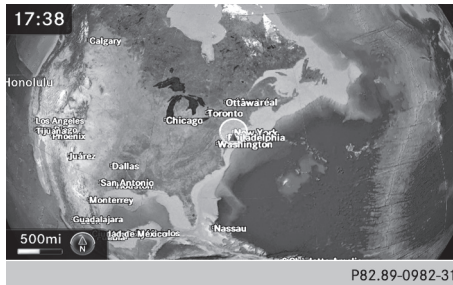


The multimedia system shows the navigation map in globe projection. This allows for a realistic map display free from distortion in all map scales.

Satellite maps are shown in map scales from 2 miles to 1000 miles.

Other functions:

- Moving the map (> page 53)
- Changing the map scale (> page 82)

Building images

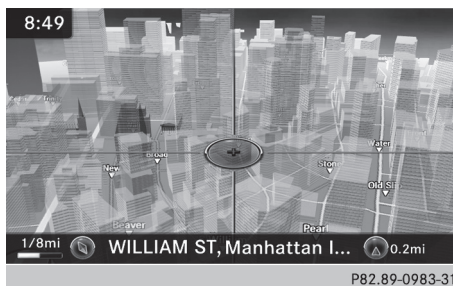

In small map scales (1/32 mile, 1/16 mile), important buildings are depicted realistically on the map. Other buildings are shown as models.

Avoiding an area

General notes

The multimedia system enables you to avoid areas you do not wish to drive through.

If you activate or deactivate a route block while route guidance is active, the multimedia system will calculate a new route. If you activate or


deactivate a route block while route guidance is inactive, the multimedia system will use the new setting for the next route guidance.

The calculated route may include an area to be avoided if:


- your destination is located in such an area
- there is no alternative route available

Highways within blocked areas are always taken into consideration in the route calculation.

Avoiding a new area

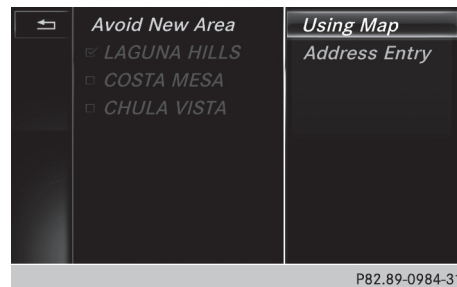

▶ **To switch to navigation mode:** press the **NAVI** button.

▶ **To show the menu:** slide  the controller.

▶ To select **Options**: turn and press the controller.

▶ Select **Route Settings**.

▶ Select **Avoid Options**.

▶ Select **Avoid Area**.

▶ Select **Avoid New Area**.

A menu appears.

▶ Select **Using Map** or **Address Entry**.

If you select **Using Map**, the map with crosshair appears.


If you select **Address Entry**, the address entry menu appears where you can enter the address (> page 56). The map appears with the crosshair after the address is entered.



Navigation

- ▶ **To select an area:** when the map with crosshair appears, press the controller. A red square appears on the map, symbolizing the area to be blocked.
- ▶ **To change the size of the area:** turn the controller. The map scale is shown at the bottom of the display. The needle points to the map scale currently selected.
- ▶ When the desired size is set, press the controller. The area is entered into the list.

Turning an area on/off and displaying/ changing the area

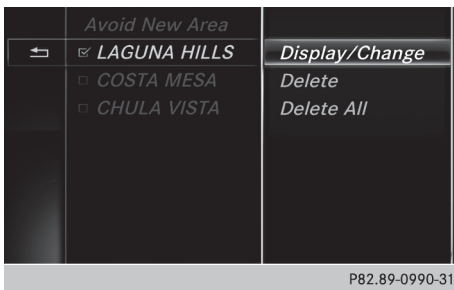

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide $\odot \downarrow$ the controller.
- ▶ To select **Options:** turn and press the controller.
 - ▶ Select **Route Settings**.
 - ▶ Select **Avoid Options**.
 - ▶ Select **Avoid Area**. A list appears.
- ▶ **To switch an area to avoid on/off:** select an area to mark by turning and pressing the controller. The area will be avoided or not .

- ▶ **To display/change an area:** mark an area by turning the controller.
- ▶ Slide $\odot \rightarrow$ the controller.
- ▶ To select **Display/Change:** press the controller. The map with the crosshair appears. The area currently blocked is displayed as a red square.
- ▶ To move the area to a new location: slide $\leftarrow \odot \rightarrow$, $\uparrow \odot \downarrow$, $\swarrow \odot \nwarrow$ the controller.
- ▶ To change the size of the area, press the controller.
- ▶ Turn the controller.
- ▶ To apply the changes, press the controller. A message appears stating that the area has been set.


Deleting one/all areas

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide $\odot \downarrow$ the controller.
- ▶ To select **Options:** turn and press the controller.
 - ▶ Select **Route Settings**.
 - ▶ Select **Avoid Options**.
 - ▶ Select **Avoid Area**. A list appears.
- ▶ **To delete an area:** mark an area by turning the controller.
 - ▶ Slide $\odot \rightarrow$ the controller.
 - ▶ Select **Delete** or **Delete All**. A prompt appears asking whether you wish to delete the area.
 - ▶ Select **Yes** or **No**. After selecting **Yes**, the area is deleted.
- ▶ **To delete all areas:** when the list appears, slide $\odot \rightarrow$ the controller.
 - ▶ Select **Delete All**. A prompt appears asking whether you wish to delete all areas.
 - ▶ Select **Yes** or **No**. After selecting **Yes**, all areas are deleted.


SIRIUS XM service

Displaying SIRIUS XM service information

You can display the SIRIUS XM service information.

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Traffic**: turn and press the controller.
- ▶ Select **SIRIUS Service**.
The provider's phone number (SIRIUS XM) and the serial number of your service module are displayed.

Registering the SIRIUS XM service

- ▶ Call the provider telephone number shown on the multimedia system display.
-  You can also have the satellite service activated online. To do so, visit the SIRIUS XM Radio website at <http://www.sirius.com> (USA).

Once the connection has been established:

- ▶ Follow the service employee's instructions. The activation process may take up to ten minutes.

If registration is not included when purchasing the system, your credit card details will be required to activate your account.

Updating the digital map

Introduction

The digital maps generated by the map software become outdated in the same way as conventional road maps. Optimal route guidance can only be provided by the navigation system in conjunction with the most up-to-date map software.

Information about new versions of the digital map can be obtained from an authorized Mercedes-Benz Center. You can have the digital map updated there using a data medium, or you can update it yourself.

Carrying out a manual update

 
You can carry out the update yourself.

The update process may take some time (up to 45 minutes), depending on the size of the digital map. The update will be completed more quickly if the vehicle is stationary. If you begin the update while the vehicle is stationary and the starter battery has insufficient power, the multimedia system may switch off automatically. This protects the battery. In order to prevent this, a suitable power supply to the vehicle must be maintained.

Navigation functions

Calling up the navigation system menu




- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller. **Navi** is highlighted in the main function bar.
- ▶ Press the controller. The navigation menu appears.
- ▶ Turn the controller to display the navigation functions one after another.
- ▶ To switch to the map, turn the controller until **Navigation** appears and press the controller.


Calling up the online map display

Online search requirement (USA): mbrace must be activated for Internet access (▷ page 122).


- ▶ Call up the navigation menu (▷ page 87).
- ▶ Turn the controller until **Online Map Display** is brought to the front.

- ▶ Press the controller.
The online connection is established. Once the connection is established, the map shows the vicinity of the current vehicle position.
- ▶ **To exit the online map display:** press the  button.

Calling up the compass display

- ▶ Call up the navigation menu (▷ page 87).
- ▶ Turn the controller until **Compass** is brought to the front.
- ▶ Press the controller.
The compass display provides the following information:
 - The current direction of travel with bearing (360 degree format) and compass direction
 - Longitude and latitude coordinates in degrees, minutes and seconds
 - Height (rounded off) above sea level
 - Number of GPS satellites from which a signal can be received
- ▶ To select **Compass On Map:** turn and press the controller.
- ▶ **To exit the compass display:** press the  button.

Info on navigation

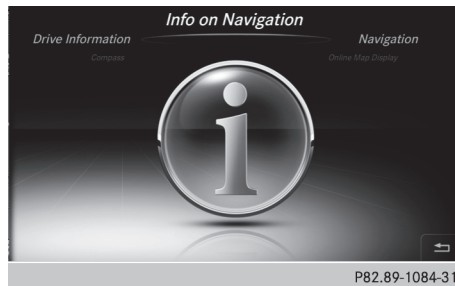

- ▶ Call up the navigation menu (▷ page 87).
- ▶ Turn the controller until **Info on Navigation** is brought to the front.
- ▶ Press the controller.
The Digital Operator's Manual is opened at the section on navigation.

Problems with the navigation system

Problem	Possible causes/consequences and ▶ Solutions
The multimedia system does not resume route guidance after the journey has been interrupted.	<p>Route guidance is canceled if you interrupt the journey for more than two hours.</p> <p>"Interrupting the journey" refers to stopping the vehicle.</p> <p>"Continuing route guidance" refers to switching the multimedia system back on and driving on.</p> <p>▶ Continue route guidance manually (▷ page 74).</p>

Problem	Possible causes/consequences and ► Solutions
The multimedia system is unable to determine the vehicle's position.	<p>The multimedia system must identify the vehicle's position again after it has been transported.</p> <p>Example:</p> <ul style="list-style-type: none"> • After transporting the vehicle by ferry • After transporting the vehicle by motorail <p>► Start the vehicle and pull away. The multimedia system calculates the vehicle's position. Depending on the driving situation, this may take some time.</p> <p>Route guidance may be restricted during the determination of the vehicle's position.</p> <p>When positioning is complete, route guidance is resumed with navigation announcements and route guidance displays.</p>

Problem	Possible causes/consequences and ► Solutions
The digital map is not compatible with the vehicle software.	<p>The data medium containing the digital map cannot be used for the update.</p> <ul style="list-style-type: none"> ► To confirm the message: press the controller. ► Remove the data medium. ► Have the data medium checked at an authorized Mercedes-Benz Center.

Problem	Possible causes/consequences and ► Solutions
The multimedia system asks for an activation code during the map update.	<p>The digital map is secured with an activation code.</p> <ul style="list-style-type: none"> ► Consult an authorized Mercedes-Benz Center.

Problem	Possible causes/consequences and ► Solutions
The map software update has failed.	<p>The digital map can be installed with a DVD, SD card or USB stick.</p> <ul style="list-style-type: none"> ► Check the readability of the data medium, e.g. in a PC. ► To restart the update: insert the DVD. <p>or</p> <ul style="list-style-type: none"> ► Insert an SD card or USB stick.
	<p>The multimedia system asks for an activation code during the map update. The code must be validated in the vehicle.</p> <ul style="list-style-type: none"> ► Start the vehicle. ► To restart the update: insert the DVD, SD card or connect a USB device.
	<p>The multimedia system's integral hard disk has been physically damaged.</p> <ul style="list-style-type: none"> ► Consult an authorized Mercedes-Benz Center.

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Telephone

Important safety notes

WARNING

If you operate mobile communication equipment when driving, you may be distracted from the traffic situation. You could also lose control of the vehicle. There is a risk of an accident.

Only operate this equipment when the vehicle is stationary.

If you make a call on your mobile phone while driving, always use hands-free mode. Only use the mobile phone when road, weather and traffic conditions permit. Some jurisdictions prohibit the driver from using a mobile phone while driving a vehicle.

Bear in mind that at a speed of 30 mph (approximately 50 km/h), the vehicle covers a distance of 44 ft (approximately 14 m) per second.

Excessive levels of electromagnetic radiation may cause damage to your health and the health of others.

There is scientific discussion surrounding the possible health risks posed by electromagnetic fields. You can reduce this risk by using an exterior antenna.

Therefore, connect your mobile communications equipment to the vehicle's exterior antenna wherever possible.

General notes

Telephony

The Bluetooth® interface on the multimedia system is available for telephony.

If your mobile phone supports the Bluetooth® profile PBAP (**P**hone **B**ook **A**ccess **P**rofile), the contacts are automatically displayed in the multimedia system.

You can use the text message and e-mail functions if your mobile phone supports the MAP Bluetooth® profile (**M**essage **A**ccess **P**rofile). Observe the other requirements for the e-mail and text message functions (▷ page 111).

With a suitable mobile phone, you can use the hands-free system and receive vCards via the Bluetooth® interface.

You can obtain more information about suitable mobile phones on the Internet at <http://www.mercedes-benz.com/connect>.

You can also obtain more information by calling.

In the USA, you can get in touch with the Mercedes-Benz Customer Assistance Center on 1-800-FOR-MERCEDES (1-800-367-6372).

In Canada, you can get in touch with the Customer Relations Center on 1-800-387-0100.

Call disconnection while the vehicle is in motion

A call may be disconnected if:



- there is insufficient network coverage in certain areas.
- you move from one transmitter/receiver area (cell) into another and no channels are free.
- you use a SIM card which is not compatible with the network available.

Operating options

You can operate the telephone by:

- using the controller:
 - turning
 - sliding ←⊙→ or ↑⊙↓

pressing

- using the  or  button on the multi-function steering wheel
- using the Voice Control System (see the separate operating instructions)


Function restrictions



You may have to wait to use telephony via the multimedia system in the following situations:

- the mobile phone is switched off
- Bluetooth® is switched off on the mobile phone
- the mobile phone has not logged on to a mobile phone network
- if the Bluetooth® function is switched off in the multimedia system

The telephone automatically tries to log on to a network. If no network is available, you may not be able to make a "911" emergency call. If you attempt to make an outgoing call, the **No Service** message will appear for a short while.

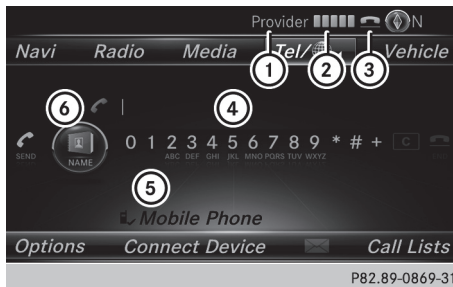Telephone menu overview





- ① Mobile phone network provider
- ② Signal strength of the mobile phone network
- ③ Receiver icon  or 
- ④ Telephone menu character bar
- ⑤ Bluetooth® device name of the currently connected mobile phone
- ⑥ Displays the phone book


Symbols ① to ③ and ⑤ are not shown until after a mobile phone has been connected to the multimedia system. The symbols depend on your mobile phone and your mobile phone network provider. Further information on connecting a mobile phone (▷ page 91).

Symbol ② shows the current signal strength of the mobile phone network. If all bars are filled, you have optimum reception.


If no bars are shown, reception is either very poor or there is none at all.


Receiver icon shows whether a call is active/being connected  or not .


 
Calling up the telephone menu

- ▶ Press .

Showing the menu bar

- ▶ Slide  the controller.

If the mobile phone connected supports the MAP Bluetooth® profile (**M**essage **A**ccess **P**rofile), the  menu item is available. Further information on text messages and e-mail (▷ page 111).

If you have an unread text message or e-mail, the  mail symbol is displayed in the status bar. The symbol disappears once you have read the text message or e-mail. The  symbol is displayed as soon as the message memory on the connected mobile phone is full. The symbol disappears once you delete at least one message.

Connecting/disconnecting a mobile phone

Requirements

For telephony via the Bluetooth® interface, you require a Bluetooth®-capable mobile phone. The mobile phone must support Hands-Free Profile 1.0 or above.

On the multimedia system

- ▶ Activate Bluetooth® (▷ page 41).

On the mobile phone

- ▶ Switch on the mobile phone and enter the PIN when prompted to do so (see the manufacturer's operating instructions).
- ▶ Activate Bluetooth® and, if necessary, Bluetooth® visibility for other devices (see the manufacturer's operating instructions).
This visibility is for restricted periods of time on some mobile phones (see the manufacturer's operating instructions).
- ▶ Set the Bluetooth® device name for the mobile phone if necessary.

The device names for all of one manufacturer's products might be identical. To make it possible to clearly identify your mobile phone, change the device name (see the manufacturer's operating instructions). The name can be freely selected.

If the mobile phone supports the PBAP (**Phone Book Access Profile**) and MAP (**Message Access Profile**) Bluetooth® profiles, the following information will be transmitted after you connect:

- Phone book
- Call lists
- Text messages and e-mail

Further information on allowing or suppressing the automatic download of the phone book (▷ page 107).

The battery of the mobile phone should always be kept sufficiently charged in order to prevent malfunctions.

- i** Not all mobile phones available on the market are equally suitable. You can obtain further information about suitable mobile phones and about the connection between the mobile phone and the multimedia system on the Internet at <http://www.mercedes-benz.com/connect>.

You can also obtain more information by calling.

In the USA, you can get in touch with the Mercedes-Benz Customer Assistance Center on 1-800-FOR-MERCEdes (1-800-367-6372). In Canada, you can get in touch with the Customer Relations Center on 1-800-387-0100.

- i** Some displays (e.g. the signal strength) are shown depending on the supported version of the Hands-Free Profile.

Procedure and general information

Authorizing a mobile phone (connecting)

Before using your mobile phone with the multimedia system for the first time, you will need to search for the phone (▷ page 92) and then authorize it (▷ page 93). Depending on the mobile phone, authorization either takes place by means of Secure Simple Pairing or by entering a passkey. The multimedia system automat-

ically makes the procedure that is relevant for your mobile phone available. You can recognize Secure Simple Pairing by the fact that a code is displayed on the mobile phone and on the multimedia system. You can recognize the passkey system by the fact that you have to enter a code on the mobile phone and on the multimedia system. The mobile phone is connected automatically after authorization. Further information about automatically reconnecting authorized mobile phones (▷ page 94).

If the multimedia system does not detect your mobile phone, this may be due to particular security settings on your mobile phone. You can also start the search procedure and authorization on the mobile phone (▷ page 94).

Device-specific information on authorizing and connecting Bluetooth®-capable mobile phones can be obtained from an authorized Mercedes-Benz Center or via the Internet at <http://www.mercedes-benz.com/connect>.

You can authorize up to 15 mobile phones. After authorization, the connection of the last two telephones used always functions automatically. For telephony, only one mobile phone can be connected to the multimedia system at any one time.

De-authorizing (disconnecting) a mobile phone

The connection is terminated automatically if you leave the receiver range of the multimedia system or deactivate Bluetooth® on your mobile phone.


If you no longer want the Bluetooth® connection to be established automatically, the mobile phone must be de-authorized (disconnected) (▷ page 95).

Searching for a mobile phone

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **⊙**↓ the controller.
- ▶ To select **Conn. Device**: turn and press the controller.
The device list is displayed.

- ▶ To select **Search for Phones**: turn and press the controller.
A message is displayed that Bluetooth® must be activated on the mobile phone and must be made visible to other devices.
- ▶ To select **Start Search**: press the controller.
The available mobile phones are displayed in the device list.



The duration of the search depends on the number of Bluetooth® telephones within range and their characteristics.

If a new phone is found, it appears in the device list with the  symbol. You can now authorize (connect) the mobile phone found (▷ page 93).

If the maximum number of authorized devices in the device list is reached, you will be requested to de-authorize a mobile phone (▷ page 95).

When you call up the device list again, de-authorized devices will be removed from the list. To update the device list, start the search again.

Symbols in the device list

Symbol	Explanation
	New mobile phone found, not yet authorized.
	Mobile phone is authorized, but is not connected.
•	Mobile phone is authorized and connected.

Authorizing a mobile phone (connecting)

Authorization via Secure Simple Pairing

If the multimedia system has found your mobile phone, you can authorize (connect) it.

- ▶ To select a mobile phone from the device list: turn the controller and press to confirm.
A code is displayed in the multimedia system and on the mobile phone.

The code is the same

- ▶ **Multimedia system**: select **Yes**.
- ▶ **Mobile phone**: confirm the code. Depending on the mobile phone used, you may have to confirm the connection to the multimedia system and for the PBAP and MAP Bluetooth®

profiles separately. You may also save the confirmation on the mobile phone (see the manufacturer's operating instructions).
The mobile phone is now authorized and connected to the multimedia system. You can now speak using the hands-free system.

To ensure an optimum language quality, you can set the mobile phone's transmission and reception volume (▷ page 95).

The code is different


- ▶ **Multimedia system**: select **No**.
The process is canceled. Repeat the authorization.

Authorization via passkey entry (access code)

If the multimedia system has found your mobile phone, you can authorize (connect) it.

- ▶ To select a mobile phone from the device list: turn the controller and press to confirm.
The input menu for the passkey is displayed.
The passkey is a one- to sixteen-digit number combination which you can choose yourself. Depending on the mobile phone used, you may have to enter a number sequence of four digits or more.

- ▶ **Multimedia system**: enter the passkey using the character bar.

- ▶ Select  once all the numbers have been entered.

- ▶ **Mobile phone**: enter the same passkey and confirm your entry. Depending on the mobile phone used, you may have to confirm the connection to the multimedia system and for the PBAP and MAP Bluetooth® profiles separately. You may also save the confirmation on the mobile phone (see the manufacturer's operating instructions).

The mobile phone is now authorized and connected to the multimedia system. You can now speak using the hands-free system.


To ensure an optimum language quality, you can set the mobile phone's transmission and reception volume (▷ page 95).

If the **Authorization Failed** message appears, you may have entered a different passkey or exceeded the prescribed time limit. Repeat the procedure.

- i** If you wish to re-authorize the mobile phone after de-authorizing it, you can choose another passkey for it.
- i** Mercedes-Benz recommends de-authorization in the multimedia system as well as on the mobile phone (> page 95). Subsequent authorization may otherwise fail.

Establishing the connection from the mobile phone

The Bluetooth® device name of the multimedia system is **MB Bluetooth**.

- ▶ **Multimedia system:** call up the telephone menu.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Conn. Device**: turn and press the controller.
The device list is displayed.
- ▶ To select **Connect via Phone**: turn and press the controller.
A message is displayed, stating that you can start the search on your mobile phone.
- ▶ **Mobile phone:** start the search for a Bluetooth® device (see manufacturer's operating instructions).
The multimedia system is displayed with the name **MB Bluetooth** in the mobile phone's device list.
- ▶ Select **MB Bluetooth**.
A prompt appears in the multimedia system's display asking if the mobile phone should be authorized.
- ▶ **Multimedia system:** select **Yes**.
If **No** is selected, the procedure is canceled.
If your mobile phone supports Secure Simple Pairing, a code is now displayed on both devices.

The code is the same

- ▶ **Multimedia system:** select **Yes**.
- ▶ **Mobile phone:** confirm the code. Depending on the mobile phone used, you may have to confirm the connection to the multimedia system and for the PBAP and MAP Bluetooth® profiles separately. You may also save the

confirmation on the mobile phone (see the manufacturer's operating instructions).
The mobile phone is now authorized and connected to the multimedia system. You can now speak using the hands-free system.

To ensure an optimum language quality, you can set the mobile phone's transmission and reception volume (> page 95).

The code is different

- ▶ **Multimedia system:** select **No**.
The process is canceled. Repeat the procedure.

If your mobile phone does not support Secure Simple Pairing, an input menu is displayed for the passkey. The passkey is a one- to sixteen-digit number combination which you can choose yourself. Enter the same passkey in both the multimedia system and on the mobile phone and confirm. Depending on the mobile phone used, you may have to confirm the connection to the multimedia system and for the PBAP and MAP Bluetooth® profiles.



Reconnecting automatically

The multimedia system always searches for the last connected mobile phone.

If no connection can be made to the most recently connected mobile phone, the system searches for the mobile phone that was connected before that one.

Switching between mobile phones

If you have authorized more than one mobile phone, you can switch between the individual phones.

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Conn. Device**: turn and press the controller.
The device list is displayed.
- ▶ To select the desired mobile phone: turn and press the controller.
The selected mobile phone is connected if it is within Bluetooth® range and if Bluetooth® is activated.

Only one mobile phone can be connected at any one time for telephony. The currently connected mobile phone is indicated by the • dot in the device list.

- i** You can only switch to another authorized mobile phone if you are not currently making a call.

De-authorizing (disconnecting) a mobile phone

Mercedes-Benz USA, LLC recommends de-authorization in the multimedia system as well as on the mobile phone. Subsequent authorization may otherwise fail.

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **☉↓** the controller.
- ▶ To select **Conn. Device**: turn and press the controller.
The device list is displayed.
- ▶ To highlight the desired mobile phone in the device list: turn the controller.
- ▶ To select **[☎]**: slide **☉→** the controller.
- ▶ To select **Deauthorize**: turn and press the controller.
A prompt appears, asking whether you really wish to de-authorize this device.
- ▶ To select **Yes**: turn and press the controller.
The mobile phone is de-authorized.

Displaying connection details

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **☉↓** the controller.
- ▶ To select **Conn. Device**: turn and press the controller.
The device list is displayed.
- ▶ To highlight the desired mobile phone: turn the controller.
- ▶ To select **[☎]**: slide **☉→** the controller.
- ▶ To select **Details**: turn and press the controller.
The following information concerning the selected mobile phone is shown:

- Bluetooth® device name
- Bluetooth® address
- Authorization status

Setting the reception and transmission volume

Once the mobile phone has been authorized, you can optimize the transmission and reception volume settings. To find out about the best possible settings for your mobile phone, visit <http://www.mercedes-benz.com/connect>.

You can also obtain more information by calling.

In the USA, you can get in touch with the Mercedes-Benz Customer Assistance Center on 1-800-FOR-MERCEDES (1-800-367-6372).

In Canada, you can get in touch with the Customer Relations Center on 1-800-387-0100.

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **☉↓** the controller.
- ▶ To select **Conn. Device**: turn and press the controller.
The device list appears.
- ▶ To highlight the desired mobile phone in the device list: turn the controller.
- ▶ To select **[☎]**: slide **☉→** the controller.
- ▶ To select **Reception Volume** or **Transmission Volume**: turn and press the controller.
- ▶ To set the volume: turn the controller.
- ▶ To accept changes: press the controller.

- i** Incorrect settings may have an impact on the quality of calls.

Using the telephone

Accepting a call

- ▶ To select **[☎]** **Accept**: press the controller.
or
- ▶ Press **[☎]** on the multifunction steering wheel.
The call is accepted.

Additional functions available during a call (▷ page 97).

Adjusting the call volume (▷ page 95).


Further information about ending a call (▷ page 99).

- ▶ **i** If the phone number of the caller is transferred, it appears in the display. If the phone number is saved in the phone book, the contact's name and picture are also displayed. If the phone number is not transferred, **Unknown** is shown in the display.

Rejecting a call



- ▶ To select  **Reject**: turn and press the controller.

or

- ▶ Press  on the multifunction steering wheel.



Making a call

Using the telephone menu



- ▶ To call up the telephone menu: press the  button.
- ▶ To select the sequence of numbers: turn and press the controller for each number.
- ▶ To select  in the telephone menu: turn and press the controller. The call is made.

Further information about ending a call (▷ page 99).

Using the number keypad

- ▶ To call up the telephone menu: press the  button.
- ▶ Enter the number sequence using the number keypad.
- ▶ To select  in the telephone menu: turn and press the controller. The call is made.


 
Redial number

- ▶ To call up the telephone menu: press the  button.
- ▶ To select  in the telephone menu: turn and press the controller. The list of outgoing calls is displayed. The most recently dialed number is at the top.
- ▶ To select an entry and make a call: turn and press the controller.

For redialing using the multifunction steering wheel (see the vehicle Operator's Manual).

Further information about ending a call (▷ page 99).



Using call lists

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ To select **Calls Received** or **Calls Dialed**: turn and press the controller. The relevant list is displayed.
- ▶ To select an entry and make a call: turn and press the controller.

Selecting and placing a call using the multifunction steering wheel (see vehicle Operator's Manual)

Further information about ending a call (▷ page 99).

Using the phone book

- ▶ To call up the telephone menu: press the  button.
- ▶ To select the  symbol in the telephone menu: turn and press the controller.
- ▶ Search for and call a contact (▷ page 100).

Selecting and placing a call using the multifunction steering wheel (see vehicle Operator's Manual)

Further information about ending a call (▷ page 99).

Using speed dial

Option 1

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To highlight a number from the character bar: turn the controller.
- ▶ Press the controller for longer than two seconds.
The telephone menu displays the selected entry. The number is dialed.

Option 2


- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **⊙** the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ To select **Speed Dial Preset List**: turn and press the controller.
The speed dial list is displayed.
- ▶ To select an entry and make a call: turn and press the controller.
The telephone menu displays the selected entry. The number is dialed.

Further information on setting up speed dial (▷ page 111).

Further information about ending a call (▷ page 99).

Functions available during a call

Overview

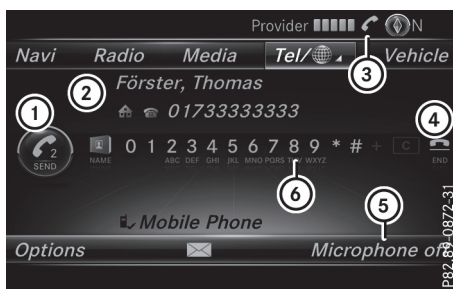

- ① Adds a call (▷ page 97)
- ② Person you are calling
- ③ Symbol for active telephone connection
- ④ Ends a call

- ⑤ Switches the microphone on/off (▷ page 97)
- ⑥ Sends DTMF tones (not possible with all mobile phones) (▷ page 98)

Other functions:

- Accepting a waiting call (▷ page 98)
- Call waiting (▷ page 98)
- Conducting a conference call (▷ page 98)

Availability depends on the network (only possible on GSM networks) and the Bluetooth® mobile phone.

Adding a call



- ① Adds a call

 

If the mobile phone network provider and the mobile phone support the function, you can make another call during an existing call. The previously active call is held.

- ▶ To select **2**: turn and press the controller.
- ▶ To make a call, e.g.:
 - Using the telephone menu (▷ page 96)
 - Using redial (▷ page 96)
 - Using the call lists (▷ page 96)
 - Using the phone book (▷ page 96)
 - Using speed dial (▷ page 97)


Switching the microphone on or off

This function is available in the telephone menu during an active phone call.

Switching off the microphone:

- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Microphone Off**: turn and press the controller.
If the microphone is switched off, the  symbol and the **The microphone is off.** message are displayed.

Switching on the microphone:

- ▶ Select **Microphone On**.
The  symbol disappears. The **The microphone is on.** message is shown.

Sending DTMF tones

This function is not supported by all mobile phones.

Answering machines or other devices can be controlled by DTMF tones, e.g. for remote query functions.

- ▶ If you would like to listen to the messages on your answering machine, for example, dial the corresponding number.

Transmitting individual characters

- ▶ Once a connection has been established to the answer phone, select the desired characters in the telephone menu: turn and press the controller each time.

or

- ▶ Press the corresponding key on the number keypad.
Every character selected will be transmitted immediately.




Calls with several participants

Switching between calls (call waiting)





If you make another call, you can switch between the two calls (call waiting). This function depends on your mobile phone network provider and the mobile phone (see the manufacturer's operating instructions).

The calls are marked 1 and 2. The active call is highlighted.

Switching between the calls

- ▶ Press  on the multifunction steering wheel.
- or
- ▶ To select  or : turn and press the controller.
The selected call is active. The other call is on hold.

Ending the active call

- ▶ To select  in the telephone menu: turn and press the controller.
 - or
 - ▶ Press  on the multifunction steering wheel.
The other call is still on hold.
 - ▶ To activate the call on hold: select  **Resume**.
The call on hold is activated. If you select  **Hang Up**, the call on hold is also ended.
- i** On some mobile phones, the call on hold is activated as soon as the active call is ended.

Conference call

This function depends on your mobile phone network provider and the mobile phone (see the manufacturer's operating instructions). You can interconnect active and held calls. This permits several parties to hear one another and speak with one another.

- ▶ Add a call (▷ page 97).
- or
- ▶ Answer an incoming call (▷ page 98).
- ▶ To select **Conference** in the telephone menu: turn and press the controller.
The new participant is included in the conference call. **Conference Call** is displayed in the telephone menu.



Incoming call during an existing call (call waiting)

The call waiting function depends on your mobile phone network provider and your mobile phone. Depending on the mobile phone used, behavior when answering a call may vary (see the manufacturer's operating instructions).

Call waiting: if you receive a call while already in a call, a message is shown. You also hear a



tone. You can decide whether to accept or reject the call.

Accepting



- ▶ To select  **Accept:** press the controller.
or
- ▶ Press  on the multifunction steering wheel.
The incoming call is active. Depending on the mobile phone used, the call which was previously active is put on hold or ended (see the manufacturer's operating instructions). If the call is on hold, you can switch back and forth between the two calls (call waiting) (> page 98).

i Depending on the mobile phone, you may also be able to accept the incoming call (call waiting) on your mobile phone. This function and behavior depends on your mobile phone network provider and the mobile phone (see the manufacturer's operating instructions).

Rejecting

- ▶ To select  **Reject:** turn and press the controller.
or
- ▶ Press  on the multifunction steering wheel.
The behavior after the call is rejected depends on your mobile phone and mobile phone network provider.
Option 1: The originally active call is ended and the incoming call is accepted.
Option 2: Both calls are ended.

 
Ending an active call

- ▶ To select  in the telephone menu: turn and press the controller.
or
- ▶ Press  on the multifunction steering wheel.
The active call is ended.


Mobile phone voice recognition

You can start or end voice recognition on your mobile phone with this function. Further information on the voice recognition service (see the manufacturer's operating instructions).

Starting the mobile phone voice recognition

- ▶ Connect the mobile phone to the multimedia system (> page 91).
- ▶ Press and hold the  button on the multifunction steering wheel for more than one second.
You can now use the mobile phone voice recognition.

Ending the mobile phone voice recognition

- ▶ Press  on the multifunction steering wheel.
The mobile phone voice recognition is stopped.

Phone book

Introduction

The phone book displays the contacts from the address book which have a phone number.

The phone book of the mobile phone is automatically displayed in the multimedia system after the connection is established (default setting). You can deactivate automatic calling up (> page 107).



In the telephone book, you can:

- Create new contacts (> page 101)
- Add information to contacts (> page 101)
- Search for contacts (> page 100)
- Store contacts (> page 102)
- Delete contacts (> page 102)

Further information on importing contacts (> page 107).

When you import, save, edit or add contacts, they will be permanently saved in the multimedia system. These contacts will remain available even when you connect the multimedia system to a different mobile phone. You can view these contacts even without a mobile phone.

Calling up the phone book






- ▶ To call up the telephone menu: press the  button.
- ▶ To select the  symbol in the telephone menu: turn and press the controller.
If the phone book contains contacts, they will be displayed in alphabetical order. The character bar at the bottom of the display is active.

You can now search for a contact
(▷ page 100).

Further information on the symbols shown
(▷ page 100).

- i** You can also call up the phone book with the multifunction steering wheel; see the vehicle Operator's Manual.


Symbol overview

Symbol	Explanation
	Contact that has been entered, edited or saved in the multimedia system
	Contact with voice tag These contacts have also been assigned a voice tag. For more information, see the separate operating instructions.
	Contact that was called up from a mobile phone
	Contact imported from the SD memory card or USB device
	Contact imported via the Bluetooth® interface


Searching for a contact




Using the character bar

You determine the first letter of the contact you are looking for with the first character you enter.

- ▶ To select characters: turn the controller and press to confirm.
The first contact with the selected first character is highlighted in the phone book. If there are similar contacts, the next different character is shown. For example, with contacts such as **Jana** and **John**, the beginnings of the names are identical. The next different character **A** and **O** are offered for selection.
- ▶ Select the characters of the contact you are searching for one by one, pressing and confirming with the controller each time.
- ▶ To end the search: select  .
The contacts in the phone book are displayed.

- ▶ To highlight a contact: turn the controller.
- ▶ To call the contact: press the controller.

The  symbol indicates that a contact contains more than one phone number.

- ▶ To select a contact with the  symbol: turn the controller and press to confirm.
The phone numbers are displayed. The  symbol changes to .
- ▶ To call a telephone number: turn and press the controller.

 
Back to the character bar

- ▶ Press the  button repeatedly until the character bar is displayed.

Further information about character entry
(▷ page 29).

Using the number keypad

You determine the first letter of the contact you are looking for with the first character you enter.

- ▶ For example, to enter the letter **C**: press the  number key briefly three times in succession.
The character appears the first time the key is pressed and shows all the available characters. It switches to the next character each time the key is pressed.

Using the touchpad


You determine the first letter of the contact you are looking for with the first character you enter.

- ▶ Press the touchpad.
- ▶ Draw the letter on the touchpad surface.
The first contact with the selected first character is highlighted in the phone book.
Further information on handwriting recognition on the touchpad (▷ page 25).
- ▶ Draw additional letters on the touchpad surface one after another.
- ▶ To complete the search and return to the phone book: press the touchpad.
- ▶ To select and call the contact: glide up or down and press.

Using the multifunction steering wheel

- ▶ Dial a number from the phone book; see the vehicle Operator's Manual.

Displaying the details of a contact

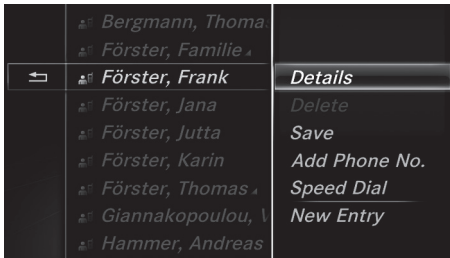


P82.89-0875-31

- ▶ Call up the phone book (▷ page 99).
- ▶ Search for and highlight a contact (▷ page 100).
- ▶ To select : slide the controller.
- ▶ To select **Details**: turn and press the controller. The detailed view appears.

Closing the detailed display

- ▶ To select : slide the controller.

Adding a new contact

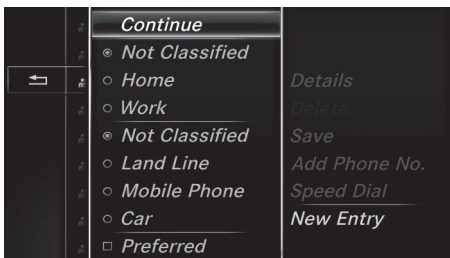

P82.89-0876-31

- ▶ Call up the phone book (▷ page 99).
- ▶ In the phone book, slide the controller repeatedly until the character bar disappears.
- ▶ To select : slide the controller.
- ▶ To select **New Entry**: turn and press the controller.
- ▶ To select a category for the number, e.g. **Home**: turn the controller and press to confirm.
- ▶ To select a telephone category, e.g. **Mobile Phone**: turn the controller and press to confirm.

If you have marked a number as preferred, it is shown at the top of the list.

- ▶ To select **Continue**: turn and press the controller. The input menu with data fields is displayed.
- ▶ Enter characters using the controller (▷ page 29) or the number keypad, for example.
- ▶ To finish and save an entry: select . The contact is created in the phone book and in the address book.

Adding information to a contact

A maximum of five telephone numbers can be saved for one contact.

- ▶ Call up the phone book (▷ page 99).
- ▶ Search for and highlight a contact in the phone book (▷ page 100).
- ▶ To select : slide the controller.
- ▶ To select **Add Phone No.**: turn and press the controller.
- ▶ To select a category for the number, e.g. **Home**: turn the controller and press to confirm.
- ▶ To select a telephone category, e.g. **Mobile Phone**: turn the controller and press to confirm.

If you have marked a number as preferred, it is shown at the top of the list.

- ▶ To select **Continue**: turn and press the controller. An input line appears.
- ▶ Enter the telephone number.
- ▶ Select .

If five numbers are already stored for the contact you are searching for, a prompt will appear asking whether you wish to overwrite one of the existing numbers.

If you wish to overwrite one of the phone numbers:

- ▶ To select **Yes**: turn and press the controller. A list of the existing five phone numbers is displayed.
- ▶ To select the phone number to be overwritten from the list: turn the controller and press to confirm. The entry field for the new phone number is displayed.
- ▶ Enter characters using the controller (▷ page 29) or the number keypad, for example.

If you do not wish to overwrite any of the phone numbers:

- ▶ To select **No**: turn and press the controller. The process is canceled.

Automatically importing contacts from the mobile phone

Depending on the mobile phone used, you can set whether the contacts should be called up automatically after the mobile phone is connected to the multimedia system.

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Import Contacts Automatically**: press the controller. You can allow or deactivate the automatic download. If the function is deactivated, contacts which have already been called up will continue to be displayed.

If the function is deactivated, the contacts can be called up manually:

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Import Contacts**: turn and press the controller. The contacts are called up.

Saving a contact

Saved contacts are indicated in the phone book by different symbols (▷ page 100).

- ▶ Call up the phone book (▷ page 99).
- ▶ Search for and highlight a contact from the mobile phone (▷ page 100).
- ▶ To select : slide the controller.
- ▶ To select **Save**: turn and press the controller. The contact has now been saved. The contact is identified by the symbol in the phone book.

- i** Saved contacts are also displayed in the address book.

Saving or editing the contact data in the multimedia system does not change the contacts on the mobile phone. If automatic calling-up of phone contacts is activated, the multimedia system displays the copy with the changed data.

Deleting a name

You can delete contacts that have been added, supplemented, saved or imported in the multimedia system.

If there are one or several phone numbers saved under the contact, the contact is deleted from the phone book and the address book.

If there are additional entries under the contact, such as a navigable destination, only the phone numbers are deleted. The contact is retained in the address book with the remaining entries.

- ▶ Call up the phone book (▷ page 99).
- ▶ Search for and highlight a contact in the phone book (▷ page 100).
- ▶ To select : slide the controller.
- ▶ To select **Delete**: turn and press the controller. A prompt appears asking whether the contact should be deleted.
- ▶ To select **Yes**: turn and press the controller. The phone number is deleted.

Closing the phone book

- ▶ To select from the character bar: turn the controller and press to confirm.

or

- ▶ Press the button.

Address book

Introduction

Always pay attention to traffic conditions.

Familiarize yourself with the address book functions before beginning your journey.

You can use the multimedia system when the road and traffic conditions permit. You could

otherwise become involved in an accident in which you or others could be injured.

The address book displays all the contacts from the various sources (mobile phone, memory card, USB device, the phone book of the multimedia system, navigation).

You can use the contacts to make telephone calls, navigate and to write messages.

If a mobile phone is connected to the multimedia system and automatic calling up is activated (▷ page 107), the mobile phone's contacts are displayed in the address book. If you disconnect the mobile phone from the multimedia system, these contacts are no longer displayed in the address book.

When you import, save, edit or add contacts, they will be saved in the multimedia system. These contacts will remain available even when you connect the multimedia system to a different mobile phone. You can view these contacts even without a mobile phone.

- i** The address book can store a total of 5000 contacts.
 - 2000 entries are reserved for permanently saved contacts
 - 3000 entries are reserved for contacts that you can load from the mobile phone
- i** Before selling your vehicle, delete the contacts saved in the multimedia system using the reset function (▷ page 43).

Calling up the address book



- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **↑** the controller.
- ▶ To select **Tel/**: press the controller.

- ▶ To select **Address Book**: turn and press the controller.

- ▶ To browse in the address book: turn the controller.

An address book entry can also include a picture. This is shown to the left of the address data. Address book entries with pictures can only be created by importing vCards (vcf files). Further information on importing vCards (▷ page 107). The quality of the picture depends on the picture's resolution.

Searching for a contact

Using the character bar

- ▶ Call up the address book (▷ page 103).
- ▶ To switch to the menu bar: slide **⊙** the controller.
- ▶ To select **Search**: turn and press the controller.
- ▶ To select characters: turn the controller and press to confirm.

The first contact with the selected first character is highlighted in the address book. If there are similar contacts, the next different character is shown. For example, with contacts such as **Jana** and **John**, the beginnings of the names are identical. The next different character **A** and **O** are offered for selection.

- ▶ Select the characters of the contact you are searching for one by one, pressing and confirming with the controller each time.
- ▶ To end the search: select **OK**.

The contacts in the address book are displayed.

- ▶ To select a contact: turn and press the controller.
- ▶ **To return to the character bar**: press the **←** button repeatedly until the character bar is displayed.

Further information about character entry (▷ page 29).

Using the number keypad

You determine the first letter of the contact you are looking for with the first character you enter.

- ▶ For example, to enter the letter **C**: press the number key briefly three times in succession.
The character appears the first time the key is pressed and shows all the available characters. It switches to the next character each time the key is pressed.

Using the touchpad

You determine the first letter of the contact you are looking for with the first character you enter.

- ▶ Draw the letter on the touchpad surface.
The first contact with the selected first character is highlighted in the address book.
Further information on handwriting recognition on the touchpad (▷ page 25).
- ▶ Draw additional letters on the touchpad surface one after another.
- ▶ To complete the search and return to the address book: press the touchpad.
- ▶ To select and call the contact: glide up or down and press.


Adding a new contact

You can enter address data directly into the address book. If you store telephone numbers in the phone book of the multimedia system, these are also saved in the address book. If you store a navigation destination, the multimedia system creates an address book entry that includes the complete navigable address data.

- ▶ Call up the address book (▷ page 103).
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **New**: turn and press the controller.
The surname and first name input lines are displayed.
- ▶ Enter characters using the controller (▷ page 29) or the number keypad, for example.
- ▶ To save the surname and first name: select .
The details for the contact are displayed.

- ▶ To add a desired entry: turn and press the controller.
Depending on the type of entry, the corresponding input menu appears.
- ▶ Enter characters using the controller (▷ page 29) or the number keypad, for example.
- ▶ To finish and save an entry: select .

Displaying contact details

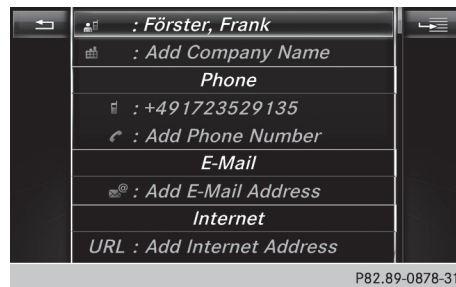

- ▶ Call up the address book (▷ page 103).
- ▶ To select a contact: turn and press the controller.
The details for the contact are displayed.

The entries can be categorized as follows:

- Business details
- Home details

i An address book entry can contain the following information:

- name
- first name
- company
- up to five telephone numbers
- two email addresses
- Internet address
- two addresses
- geo-coordinates


Adding information to a contact

A maximum of five telephone numbers can be saved for one contact.

- ▶ Call up the address book (▷ page 103).
- ▶ To select a contact: turn and press the controller.
The details for the contact are displayed.
- ▶ To select the desired entry: turn and press the controller.
Depending on the type of entry, the corresponding input menu appears.
- ▶ Enter characters using the controller or the number keypad, for example (▷ page 29).
- ▶ To finish and save an entry: select **OK**.

Starting route guidance to an address or geo-coordinates

If an address with a ZIP code is saved, the address can be used for route guidance. If the ZIP code cannot be assigned to an exact address, you can adjust the destination subsequently using the controller.


 
- ▶ Call up the address book (▷ page 103).
- ▶ To select a contact: turn and press the controller.
The details for the contact are displayed.
- ▶ To select the address or geo-coordinates: turn and press the controller.
The navigation menu is displayed.
- ▶ To select **Start Route Guidance**: slide  and press the controller.
The route to the destination address is calculated and route guidance starts.

Making a call

- ▶ Call up the address book (▷ page 103).
- ▶ To select a contact: turn and press the controller.
The details for the contact are displayed.
- ▶ To select a telephone number: turn and press the controller.
The number is dialed. Further information about the functions during a call (▷ page 97).

Sending text messages

- ▶ Call up the address book (▷ page 103).
- ▶ To select a contact: turn and press the controller.
The details for the contact are displayed.

- ▶ To highlight the telephone number: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Send Text Message**: turn and press the controller.
The entry fields for a text message are displayed (▷ page 115).


 

Observe the requirements for the message function (▷ page 111).

Sending an e-mail


 
- ▶ Call up the address book (▷ page 103).
- ▶ Select an entry: turn and press the controller.
The details for the contact are displayed.
- ▶ To select an e-mail address: turn and press the controller.
The entry fields for an e-mail are displayed (▷ page 115).

Observe the requirements for the message function (▷ page 111).

Displaying sub-entry information


 
- ▶ Call up the address book (▷ page 103).
- ▶ Select an entry: turn and press the controller.
The details for the contact are displayed.
- ▶ To highlight the desired entry: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Details**: turn and press the controller.
The display is shown in full.
- ▶ **To close the detailed display**: press the  button.

Editing a contact



- ▶ Call up the address book (▷ page 103).
- ▶ To select a contact: turn and press the controller.
The details for the contact are displayed.
- ▶ To highlight the desired entry: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Edit**: turn and press the controller.
The entry field for the selected entry is displayed.

Further information about character entry (▷ page 29).

Changing the category of an entry

- ▶ Call up the address book (▷ page 103).
- ▶ Select an entry: turn and press the controller. The details for the contact are displayed.
- ▶ To highlight the desired entry: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Change Category**: turn and press the controller.
- ▶ To select a category: turn the controller and press to confirm.
- ▶ Select **Save**.

Storing the phone number as a speed dial number




- ▶ Call up the address book (▷ page 103).
- ▶ Select an entry: turn and press the controller. The details for the contact are displayed.
- ▶ To highlight the desired telephone number: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Speed Dial**: turn and press the controller.
- ▶ To select **Assign Speed Dial Preset**: turn and press the controller.
- ▶ To select a memory position for the speed dial: turn and press the controller. The phone number has been saved as a speed dial.

Voice tags



Introduction

You can enter voice tags via the Voice Control System (see the separate operating instructions). Once you have assigned a voice tag to an address book entry, you can call up this entry with a voice command and dial a phone number, for example. You can add one voice tag per address book entry.



Adding a voice tag

- ▶ Call up the address book (▷ page 103).
- ▶ Search for an address book entry with or without a voice tag  (▷ page 103).
- ▶ To select : slide  the controller.
- ▶ To select **Voice Tag**: turn and press the controller.
- ▶ To select **Add**: turn and press the controller. Subsequent operation is voice-controlled. The Voice Control System guides you through the dialogs.


Deleting a voice tag

- ▶ Call up the address book (▷ page 103).
- ▶ Search for an address book entry with a voice tag (▷ page 103).
- ▶ To select : slide  the controller.
- ▶ To select **Voice Tag**: turn and press the controller.
- ▶ To select **Delete**: turn and press the controller.
- ▶ To select **Yes**: turn and press the controller. The voice tag is deleted.

Listening to a voice tag

- ▶ Search for an address book entry with a voice tag (▷ page 103).
- ▶ To select : slide  the controller.
- ▶ To select **Voice Tag**: turn and press the controller.
- ▶ To select **Listen**: turn and press the controller. You hear the voice tag.

Changing the display and sorting criteria for contacts

- ▶ Call up the address book (▷ page 103).
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Display and Sorting**: turn and press the controller.

You have the following options:

- **Last Name, First Name** (default setting)

The contacts are sorted by surname and displayed with a comma.

- **Last Name First Name**

The contacts are sorted by surname and displayed without a comma.

- **First Name Last Name**

The contacts are sorted by first name and displayed without a comma.

- ▶ To select the required option: turn and press the controller.

The contacts are sorted and displayed according to the selection.

Automatically importing contacts from the phone

Depending on the mobile phone used, you can set whether the contacts should be called up automatically after the mobile phone is connected to the multimedia system.

- ▶ Connect a mobile phone (▷ page 91).
- ▶ Call up the address book (▷ page 103).
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Import Contacts Automatically**: turn and press the controller.
You can allow or suppress the automatic download. If the function is deactivated, contacts which have already been called up will continue to be displayed.

Saving a contact

Saved contacts are indicated in the phone book by different symbols (▷ page 100).

- ▶ Call up the address book (▷ page 103).
- ▶ To select a contact: turn and press the controller.
The details for the contact are displayed.
- ▶ To select : slide the controller.
- ▶ To select **Save**: turn and press the controller.
The contact has now been saved.

i If the saved address book entry contains a phone number, the entry is also displayed in the phone book.

Saving or editing the contact data in the multimedia system does not change the contacts on the mobile phone. If automatic downloading of phone contacts is activated, the multimedia system displays the copy with the changed data. To add additional data, such as additional phone numbers or e-mail addresses, select this contact. In this way, you avoid creating additional copies of the mobile phone entry.

Deleting a name

- ▶ Call up the address book (▷ page 103).
- ▶ Search for a contact (▷ page 103).
- ▶ To select : slide the controller.
- ▶ To select **Delete**: turn and press the controller.
- ▶ To select **Yes**: turn and press the controller.
The contact is deleted.

Closing the address book

- ▶ Press the button.

Importing contacts

Information and requirements


Contacts can be imported as vCards (vcf files). A vCard is an electronic business card. A memory card, USB device or a Bluetooth® connection can be used for importing.

i Up to 2000 entries can be imported into the address book. A message notifies you when the maximum number is reached. In order to be able to then import new contacts, you have to delete existing contacts (▷ page 107).

Source	Requirements
Memory card	The SD card is inserted. It contains importable contact details.

USB device	The USB device is inserted into the USB port. It contains importable contact details.
Bluetooth® connection	If the sending of vCards is supported via Bluetooth®, vCards can be received on mobile phones or netbooks, for example. Bluetooth® must be activated in the multimedia system and on the respective device; see the manufacturer's operating instructions.


Importing from the memory card or USB device

Contacts imported from the memory card or from a USB device are identified by the  symbol.

The following conditions must be fulfilled in order to import vCards:

 
- vCards (vcf files) may be located in the main directory or in folders. The multimedia system allows for a targeted selection of the corresponding directories.
- vCards must have the file extension ".vcf".

i The multimedia system supports vCards in versions 2.1 and 3.0.

- ▶ To switch to the menu bar in the telephone menu or the address book: slide  the controller.
 - ▶ To select **Options**: turn and press the controller.
 - ▶ To select **Download Contacts**: turn and press the controller.
 - ▶ To select **From Memory Card, USB 1 or USB 2**: turn and press the controller.
 - ▶ Select **All Folders**.
- or
- ▶ Select the desired folder or individual vCard.
 - ▶ Select **Continue**.
- The selected contacts are imported.

Receiving vCards via Bluetooth®


Multimedia system


- ▶ To switch to the menu bar in the telephone menu or the address book: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Download Contacts**: turn and press the controller.
- ▶ To select **From Bluetooth Device**: turn and press the controller.
If the multimedia system is connected to a mobile phone, all connections are terminated. vCards can now be received by a device (PC, mobile phone) via Bluetooth®.

External device

- ▶ Start the data transfer; see the manufacturer's operating instructions.
The number of vCards received is displayed in the multimedia system.


Multimedia system

- ▶ To end reception: press the controller or the  button.
If a mobile phone was connected, the connection to the mobile phone is established again.

vCards received via Bluetooth® are identified by the  symbol in the phone book.

- i** If you switch to another main function, e.g. navigation, while receiving vCards, the reception of vCards will be terminated.

Deleting imported contacts

- ▶ To switch to the menu bar in the telephone menu or the address book: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Delete Contacts**: turn and press the controller.
- ▶ Select one of the following options:
 - **Internal Contacts**
 - **Downloaded from Phone**
 - **Imported from Storage Device**
 - **Imported from BT Devices**
 Turn and press the controller.

- ▶ To select **Yes**: turn and press the controller. The contacts are deleted.

i If automatic calling up of the contacts is deactivated (▶ page 107), the **Downloaded from Phone** option is available.

Call lists

Introduction


If your mobile phone supports the PBAP Bluetooth® profile, the call lists from the mobile phone are displayed in the multimedia system. If the mobile phone call lists cannot be displayed, the multimedia system generates its own call lists. These are not the same as the call lists in your mobile phone.

The **Call Lists** option is not available unless a mobile phone is connected to the multimedia system.

If the contact for an incoming call is not saved in the address book, you can use the call list to save the telephone number. You can save this telephone number as a new contact in the address book or add it to an existing contact (▶ page 110).

i If you connect a different mobile phone to the multimedia system, the call lists from the new mobile phone are displayed.

Opening the call list and selecting an entry

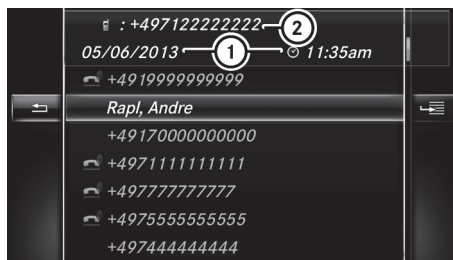

P82.89-0189-31

- ① Date and time (if available)
- ② Telephone number of the highlighted entry and symbols (if assigned)

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ To select **Calls Received** or **Calls Dialed**: turn and press the controller. The relevant list is displayed.
- ▶ To highlight an entry: turn the controller.
- ▶ To make a call: press the controller.

Closing the call list

- ▶ To select **☰**: slide **←⊙** and press the controller.
- or
- ▶ Press the **☰** button. The list is closed.


Displaying details from a list entry

Abbreviated list entries can also be shown in full.

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ To select **Calls Received** or **Calls Dialed**: turn and press the controller. The relevant list is displayed.
- ▶ To highlight the desired entry: turn the controller.
- ▶ To select **☰**: slide **⊙→** the controller.
- ▶ To select **Details**: turn and press the controller. The details are displayed.
- ▶ To go back to the list: slide **←⊙** the controller repeatedly until the list is highlighted.

Saving telephone numbers

Adding new entries to the address book

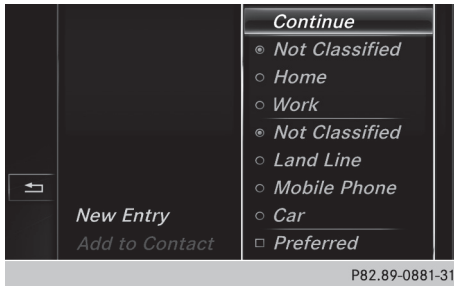

Telephone

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide $\odot \downarrow$ the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ To select **Calls Received** or **Calls Dialed**: turn and press the controller. The relevant list is displayed.
- ▶ To highlight the desired telephone number: turn the controller.
- ▶ To select $\boxed{4}$: slide $\odot \rightarrow$ the controller.
- ▶ To select **Save**: turn and press the controller.
- ▶ Select **New Entry**.
- ▶ Select a number category, e.g. **Home**.
- ▶ Select a telephone category, e.g. **Mobile Phone**.
The selected category is marked with •.
- ▶ If you have marked a number as **Preferred**, it is shown at the top of the list.
- ▶ Select **Continue**.
The entry field for the name of the new contact is displayed. The entry field for the telephone number is filled in automatically.
- ▶ Enter characters using the controller (\triangleright page 29) or the number keypad, for example.
- ▶ To finish and save an entry: select $\boxed{\text{ok}}$.
The new contact has been created.

Adding information to an address book entry

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide $\odot \downarrow$ the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ To select **Calls Received** or **Calls Dialed**: turn and press the controller. The relevant list is displayed.
- ▶ To highlight the desired telephone number: turn the controller.
- ▶ To select $\boxed{4}$: slide $\odot \rightarrow$ the controller.
- ▶ To select **Save**: turn and press the controller.
- ▶ Select **Add to Address Book Entry**.
- ▶ Select a number category, e.g. **Home**.
- ▶ Select a telephone category, e.g. **Mobile Phone**.
- ▶ Select **Continue**.
The address book is displayed.
- ▶ Search for the desired contact and highlight (\triangleright page 103).
- ▶ To save a telephone number: press the controller.
A maximum of five telephone numbers can be saved for one contact.

If five numbers are already stored for the contact you are searching for, a prompt will appear asking whether you wish to overwrite one of the existing numbers.

If you wish to overwrite one of the phone numbers:

- ▶ To select **Yes**: turn and press the controller.
A list of the existing five phone numbers is displayed.
- ▶ To select the phone number to be overwritten from the list: turn the controller and press to confirm.
The entry is overwritten with the new telephone number.

If you do not wish to overwrite any of the phone numbers:

- ▶ To select **No**: turn and press the controller.
The process is canceled.

Speed dial lists

Setting up

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To call up the menu bar: slide **☉↓** the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ Select **Speed Dial Preset List**.
The speed dial list is displayed.
- ▶ To highlight a memory position for the speed dial: turn the controller.
If you highlight an entry that already exists in the speed dial list, this is overwritten with the new entry.
- ▶ To select **[☎]**: slide **☉→** the controller.
- ▶ Select **Assign Speed Dial Preset**.
The phone book is displayed.
- ▶ Search for a contact (▷ page 100).
- ▶ To select a contact: turn and press the controller.
The phone number has been saved as a speed dial.

Deleting

Deleting a speed dial preset

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To call up the menu bar: slide **☉↓** the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ Select **Speed Dial Preset List**.
The speed dial list is displayed.
- ▶ To highlight the memory position you want to delete: turn the controller.
- ▶ To select **[☎]**: slide **☉→** the controller.
- ▶ To select **Delete Speed Dial Preset**: turn and press the controller.
- ▶ To select **Yes**: turn and press the controller.
The speed dial preset has been deleted.

Deleting all speed dial presets

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To call up the menu bar: slide **☉↓** the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ Select **Speed Dial Preset List**.
The speed dial list is displayed.
- ▶ To select **[☎]**: slide **☉→** the controller.
- ▶ To select **Delete All Speed Dial Presets**: turn and press the controller.
- ▶ To select **Yes**: turn and press the controller.
All speed dials are deleted.

Messages (text messages and e-mails)

General notes

New messages are identified by the **[✉]** symbol in the display of the multimedia system and an audible signal. Once you have read all the messages, the symbol is no longer displayed. The multimedia system displays the 100 newest text messages and e-mails.

The **[✉]** symbol is displayed when the mobile phone's message memory is full. The symbol is no longer displayed if you delete messages.

Function restrictions

Text messages cannot be written while the vehicle is in motion.

Requirements

To use the message functions, the connected mobile phone must support the MAP Bluetooth® profile. When connecting the mobile phone, you may have to accept the prompt for the MAP Bluetooth® profile.

With some mobile phones, some settings still have to be made after connecting to the multimedia system (see the manufacturer's operating instructions). The messages are then displayed the next time you connect to the multimedia system.

An e-mail account must be set up on the mobile phone for the e-mail function (see the manufacturer's operating instructions).

To read and write e-mails in the multimedia system, the e-mail account first needs to be configured (▷ page 113).

Some mobile phones with the MAP Bluetooth® profile:

- only show new text messages
- do not support the deleting or editing of text messages
- do not support the drafts folder for text messages
- do not support the sending of text messages
- do not support the e-mail function
- do not send messages when in a locked status

Not all mobile phones available on the market are equally suitable. Further information about settings and supported functions of Bluetooth®-capable mobile phones can be found on the Internet at

<http://www.mercedes-benz.com/connect>.





You can also obtain more information by calling.

In the USA, you can get in touch with the Mercedes-Benz Customer Assistance Center on 1-800-FOR-MERCEdes (1-800-367-6372).


 
In Canada, you can get in touch with the Customer Relations Center on 1-800-387-0100.

Settings


 
Calling up the settings menu for messages

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select : turn and press the controller. The message menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Settings** : turn and press the controller.
The text message settings and the available e-mail accounts of the connected mobile phone will be displayed.

Configuring the text messages displayed

- ▶ Call up the settings menu for messages (▷ page 112).
- ▶ To highlight **Text Message**: turn the controller.
- ▶ To select : slide  the controller. A menu with the following options is shown:
 - **All Messages**
All the messages are displayed.
 - **New Messages**
Only the messages that are new on the mobile phone are displayed.
 - **Off**
The messages are not displayed automatically. You can display the 100 newest text messages from the mobile phone using the **Download** option in the message menu.
- ▶ To select the required option: turn and press the controller.

Configuring the e-mails displayed

- ▶ Call up the settings menu for messages (▷ page 112).
- ▶ To highlight an e-mail account: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Automatic Download**: turn and press the controller. A menu with the following options is shown:
 - **All Messages**
All the messages are displayed.
 - **New Messages**
Only the messages that are new on the mobile phone are displayed.
 - **Off**
The messages are not displayed automatically. You can display the 100 newest e-mails from the mobile phone using the **Download** option in the message menu.
- ▶ To select the required option: turn and press the controller.



Configuring an e-mail account

- ▶ Call up the settings menu for messages (▷ page 112).
- ▶ To select an e-mail account: turn and press the controller.
The e-mail account is now configured. E-mails can now be received and sent in the multi-media system.





Deactivating the e-mail function

- ▶ Call up the settings menu for messages (▷ page 112).
- ▶ To select **E-Mail Off**: turn and press the controller.
E-mail reception is deactivated.

Changing the displayed name of the e-mail account

- ▶ Call up the settings menu for messages (▷ page 112).
- ▶ To highlight an e-mail account: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Own E-Mail Address**: turn and press the controller.
The input menu for entering your own e-mail address is displayed.

Downloading messages manually

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select : turn and press the controller.
The message menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Download**: turn and press the controller.

Downloading text messages and e-mails from the phone


- ▶ Select **From the Phone**.
The messages are downloaded. If you have selected **Automatic Download** in the e-mail settings, manual downloading is not possible.

Updating from the e-mail server by the mobile phone





- ▶ Select **From the E-Mail Server**.
The e-mails in the mobile phone are updated.
This function is not supported by all mobile phones.

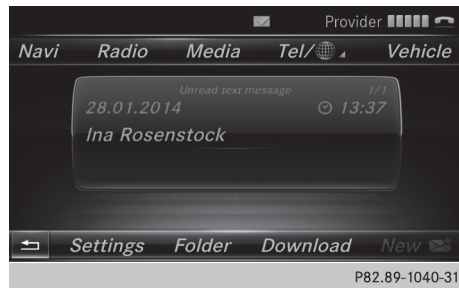Reading messages

In the message menu




The message menu contains all the unread text messages and e-mails. If the corresponding folder is called up, the messages are displayed sorted by text messages and e-mails.

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select : turn and press the controller.
The message menu is displayed with the unread messages.
- ▶ To select the message: turn and press the controller.
The message text is displayed.
- ▶ **To close the message text**: press the  button.

If you want to read messages that have already been read again, you have to call up the corresponding message folder (▷ page 114).

In the message folder

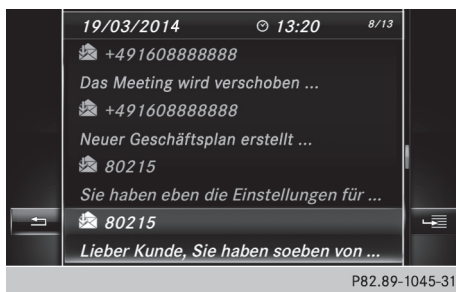

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **✉**: turn and press the controller. The message menu is displayed.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **Folder**: turn and press the controller.
- ▶ To select the desired folder in **Text Message** or **E-Mail** category: turn and press the controller. The selected folder is displayed.
- ▶ To select the message: turn and press the controller. The message is displayed.
- ▶ To scroll through the message or select phone numbers in the text: turn the controller. The display scrolls up or down line by line, or skips to the next or previous telephone number and automatically highlights it.
- ▶ **To close the message text**: press the **⏪** button.

The following sub-folders can be selected for text messages and e-mails:

- **Inbox**
This folder contains all the incoming messages.
- **Outbox**
This folder contains all the outgoing messages.
- **Drafts**
This folder contains all the messages that you have saved as a draft.

i Folders cannot be selected if they are empty.

Depending on the mobile phone used, the sub-folder function may be available.

Read-aloud function for messages

- ▶ To start the read-aloud function: press the controller when the message is displayed.
 - ▶ To select **Read Aloud**: turn and press the controller. The multimedia system reads the message aloud.
 - ▶ To cancel the read-aloud function: press the **⏪** button.
- or
- ▶ Press the controller, select **Cancel Read-Aloud Function** and press the controller again.

You can set the language (▷ page 41) and the speed (▷ page 37) of the read-aloud function.

Displaying details and phone numbers

The multimedia system can also show a shortened sender display in full.

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **✉**: turn and press the controller. The message menu is displayed.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **Folder**: turn and press the controller.
- ▶ To select **Text Msg.** or **E-Mail** : turn and press the controller. The selected folder is displayed.
- ▶ To highlight the desired message: turn the controller.
- ▶ To select **✉**: slide **⊙→** the controller.
- ▶ To select **Details**: turn and press the controller. The detailed view appears.
- ▶ **To close the detailed display**: slide **←⊙** the controller.

Writing text messages

Writing a new text message



Observe the requirements for the message function (▷ page 111).

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select : turn and press the controller. The message menu is displayed.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **New**: turn and press the controller.
- ▶ To select **Text Message**: turn and press the controller. The text message input menu is displayed. The **To:** input line is selected.

Entering a recipient

- ▶ Enter characters using the controller or the number keypad (▷ page 29).
- or
- ▶ To enter a phone number from the phone book: select the symbol. The contacts from the address book which have a phone number are displayed.
 - ▶ Search for and select an entry (▷ page 100). The number is copied to the recipient line.

Entering text and sending text messages

- ▶ To select an input line for text: select in the character bar.
- ▶ Enter characters. The multimedia system contains templates which you can use to compile your messages (▷ page 116).
- ▶ To send the text message: select **OK**.

Answering a text message

Observe the requirements for the message function (▷ page 111).

- ▶ Display the message (▷ page 113).
- ▶ Press the controller.
- ▶ To select **Reply**: turn and press the controller. The text message input menu is displayed. The addressee's details are automatically filled in using the details in the original message.

Writing e-mails

Writing a new e-mail




Observe the requirements for the message function (▷ page 111).


- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select : turn and press the controller. The message menu is displayed.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **New**: turn and press the controller.
- ▶ To select **E-Mail**: turn and press the controller. The e-mail input menu appears. The **To:** input line is selected.

Entering a recipient


- ▶ Enter characters using the controller or the number keypad (▷ page 29).
- or

- ▶ To insert an e-mail address from the address book: select the  symbol. The contacts from the address book which have an e-mail address are displayed.
- ▶ Search for and select an entry (▷ page 100). The e-mail address is copied to the addressee line.

Entering the subject

- ▶ To select the **Subject**: input line: select  in the character bar.
- ▶ Enter characters.

Entering text and sending e-mails

- ▶ To select an input line for text: select  in the character bar.
- ▶ Enter characters. The multimedia system contains templates which you can use to compile your messages (▷ page 116).
- ▶ To send the e-mail: select **OK**.

Answering an e-mail

Observe the requirements for the message function (▷ page 111).

- ▶ Display the message (▷ page 113).
- ▶ To call up a menu: press the controller.
- ▶ To select **Reply**: turn and press the controller. The e-mail input menu appears. The addressee's details are automatically filled in using the details in the original message.

When replying to an e-mail, you can also select **Reply to All** instead of **Reply**. In this case, the reply is sent not just to the sender but to all those who received the original message.

Forwarding an e-mail

Observe the requirements for the message function (▷ page 111).

- ▶ Display the message (▷ page 113).
- ▶ To call up a menu: press the controller.
- ▶ To select **Forward**: turn and press the controller. The input menu appears. The subject line is automatically filled in with the same details as those in the original message.

Text templates



Using text templates



- ▶ Select the input line for a text message (▷ page 115) or e-mail (▷ page 115).
- ▶ To select text templates ① in the character bar: turn and press the controller. The text templates are displayed.
- ▶ To select and insert a text template: turn and press the controller. The text template is inserted into the text message or e-mail.

Editing text templates



- ① Displays text templates
- ▶ Select the input line for a text message (▷ page 115) or e-mail (▷ page 115).
- ▶ To select text templates ① in the character bar: turn and press the controller. The text templates are displayed.
- ▶ To highlight the text template to be edited: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Edit**: turn and press the controller. The text template is displayed in an input line.
- ▶ Enter characters using the controller or the number keypad (▷ page 29).

- ▶ To adopt changes to the text template, select **OK** : turn and press the controller.
- ▶ Select **Yes**.
The text template has been changed.

Calling a text message sender

- ▶ Display the message (▷ page 113).
- ▶ To call up a menu: press the controller.
- ▶ To select **Call Sender** : turn and press the controller.
The call is made.

Using a phone number in the text

Numbers in text messages that are highlighted can be used.

- ▶ To highlight and select a usable phone number while the message is displayed: turn and press the controller.
- ▶ To select **Use**: turn and press the controller.
- ▶ To select **Call** : turn and press the controller.
The call is made.

i It is possible that a highlighted numerical sequence may not contain a telephone number.

Storing sender as a new contact


 
Storing the sender of a text message

- ▶ To call up the menu when a text message is displayed: press the controller.
- ▶ To select **Save Number**: turn and press the controller.
- ▶ Select **New Entry**.
or
- ▶ Select **Add to Address Book Entry**.
- ▶ Select a number category.
- ▶ Select a telephone category.
- ▶ Select **Continue**.
The input line for the name of the new contact is displayed. The input line for the telephone number is filled in automatically.
- ▶ Enter characters using the controller (▷ page 29) or the number keypad.
- ▶ To finish the entry: select **OK**.
The new contact has been created.

Saving the sender of an e-mail

- ▶ To call up the menu when an e-mail is displayed: press the controller.
- ▶ To select **Save Sender's E-Mail Address**: turn and press the controller.
The input line for the name of the new contact is displayed. The input line for the e-mail address is filled in automatically.
- ▶ Enter characters using the controller or the number keypad (▷ page 29).
- ▶ To finish the entry: select **OK**.
The new contact has been created.

Deleting messages

- ▶ Call up the message folder (▷ page 114).
- ▶ To select the message: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Delete** : turn and press the controller.
- ▶ To select **Yes**: turn and press the controller.
The message is deleted from the multimedia system and the mobile phone.

i This delete function is not supported by all mobile phones. You will see a message to this effect.

Dictation function

Requirements

To use the dictation function, the connected mobile phone must support the MAP Bluetooth® profile. When connecting the mobile phone, you may have to accept the prompt for the MAP Bluetooth® profile.

With some mobile phones, some settings still have to be made after connecting to the multimedia system (see the manufacturer's operating instructions).

An e-mail account must be set up on the mobile phone for the e-mail function (see the manufacturer's operating instructions).





To read and write e-mails in the multimedia system, the e-mail account first needs to be configured (▷ page 113).

Some mobile phones with the MAP Bluetooth® profile:


- do not support the deleting or editing of text messages
- do not support the drafts folder for text messages
- do not support the sending of text messages
- do not support the e-mail function
- do not send messages when in a locked status

i The availability of the dictation function is country-dependent.

Calling up text messages or e-mails in the message menu

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select : turn and press the controller. The message menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **New**: turn and press the controller.
- ▶ To select **Text Message** or **E-Mail**: turn and press the controller. The input menu for the message is displayed.

Calling up and using the dictation function

- ▶ Select the  microphone. The app for the dictation function is loaded. If there was no prior Internet connection, a connection is now established.
- ▶ **To start the dictation function:** press the controller.
- ▶ Say your message. The dictation ends automatically after you have finished speaking. After the spoken message has been processed, it is shown as text on the display.
- ▶ **To select words:** turn and press the controller.
- ▶ In the correction menu, you can:

- adjust capitalization of words (if supported by the character set)
- add words
- delete words
- replace the dictated message with a new one

▶ **To exit the menu:** select **Done**.

Send message

The dictated text is displayed in the message input window.

 
- ▶ Enter the telephone number or e-mail address into the addressee line.
- ▶ To send the message: select **OK**.

i The availability of the dictation function may vary according to the country and vehicle equipment.

Apple CarPlay™

Introduction

iPhone® functions can be used via the multimedia system using Apple CarPlay™. Apple CarPlay™ can be operated using the controller or Siri® voice-operated control system. Whether selected buttons are supported in the vehicle depends on the iOS version of the mobile phone and the apps available. You will find an overview of the multimedia system's control panel and available buttons here (> page 18).

To activate voice-operated control, press and hold the  button on the multifunction steering wheel (> page 99). Apple CarPlay™ is only available for Apple® mobile phones (see the manufacturer's operating instructions). The availability of Apple CarPlay™ may vary by country and depending on vehicle equipment.

During Apple CarPlay™ use, various multimedia system functions, such as navigation, are not available.


The respective provider is responsible for the application and the associated services and content.

Requirements

- Apple CarPlay™ is available from the iPhone® 5. Mercedes-Benz recommends that you use the latest operating system on the iPhone®.
- You require a connector cable for the iPhone®.
- The full range of functions for Apple CarPlay™ is only possible when the Apple CarPlay™-capable mobile phone is connected to the Internet.

Connecting the iPhone® with the multimedia system

In order to be able to use Apple CarPlay™, a connection must be established between the iPhone® and the multimedia system.


 


- ▶ Connect the iPhone® via a connection cable to the USB port . The first time you connect an Apple CarPlay™-capable mobile phone to the multimedia system or switch between Apple CarPlay™-capable mobile phones, a prompt appears asking whether you want future activation to be automatic or manual.

Activating Apple CarPlay™

Automatic activation





 

- ▶ To select **Auto**: press the controller. Apple CarPlay™ will start automatically each time a connection has been established between the iPhone® and the multimedia system.

Manual activation

- ▶ To call up the telephone menu: press the  button.
 - ▶ To show the main function bar: slide   the controller.
 - ▶ To select **Tel/**: turn and press the controller.
 - ▶ Select **Apple CarPlay**. Apple CarPlay™ starts.
- i** Depending on the operating status, not all of the steps may be necessary. A message to start Apple CarPlay™ appears on the display. Confirm this.


Changing the activation type

When the mobile phone is disconnected from the multimedia system, the activation mode can be changed.

- ▶ To call up the telephone menu: press the  button.
- ▶ To display the main function bar: slide   the controller.
- ▶ To select **Tel/**: press the controller.
- ▶ Select **Apple CarPlay**.
- ▶ To show the menu bar: slide   the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Deactivate or activate **Start Apple CarPlay Automatically**.

Canceling Apple CarPlay™

Mercedes-Benz recommends that you only cancel Apple CarPlay™ when your vehicle is stationary.

- ▶ Remove the connection cable from the USB port . The **No Apple CarPlay Device Connected Please ensure that your device is connected to the correct USB port.** message appears.

Transmitted vehicle data

When using Apple CarPlay™, specific vehicle data are transmitted to the mobile phone. This makes it possible to use selected mobile phone services efficiently. The mobile phone does not have active access to vehicle data.

The following system information is transmitted:

- Multimedia system software version
- System ID (anonymous)

These data are transmitted in order to optimize communication between the vehicle and mobile phone.

A random vehicle code is generated for this purpose and in order to assign multiple vehicles to the mobile phone.

This code is not related to the vehicle identification number (VIN) and is deleted if the multimedia system is reset (▷ page 43).

The following driving status data is transmitted:

- Gear position engaged
- Difference between parked, stationary, coasting and driving
- Instrument cluster day/night mode

These data are transmitted in order to adapt the content displayed to the driving situation.

The following position data is transmitted:

- Coordinates
- Speed
- Compass direction
- Acceleration direction

These data are transmitted only when navigation is active in order to improve navigation (e.g. when driving through a tunnel).

Android Auto

Introduction

Android Auto can be used for functions on mobile phones with the Android operating system:

- Android Auto-capable apps of the mobile phone are shown in the multimedia system.
- Audio content from the mobile phone is played back in the multimedia system.

Only one mobile phone at a time can be connected to the multimedia system via Android Auto.

During Android Auto use, various multimedia system functions such as navigation, are not available.


The availability of Android Auto and Android Auto apps may vary from country to country and depending on the equipment in the vehicle.

The respective provider is responsible for the application and the associated services and content.

Connecting a mobile phone via Android Auto

Requirements:



 

- For safety reasons, initial activation of Android Auto on the multimedia system must be carried out while the vehicle is stationary.
- The mobile phone supports Android Auto starting from Android 5.0.

- The Android Auto app is installed on the mobile phone.
- In order to use the telephone functions, a mobile phone needs to be connected with the multimedia system via Bluetooth®.
- The full range of functions for Android Auto is only possible with an Internet connection.
- The mobile phone is connected to the USB port  on the multimedia system via a USB cable.


The multimedia system automatically establishes a connection to the mobile phone via Bluetooth®. If this is unsuccessful, an error message will appear. In this case, you should connect the mobile phone manually via Bluetooth® (▷ page 91).

Starting Android Auto







Multimedia system

 
- ▶ To call up the telephone menu: press the  button.
- ▶ To show the main function bar: slide   the controller.
- ▶ To select **Tel/**: press the controller.
- ▶ To select **Android Auto**: turn and press the controller.
A message informs you that no Android Auto device is connected.

Mobile phone

 - ▶ Connect the mobile phone to the USB port  in the center console.
When activated manually, a message to start Android Auto appears on the display of the multimedia system.
- ▶ To confirm the message: press the controller.
The Android Auto app is shown in the multimedia system display.




 


Setting up automatic connection

- ▶ To call up the telephone menu: press the  button.
- ▶ To display the main function bar: slide   the controller.
- ▶ To select **Tel/**: press the controller.
- ▶ To select **Android Auto**: turn and press the controller.
- ▶ To switch to the menu bar: slide   the controller.
- ▶ To select **Options**: turn and press the controller.

- ▶ To select **Start Android Auto Automatically**: turn and press the controller.
- ▶ Allow automatic connection . Android Auto starts automatically as soon as the mobile phone is connected to the USB port  of the multimedia system.

 
Changing the sound settings

When Android Auto is active, you can change the sound settings in the radio menu.

- ▶ To call up the radio menu: press the  button.
- ▶ To show the main function bar: slide   the controller.
- ▶ To select **Radio**: turn and press the controller.
- ▶ To switch to the menu bar: slide   the controller.
- ▶ To select : turn and press the controller. Change the sound settings.

Activating voice control

When Android Auto is active, you can start the mobile phone's voice control.

- ▶ Press and hold the  button on the multifunction steering wheel. Depending on the mobile phone a tone sounds.

Ending Android Auto

Mercedes-Benz recommends that you only cancel Android Auto when your vehicle is stationary.

- ▶ Terminate the USB connection between the mobile phone and the multimedia system. The **No Android Auto Device Connected** Please ensure that your device is connected to the correct USB port. message appears in the multifunction display.

Transmitted vehicle data

When using Android Auto, specific vehicle data is transmitted to the mobile phone. This makes it possible to use selected mobile phone services efficiently. The mobile phone does not have active access to vehicle data.

The following system information is transmitted:

- Multimedia system software version
- System ID (anonymous)

These data are transmitted in order to optimize communication between the vehicle and mobile phone.

A random vehicle code is generated for this purpose and in order to assign multiple vehicles to the mobile phone.

This code is not related to the vehicle identification number (VIN) and is deleted if the multimedia system is reset (▷ page 43).

The following driving status data is transmitted:

- Gear position engaged
- Difference between parked, stationary, coasting and driving
- Instrument cluster day/night mode

These data are transmitted in order to adapt the content displayed to the driving situation.

The following position data is transmitted:

- Coordinates
- Speed
- Compass direction
- Acceleration direction

These data are transmitted only when navigation is active in order to improve navigation (e.g. when driving through a tunnel).

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Important safety notes

WARNING

If you operate information systems and communication equipment integrated in the vehicle when driving, you may be distracted from the traffic situation. You could also lose control of the vehicle. There is a risk of an accident.

Only operate this equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

You must observe the legal requirements for the country in which you are driving when operating the system.

Conditions for access

USA: to use Mercedes-Benz Apps and Internet access, mbrace must be activated and operational. Furthermore, mbrace must be activated for Mercedes-Benz Apps and Internet access.


Canada: to use Mercedes-Benz Apps and Internet access, Mercedes me connect must be activated and operational. Furthermore, Mercedes me connect must be activated for Mercedes-Benz Apps and Internet access.

Take note of the connection priorities. An emergency call has the highest priority. When a service call, e.g. a breakdown service call or the MB Info Call, is active, an emergency call can still be initiated. A service call, on the other hand, has

priority over a current Internet connection. Therefore, you cannot establish an Internet connection during a service call.

The terms of use are shown when the system is used for the first time and then once a year thereafter. Only read and accept the terms of use when the vehicle is stationary.

The driver is not permitted to call up websites while driving and use of the Mercedes-Benz Apps is restricted.

-  The availability of individual Mercedes-Benz Apps may vary depending on the country.

Establishing/ending the connection

Establishing a connection

Read the conditions for establishing a connection (▷ page 122).

A connection can be established, for example by:

 
- entering a web address
- calling up a Mercedes-Benz App
- calling up a favorite

Ending the connection

- ▶ Press **Cancel** in the connections window.

Connection status



-  Display of existing connection and signal strength

In most cases, the current connection status is then shown in the status bar when you switch to another main function.

Detailed connection status

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the main function bar: slide **↑** the controller.
- ▶ To select **Tel/**: press the controller.
- ▶ To select **Internet**: turn and press the controller. The menu with the Internet functions is displayed.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **Settings**: turn and press the controller.
- ▶ To select **Connection Status**: turn and press the controller. The following information is displayed:
 - the volume of transferred data
 - connection status

Ending the connection

You cannot cancel the connection yourself. The Internet connection is automatically terminated if the system does not recognize any user input within a five-minute time period.

Mercedes-Benz Apps

General notes

To be able to use Mercedes-Benz Apps, you have to register and confirm the terms and conditions.

Calling up Mercedes-Benz Apps


- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the main function bar: slide **↑** the controller.
- ▶ To select **Tel/**: press the controller.
- ▶ To select **Internet**: turn and press the controller.
- ▶ To select **Mercedes-Benz Apps**: turn and press the controller.
- ▶ To call up the app: turn and press the controller.


You can find further Mercedes-Benz Apps and information under:

http://apps.mercedes-benz.com/apps/

- i** The available features are country-dependent. License fees may be applicable.

Voice-operated control of Mercedes-Benz Apps

If voice-operated control of a Mercedes-Benz app is available, this is shown by the  symbol in the app.

- ▶ Call up a Mercedes-Benz app (> page 123).
- ▶ To use voice-operated control: select .
- ▶ Say the question or prompt.
- i** The voice-operated control system is not available in all countries or all languages.

Web browser

Calling up a website


Function restrictions

Internet pages cannot be shown while the vehicle is in motion.



Entering a web address






 
- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the main function bar: slide **↑** the controller.
- ▶ To select **Tel/**: press the controller.

- ▶ To select **Internet**: turn and press the controller. The menu with the Internet functions is displayed.
- ▶ To select **www**: turn and press the controller. An input menu for the web address is displayed.
- ▶ Enter characters using the controller or the number keypad.
- ▶ To finish entry and call up a website: select .


Selecting a web address from the list

- ▶ When the character bar is displayed, slide  the controller.
- ▶ To select the desired web address: turn and press the controller. The web address can still be changed as desired.
- ▶ To call up a website: select  . The website is called up.







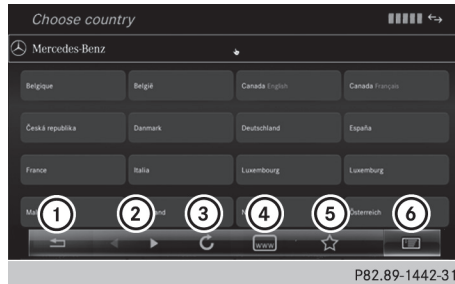

Navigating the website

Step	Result
▶ Turn the controller.	Navigates from one selectable item (e.g. link, text field or menu) to the next and highlights the respective element on the website.
Sliding the controller:	Moves the pointer on the page.
▶ Left or right 	
▶ Up or down 	
▶ Diagonally 	
▶ Press the controller.	Opens the selected item.
▶ Press  .	Calls up the menu.

Menu functions





- ① Closes the browser
- ② Back or forwards
- ③ Updates or cancels
- ④ URL entry
- ⑤ Favorites
- ⑥ Options

- ▶ **To show the menu:** press the  button.
 - ▶ **To call up the Options menu:** select  by turning and pressing the controller.
 - ▶ **To close the website:** select .
 - ▶ **To call up the previous website:** select .
 - ▶ **To call up the next website:** select .
 - ▶ **To refresh the website:** select  . The website is refreshed. This procedure may take some time.
- i** While the website is loading, a cross appears in the menu. This can be used to cancel the loading procedure.
- ▶ **To enter a URL:** select .
 - ▶ Enter a web address (URL) (▷ page 123).
 - ▶ **Favorites:** select  . The Favorites menu appears (▷ page 126).

 

Options menu

Adding to bookmarks

Adds the current website to the favorites. The website can then be called up using the menu. You can store up to 20 favorites in the menu.










 - ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.
- ▶ Select **Add to Bookmarks**. The **The page has been added to your bookmarks**. message appears.

Current URL

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.
- ▶ Select **Current URL**.
The URL appears.

 

Zoom

You can use this function to enlarge web pages.

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.
A menu appears. The • dot indicates the current setting.
- ▶ Select **Zoom**.
- ▶ To navigate on the web page: slide   ,   or   the controller.
- ▶ To zoom in on the web page: turn the controller.



Jumping from link to link

You can use this function to skip from one link to the next on a website.

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.
A menu appears. The • dot indicates the current setting.
- ▶ Select **Jump From Link To Link**.
If a website has been called up and the controller is turned, the cursor jumps from link to link.



 Directional scrolling

You can use this function to scroll up and down on the web page.

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.
A menu appears. The • dot indicates the current setting.
- ▶ Select **Directional Scrolling**.
If a website has been called up and the controller is turned, the cursor moves up or down depending on the direction of the turn.

Settings

Overview

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.
A menu appears.
- ▶ Select **Settings**.

You can activate or deactivate the following settings:

- **Download Images Automatically**

It may take some time to download the contents of websites that contain a large amount of images. Therefore, it may be useful to deactivate this option.

- **Block Pop-Ups**

Pop-ups are windows (usually with advertisements) which are displayed automatically when you call up a website. You can block these displays.

- **Activate Javascript**

Javascript makes it possible to display and interact with dynamic content on the website.

- **Allow Cookies**

Some websites save information in small text files (cookies) on your system. You can determine whether cookies may be stored.

- **Enable Internet Audio**

You can switch the browser's audio playback on or off here.

- **Hide Scroll Bars**

You can show or hide the scroll bar here.

- **Show Link Target**

You can display the link's URL here.

- **Character Size**

You can select the font size which is used when displaying the website.

- **Character Code**

You can select a different character set here, e.g. if the characters of a website appear distorted.

Changing settings


- ▶ To select the desired setting: turn and press the controller.
Switch the setting on or off .

Changing the character size or character code

- ▶ Select **Character Size** or **Character Code**.
- ▶ To select the setting you require: turn and press the controller.

i If you change the settings, the websites may not be displayed correctly.

Deleting private data

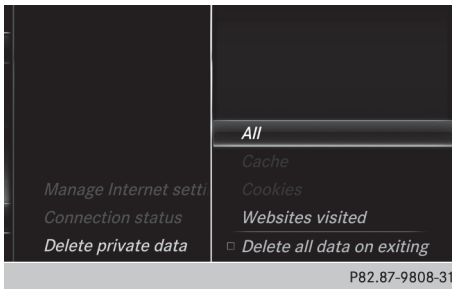

- ▶ Press the **TEL** button.
- ▶ To switch to the main function bar: slide **↑** the controller.
- ▶ To select **Tel/**: press the controller.
- ▶ To select **Internet**: turn and press the controller.
- ▶ To switch to the menu bar: slide **⇩** the controller.
- ▶ To select **Settings**: slide **⇩**, turn and press the controller. A menu appears.
- ▶ To select **Delete Private Data**: turn and press the controller.
- ▶ To select the setting you require: turn and press the controller.

or

- ▶ Select **Delete All Data On Exit**. Switch the setting on or off .

Option	Function
All	Deletes all personal data.
Cache	Deletes data in the cache.
Cookies	Deletes cookies that are created by websites which you have called up.

Option	Function
URL History	Deletes all websites visited (path).
<input checked="" type="checkbox"/> Delete All Data On Exit	If this function is activated <input checked="" type="checkbox"/> , all personal data is deleted when you exit the Internet browser.

Favorites

Introduction

Favorites are frequently visited websites.

Creating favorites

Adding a favorite in the menu

- ▶ Press the **TEL** button. The last function called up appears.
- ▶ To select **Tel/** in the main function bar: slide **↑**, turn and press the controller. A menu appears.
- ▶ To select **Internet**: turn and press the controller. The menu for the Internet functions appears.
- ▶ Select **www**.
- ▶ Enter the web address (URL) and name using the character bar and press **OK**.

Add to favorites

- ▶ To call up the menu: press the **↔** button.
- ▶ To select **☰**: turn and press the controller.
- ▶ Select **Add to Bookmarks** (> page 124).

Selecting favorites

- ▶ Press the **TEL** button. The last function called up appears.
- ▶ To select **Tel/** in the main function bar: slide **↑**, turn and press the controller. A menu appears.
- ▶ To select **Internet**: turn and press the controller. The menu for the Internet functions appears.

- ▶ To select the **Internet Favorites** menu: turn and press the controller. The Favorites menu appears.
- ▶ Select the desired bookmark. The favorite is opened in a new window.

Editing favorites

- ▶ Press the **TEL** button. The last function called up appears.
- ▶ To select **Tel/** in the main function bar: slide **↑**, turn and press the controller. A menu appears.
- ▶ To select **Internet**: turn and press the controller. The menu for the Internet functions appears.
- ▶ To select the **Internet Favorites** menu: turn and press the controller. The Favorites menu appears.
- ▶ To bring the desired favorites to the front.
- ▶ To select **Edit**: slide **↓** and press the controller. An input menu appears.
- ▶ Enter a web address (URL).
- ▶ Press the touchpad or controller.
- ▶ Select **T/**.
- ▶ Press the touchpad or controller.
- ▶ Slide **↓** the controller.
- ▶ Enter a name.

Deleting favorites

- ▶ Press the **TEL** button. The last function called up appears.
- ▶ To select **Tel/** in the main function bar: slide **↑**, turn and press the controller. A menu appears.
- ▶ To select **Internet**: turn and press the controller. The menu for the Internet functions appears.
- ▶ To select the **Internet Favorites** menu: turn and press the controller. The Favorites menu appears.
- ▶ To bring the desired favorites to the front.
- ▶ To select **Delete**: slide **↓** and press the controller. A prompt appears.
- ▶ Select **Yes**. The favorite is deleted.

Closing the browser

- ▶ Select **↔** in the browser menu (> page 124)
- or
- ▶ Press the **↔** button for longer than two seconds. A prompt appears, asking whether you want to close the Internet browser.
 - ▶ Select **Yes**. The application is closed.

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Radio

Switching on the radio

- ▶ Press the **[RADIO]** button. The Radio menu appears. You will hear the last station set on the waveband selected last.



Switching HD Radio on/off

- ▶ In radio mode: slide **[ON/OFF]** the controller.
- ▶ Select **Options**.
- ▶ Switch **HD Radio** on or off .

If HD Radio is switched off, the system does not switch to digital radio and it is not possible to select any sub-channels.

- i** HD Radio™ Technology Manufactured Under License From iBiquity Digital Corp. U.S. and Foreign Patents. The HD and HD Radio logos are proprietary trademarks of iBiquity digital.

Overview



- ① Main function bar
- ② Status bar with compass display
- ③ Main display field with available stations and relevant information
- ④ Display of radio station selected
- ⑤ Radio menu bar

The following functions can be called up in the main function bar by selecting the menu item Radio:

- **HD Radio FM:** HD FM radio mode
- **HD Radio AM:** HD MW radio mode
- **Sat Radio:** satellite radio
- **Info on Radio:** information on radio in the Digital Operator's Manual
- **Radio Station Presets:** 100 preset positions for radio stations

The following functions are available using the radio menu bar:

- **Options:** radio options
- **[SEARCH]:** searches for stations by name
- **Preset:** station presets menu
- **Band:** waveband selection
- **Information:** displays additional information about the current station (radio text or Artist Experience®)
- **[SOUND]:** sound settings, harman/kardon® Logic 7®, Bang & Beosound

Sets the waveband

- ▶ In radio mode: press the **RADIO** button. A menu appears with a selection of **HD Radio FM, HD Radio AM, Sat Radio, Info on Radio** and **Radio Station Presets**.
- ▶ Turn the controller until the required waveband is in the center. Press the controller.

Station

Selecting a station

Setting the station in radio mode

All currently available stations are displayed.

- ▶ In radio mode, turn the controller until the desired station is in the center.

Setting a station from the current station list

- ▶ In radio mode, press the controller. The station list appears with the stations currently available.
- ▶ To select the desired station: turn and press the controller.
- ▶ **i** The loudspeaker symbol in front of a station indicates the currently set station.

Entering the station frequency

- ▶ In radio mode: slide **⊙↓** the controller. The radio menu bar appears.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Enter Frequency**.
- ▶ Enter the frequency of the desired station in the entry field.

Finding a station

- ▶ In radio mode: slide **⊙↓** the controller. The radio menu bar appears.
- ▶ Select **🔍** and enter the first letters of the required station using the controller.
- ▶ Press **OK** to confirm. A list with available stations appears.
- ▶ To select stations from the list: turn the controller and press to confirm.

Activating/deactivating the station presets display

Activating

You can use this function to change to the station presets display.

- ▶ In radio mode: slide **⊙↓** the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ To select **Station Preset View: On**: press the controller. The station preset display appears.
- ▶ To switch between the stored stations: turn the controller.

Deactivating

- ▶ In radio mode: slide **⊙↓** the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ To select **Station Preset View: Off**: press the controller. The view of the last heard waveband appears.

Saving a station

Storing current stations

- ▶ In radio mode: slide **⊙↓** the controller. The radio menu bar appears.
- ▶ To select **Preset**: turn and press the controller.
- ▶ To select the **Save Current Station/Channel** option: turn and press the controller.
- ▶ To select the position of the required preset entry: turn and press the controller. The currently set station is stored in the selected preset position. A tone signals a successful preset entry.

Storing a station using the number keypad



- ▶ Set the desired station in radio mode.
- ▶ Press and hold down the preset number to be assigned on the number keypad until a tone confirms the storing process.
- ▶ If the preset number has two digits, press the first digit briefly and then press and hold down the second digit. A tone confirms that the storing process was successful.

Storing a station using the controller



- ▶ Set the desired station in radio mode.
- ▶ Press and hold the controller until the preset list appears.
- ▶ To select the preset number: turn and press the controller.

i Frequencies have already been stored in the multimedia system. There are 100 preset positions available.

Moving highlighted stations

- ▶ In radio mode: slide  the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ Select **Edit Station Preset**.
- ▶ To select the required preset entry: turn the controller.
- ▶ Slide  the controller. An additional menu appears.
- ▶ To select the **Move Highlighted Station/Channel** option: turn and press the controller. The list of stored stations appears again.
- ▶ To move the highlighted station to the new position: turn the controller and press to confirm.

Deleting highlighted stations

 
- ▶ In radio mode: slide  the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ Select **Edit Station Preset**.
- ▶ To select the required preset entry: turn the controller.
- ▶ Slide  the controller.
- ▶ To select the **Delete Highlighted Station/Channel** option in the additional menu: turn and press the controller.

or


- ▶ Press the **CLEAR** button. A prompt appears.
- ▶ To select **Yes**: turn and press the controller. The highlighted station is deleted.

Tagging music tracks



This function allows you to transfer the music track currently playing to an Apple® device and then purchase it in the iTunes store®.

- ▶ In radio mode: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Tag This Track**. A message appears in the multimedia system about storing the track information.

 Displaying station information

- ▶ In radio mode: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Switch **Show Station Information** on or off . If the function is active, the artist and track will also be displayed in the main display field.

 Calling up sound settings

- ▶ In radio mode: slide  the controller. The radio menu bar appears.
- ▶ To select : turn and press the controller. The sound menu appears (> page 157).

Displaying information

This function is available in HD FM radio and HD AM radio mode.

Reception is only possible if the radio stations provide the relevant information.

- ▶ To select **Information** in the radio menu bar: turn and press the controller. Information on the currently received program is displayed.

If available, you will see:


- the track that is currently being played
- the artist of the track that is currently being played
- the album name

- the channel abbreviation
- the logo of the station or Artist Experience®

Returning to the radio menu:

▶ To select **Information** : slide  and press the controller.

or

▶ Press the  button.

Satellite radio

General notes

The satellite radio mode requires satellite radio equipment and registration with a satellite radio provider.

Note that the categories and channels shown in the illustrations depend on the program content offered by the provider. The illustrations and descriptions in these operating instructions may therefore differ from the channels and categories offered by the provider.

Satellite radio mode may be temporarily unavailable or interrupted for a variety of reasons.

These include environmental or topographical conditions as well as other factors beyond the control of Mercedes-Benz USA, LLC. This means operation may not be possible in certain areas.

These include:

- tunnels
- parking garages
- locations inside or next to buildings
- locations in the vicinity of other structures

Sirius XM® Satellite Radio offers more than 140 digital-quality radio channels, providing 100% commercial-free music, sports, news and entertainment.

Sirius XM® Satellite Radio uses a fleet of high-performance satellites to broadcast around the clock throughout the USA and Canada.


The satellite radio program is available for a monthly fee. Details are available from the SIRIUS XM® Service Center and at <http://www.siriusxm.com> (USA) or <http://www.siriusxm.ca> (Canada).

Your new Mercedes-Benz vehicle comes with Sirius XM® Satellite Radio pre-installed at the factory. This service is free for a six-month trial period. About a month before the trial period ends, information will be provided on how to extend this subscription. An acoustic signal

sounds and a message is shown, describing how the subscription can be extended.

- ❗ Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. and its subsidiaries. All other marks, channel names and logos are the property of their respective owners. All rights reserved.

Registering satellite radio

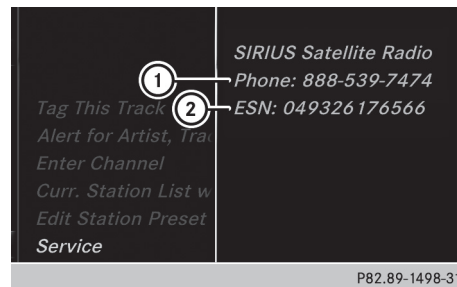

- ① Phone number of provider
- ② Sirius XM® ID of your satellite receiver

▶ Switch on SatRadio mode (▶ page 132). The satellite radio main menu appears showing the preview channel. You cannot select any other stations.

▶ To select **Options** in the radio menu bar: turn and press the controller.

▶ To select **Service** : turn and press the controller.

The service information screen appears.

Once the telephone connection has been established:



▶ Follow the instructions of the service staff. The activation process may take up to ten minutes.

- ❗ You can also have the satellite service activated online. To do so, please visit <http://www.siriusxm.com> (USA) or <http://www.siriusxm.ca> (Canada).

- ❗ If registration is not included when purchasing the system, your credit card details will be required to activate your account.

If the satellite receiver is not installed correctly, the **Device Unavailable** message will appear.


Switching to satellite radio

- ▶ To show the main function bar: slide  the controller.
- ▶ To select **Radio**: turn and press the controller. The Radio menu appears. You will hear the last station set on the waveband selected last.
- ▶ To select **Radio** in radio mode: slide  and press the controller. The menu with the available radio modes appears.
- ▶ To select **Sat Radio**: turn and press the controller.

The **No Service** message appears if there is no signal.

- ▶ **To call up the category list:** select **Category** in the menu bar by turning and pressing the controller. The category list appears.
- ▶ **To select a category:** turn and press the controller. The category selected is shown in the display. You hear the channel last selected for this category. The **•** dot indicates the current setting. When you select a specific category, the channels are filtered exclusively according to this category. Select the **All Channels** category in order to see all of the available channels. Only this category enables you to browse all available stations.

Satellite radio overview

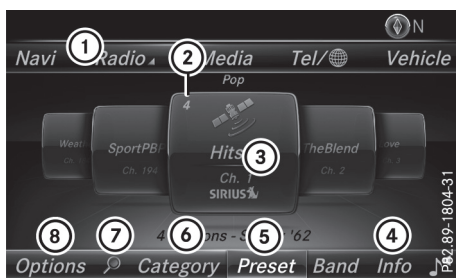

- ① Main function bar
- ② Preset
- ③ Channel name and channel number
- ④ Channel information
- ⑤ Station presets menu
- ⑥ Category list
- ⑦ Keyword search
- ⑧ Options menu


Channel information ④ can be viewed in detail ( page 134).

Selecting a category



Satellite radio channels are sorted into categories. You can choose between various categories such as News/Discussions, Sports and Country (if available). The category list is sorted alphabetically. The content of the categories is sorted by channel numbers.

Selecting a channel

Changing channels

- ▶ When the display/selection window in the satellite radio display is selected, slide  or turn the controller. The multimedia system switches to the next available channel.

Entering the channel number directly

- ▶ To select **Options** in the radio menu bar: turn and press the controller. The satellite radio menu appears.
- ▶ To select **Enter Channel**: turn and press the controller. An input menu appears.
- ▶ Enter the desired channel in the entry field. or
- ▶ Press the  key on the number keypad. An input menu appears.
- ▶ For the channel number, press the corresponding number keys on the control panel one after the other.
- ▶ Press the  key on the number keypad. The multimedia system sets the selected channel.

i You can only select currently permitted digits.

Selecting a channel via the satellite radio station list


You can select the channel using the station list displaying the artists and tracks that are currently playing.

- ▶ To select **Options** in the radio menu bar: turn and press the controller.
- ▶ To select **Station List with Artist & Title**: turn and press the controller. The channel list appears.

or

- ▶ Press the controller in the main display field.
- ▶ Select the desired channel

Keyword search

- ▶ To select the keyword search  in the menu bar: turn and press the controller.
- ▶ To enter the required search term: turn and press the controller. Direct and indirect results are shown.
- ▶ Select the required result. The relevant channel is played.

Memory functions

There are 100 presets available.

Saving the current channel

- ▶ To select **Preset** in the radio menu bar: turn and press the controller.
- ▶ To select **Edit Station Preset**: turn and press the controller. The list of saved channels appears.
- ▶ To select the preset: turn the controller and press for about two seconds. The newly saved channel overwrites the existing preset.


Saving a channel using the controller

- ▶ Set the desired channel in satellite radio mode.
- ▶ Press and hold the controller until the preset list appears.
- ▶ To select the preset number: turn and press the controller. A tone confirms that the storing process was successful.


Using quick save

- ▶ Set the desired channel in satellite radio mode.
- ▶ Press and hold a number key for two seconds. The channel is saved to the corresponding position in the channel presets. The newly saved channel overwrites the existing preset.

Deleting the highlighted channel

- ▶ To select **Preset** in the radio menu bar: turn and press the controller.
- ▶ Select **Edit Station Preset**.
- ▶ To select the required preset entry: turn the controller.
- ▶ Slide  the controller.
- ▶ To select the **Delete Highlighted Station/Channel** option in the additional menu: turn and press the controller.

 
or

- ▶ Press the  button. A prompt appears.
- ▶ To select **Yes**: turn and press the controller. The highlighted station is deleted.


Activating/deactivating the station presets display

You can use this function to change to the station presets display.

Activating

- ▶ In radio mode: slide  the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ To select **Station Preset View: On**: turn and press the controller. The station preset display appears.
- ▶ To switch between the stored stations: turn the controller.

Deactivating

- ▶ In radio mode: slide  the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ To select **Station Preset View: Off**: turn and press the controller. The view of the last heard waveband appears.

Music and sports alerts

General notes

This function makes it possible to store a program alert for your favorite artists, tracks or sporting events.

You can store up to 30 music and sports alerts (favorites).

Music alerts can only be saved whilst a track is being played. You can also specify sports alerts via the menu option. The system then continuously searches through all the channels. If a match is found with a saved message, you will be informed. A window appears with the respective information.

Setting a music alert

- ▶ To select **Options** in the radio menu bar: turn and press the controller.
- ▶ To select **Alert for Artist, Track & Sports Event** : turn and press the controller. A menu appears.
- ▶ Select **Add New Alert** .
A window with a prompt appears.
- ▶ Select **Artist** or **Track** .
The alert is set for the current artist or track.

i If an alert cannot be set, the **No Alerts Available** message appears.

Setting a sports alert

- ▶ To select **Options** in the menu bar: turn and press the controller.
- ▶ To select **Alert for Artist, Track & Sports Event** : turn and press the controller. A menu appears.
- ▶ Select **Manage Sports Alerts** .
A menu appears.
- ▶ Select **Select New Alerts** .
A menu appears.
- ▶ Select the desired team from a league, e.g. college, NBA, NHL, NFL or MLB.
The alert function for the sports team is added.

A window with music and sports alerts appears

- ▶ Select **Change To** .
The channel is changed and the favorite artist or track is played.
- or
- ▶ Select **Ignore** .
The current channel will continue playing.

Editing music and sports alerts

- ▶ To select **Alert for Artist, Track & Sports Event** : turn and press the controller. A menu appears.
- ▶ Select **Manage Music Alerts** or **Manage Sports Alerts** .
A list of set alerts appears.

Switching music and sports alerts on/off

- ▶ Switch **Activate Music Alerts** on or off .
- ▶ Switch **Activate Sports Alerts** on or off .

Tagging music tracks

If the channel supports this function, you are able to transfer the music track currently playing to an Apple® device. You can then purchase it in the iTunes® store.


- ▶ To select **Options** in the radio menu bar: turn and press the controller.
- ▶ To select **Tag This Track** : turn and press the controller.
A message about saving this music track on the Apple® device appears.

Displaying information

- ▶ To select **Information** in the radio menu bar: turn and press the controller.
Information on the currently received program is displayed.


If available, the following information is displayed:

- the channel logo
- the channel abbreviation

- the artist of the track that is currently being played
 - the track that is currently being played
 - the category
 - or the composer
- ▶ **To return to the radio menu:** select **Information** by sliding  and pressing the controller.

Displaying service information

The satellite radio provider's customer service center is available by phone at any time to answer any general questions or questions on the versions available.

- ▶ To select **Options** in the menu bar: turn and press the controller.
- ▶ To select **Service** : turn and press the controller.
The Sirius XM[®] ID of your satellite receiver and the telephone number of the provider appear.
- ▶ **To return to the radio menu:** press the  button.

Channel list updates

During reception of a new channel list, the **Updating Channels...** message is shown. The channel last selected is switched to mute until the update has been completed. Satellite radio mode is not available during this process. Once the update has been completed, the satellite radio menu appears. The channel previously selected will be played if it is still available.

Sound settings

Information on sound settings (▷ page 157).



Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Activating media mode


General notes

There are several ways to activate media sources using the multimedia system.

The relevant sections of the Operator's Manual describe the simplest way to activate a media source.

This section describes all options for activating media sources.

Connections for external media sources

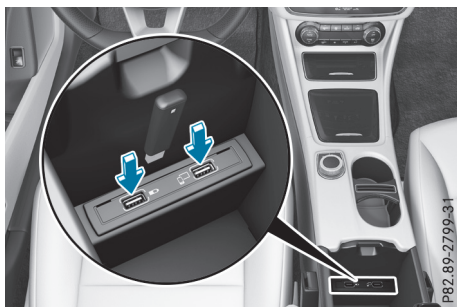

The following external media sources can be used:

- Apple® devices (e.g. iPhone®)
- USB devices (e.g. USB stick, MP3 player)
 - Two USB ports are located in the stowage space under the armrest.
- CD
- DVD video
- SD cards
- Devices with Bluetooth® connection

Activating media using the button

- ▶ Press the **MEDIA** button.
The last media source you have set is displayed.
- ▶ Press the **MEDIA** button again.
The menu appears with the available media sources.
- ▶ To select media sources: turn the controller until the desired media source is in the center. Press the controller.

Depending on the vehicle equipment, the following media sources will be available:

- Disc
- Memory Card
- Media Interface 1
- Media Interface 2
- Bluetooth Audio

Switching on automatically

When an external media source is connected, CD and SD memory card functions are automatically switched on by the multimedia system. When using with USB devices, switch to the respective media menu.

 

If playable music files are found, they will be played by the multimedia system.

i If media playback is active in the multimedia system, it is interrupted. The media menu of the newly connected device appears (except when using with USB/iPod®). If another function, such as navigation, is being operated, the display does not change.



Activating media using the main function bar

- ▶ To show the main function bar in media mode: slide **↑** the controller.
- ▶ To select **Media**: press the controller.
A menu appears with the available media sources.
- ▶ To select the media source: turn the controller and press to confirm.
If the media source contains music or video files, these will be played. The corresponding media menu is shown.

Activating media using the number keypad

- ▶ To select a media source: press the corresponding number key.
If the media source contains music or video files, these will be played. The corresponding media menu is shown.
- ▶ To enter the track number: press the  button.
A menu appears.
- ▶ Use the number keypad to enter the track number.
The track is played.
Use the  button to show the track information for the track that is currently playing.

 Activating media using the device list

- ▶ In Media mode, slide  the controller.
The media menu bar appears.
 - ▶ To select **Devices**: turn and press the controller.
The available media sources will be shown. The  dot indicates the current setting.
 - ▶ Select the media source.
If the media source contains music or video files, these will be played. The corresponding media menu is shown.
- i** In Bluetooth® audio mode, it is not possible to select media via the device list.

Audio/video mode

Important safety notes

WARNING

The CD/DVD drive is a class 1 laser product. If you open the housing of the CD/DVD drive, there is a risk of exposure to invisible laser radiation. This laser radiation could damage your retina. There is a risk of injury.

Never open the housing. Always have maintenance and repair work carried out at a qualified specialist workshop.

WARNING

If you handle a disc while driving, you may be distracted from the traffic situation. You could

also lose control of the vehicle. There is a risk of an accident.

Only handle a disc when the vehicle is stationary.

Bear in mind that at a speed of only 30 mph (approximately 50 km/h), the vehicle covers a distance of 44 ft (approximately 14 m) per second.

Notes on audio/video mode

Permissible data carriers

- CD audio, CD-R and CD-RW
- DVD video, DVD-R and DVD-RW (audio formats PCM DTS® and Dolby® Digital)
- SD card
- USB storage device
- Apple® devices

i Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

i For DTS patents see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol & DTS and the Symbol together are registered trademarks, and DTS Digital Surround is a trademark of DTS, Inc.® DTS, Inc. All rights reserved.

Permissible file systems

- ISO 9660/Joliet standard for CDs
- UDF for video DVDs
- FAT16, FAT32, exFAT and NTFS for SD card and USB storage media
- HFS and HFS+ for Apple® devices

i Writing access is not possible on NTFS.

Multisession CDs

For multi-session CDs, the content of the first CD session determines how the multimedia system will process the CD. The multimedia system only plays back one CD session and gives priority to the first session on the CD.

File structure of a data carrier

When you create a disc with compressed music files, the tracks can be organized in folders. A folder may also contain subfolders. The disc may contain no more than eight directory levels (a root and seven sub-levels). Files beyond the eighth level will not be recognized by the system.

- i** The multimedia system supports up to 25,000 files for all of the connected sources.

Track and file names

When you create a disc with compressed music files, you can assign names to the tracks and folders.

You should observe the following when assigning track names:

- track names must have at least one character
- track names must have an extension of a supported audio or video format, e.g. mp3, aac or m4v
- there must be a dot between the track name and the extension

Example of a correct track name:
"Track 1.mp3".

Permissible formats

The multimedia system supports the following audio and video formats:

Audio formats	MP3, WMA, CDA, AAC formats (.aac, .mp4, .m4a and .m4b)
Video formats	DVD-V, MPEG, WMV, M4V, AVI up to 720p

Copy-protected iTunes® music files with the .m4p file extension are not supported.

Permissible sampling and data rates

The multimedia system supports MP3 and WMA files of the following type:

Format	Data rate [kbit/s]	Sampling rates [kHz]
MP3	32-320 (fixed and variable data rates)	8-48
WMA	5-384 (fixed and variable data rates)	8-48

The multimedia system does not support WMA files of the following type:

- DRM (Digital Rights Management) encrypted files
- WMA Pro
- 5.1 surround sound

- i** Only use tracks with a data rate of at least 128 kbit/s and a sampling rate of at least 44.1 kHz. Lower rates can cause a noticeable deterioration in quality. This is especially the case if you have activated a surround sound function.

Selecting an active partition (USB mass storage devices only)

You can select this function for USB storage devices if the storage device is partitioned. Up to nine partitions (primary or logical, FAT, FAT32, exFAT and NTFS) are supported.

Selecting an active partition

- ▶ Select a USB storage device (> page 136).
- ▶ To select **Options** in the media menu bar: turn and press the controller.
- ▶ Select **Select Active Partition**.

Notes on copyright

Audio or video files that you create or reproduce yourself for playback are generally subject to copyright protection.

In many countries, reproductions, even for private use, are not permitted without the prior consent of the copyright holder.

Make sure that you know about the applicable copyright regulations and that you comply with these.

Notes on CDs/DVDs

- ❗ Do not affix stickers or labels to the discs. They could peel off and damage the drive.

The drive is designed to receive EN 60908 standard discs. Therefore, you can only use discs with a maximum thickness of 1.3 mm.

If you insert thicker discs, e.g. those that contain data on both sides (DVD on one side and audio data on the other), they cannot be ejected and can damage the drive.


Do not use discs with an 8 cm diameter, even when using an adapter. Only use round discs with a 12 cm diameter.

Discs with copy protection are not compatible with the audio CD standard and therefore may not be able to be played.

Playback problems may occur when playing copied discs.

There may be playback problems if you play CDs that you have copied yourself with a storage capacity of more than 700 MB.

Menu overview

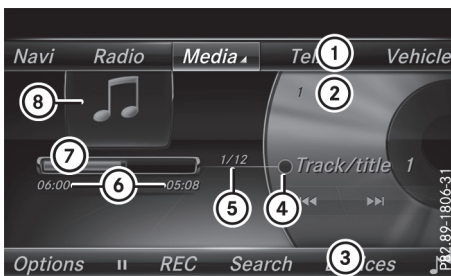

- ① Main function bar
- ② Display for the active data medium
- ③ Media menu bar
- ④ Title display in the media list
- ⑤ Current track and number in the track list
- ⑥ Numerical time display
- ⑦ Graphic time display
- ⑧ Album cover (if available)

Inserting and removing a disc from the single CD/DVD drive

Inserting


- ▶ Press the button on the single drive. If there is a disc already inserted, it will be ejected.
- ▶ Insert a disc into the disc slot with the printed side facing up. The drive closes and the disc is played. If the CD or DVD is started in media mode, the corresponding display is shown. If the CD or DVD is started from another application (e.g. navigation), the display will not change.

i The drive may not be able to play discs with copy protection.

Removing

- ▶ Press the button. The drive ejects the disc.
- ▶ Take the disc out of the slot. If you do not take the disc out of the slot, it is drawn in again automatically after a short while.

Inserting a CD/DVD into the DVD changer

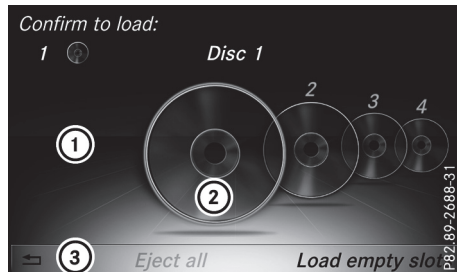

- ① Disc view
- ② Selected magazine tray
- ③ Magazine menu


The DVD changer has a magazine with six trays.

Inserting a CD/DVD into the magazine tray

- ▶ Press the button. Magazine menu ③ appears.
- ▶ To switch to disc view ①: slide the controller.

- ▶ To select the magazine tray: turn the controller and press to confirm.
- or
- ▶ Press number buttons (1-6) on the multimedia system.
The DVD changer switches to the selected magazine tray.
- ▶ When the **Please insert disc 1.** message appears: insert a disc into the disc slot with the printed side facing upwards.


Loading all empty magazine trays

- ▶ To show the magazine menu: press the  button.
- ▶ To select **Load Empty Slots**: turn and press the controller.
The multimedia system switches to the next empty magazine tray.
- ▶ When the **Please insert disc 1.** message appears: insert a disc into the disc slot with the printed side facing upwards.
Once the disc is loaded, the DVD changer switches to the next empty tray.
If insertion of the next disc takes too long, the disc inserted first will be played.
- ▶ Repeat these steps until all magazine trays are filled.
The DVD changer plays the first inserted disc.

Exiting the DVD changer menu

- ▶ Press the  button.

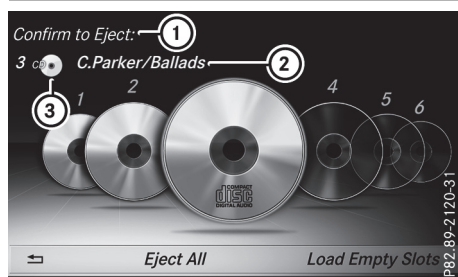

Ejecting a CD/DVD from the DVD changer




- ① Active ejection
- ② Disc name
- ③ Type of data medium

If you remove one disc while playing another disc, the DVD changer interrupts playback. Playback resumes after the disc is ejected.



Ejecting a single disc

- ▶ To show the magazine menu: press the  button.
- ▶ To switch to the disc view: slide  the controller.
The current disc is marked.
- ▶ To select a disc: turn the controller and press to confirm.
- or
- ▶ Press number buttons (1-6) on the multimedia system.
The DVD changer ejects the disc.
- ▶ Take the disc out of the slot.

Ejecting all CDs/DVDs

- ▶ To show the magazine menu: press the  button.
- ▶ Select **Eject All**.
The last active disc is ejected.
The **Please remove disc 1.** message appears.
- ▶ Remove the disc.
- ▶ Repeat the last step until the magazine is empty.
If you take too long removing the disc, the disc is re-loaded.

Exiting a menu

- ▶ Press the  button.
- or
- ▶ Select  in the magazine menu.

Inserting/removing an SD card

Important safety notes

WARNING

SD cards are small parts. They can be swallowed and cause choking. This poses an increased risk of injury or even fatal injury. Keep the SD card out of the reach of children. If a SD card is swallowed, seek medical attention immediately.

- ❗ If you are no longer using the SD card, you should remove it and store it outside the vehicle. High temperatures can damage the card.

The multimedia system supports SD cards (**Secure Digital**), SDHC cards (**Secure Digital**

High Capacity), and SDXC cards (Secure Digital eXtended Capacity).

Inserting an SD card

- ▶ Insert the SD card into the SD card slot on the control panel until the SD card engages. The side with the contacts must face down. The medium is played and the files are loaded in the background. If there are no supported audio or video files, you will see a message to this effect.

Removing an SD card

- ▶ Press the SD card. The SD card is ejected.
- ▶ Remove the SD card.


Connecting USB devices

Two USB ports are located in the stowage space under the armrest (▷ page 136).

- ▶ Connect the USB device with a suitable USB port. If the corresponding media menu is visible, the medium is played and the files are loaded in the background. Otherwise, the system does not automatically switch to USB. If there are no supported audio or video files, you will see a message to this effect.

i MP3 players must support Media Transfer Protocol (MTP).

Selecting the playback option

- ▶ In media mode, slide  the controller. The media menu bar is shown.
- ▶ To select **Options**: turn and press the controller.

Playing similar tracks

- i** This option is available as soon as the music collection has been read and analyzed.
- ▶ To select **Play More Like This**: turn and press the controller.

Selecting Play mode

- ▶ To select **Playback Mode**: press the controller.
- ▶ Select **Normal Track Sequence**. The current track list is played in the order it is stored on the data medium.
- ▶ Select **Random Track List**. The current track list is played in random order.
- ▶ Select **Random Medium**. All tracks on the data medium are played in random order.

Skipping to time

- ▶ To select **Skip to Time**: turn and press the controller. A menu appears.
- ▶ To set the time: turn the controller. or
- ▶ Set the desired time using the number keypad.


Selecting an active partition

- ▶ To select **Select Active Partition**: turn and press the controller. You can select a partition in the current USB data medium.




 


Showing track information

- ▶ To switch the **Show Track Information** function on or off : turn and press the controller. You display or hide information for Track, Artist and Album in the main display field. If the function is deactivated, the file name and the folder name of the track are displayed.

Entering a track number directly

- ▶ To enter the track number: press the  button. A menu appears.
- ▶ Use the number keypad to enter the desired track number. The track is played.

Pausing/continuing playback

 
 


- ▶ **To pause playback:** in audio or video mode, slide  the controller. The media menu bar is shown.
- ▶ To select  in the media menu bar: turn and press the controller. Playback is interrupted. The display changes to .
- ▶ **To continue playback:** in audio or video mode, slide  the controller. The media menu bar is shown.
- ▶ To select  in the media menu bar: turn and press the controller. Playback is continued from the point of interruption. The symbol changes to .

Selecting a track



Selecting a track using the current track list

- ▶ To display the current track list: press the controller when audio mode is active. The category list appears.
- ▶ Select **Current Track List**.
- ▶ To select a track: turn the controller and press to confirm.


Selecting a track by skipping to a track

- ▶ To skip forwards or backwards to a track: in audio mode, turn or briefly slide  or  the controller.
- or
- ▶ Press the  or  button.

 Fast-forwarding or rewinding a track

- ▶ In audio mode, press and hold the  or  button until the desired position is reached.

Searching for a track

- ▶ In Media mode, slide  the controller. The media menu bar is shown.
- ▶ To select **Search**: turn and press the controller. The category list is shown.

- ▶ Select a category, e.g. **Genres**. After the category has been chosen, sub-categories appear depending on the music tracks available.
- ▶ Select a sub-category, e.g. **Rock**.
- ▶ Select a track in the sub-category for playing. All of the tracks in this sub-category are played.

Gracenote® Media Database

General notes

This function is available in CD, MP3 and iPod® mode.



There is a version of Gracenote® music recognition technology, Emeryville, California, USA on the hard disk of the multimedia system. In media mode, you will recognize this by the logo in the bottom right-hand corner of the display. If the audio CD does not contain any CD text information, the multimedia system can use the Gracenote® Media Database to identify unknown audio tracks when in CD mode.

In addition, the cover arts for the main display field, the album list and the "Select by cover" function from the Gracenote® Media Database are displayed for the music files and the iPod®. This occurs when the cover art is not contained in the files but in the Gracenote® Media Database.

Online prompt for metadata

A connection to the Gracenote® server is established automatically when an audio CD is inserted. The missing data is loaded, saved in the multimedia system and shown on the display. If the search for metadata is unsuccessful, no data can be displayed. If no phone is connected or configured for data use, this function is unavailable.

An Internet connection is required for this (> page 122).

Saving audio CDs

General notes

- i** Store your audio CDs in a safe place. Any malfunction in the multimedia system may result in the loss of stored files. Mercedes-Benz is not liable for any loss of data.

No individual music tracks can be stored or deleted, only a maximum of twelve complete audio CDs.

If twelve audio CDs are stored, the **REC** option in the Media menu bar is grayed out and has no function. One audio CD must be deleted before a new audio CD can be copied.

Copying an audio CD

- ▶ Insert an audio CD.
- ▶ In media mode, slide **⊙** the controller. The media menu bar appears.
- ▶ **To start the copying process:** select **REC** by turning and pressing the controller.
- ▶ To select **Start**: press the controller. The copying procedure starts and is shown in the progress bar. It may take some time for the copying process to be completed, depending on the amount of data. Once the copying process is completed, a message appears.
- ▶ **To cancel copying:** select **Cancel**. The files copied up to the point of cancellation are lost.
- i** During the copying process, you can switch to another function (e.g. radio) or to another media source (e.g. USB). The copying procedure continues in the background. It is however not possible to select another CD in the CD changer.

Playing stored audio CDs

- ▶ In Media mode, slide **⊙** the controller. The media menu bar appears.
- ▶ To select **Search**: turn and press the controller. The category list appears.
- ▶ To select **Stored Audio CDs** in the category list: turn and press the controller. A selection list for the copied audio CDs is displayed.

- ▶ To select the desired audio CD: turn and press the controller. The track list is displayed.
- ▶ To select a track: turn the controller and press to confirm.

The tracks on the stored audio CDs can also be found and played using other media search functions (> page 143).

Deleting stored audio CDs

If music is being played from the saved audio CDs, the function for deleting audio CDs is available.

- ▶ In media mode, slide **⊙** the controller. The media menu bar appears.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Delete Stored Audio CDs**: press the controller. A selection list for the stored audio CDs is displayed.
- ▶ To select the desired audio CD: turn and press the controller. The audio CD is deleted.

Media search

General notes

The multimedia system plays back files from the following data media:

- Disc (CD/DVD)
- Memory card
- USB storage device
- Apple® devices

The categories are displayed according to the data available. A database is created for the iPod® and a database is created for all of the other media sources (CD, USB, SD card). During the search the relevant database is accessed depending on the active media source.


Starting the media search

- ▶ In Media mode, slide **⊙** the controller.

The media menu bar appears.

- ▶ To select **Search**: turn and press the controller.
The category list appears.

Category list

- ▶ In Media mode, slide  the controller.
The media menu bar is shown.
- ▶ To select **Search**: turn and press the controller.
The category list is shown.

Depending on the connected media sources and files, the following categories are listed:

- **Current Track List**
- **Folder**
- **Select By Cover**
- **Keyword Search**
- **Playlists**
- **Artists**
- **Albums**
- **Tracks**
- **Genres**
- **Year**
- **Composers**
- **Stored Audio CDs**
- **Videos**
- **Photos**

- i** The categories are available as soon as the entire media content has been read and analyzed.

If the same device is reconnected with unchanged media content, these categories are available more quickly.

When connecting Apple® devices, the categories “Folder”, “Year” and “Photos” are not available.

Searching a track using the current track list

- ▶ To select **Current Track List** in the category list: turn and press the controller (> page 144).
The selection list appears.
- ▶ Select the required track.

Searching for a track via a folder

Playable files can be searched for in the active data medium's directories.

 
- ▶ To select **Folder** in the category list: turn and press the controller (> page 144).
The folder list appears.
- ▶ Select the required folder.
Either the desired track list appears or continue searching in the folder directory until the desired track list has been found.
- ▶ Select the required track.

Searching for a track via cover view

- ▶ To select **Select By Cover** in the category list: turn and press the controller (> page 144).
A menu with cover views appears.
- ▶ Select the required cover.
Track playback is started automatically.

- i** There is a database for iPod® and for each of the other media sources (CD, USB, SD card). During the search the relevant database is accessed depending on the active media source.

Searching for a track via music genre

- ▶ To select **Genres** in the category list: turn and press the controller (> page 144).
The multimedia system searches in all media sources. A selection list with Genre and media sources appears.
- ▶ Select the desired music genre.
A selection list with music tracks from the selected genre appears.
- ▶ Select a music track.
The track is played. The display for the active media source is shown.
- ▶ To exit the selection list: press the  button.

- i** The list is closed automatically once a selection has been made.

Searching for a track via a keyword

- ▶ To select **Keyword Search** in the category list: turn and press the controller (> page 144).

The input field appears.

- ▶ To select the required characters: turn and press the controller for each one (▷ page 29). Entering just part of the name of a track or artist is enough. The search result then displays the entire text.

- ▶ Select .

The search results are displayed.

The numbers behind the results, for example **Artists** (1/0), mean: 1 result that contains the exact keyword searched for and 0 results are similar.

- ▶ Select one of the results.
Keywords that have already been searched for are displayed in the "Search history" without having to enter them completely. They can be accepted directly and displayed in the search result.
- ▶ Select one entry, e.g. **Artists**.
The tracks are listed.
- ▶ Select a track.
Playback starts.

i If available, the album list and covers are shown.

i There is a database for iPod® and for each of the other media sources (CD, USB, SD card). During the search the relevant database is accessed depending on the active media source.

Bluetooth® audio mode

Requirements

The Bluetooth® function must be activated in the multimedia system (▷ page 41).

Bluetooth® audio mode requires a Bluetooth®-capable audio device.

Check your Bluetooth® audio device for the following; see the manufacturer's operating instructions:

- Bluetooth® audio profile

The Bluetooth® audio device must support the A2DP and AVRCP Bluetooth® audio profiles.

- Bluetooth® visibility

Certain Bluetooth® audio devices do not just require activation of the Bluetooth® function.

In addition, your device must be made "visible" to other devices.

- Bluetooth® device name

This device name is predetermined but can usually be changed. For a clear selection of the Bluetooth device, we recommend that you customize the device name.

i A2DP (**A**dvanced **A**udio **D**istribution **P**rofile): Bluetooth® audio profile for audio data transmission

AVRCP (**A**udio **V**ideo **R**emote **C**ontrol **P**rofile): Bluetooth® audio profile for audio data playback

i The Bluetooth® device must be visible to the multimedia system for authorization. After authorization, the multimedia system even finds the Bluetooth® device when it is not visible.

General notes

Before using your Bluetooth® audio device with the multimedia system for the first time, you will need to authorize it.

When you authorize a new Bluetooth® audio device, it is connected automatically. Connection involves first searching for a Bluetooth® audio device and then authorizing it.

You can authorize up to 15 Bluetooth® devices.


i If you authorize a mobile phone that supports Bluetooth® audio, the A2DP and AVRCP Bluetooth® audio profiles are connected automatically.

The mobile phone is then entered:

- in the Bluetooth® telephone list (▷ page 92)
- in the Bluetooth® audio device list (▷ page 146)

Mercedes-Benz recommends authorizing a mobile phone in Bluetooth® telephony (▷ page 93).

Bluetooth® audio menu

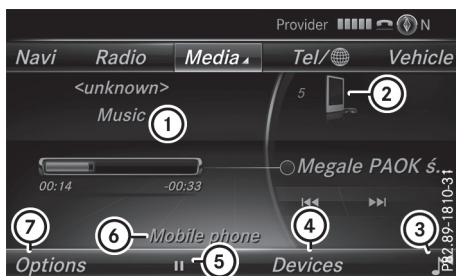

- ① Audio transmission status (depending on the Bluetooth® audio device, also title name and artist)
 - ② Data medium position in the media list
 - ③ Sound settings
 - ④ Media sources
 - ⑤ To stop or start playback
 - ⑥ Name of the connected Bluetooth® audio device (example)
 - ⑦ Options menu
- ▶ To show the menu bar: slide the controller.

Switching to Bluetooth® audio

- ▶ Press the **MEDIA** button.
- ▶ To select **Bluetooth Audio** in the menu: turn and press the controller. The multimedia system activates the Bluetooth® audio device. The **Bluetooth Audio** menu then appears (▷ page 146). Playback starts.


If you see the **No Bluetooth Audio Device Authorized** message, you will need to authorize the Bluetooth® audio device first (▷ page 146).

- i** If the connected Bluetooth® audio device supports metadata and if the corresponding data is available, then the artist, track and album name can be displayed.

Searching for and authorizing a Bluetooth® audio device

Searching for a Bluetooth® audio device

- ▶ Switch on Bluetooth® audio mode (▷ page 146).
- ▶ Slide the controller. The media menu bar appears.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Bluetooth Audio Devices**: press the controller. A new menu appears.
- ▶ To select **Search for Audio Devices**: press the controller. A message appears.
- ▶ Select **Start Search**. The multimedia system searches for Bluetooth® audio devices within range and adds them to the Bluetooth® device list. The duration of the search depends on the number of Bluetooth® audio devices within range and their characteristics.

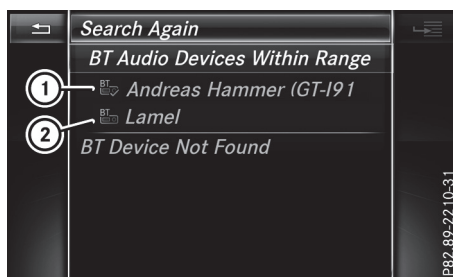

- ① Bluetooth® audio device within range and already authorized
- ② Newly detected mobile phone with Bluetooth® audio mode in range

The Bluetooth® device list displays all authorized devices, whether they are within range or not. After a device search, devices which are within range but not authorized are also displayed.

If the multimedia system cannot find your Bluetooth® audio device, external authorization may follow (▷ page 147).

Authorizing a Bluetooth® audio device

- ▶ Select a Bluetooth® audio device that has not yet been authorized from the list: turn and press the controller.
Authorization starts.

Depending on which Bluetooth® audio device is being used, the device can be authorized either by entering a passkey or by Secure Simple Pairing. You can find information on this in the "Authorizing (connecting) a mobile phone" section (▷ page 93).

After successful authorization, the Bluetooth® audio device is connected and starts playing.

- i** With some Bluetooth® audio devices, playback must initially be started on the device itself, so that the multimedia system can play the audio data. For the audio device used, the output of the audio files has to be specified via Bluetooth®.


- i** The Bluetooth® audio device must support Bluetooth® version 2.1 for connection via Secure Simple Pairing. The multimedia system creates a six-digit code which is displayed simultaneously on both devices that are to be connected.

For some Bluetooth® audio devices, the pairing must also be confirmed within 10 seconds.

External authorization

If the multimedia system does not find your Bluetooth® audio device, this may be due to particular security settings on your Bluetooth® audio device. In this case, check whether your Bluetooth® audio device can locate the multimedia system.


The Bluetooth® device name of the multimedia system is **MB Bluetooth**.

- ▶ Switch on Bluetooth® audio mode (▷ page 146).
- ▶ Slide  the controller.
The media menu bar appears.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Bluetooth Audio Devices**: press the controller.
A new menu appears.

- ▶ To select **Connect via Audio Device**: turn and press the controller.
A message appears.
- ▶ Start the authorization on your Bluetooth® audio device (see the manufacturer's operating instructions).
After successful authorization, the Bluetooth® audio device is connected and starts playing.

With some Bluetooth® audio devices, playback must initially be started on the device itself, so that the multimedia system can play the audio data.

 
Displaying details

- ▶ To select a Bluetooth® audio device from the Bluetooth® device list: turn the controller (▷ page 146).
- ▶ To select : slide  the controller.
- ▶ To select **Details**: turn and press the controller.

The following information concerning the selected mobile phone is shown:

- Bluetooth® name
- Bluetooth® address
- Availability status (shown after an update)
- Authorization status



Closing the detailed display

- ▶ Wait for a few seconds.
- or
- ▶ Press the  button.



Starting/stopping playback

Requirement: the Bluetooth® audio menu (▷ page 146) is shown.



Starting playback

- ▶ To select : turn and press the controller.
Playback starts.  is selected.

Stopping playback



- ▶ Select .
- A message appears.  is selected.

Continuing playback

- ▶ Select .
- A message appears.  is selected.

Starting playback if the Bluetooth® audio device has been stopped







During the search for mobile phones (▷ page 92), the connection with the Bluetooth® audio device is terminated. The **No Bluetooth Audio Device Connected** message appears in the Bluetooth® audio menu (▷ page 146). When the search is finished, the Bluetooth® audio device can be reconnected.

- ▶ To confirm the **Connect Last Used Player** message: press the controller. Depending on the Bluetooth® audio device used, playback starts immediately or you must start playback manually. In this case, you will see the **Bluetooth Audio Device Paused** message.
- ▶ To select **Start playback:** : slide  and press the controller. Playback resumes from the beginning.

Selecting a track

The function is not supported by all Bluetooth® audio devices.

Some mobile phones impair function with regard to the following criteria:

- the number of tracks that can be selected.
- the time period until the next or previous track is played.
- ▶ Use the multifunction steering wheel to switch to the media menu in the on-board computer; see the vehicle Operator's Manual.
- ▶ **To skip forward or back to a track:** press the  or  button on the multifunction steering wheel.
- ▶ **To rapid scroll:** press and hold the  or  button on the multifunction steering wheel until the desired track is reached. If you press and hold the  or  buttons, the rapid scrolling speed increases after a short time.

Further ways to select tracks (▷ page 142).

- i** In rapid scroll, track names are not shown, but instead only Track 1, Track 2 etc. The playback times for the tracks played are not displayed. This is available as an optional function starting with AVRCP Version 1.3. There is also no music search option available with Bluetooth® Audio.


Playback options

General information


If the Bluetooth® audio device supports the corresponding function, the following options are available:

- **Normal Track Sequence:** the tracks are played in the normal order (e.g. track 1, 2, 3 etc.). Audio data playback is determined by the order in which the tracks are written to the data medium. Alphabetical order is the most common. Once all the tracks in a folder have been played, the tracks in the next folder are played.
 - **Random Track List:** the current track list is played in random order (e.g. 3, 8, 5 etc.).
 - **Random Medium:** all tracks on the data medium are played in random order (e.g. track 3, 8, 5 etc.).
- Playback options are optional functions and are not, or only partially, supported by Bluetooth® audio devices.

Selecting the playback option

- ▶ Slide  the controller.
- ▶ To select **Options** : turn and press the controller.
- ▶ Select **Playback Mode** . A • dot indicates the current setting.
- ▶ Select the desired option.

Increasing the volume in the multimedia system

- ▶ In the **Bluetooth Audio** menu (▷ page 146), slide  the controller.
- ▶ To select **Options** : turn and press the controller.
- ▶ To select **Volume**: turn and press the controller. A menu appears. The • dot indicates the current setting.
- ▶ Select **Standard** or **Boost** .
- i** If playback on the Bluetooth® audio player is too quiet, the **Boost** function may be used. It is recommended, however, that you increase the volume on the Bluetooth® audio device directly.

Reconnecting a Bluetooth® audio device

General notes

The Bluetooth® audio profiles are connected automatically under the following circumstances:

- one of the last two mobile phones to have been connected has also been used as a Bluetooth® audio device (if the function is supported by the mobile phone).
- the mobile phone is automatically connected. The Bluetooth® audio device is then connected.

i For an automatic connection with the multimedia system, the mobile phone must be within range.

For most Bluetooth® audio devices, the "automatic connection" must be activated by ticking a box. Depending on the device used, this prompt often occurs during authorization (see the manufacturer's operating instructions).


Connecting Bluetooth® audio devices

If the **No Bluetooth Audio Device Connected** message appears, you have two options to reconnect the Bluetooth® audio device.

Option 1:

- ▶ To confirm the **Connect Last Used Player** message: press the controller.
If the multimedia system can locate the Bluetooth® audio device, it will be connected and start playing.

 Option 2:


 
- ▶ Slide  the controller.
The media menu bar appears.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Bluetooth Audio Devices**: press the controller.
A new menu appears.
- ▶ To select a Bluetooth® audio device: turn and press the controller.
If the Bluetooth® audio device has been authorized, playback starts.

Bluetooth® audio device and simultaneous search for mobile phones

i When searching for a mobile phone or a new Bluetooth® audio device, the connection to an already activated Bluetooth® audio device is separated (▷ page 92).

In the Bluetooth® audio basic display, you will see the **No Bluetooth Audio Device Connected** message, and the displayed **Connect Last Used Player** message cannot be selected.

De-authorizing (deregistering) a Bluetooth® audio device

- ▶ To select a Bluetooth® audio device from the Bluetooth® device list: turn the controller (▷ page 146).
- ▶ To select : slide  the controller.
- ▶ To select **Deauthorize**: press the controller.
A prompt appears asking whether you really wish to de-authorize this device.
- ▶ To select **Yes**: turn and press the controller.
The device is deleted from the Bluetooth® device list.

i Before re-authorizing the Bluetooth® audio device, you should also delete the device name **MB Bluetooth** from your Bluetooth® audio device's Bluetooth® list (see the manufacturer's operating instructions).


Operation with the Media Interface

General notes

Media Interface is a universal interface for the connection of mobile audio and video devices. Media Interface in the multimedia system has two USB connections.

The USB ports are located in the stowage compartment under the armrest (▷ page 136).

Media interface menu

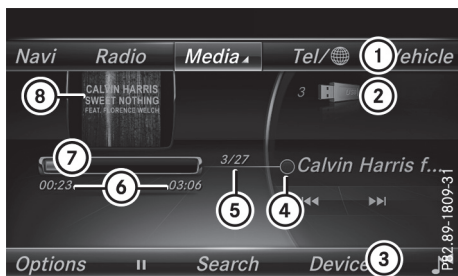

- ① Main function bar
- ② Display for the active data medium
- ③ Media menu bar
- ④ Title display in the media list
- ⑤ Current track and number in the track list
- ⑥ Numerical time display
- ⑦ Graphic time display
- ⑧ Additional display area with cover view

Switching to Media Interface

- ▶ Connect the data medium to USB port 1 or USB port 2 (> page 141).
- ▶ Select the basic menu for Media Interface 1 or Media Interface 2 (> page 137). If playable media files are found, they will be played by the multimedia system.

Supported devices

The following data media can be connected to the multimedia system via Media Interface:

- iPod®
- iPhone®
- MP3
- USB devices

i iPod® and iPhone® are registered trademarks of Apple Inc., Cupertino, California, USA.

For details and a list of supported devices, visit our website at <http://www.mercedes-benz-mobile.com/>. Then follow the instructions in the "Media Interface" section.

Or call the Mercedes-Benz Customer Assistance Center at 1-800-FOR-MERCEDES

(1-800-367-6372) (for the USA) or Customer Relations at 1-800-387-0100 (for Canada).

Supported data formats

Music	MP3, WMA, AAC
Video	MPEG, WMV, MOV, AVI, MP4
Images	JPG, JPEG, BMP, PNG

i Video files from Apple® devices cannot be played.

Selecting a music file

Selecting with the controller

- ▶ **To display the current track list:** press the controller in the media interface menu.
- ▶ Select **Current Track List**. The track list for the active data medium appears.
- ▶ To select a track: turn the controller and press to confirm.
- ▶ **To skip forwards or backwards to a track:** turn the controller in the media interface menu. The selected track is played.

Fast-forwarding or rewinding a track

- ▶ With the media source active in the media interface, slide ◀Ⓞ▶ the controller and hold it until the desired position has been reached.

Searching for a track

Overview

The following categories are listed:

- **Current Track List**
- **Folder**
- **Select By Cover**
- **Keyword Search**
- **Playlists**
- **Artists**
- **Albums**

- Tracks
- Genres
- Year
- Composers
- Videos
- Photos
- Audiobooks
- Podcasts


i The functions are available as soon as the entire media content has been read and analyzed.

If the same device is reconnected with unchanged media content, these functions are available more quickly.

The audio books and podcasts categories are only available for Apple® devices.

When connecting Apple® devices, the categories "Folder", "Year", "Videos" and "Photos" are not available.


Searching for a track

- ▶ Slide  the controller.
The media menu bar appears.
- ▶ To select **Search**: turn and press the controller.
The category list appears.
- ▶ To select a category, e.g. **Current Track List**: turn and press the controller.
A selection list appears.
- ▶ Select the required track.

Using the keyword search

- ▶ Enter and confirm the characters of the desired search using the controller (> page 144).
Search results are sorted according to the available categories, displayed and can then be selected.

Selecting the playback option


- ▶ In media mode, slide  the controller.
The media menu bar is shown.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select the playback option (> page 141).
- i** The **Play More Like This** option is also available for Apple® devices. For this, the

Genius functionality must be activated in iTunes®. Then synchronization of the device with iTunes® must be carried out again.

Selecting video settings

Video files from Apple® devices cannot be played.

If playable video files are found, they will be played by the multimedia system.

- ▶ To activate full-screen mode: press the controller in the Media Interface menu.
- ▶ To show the video menu: slide  the controller in full-screen mode.
- ▶ Select **Menu**.
The Media Interface menu bar appears.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Video Settings**.

Making settings (> page 153)

Video DVD mode

Important safety notes

WARNING

The CD/DVD drive is a class 1 laser product. If you open the housing of the CD/DVD drive, there is a risk of exposure to invisible laser radiation. This laser radiation could damage your retina. There is a risk of injury.

Never open the housing. Always have maintenance and repair work carried out at a qualified specialist workshop.

WARNING

If you handle a disc while driving, you may be distracted from the traffic situation. You could also lose control of the vehicle. There is a risk of an accident.

Only handle a disc when the vehicle is stationary.

Bear in mind that at a speed of only 30 mph (approximately 50 km/h) your vehicle covers a distance of 44 feet (approximately 14 m) every second.

General notes

Notes on discs

! Do not affix stickers or labels to the discs. They could peel off and damage the drive. The drive is designed to receive EN 60908 standard discs. Therefore, you can only use discs with a maximum thickness of 1.3 mm.

If you insert thicker discs, e.g. those that contain data on both sides (DVD on one side and audio data on the other), they cannot be ejected and can damage the drive.

Do not use discs with an 8 cm diameter, even when using an adapter. Only use round discs with a 12 cm diameter.

The variety of discs, burners and burn software available means there is no guarantee that the multimedia system will be able to play discs that you have burned yourself.

DVD playback conditions

The multimedia system can play back video DVDs produced according to the following standards:

- Region code 1 or region code 0 (no region code)
- PAL or NTSC standard

You will generally find the relevant details either on the DVD itself or on the DVD case.

With DVDs that do not meet the standard requirements, you may encounter playback problems.

 
- i** Observe the following notes:
- The multimedia system is set to region code 1 at the factory. This setting can be changed at a qualified specialist workshop. The region code can be changed up to five times.
 - If the region code is changed at the workshop, video DVDs with another region code can also be played. If you insert a video DVD with a different region code, a message to this effect appears.
 - If a DVD cannot be played back according to national color transfer methods (PAL or NTSC standards), problems with the image, sound or playback may occur.

Control options


There are various control menus available in DVD video mode.

Most DVDs have their own control menu.

The DVD's control menu is operated directly using the controller or DVD functions.

Control menu and function	Operation
<ul style="list-style-type: none"> • DVD's control menu Selection of title, scene, language, subtitles ... 	Operation with the controller
<ul style="list-style-type: none"> • MenuOptions Selection of brightness, contrast, color, format 	Operation using the menu bar Options, video settings
<ul style="list-style-type: none"> • Video menu Selection of scene, fast forward or rewind 	In full-screen mode, slide  the controller
<ul style="list-style-type: none"> • DVD functions Selection of title, scene, language, subtitles ... 	In full-screen mode, press the controller


Function restrictions

Depending on the DVD, certain functions or actions may not function at all. The symbol  appears in the display.

Switching on video DVD mode

- ▶ Insert a DVD into the single DVD drive (▷ page 139).
- ▶ Insert a DVD into the DVD changer (▷ page 139).

Further options for switching on:

- Using the number keypad (▷ page 137)
- Using the main function bar (▷ page 136)
- Using the device list (▷ page 137)
- Using the  button (▷ page 136)

Showing the Disc menu



- ① Main function bar
- ② Main display field
- ③ Media menu bar

The Disc menu can be shown in the following situations:

- ▶ **To show the DVD menu:** press the button.
- ▶ **To show in the video DVD currently playing:** slide the controller. The video menu appears.
- ▶ Press the controller. The **Disc** menu appears.

Switching on DVD full-screen mode

You can change from the menu to full-screen mode as follows:

- ▶ Slide the controller. The main function bar and menu bar are hidden. A full-screen symbol will be shown.
- ▶ Press the controller. The full-screen mode appears.

Selecting video settings

Setting the picture format

The following options are available for the screen format for the DVD being played:

- **Automatic**
- **16:9**
- **4:3**
- **Zoom**

- ▶ In full-screen mode, slide the controller. The video menu appears.
- ▶ Press the controller. The **Disc** menu appears.
- ▶ To select **Options** in the menu bar: turn and press the controller.
- ▶ Select **Video Settings**.
- ▶ To set the picture format: turn and press the controller. The dot before the menu entry shows the selected format.

Manual image enhancement

- ▶ In full-screen mode, slide the controller. The video menu appears.
- ▶ Press the controller. The **Disc** menu appears.
- ▶ To select **Options** in the menu bar: turn and press the controller.
- ▶ Select **Video Settings**.
- ▶ To select **Brightness**, **Contrast** or **Color**: turn and press the controller. A sliding menu appears.
- ▶ To select the required value: turn the controller.
- ▶ **To exit the sliding menu:** slide the controller.


Showing the DVD's control menu

Most DVDs have their own control menu which can be operated using the controller.

Showing the DVD's control menu

- ▶ To show the DVD overlay menu: in full-screen video mode, press the controller. The DVD overlay menu is shown.
- ▶ To select **Menu** from the DVD overlay menu: turn and press the controller. The menu of the DVD overlay menu is hidden and the DVD's menu entries (e.g. scenes, language, trailers) are displayed.
- ▶ To select a menu entry: slide and press the controller.

Operating the video menu

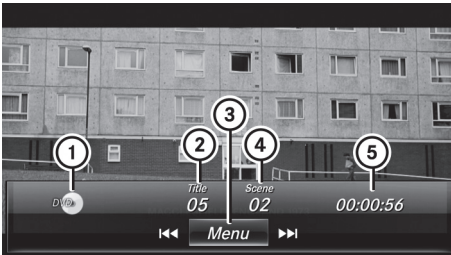

P82.89-0267-31

- ① Type of data medium
- ② Current title
- ③ Shows the menu bars for the DVD basic display
- ④ Current scene
- ⑤ Track time

Operating the video menu

- ▶ To show: in full-screen video mode, slide the controller.
- ▶ To hide: slide the controller.
- ▶ To select the next or previous scene: turn the controller clockwise/counter-clockwise.
- ▶ To fast forward or rewind: slide the controller and hold until the desired position has been reached.
- ▶ To hide the video menu: slide the controller.
- ▶ To show the menu bars for the DVD basic display: press the controller. The video menu is hidden and the DVD basic menu appears.

DVD functions

Showing/hiding the DVD functions

- ▶ To show the DVD overlay menu: in full-screen video mode, press the controller. The DVD overlay menu is shown.
- ▶ **To hide:** select in the DVD overlay menu.
- ▶ **To show the DVD basic display:** select in the DVD overlay menu.

Overview of DVD overlay menu



P82.89-0268-31



- ① Activates DVD control menu
- ② Hides DVD overlay menu
- ③ Shows the DVD basic display
- ④ Confirms entry in control menu
- ⑤ Navigates DVD lists
- ⑥ Jumps to the start of the scene
- ⑦ Displays camera perspectives
- ⑧ Shows subtitles
- ⑨ Selects language
- ⑩ Stop function
- ⑪ Pause function

Operating the DVD's own menu with the DVD overlay menu


 


- ▶ In full-screen mode, press the controller. The DVD overlay menu is shown. It is possible to navigate within the DVD's own control menu using the arrows in the upper bar of the DVD overlay menu.
- ▶ To select the arrow to navigate in the DVD's own menu: turn the controller. The active arrow is highlighted.
- ▶ To select the arrow: press the controller. The next menu entry in the direction of the arrow is highlighted.
- ▶ To select from the DVD overlay menu: turn and press the controller. The selected DVD scene is played.
- ▶ **To hide the DVD overlay menu:** select using the controller.
- ▶ Press the controller. The DVD overlay menu is hidden.

If functions such as **Display camera perspectives** are available on the DVD, these functions are shown in the DVD overlay menu.

Stopping playback

- ▶ In full-screen mode, press the controller. The DVD overlay menu is shown.
- ▶ **To stop playback:** select .
- ▶ **To start playback again:** select . Playback restarts from the beginning.

Pausing playback

- ▶ In full-screen mode, press the controller. The DVD overlay menu is shown.
- ▶ **To pause playback**
Select .
The  display changes to .
- ▶ **To continue playback:** select .



Selecting a scene/chapter

If the film is divided into scenes and chapters, you can select these directly while the film is running or you can skip progressively through them. This is not possible at certain points for some DVDs (e.g. during the opening credits).

It may also be possible to select the scene and chapter from the functions stored on the DVD.

- ▶ **To skip forward or back:** in the video menu, turn the controller.

or

- ▶ Press the  or  button.
The next or previous scene in the film is skipped to.

Picture viewer

General notes

 
If pictures are stored on a connected medium (except on Apple® devices), you can view these on the multimedia system.

The following data media and picture formats are supported:


- **Data media:** CD, DVD, USB devices, SD cards
- **Picture formats:** jpeg, jpg, bmp, png

The maximum image resolution is 20 megapixels for JPEG, JPG and 1.5 megapixels for BMP, PNG.

Displaying pictures

- ▶ In media mode, slide  the controller.
- ▶ To select **Search:** turn and press the controller. The category list appears.
- ▶ To select **Photos:** turn and press the controller. A directory list appears. Folders and picture files can be shown.
- ▶ Select a folder or picture. If there is no picture on the data medium, an empty list is shown.

Searching for pictures on other data media

- ▶ You can search for pictures on other data media.
In the directory list, slide  the controller. The device list appears.
- ▶ To select a data medium with picture files: turn the controller and press to confirm. A directory list appears. Folders and picture files can be shown.
- ▶ Select a folder or picture.



Starting a slide show

- ▶ While viewing a picture, press the controller. The image menu appears.
- ▶ To select **Start Slideshow:** turn and press the controller. The slide show starts.
- ▶ To end the slide show: press the controller. The image menu appears.
- ▶ Select **End Slide Show**.


Changing the picture view

- ▶ Press the controller. The image menu appears.
- ▶ To select **Turn Clockwise**: turn and press the controller. The picture rotates 90 degrees clockwise.
- ▶ Select **Turn Counterclockwise**. The picture rotates 90 degrees counter-clockwise.
- ▶ Select **Zoom In**. The size of the picture increases.

After you have zoomed into the picture, you can move the section of the picture.

- ▶ To move the section of the picture: slide  and  the controller.
- ▶ To revert to the original size: press the controller.

or

- ▶ Press the  button.

Closing the picture viewer

- ▶ Press the controller.
- ▶ To select **Close Picture Viewer**: turn and press the controller.

The multimedia system returns to the last accessed media mode.

Your multimedia system equipment

 
 
These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Sound settings

Calling up the sound menu




You can select various sound settings for the different audio and video sources. It is possible to set more bass for radio mode than for CD mode, for example. The respective sound menu can be called up from the menu of the desired mode.



- ▶ Switch to radio mode (▷ page 128).
- or
- ▶ Switch to media mode (▷ page 136).
- ▶ To display the menu bars: slide  the controller.
- ▶ To select : turn and press the controller. The menu appears with the last setting accessed, e.g. **Equalizer**.

Sound menu overview

Function	Options
Equalizer	Sets treble, mid-range and bass
Balance/fader	Adjusts the volume: right/left and front/rear

Setting treble, mid-range and bass

 






- ▶ Call up the sound menu (▷ page 157).
- ▶ Turn the controller until **Equalizer** is brought to the front.
- ▶ To activate rotary menus for treble, mid-range and bass: slide  the controller.
- ▶ To switch between the rotary menus: slide  or  the controller.

- ▶ To make the desired settings: turn the controller. Rotary menus show the set values.
- ▶ To return to the sound menu: slide  the controller.
- ▶ To return to media mode: press the  button.

Adjusting the balance/fader

Balance adjusts the volume left and right. Fader adjusts the volume in front and rear.

 For the best sound, setting 0 is recommended.

- ▶ Call up the sound menu (▷ page 157).
- ▶ Turn the controller until **Balance/Fader** is brought to the front and then slide  the controller.
- ▶ To activate the menu for balance and fader: press the controller.
- ▶ To adjust the balance: slide  or  the controller.
- ▶ To adjust the fader: slide  or  the controller.
- ▶ To return to the sound menu: press the  button.
- ▶ To return to media mode: press the  button.

Harman/kardon® Logic 7® surround sound system

General notes

The harman/kardon® Logic7® surround sound system is available for all functions in the radio and media modes.

The harman/kardon® Logic7® surround sound system is available for the following operating modes:

- Radio (FM only)
- Satellite radio
- Audio CD
- MP3 (including SD card and USB storage device)
- Media Interface
- Bluetooth® audio mode
- Video DVD (PCM, DTS® and Dolby® Digital audio formats)

- i** For the best sound, CD or the WAV audio format is recommended. For data-reduced media, the AAC audio format with a data rate of 320 kbit/s is recommended.

Discs which support the audio formats mentioned have the following logos:



Sound

- i** Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
- i** For DTS patents see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol & DTS and the Symbol together are registered trademarks, and DTS Digital Surround is a trademark of DTS, Inc.® DTS, Inc. All rights reserved.

Calling up the sound menu

You can select various sound settings for the different audio and video sources. It is possible to set more bass for radio mode than for CD mode, for example. The respective sound menu is called up from the menu of the desired mode.

- ▶ Switch to radio mode (▷ page 128).
- or
- ▶ Switch to media mode (▷ page 136).
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select : turn and press the controller. The menu appears with the last setting accessed, e.g. **Equalizer**.

Overview of harman/kardon® Logic7® surround sound system

Function	Options
Equalizer	Sets treble, mid-range and bass
Balance/fader	Adjusts the volume: right/left and front/rear
Logic 7	Optimizes the sound playback

Setting treble, mid-range and bass



- ▶ Call up the sound menu (▷ page 158).
- ▶ Turn the controller until **Equalizer** is in the center.
- ▶ To activate rotary menus for treble, mid-range and bass: slide the controller.
- ▶ To switch between the rotary menus: slide or the controller.
- ▶ To make the desired settings: turn the controller. The rotary menus show the set values.
- ▶ To return to the sound menu: slide the controller.
- ▶ To return to media mode: press the button.

Adjusting the balance/fader

Balance adjusts the volume left and right. Fader adjusts the volume in front and rear.


 
 
For the best sound, setting 0 is recommended.

- ▶ Call up the sound menu (▷ page 158).
- ▶ Turn the controller until **Balance/Fader** is in the center.
- ▶ Slide the controller.
- ▶ To activate the menu for balance and fader: press the controller.
- ▶ To adjust the balance: slide or the controller.
- ▶ To adjust the fader: slide or the controller. An image shows the sound focus set.

- ▶ To return to the sound menu: press the  button.
- ▶ To return to media mode: press the  button.

Setting surround sound

The **Logic7** setting optimizes the sound playback.

- ▶ Call up the sound menu (▷ page 158).
- ▶ Turn the controller until **Logic7** is in the center.
- ▶ Slide  the controller.
The left-hand rotary menu to switch surround sound on and off is activated.
- ▶ To switch **Logic7** on or off: turn the controller.
- ▶ To return to the menu: slide  the controller.
- ▶ To return to media mode: press the  button.

For the optimum audio experience for all passengers when **Logic7**[®] is switched on, the balance settings should be set to the center of the vehicle interior.

MP3 tracks should have a data rate of at least 128 kbit/s.

Surround sound playback does not function for mono signal sources, such as for AM radio mode.

If radio reception is poor, e.g. in a tunnel, you should switch off **Logic7**[®], since it may otherwise switch dynamically between stereo and mono and cause temporary sound distortions.

Bang & Olufsen BeoSound

General notes

The Bang & Olufsen BeoSound AMG sound system is available for all functions in the radio and media modes.

The following modes are available for the Bang & Olufsen BeoSound AMG sound system:

- Radio (FM only)
- Satellite radio
- Audio CD
- MP3/AAC
- Media Interface

- Bluetooth[®] audio mode
- Video DVD (PCM, DTS[®] and Dolby[®] Digital audio formats)

- i** For the best sound, CD or the WAV audio format is recommended. For data-reduced media, the AAC audio format with a data rate of 320 kbit/s is recommended.

 



- i** Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.

- i** For DTS patents see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol & DTS and the Symbol together are registered trademarks, and DTS Digital Surround is a trademark of DTS, Inc.[®] DTS, Inc. All rights reserved.

Calling up the sound menu

You can select various sound settings for the different audio and video sources. It is possible to set more bass for radio mode than for CD mode, for example. The respective sound menu is called up from the menu of the desired mode.


 



- ▶ Switch to radio mode (▷ page 128).
- or
- ▶ Switch to media mode (▷ page 136).
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select : turn and press the controller. The menu appears with the last setting accessed, e.g. **Equalizer**.

Bang & Olufsen BeoSound AMG sound system

Function	Options
Equalizer	Sets treble, mid-range and bass
Balance/fader	Adjusts the volume: right/left and front/rear
True Image™	Sets a sound profile in the vehicle
Sound mode (VIP & BAL Selection)	Optimizes the sound playback

Sound

 
 



Setting treble, mid-range and bass



- ▶ Call up the sound menu (▷ page 159).
- ▶ Turn the controller until **Equalizer** is in the center.
- ▶ Slide  the controller. Rotary menus for treble, mid-range and bass are activated.
- ▶ To switch between the rotary menus: slide  or  the controller.
- ▶ To make the desired **Equalizer** settings: turn the controller. The rotary menus show the set values.
- ▶ To return to the menu: slide  the controller.
- ▶ To return to media mode: press the  button.

Adjusting the balance/fader

Balance adjusts the volume left and right. Fader adjusts the volume in front and rear.

For the best sound, setting 0 is recommended.


 

- ▶ Call up the sound menu (▷ page 159).
- ▶ Turn the controller until **Balance/Fader** is in the center.
- ▶ Slide  the controller.
- ▶ To activate the menu for balance and fader: press the controller.
- ▶ To adjust the balance focus: slide  or  the controller.
- ▶ To adjust the fader focus: slide  or  the controller.

- ▶ To return to the sound menu: press the  button.
- ▶ To return to media mode: press the  button.

Setting the sound profile




With the **Sound Profile** setting, you can select between two defined sound settings.

Sound profiles	Description
Reference	High-end sound setting for faithful audio playback
Surround	Optimum setting for LIVE and concert recordings

- ▶ Call up the sound menu (▷ page 159).
- ▶ Turn the controller until **Sound Profile** is in the center.
- ▶ Slide  the controller. The rotary menu to select the sound profile is activated.
- ▶ To select **Sound Profile**: turn the controller until the desired sound profile is activated.
- ▶ To return to the menu: slide  the controller.
- ▶ To return to media mode: press the  button.

Sound playback for individual seats

For the best sound, the specific seats will need to be set.

- ▶ Call up the sound menu (▷ page 159).
- ▶ Turn the controller until **VIP & BAL Selection** is in the center.
- ▶ Slide  the controller. The rotary menu is activated.
- ▶ To set the desired **VIP & BAL Selection**: turn the controller. The segment, text and image show the selected setting.
- ▶ To return to the sound menu: slide  the controller.
- ▶ To return to media mode: press the  button.

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Weather forecasts

Introduction

This function is currently not available for Canada.

For the reception of weather forecasts via satellite radio, you will need a SIRIUS XM Satellite Weather subscription.

When prompted, have the weather service activated by phone. A message shows the SIRIUS telephone number and the SIRIUS device identification number.

- ▶ To select **Call** or **Cancel**: turn and press the controller.

If a mobile phone is connected to the multimedia system (▷ page 91), when you select **Call**, a call is placed to a member of the SIRIUS service staff. The ID number of the SIRIUS device will be transferred to the telephone display.

- ▶ This will be followed by instructions from the service employee.

The multimedia system can receive weather forecasts for the USA (including Alaska and Hawaii) via satellite radio.

The received weather data can be displayed as an information chart (daily forecast, five-day forecast, detailed information) or on the weather map.

The weather data received from the weather station is stored for one hour in the multimedia system. It can therefore be displayed again immediately after restarting the engine (for example after refueling).

Depending on which scale has been selected, the weather map can display the following weather data with symbols:


- precipitation radar
 - The precipitation radar cannot be displayed for Alaska, Hawaii and Puerto Rico.
- storm characteristics
- high and low-pressure areas, weather fronts
- course of tropical cyclones (hurricanes, typhoons)
- storm warnings
- wind direction and speeds

i Hurricane: term used to describe the tropical cyclones that primarily develop in the Atlantic, North Pacific and South Pacific oceans. The wind speeds are above 74 mph (118 km/h). Five categories are used to classify the strength of a hurricane.

Typhoon: term used to describe a tropical cyclone that develops in the northwestern Pacific. The wind speeds are in the category of a hurricane.

Switching the SIRIUS Weather display on/off

Activating

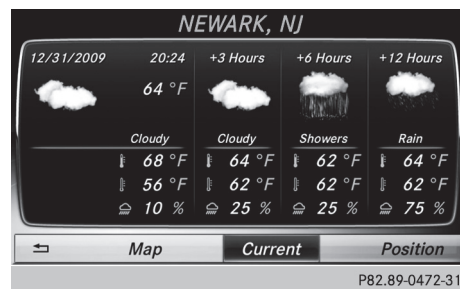

- ▶ Press the **TEL** button.
- ▶ To select **Tel** in the main function bar: slide and turn and press the controller. A menu appears.
- ▶ To select **SIRIUS Weather**: turn and press the controller. The information chart shows the daily forecast at the current vehicle position.

You see the following information:


- the date and time of the weather message received last
- information on the current weather (temperature, cloud coverage) and a forecast for the next three, six and twelve hours
- the current highest temperature and forecasts
- the current lowest temperature and forecasts
- the probability of rain

- ▶ **To switch to the 5-day forecast:** select **Current**.

A menu appears.

- ▶ Select **5-Day**.

The information chart displays the forecast for the next five days in the currently selected location.

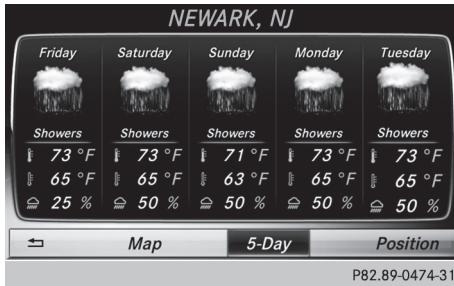

- ▶ **To return to the current-day forecast:** select **5-Day**.

A menu appears.


- ▶ Select **Current**.

The information chart shows the forecast for the current day again.

Deactivating

- ▶ Press .

Displaying detailed information

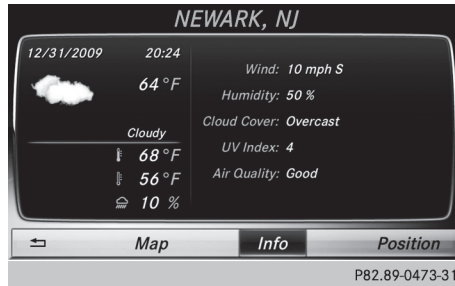

Besides the current temperatures, you can display information such as wind speeds and UV index.

- ▶ To select **Current** or **5-Day** in the current-day or 5-day forecast: turn and press the controller.

A menu appears.

- ▶ Select **Info**.

The information chart shows detailed information for the selected area.

Selecting the area for the weather forecast

Introduction

You can select the weather forecasts for:

- the current vehicle position
- the vicinity of the destination
- a winter sports area
- an area within the USA

You can select a location in the information chart (option 1) or in the map (option 2). You can store frequently selected locations in the memory (▷ page 164).


- ❗ The multimedia system receives data for the weather forecasts from the nearest weather station to the selected location.

Option 1: selecting the area in the information chart

- ▶ To select **Position** in the information chart: turn and press the controller.
- ▶ To select the **current vehicle position**: select **Current Position** from the menu. The multimedia system receives weather data for the current vehicle position from the nearest weather station and automatically displays the data.


Requirement for "Near destination": a route to a destination has been calculated (▷ page 58). The menu item is otherwise grayed out.

- ▶ To select the **vicinity of the destination**: select **Near Destination** from the menu: turn the controller and press to confirm.

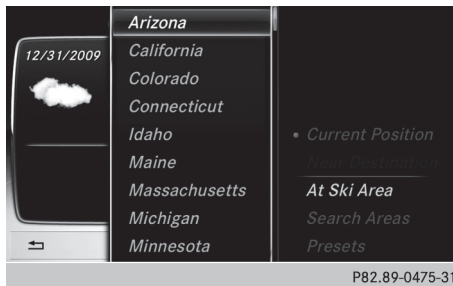

P82.89-0475-31

- ▶ To select a **winter sports area**: select **At Ski Area** from the menu: turn the controller and press to confirm.
- ▶ Select a state.
- ▶ Select a winter sports area from the menu. The weather data and other information is displayed for the winter sports area that has been selected. The data is supplied by the nearest weather station.

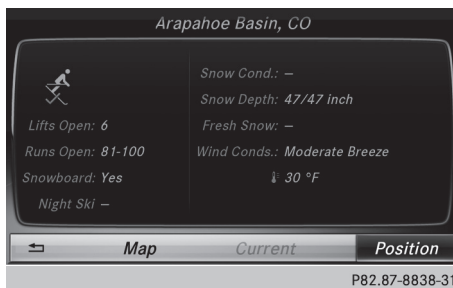


P82.87-8838-31

The information chart shows the following information (if available):

- ski slopes/ski lifts
- snowboarding and nighttime opening
- snow conditions (e.g. snow depth)
- temperature

The status of a facility is indicated as follows:

- green check mark - open
- red cross - closed
- question mark - not known

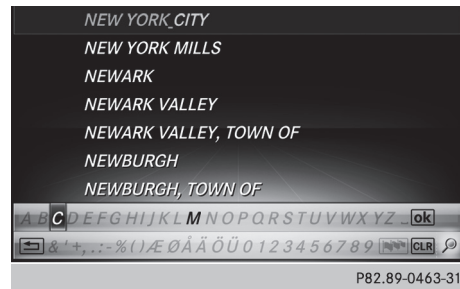

Example: city list with character bar

Entry limitation: searching for a location using the character bar is not possible while driving.

- ▶ To search for a **location**: select **Search Areas**: turn and press the controller.
- ▶ Select the search area, e.g. **Other States (U.S.)**. Depending on the selection, the list of states or cities will appear with the character bar. You can limit the search using the character bar.
- ▶ To select state/province or city: enter the first few letters by turning and pressing the controller.
- ▶ To switch to the list without the character bar: slide **↑** the controller or select **ok**.
- ▶ To delete an entry: select **CLR** in the character bar and press the controller. Pressing briefly deletes the last letter entered. Pressing and holding longer deletes the entire entry.
- ▶ To select the state/province or city from the list: turn and press the controller. After selecting a state (or province) the list of locations appears. After selecting a location, the information chart displays the weather forecast for the

selected location. The data is supplied by the nearest weather station.

Option 2: selecting the area in the weather map

- ▶ Call up the weather map (▷ page 164).
- ▶ Move the weather map so that the crosshair is over the desired area (▷ page 164).
- ▶ Press the controller.

The information chart shows the weather forecast for the selected area. The data is supplied by the nearest weather station.

Memory functions

Storing the area in the weather memory

You can save locations that are called up frequently in ten preset positions (0, 1-9) in the weather memory.

- ▶ **In the weather memory:** select the area for the weather forecast (▷ page 162).

The selected location appears at the top in the status bar.
 - ▶ To select **Position** in the information chart: turn and press the controller.
 - ▶ Select **Preset**.
 - ▶ Select a preset using the controller.
 - ▶ Press and hold the controller until you hear a tone.

The area is entered on the selected preset.
 - ▶ **To store rapidly:** in the daily forecast (▷ page 161) press and hold a number key, e.g. **2** ABC, until the preset position number is shown in the status bar in front of the area name.
- i** You can also use this function in the five-day forecast (▷ page 161), and in the detailed information view (▷ page 162).

Selecting an area from the weather memory

- ▶ **Directly from the weather memory:** select **Position** from the information chart: turn and press the controller.
- ▶ Select **Preset**.

- ▶ Select the memory position which contains the location you require.

The weather data for the selected area is displayed.
- ▶ **Quick select:** if a location is stored in the weather memory, for example when the current forecast display is active, briefly press a number key, e.g. **2** ABC.

The weather data for the selected area is displayed.

Weather map

Calling up the weather map



- ▶ To select **Map** in the information chart: turn and press the controller.

The weather map is shown on a 500-mi (500-km) scale. The crosshair highlights the weather station that supplies the current weather data.

Moving the weather map

- ▶ Slide **↑** ⊙ **↓** or **←** ⊙ **→** the controller.

The weather map moves in the corresponding direction under the crosshair.

Changing the scale

- ▶ Turn the controller.

The scale bar appears.
- ▶ Turn until the desired scale is set.


Showing/hiding the menu in the weather map

- ▶ **To show:** press the controller.
- ▶ **To hide:** slide **↑** ⊙ the controller.

Selecting a weather station in the map

- ▶ Move the weather map and crosshair to the desired position (▷ page 164).
 - ▶ To show the menu: press the controller.
 - ▶ To select **Weather Table**: press the controller.
- The multimedia system receives weather data for the selected position from the nearest weather station and displays the data as a current-day forecast.

Switching layers on the map on/off

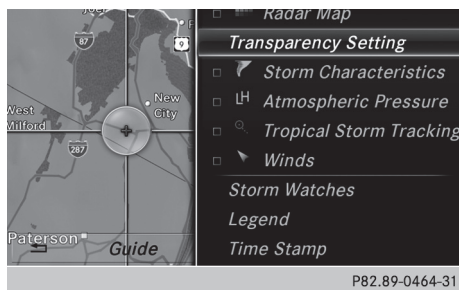

You can switch on different layers, for example to display the rain radar, weather fronts and the course of tropical storms on the map.

- ▶ Display the menu on the weather map (▷ page 164).
- ▶ To select **View**: turn and press the controller.
- ▶ Select a layer.
Switch the display on or off .

Explanation of the layers on the weather map

- Menu item **Radar Map**
Displays the precipitation radar as a color area in all map scales. For an explanation of the colors, see the legend (▷ page 167).
- Menu item **Storm Characteristics**
Displays the characteristics of a storm in all map scales:
 - tornadic storm:
storm cell with strong winds (super cell), from which a tornado can develop. Tornadoes are also known as twisters.
 - cyclone:

storm cells from which a tornadic storm can develop

- hailstorm
- the likelihood of a hailstorm

- **Storm watch areas**

Shows areas for which storm advisories have been issued (red areas). It is shown in map scales 50 mi (50 km), 200 mi (200 km) and 500 mi (500 km).

- Menu item **Atmospheric Pressure**

Shows the position of high and low-pressure areas (H, L), weather fronts and isobars. It is shown in map scales 200 mi (200 km) and 500 mi (500 km).


- Menu item **Tropical Storm Tracking**

shows the direction and speed of propagation of a tropical storm as a track in all map scales. Information on times and strength is also given.

- Menu item **Winds**

Shows the wind direction and wind speed in map scale of 5 mi (5 km).

Sample displays of weather data in the map

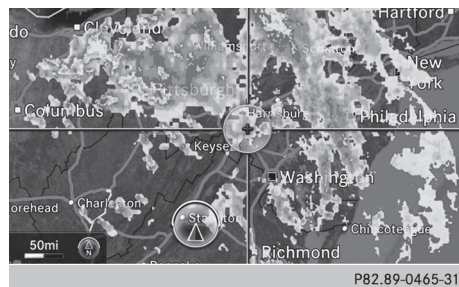

- ▶ **To display the precipitation radar:** activate the **Radar Map** display level (▷ page 165). The precipitation radar is displayed if weather data is available.

i You can call up the legend for the precipitation radar (▷ page 167).

The transparency of the precipitation radar display level can be adjusted in five stages.

- ▶ **To display the storm characteristics:** activate the **Storm Characteristics** display level (▷ page 165). If weather data is available, the weather map will then display the storm characteristics.

You can call up the legend for storms (> page 167).

The following information on a storm cell is displayed (if available):

- characteristics of the storm cell
- date and time of observation (time stamp)
- directional movement speed and path

Propagation speed: the speed at which the storm cell is advancing.



- **To display the weather fronts:** activate the **Atmospheric Pressure** display level (> page 165).

If weather data is available, the weather map will then display the weather fronts.

The example shows the position of high and low-pressure areas (H, L), weather fronts and isobars. Isobars are lines that show where the air pressure is the same.

Legend: weather fronts

Weather front	Explanation
Cold front (blue line with blue triangles)	If a cold front moves in, the weather remains changeable and there are often rain showers and thunderstorms. The air temperature decreases.
Warm front (red line with red semi-circles)	A warm front may cause more prolonged steady rain, more cloud cover and a slow rise in temperature.

Weather front	Explanation
Stationary front (red and blue line with red semi-circles and blue triangles)	The weather front moves minimally. The weather remains changeable in this area.
Occlusion (purple line with purple semi-circles and triangles)	When the faster cold front catches up and joins the warm front ahead of it, an occluded front is formed. The weather remains changeable and rainy within an occlusion.



- **To display the track of a storm:** activate the **Tropical Storm Tracking** display level (> page 165).

If weather data is available, the weather map will then display storm tracking information.

Example: in the middle of the map you can see the current position of the tropical low-pressure area (cyclone). To the right of this a solid line shows the previous path with positions and times. The forecast for the direction of propagation is shown by a dotted line with positions and times.



You can find out more information about cyclones in the Storm Guide (▷ page 168).

The following information is shown (if available):

- name of the tropical storm and category
- time stamp
- directional movement speed and path
- maximum wind speed

Propagation speed: the speed at which the storm cell of a tropical cyclone is advancing.


A tropical storm is categorized according to where it originated.

Region of origin	category
Atlantic, North and South Pacific Oceans	Name of tropical low-pressure system (Tropical Low Press. Sys.)
Atlantic, North and South Pacific Oceans	Name of tropical storm (Tropical Storm)
Atlantic, North and South Pacific Oceans	Name of tropical storm (Hurricane Category 3) Displays hurricane categories 1 through 5
Northwestern Pacific Ocean	Name of tropical storm (Tropical Low Press. Sys.)
Northwestern Pacific Ocean	Name of tropical storm (Tropical Cyclone)
Northwestern Pacific Ocean	Name of tropical storm (Typhoon)
Northwestern Pacific Ocean	Name of tropical storm (Super-Typhoon)

You can also see the time stamp for the weather data on map scales of 50 miles and smaller.

The weather map shows wind directions and wind speeds.

Legend (precipitation radar and storms)

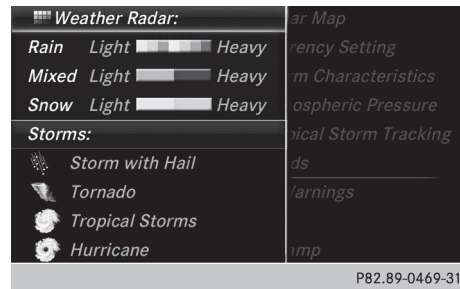

- ▶ Display the menu on the weather map (▷ page 164).
- ▶ To select **View**: turn and press the controller.
- ▶ Select **Legend**.
- ⓘ The symbol for a tornadic storm is also valid for a cyclone (mesocyclone).

Precipitation type	Color scale
Rain	Eleven shades from light to heavy (light green to red)
Mixed	Shades from light to heavy (light purple to purple)
Snow	Shades from light to heavy (light turquoise to turquoise)

Time stamp

The time stamp shows when the weather data was created by the weather station.

A time stamp corresponds to the time at the vehicle's current position. The changeover from summer time to standard time is performed automatically.

- ▶ Display the menu on the weather map (▷ page 164).
- ▶ To select **View**: turn and press the controller.
- ▶ Select **Time Stamp**.

Changing to the information chart

- ▶ Display the menu on the weather map (▷ page 164).
- ▶ To select **Weather Table**: turn and press the controller.


Storm Watch Box



Storm watch areas for which there are storm advisories are displayed as red areas on the weather map.

- ▶ **To activate/deactivate the storm watch area display on the map:** display the menu on the weather map (▷ page 164).
- ▶ To select **View**: turn and press the controller. The list of display levels appears.
- ▶ Select **Storm Watch**.
- ▶ Select **Show Sym. for Storm Areas on Map**. Storm watch areas are displayed or are not displayed on the map.
- ▶ **To activate/deactivate the automatic display of storm advisories:** select **Display Storm Watch Automatically**. Storm advisories are automatically displayed or not displayed on the map.
- ▶ **To set the radius for storm advisories:** select **5 Miles**, **50 Miles** or **200 Miles**.

Storm Guide

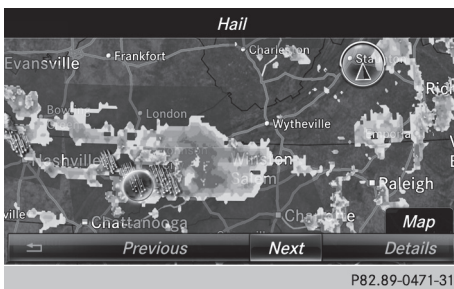

- ▶ **To display the storm guide:** display the menu on the weather map (▷ page 164).
- ▶ To select **Guide**: turn and press the controller. A menu appears. The current storm is highlighted. There is information about the storm in the status bar.
- ▶ To select **Next**: turn and press the controller. The next storm is marked.
- ▶ Select **Previous**. The previous storm is highlighted.
- ▶ **To display storm details:** select **Details**. You see detailed information about the selected storm.

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Overview

Important safety notes

WARNING

The CD/DVD drive is a class 1 laser product. If you open the housing of the CD/DVD drive, there is a risk of exposure to invisible laser radiation. This laser radiation could damage your retina. There is a risk of injury.

Never open the housing. Always have maintenance and repair work carried out at a qualified specialist workshop.

WARNING

If objects such as headphones/headsets or external audio/video sources are not secured in the passenger compartment, they can be flung around and hit vehicle occupants. There

is a risk of injury, for example in the event of sudden braking or a sudden change in direction.

Always stow these items or similar objects carefully so that they cannot be flung around, for example in a lockable vehicle stowage compartment.

Equipment


Observe that a range of Rear Seat Entertainment Systems are available for Mercedes-Benz vehicles. In this Operator's Manual, the Rear Seat Entertainment System Code 864 is used for illustration purposes. If you have a different Rear Seat Entertainment System in your vehicle, please refer to the manufacturer's operating instructions.

Components

The Rear Seat Entertainment System includes:

- two screens for the rear behind the front-seat head restraints
- two remote controls
- a single drive (rear-compartment drive)
- AUX jacks on both rear screens (AUX display)
- AUX jacks on the rear drive (AUX drive)
- headphones for each rear screen
- two sets of cordless headphones

Rear-compartment screens

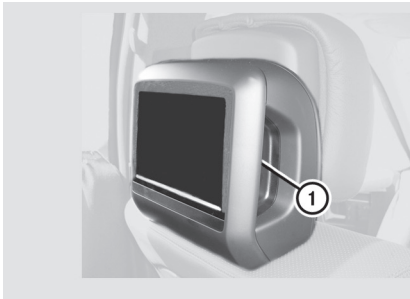


P82.B9-1582.31

- ① AUX jacks (AUX display)
- ② Display

The same AUX jacks (AUX drive) can be found in the rear-compartment drive (▷ page 171).

Remote control

Overview

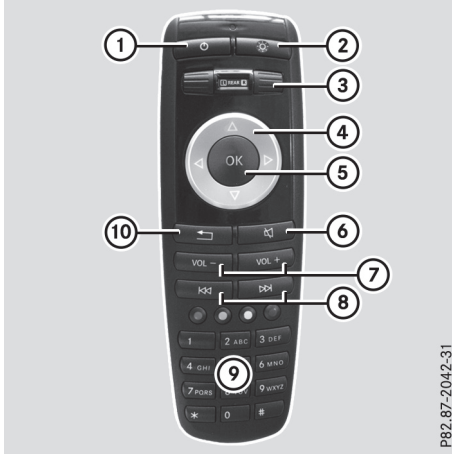

- ① Switches the screen on or off
- ② Switches the button illumination on/off
- ③ Selects the screen for the remote control
- ④ Selects a menu item
- ⑤ Confirms a selection or setting
- ⑥ Switches the mute function on/off
- ⑦ Adjusts the volume
- ⑧ Skips, fast-forward and fast-rewind
- ⑨ Selects a track; direct entry
- ⑩ Exits a menu (back)

i Two remote controls are supplied for the US and Canadian markets.

Selecting the screen for the remote control

You can use the remote control to operate either of the two rear screens. To do so, the appropriate rear screen must be selected.

- ▶ **To select the left-hand screen:** turn thumbwheel ③ until **L REAR** (▷ page 170) is highlighted in the window.
- ▶ **To select the right-hand screen:** turn thumbwheel ③ until **REAR R** is highlighted in the window.

Switching the screen on/off

The switched-on rear compartment screens switch off after 30 minutes if:

- the SmartKey in the ignition lock is in position **0** or **1** (see the vehicle Operator's Manual)
- the SmartKey is not inserted

Before the screens switch off, they show a message to this effect.

You can switch the screens back on. However, this will discharge the starter battery.

- ▶ Point the remote control at the rear-compartment screen which has been selected for remote operation.
- ▶ Press button ① on the remote control (▷ page 170).
The rear screen switches on or off.

Switching the button lighting on/off

- ▶ Press button ② on the remote control (▷ page 170).
Depending on the previous status, the button lighting is switched on or off.

i If you do not use the remote control for about 15 seconds, the button lighting switches off automatically.


Switching the sound on or off

- ▶ Press button ⑥ on the remote control (▷ page 170).
The sound is switched on/off.

Selecting a menu/menu item and confirming your selection

- ▶ Select a menu item using the ◀ ▶ buttons on the remote control and press the Ⓞ button to confirm.

CD/DVD drive and AUX jacks

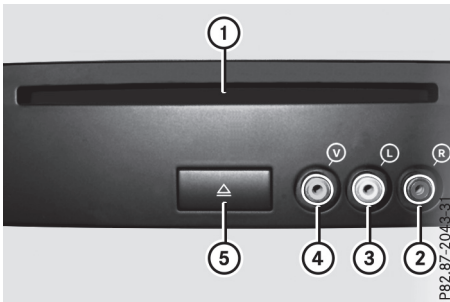

- ① Disc slot
- ② AUX, right-hand (R) jack for audio signal (red)

- ③ AUX, left-hand (L) jack for audio signal (white)
- ④ AUX, video (V) jack (yellow)
- ⑤ Disc eject button

The AUX jacks shown are for the AUX drive. Identical jacks can be found on the right-hand side of the rear-compartment screens (AUX display) (> page 169).

Cordless headphones

Overview



- ▶ **To adjust the headphones:** open both sides of the headphones.
- ▶ Adjust the headphones by pulling the headphone band in the direction of the arrow.
- ▶ **To switch the headphones on or off:** press On or Off switch ②.
- ▶ **To adjust the volume:** turn volume control ③ until the desired volume is set. If you have connected corded headphones to a rear-compartment screen, you can adjust the volume using the remote control (> page 170).
- ▶ **To check the battery condition of charge:** check the state of the batteries using indicator lamp ① (> page 172).

The headphones automatically switch off if they have not received an audio signal for approximately three minutes. This preserves the batteries.

Indicator lamp on the cordless headphones

The color of the indicator lamp shows:

- whether the device is switched on or off
- the condition of the inserted batteries

LED display	Status
Green	The batteries are fine.
Red	The batteries are almost discharged.
Lit continuously	The headphones are switched on and connected to a screen.
Flashing	The headphones are searching for the connection to a screen.
No display (dark)	The headphones are switched off or the batteries are discharged.

The function of the headphones may be impaired by other radio-based electronic devices such as mobile phones or laptops.

Selecting the screen for the cordless headphones



P82.89-2045-31

- ▶ Slide switch ① to **L** (left-hand screen) or **R** (right-hand screen).

Connecting additional headphones

Up to two cordless headphones can be used at the same time for each screen.

You can also connect one additional set of corded headphones to each of the two rear-compartment screens (▷ page 169). The socket is designed for headphones with a 3.5 mm stereo jack plug and an impedance of 32 ohms.

Replacing batteries

Notes

WARNING

Batteries contain toxic and corrosive substances. If batteries are swallowed, it can result in severe health problems. There is a risk of fatal injury.

Keep batteries out of the reach of children. If a battery is swallowed, seek medical attention immediately.

Environmental note



Batteries contain dangerous substances. It is against the law to dispose of them with the household rubbish. They must be collected separately and recycled to protect the environment.




Dispose of batteries in an environmentally friendly manner. Take discharged batteries to a qualified specialist workshop or a special collection point for used batteries.

Batteries are required for the remote control and for the two sets of cordless headphones.

- ▶ Switch to the remote control (▷ page 173).
- ▶ Switch to cordless headphones (▷ page 173).

On the remote control

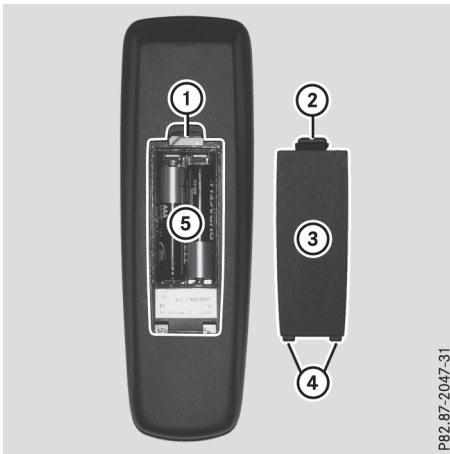

P82.87-2047-31

- ① Battery compartment
- ② Catch tab
- ③ Battery compartment cover
- ④ Retaining lugs
- ⑤ Batteries

The remote control contains two type AAA, 1.5 V batteries.

- ▶ **To open the battery compartment:** remove battery compartment cover ③ on the back of the remote control.
- ▶ To do so, press down retaining lug ② and take off battery compartment cover ③.
- ▶ Remove discharged batteries ⑤ from the tray.
- ▶ Insert the new batteries. Observe the polarity markings on the batteries and battery compartment when doing so.
Left-hand battery: the positive pole (+) must face upwards.
Right-hand battery: the positive pole (+) must face downwards.
- ▶ **To close the battery compartment:** insert battery compartment cover ③ starting with retaining lugs ④ into the battery compartment and allow catch tab ② to engage in place.

On the cordless headphones



P82.89-2048-31

The battery compartment is located on the left headphone. The cordless headphones require two type AAA, 1.5 V batteries.

- ▶ **To open the battery compartment:** turn battery compartment cover ① counter-clockwise and remove.
- ▶ Remove the discharged batteries from the tray.
- ▶ Insert the new batteries. Observe the polarity markings on the batteries and battery tray when doing so.
- ▶ **To close the battery compartment:** replace battery housing cover ① and turn it clockwise until it engages.
If the batteries have been inserted correctly, the indicator lamp will light up green when the headphones are switched on.

- ❗ The operating duration of the headphones with a set of batteries is up to 40 hours.

Basic functions

Using headphones

You can use the cordless headphones supplied and/or up to two sets of corded headphones connected to the corresponding jack of the rear-compartment screens (▷ page 169).



Information on the cordless headphones (▷ page 171).

Using the main loudspeakers

This function is available in conjunction with the multimedia system.




 
You can use the vehicle loudspeakers to listen to a disc inserted in the rear-compartment drive. To do so, disc mode (audio CD/audio DVD/MP3) must be activated on at least one rear screen.

The volume setting of the headphones does not affect the main loudspeakers.

- ▶ **To set on the multimedia system:** press the  button, for example, to switch on an audio mode.
- ▶ To select **Information**  slide and press the controller.
A menu appears.
- ▶ Turn the controller until **Rear Seat Entertainment System: Audio** is brought to the front.
- ▶ Press the controller.

Selecting sound settings

You can select sound settings in the following operating modes:

- Audio CD/MP3
- Video DVD
- Radio (active media source in COMAND)
- AUX
- ▶ Switch on an operating mode (e.g. CD mode) (> page 175).
- ▶ Select **Treble** or **Bass** using the  buttons on the remote control and press the  button to confirm. An adjustment scale appears.
- ▶ Select a setting using the  buttons and press the  button to confirm.

Multiple users

Simultaneous use of the rear-compartment disc drive

The two rear-compartment screens can be operated almost entirely independently from one another. However, a conflict may occur in some menus if the two screens are used simultaneously.

The following functions affect both screens:

- changing playback options
- selecting a track (from a track list or folder)
- using the play, pause and stop functions
- fast forward and rewind or scrolling
- calling up the DVD menu and navigating within it
- setting the language, subtitles and camera angle
- calling up interactive DVD content

The following functions affect only one screen:

- functions in audio and video mode
- changing picture settings
- switching between full screen and the menu

Switching between operating modes

When you exit an operating mode (e.g. CD mode), the current setting is saved. If you call up this operating mode again later, there are two possibilities:

- the operating mode has been changed on the other screen.
- the operating mode has not been changed.

In the first case, the operating mode appears as it is on the other screen.


In the second case, the setting appears on the screen as it was when you last exited the operating mode.









 

Picture settings

Overview








 
You can select the picture settings in DVD and AUX mode (> page 184).

Adjusting the brightness, contrast and color

- ▶ Switch to DVD mode (> page 179).
- ▶ **To show the menu:** press the  button on the remote control.

- ▶ Select **DVD-Video** using the    buttons and press the  button to confirm.
- ▶ Select **Brightness, Contrast** or **Color** using the   buttons and press the  button to confirm.
A scale appears.
- ▶ Select a setting using the   buttons and press the  button to confirm.

Changing the picture format












- ▶ **To show the menu:** press the  button on the remote control.
- ▶ Select **DVD-Video** using the    buttons and press the  button to confirm.
The dot in front of one of the menu items **16:9, 4:3** or **Zoom** shows the currently set picture format.
- ▶ Select a format using the   buttons and press the  button to confirm.

System settings






Note

You can adjust all system settings individually for each rear screen without affecting the other screen.

Selecting the display language





 



- ▶ Select **System** using the    buttons on the remote control and press  to confirm.
You see the system menu on the selected rear screen.
- ▶ Select **Settings** using the  button and press  to confirm.
- ▶ Press the  button to confirm **Language**.
The list of languages appears. The  dot indicates the current setting.
- ▶ Select a language using the   buttons and press the  button to confirm.
The Rear Seat Entertainment System sets the selected language.

Switching the display design





- ▶ Select **Settings** using the  button and press  to confirm.
- ▶ Select **Day Mode, Night Mode** or **Automatic** with the   buttons and confirm with the  button.
The dot indicates the current setting.

Design	Explanation
Day Mode	The display is set permanently to day design.
Night Mode	The display is set permanently to night design.
Automatic	The display design changes depending on the vehicle instrument cluster illumination.

Setting the brightness

- ▶ Select **Settings** using the  button and press  to confirm.
- ▶ Select **Brightness** with the   buttons and confirm with the  button.
A scale appears.
- ▶ Adjust the brightness using the   buttons and press the  button to confirm.
The bar moves up or down. The picture becomes lighter or darker.

Showing/hiding the picture

- ▶ **To hide the picture:** select **Display** in the system menu using the   buttons on the remote control and press the  button to confirm.
The picture is hidden.
- ▶ **To display the picture:** press the  button.

Audio CD/DVD and MP3 mode

Important safety notes

WARNING

The CD/DVD drive is a class 1 laser product. If you open the housing of the CD/DVD drive, there is a risk of exposure to invisible laser

radiation. This laser radiation could damage your retina. There is a risk of injury.

Never open the housing. Always have maintenance and repair work carried out at a qualified specialist workshop.


General notes

The rear-compartment drive is a single disc drive.

Notes on audio mode can be found in the "Media" section (▷ page 137):

- Notes on CDs and DVDs
- Notes on MP3 mode
- Notes on copyright

Inserting and removing a CD/DVD from the rear-compartment drive

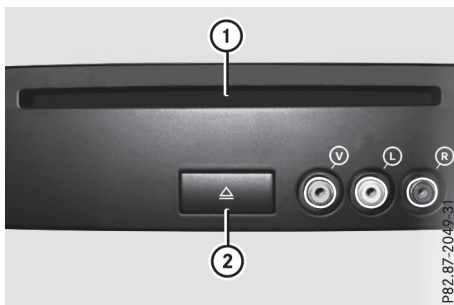

- ① Disc slot
- ② Disc eject button

The rear-compartment drive is located behind the center console in a folding compartment.

Depending on the vehicle equipment level, the rear-compartment drive is located:

- under the rear bench seat or
- in the center console between the driver's and front-passenger seats

If there is already a disc inserted, this must be ejected before another is inserted.


- ▶ **To remove:** press the button. The rear-compartment drive ejects the disc.
- ▶ **To insert:** insert a disc into the disc slot with the printed side facing upwards. The rear-compartment drive closes and the disc is played.

The rear-compartment drive plays the disc:

- if it has been inserted correctly and is a permissible disc, and
- after you have switched on disc mode (audio CD or audio DVD or MP3 mode) (▷ page 176).

Data on an MP3 CD first needs to be loaded by the drive. Loading may take some time, depending on the number of folders and tracks.

Switching to audio CD, audio DVD or MP3 mode

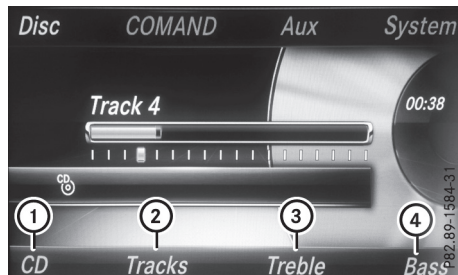

- ① Calls up CD functions, other displays: MP3 (MP3 mode), DVD-A (audio DVD mode)
- ② Calls up track list (audio CD and audio DVD mode), calls up folders (MP3 mode)
- ③ Sets the treble
- ④ Sets the bass

The example shows audio CD mode. The number and the elapsed playback time for the current track are displayed.

- ▶ Insert a CD or DVD (▷ page 176). The Rear Seat Entertainment System loads the inserted disc and plays it.
- ▶ If the Rear Seat Entertainment System does not play back the disc automatically, select **Disc** using the buttons on the remote control and confirm with the button. The corresponding mode is switched on. The Rear Seat Entertainment System plays the disc.

- ❗ Variable bit rates in MP3 tracks can result in the elapsed time shown being different from the actual elapsed time.

Selecting a track

Via skip function

- ▶ Press the or button on the remote control.

or

- ▶ Press the or button.
The skip forward function skips to the next track.

If the elapsed track time has passed 8 seconds, the function skips back to the beginning of the track. If the elapsed time is shorter, it will skip to the start of the previous track.

If the **Random Tracks** or **Random Folder** playback option has been selected, the track order is random.

Via track list

In audio CD mode, the track list contains all tracks on the disc currently playing. In audio DVD mode, the track list contains all tracks in the currently active group.

In MP3 mode, the track list shows all tracks in the currently active folder as well as the folder structure, allowing you to select any track on the MP3 CD.

- ▶ Select **Tracks** (audio CD/DVD mode) or **Folder** (MP3 mode) using the buttons on the remote control, and confirm by pressing the button.

or

- ▶ Press the button when the selection window is active.
The track list appears. The • dot indicates the current track.
- ▶ Select a track using the buttons and press the button to confirm.

By entering the track number directly

- ▶ Press the button on the remote control.
The track entry display appears.

Example: track 2

- ▶ Press the button.

Example: track 23

- ▶ Press the and buttons in quick succession.
- ▶ Wait for approximately three seconds after making the entry.
You will hear the track which has been entered. The corresponding basic menu then reappears.

i It is not possible to enter numbers that exceed the number of tracks on the CD or in the currently active folder.

Fast forwarding/rewinding

- ▶ With the selection window active, press the or button on the remote control repeatedly until you reach the desired position.

or

- ▶ Press and hold the or button until the desired position has been reached.

Selecting a folder

This function is available in MP3 mode.















- ▶ Select **Folder** in MP3 mode using the buttons on the remote control and press the button to confirm.

or

- ▶ Press the button when the selection window is active.
The folder content appears.
- ▶ **To switch to the superordinate folder:**
select symbol using the buttons on the remote control and press the button to confirm.
The display shows the next folder up.
- ▶ **To select a folder:** select a folder by pressing the button and confirm by pressing the button.
You will see the tracks in the folder.
- ▶ Select a track using the buttons and press the button to confirm.
The track is played and the selected folder is now the active folder.






 









Pause function

This function is available in audio DVD mode.

- ▶ **To pause playback:** press the  button in full-screen mode. The  display changes to .
- ▶ Select  using the , ,  buttons on the remote control and confirm with the  button. The  display changes to .
- ▶ **To continue playback:** select  and press the  button to confirm. The  display changes to .






Stop function










This function is available in audio DVD mode.

- ▶ **To interrupt playback:** press the  button in full-screen mode.
- ▶ Select  using the , ,  buttons on the remote control and confirm with the  button. The  display changes to .
- ▶ **To continue playback:** select  and press the  button to confirm. Playback continues from the point where it was interrupted.
- ▶ **To stop playback:** while playback is interrupted, select  again and press the  button to confirm. Playback stops and returns to the beginning of the DVD.  is highlighted.
- ▶ **To restart playback:** select  and press the  button to confirm. Playback starts from the beginning of the DVD.




 




Setting the audio format

The content of an audio DVD can be divided into up to 9 groups. The availability and type of group depends on the respective DVD. A group can contain music of different sound qualities (stereo and multichannel formats, for example), or bonus tracks.

- ▶ In full-screen mode press the  button.
- ▶ Select **DVD-A** using the , ,  buttons on the remote control and press  to confirm.

- ▶ Select **Group** using the ,  buttons and press the  button to confirm. The list of available audio formats appears. The  dot indicates the format currently selected.
- ▶ Select an audio format using the ,  buttons and press the  button to confirm.
- ▶ **To exit the menu:** press the  or  button.




 



Playback options

- ▶ Select **CD, DVD-A** or **MP3** using the , ,  buttons on the remote control and press the  button to confirm. A list appears. The  dot indicates the playback option currently selected.
- ▶ Select **Normal Track Sequence, Random Tracks** or **Random Folder** using the ,  buttons and press the  button to confirm. The option is switched on. For all options except **Normal Track Sequence**, you will see a corresponding display in the selection window.
 - ❗ If you switch the data carrier which you are currently listening to, the **Normal Track Sequence** option is activated automatically. If an option is selected, it remains selected after the Rear Seat Entertainment System is switched on or off.

Switching track information on/off (MP3 mode only)

If the function is switched on, folder and track names are displayed.

 If the function is switched off, disc and file names are displayed.

- ▶ Select **MP3** using the , ,  buttons on the remote control and press the  button to confirm.
- ▶ Select **Display Track Information** using the ,  buttons and press the  button to confirm. The function is switched on or off , depending on the previous status.

Video DVD mode

Important safety notes

WARNING

The CD/DVD drive is a class 1 laser product. If you open the housing of the CD/DVD drive, there is a risk of exposure to invisible laser radiation. This laser radiation could damage your retina. There is a risk of injury.

Never open the housing. Always have maintenance and repair work carried out at a qualified specialist workshop.


General notes

DVD playback conditions

Playback problems may occur when playing copied discs. There is a large variety of discs, DVD authoring software, writing software and writers available. This variety means that there is no guarantee that the Rear Seat Entertainment System will be able to play DVD videos that you have copied yourself.

Further information (▷ page 152). Information regarding the multimedia system also applies to the Rear Seat Entertainment System.





Function restrictions

Depending on the DVD, it is possible that certain functions or actions described in this section will be temporarily blocked or may not function at all. As soon as you try to activate these functions or actions, you will see the  symbol in the display.


Switching on video DVD mode

- ▶ Insert a video DVD (▷ page 176).
The Rear Seat Entertainment System loads the disc.
If disc mode was the last mode selected, it will now be active.



If it was not, switch on video DVD mode as described in the following instructions.

- ▶ Select **Disc** in the menu using the    buttons on the remote control and confirm by pressing the  button. If the DVD video fulfills the playback criteria, the film either starts automatically or the menu saved on the DVD appears. If the DVD menu appears, you must start the film manually.
- ▶ Select the corresponding menu item in the DVD menu.
A submenu is displayed. If available, additional options can now be selected.

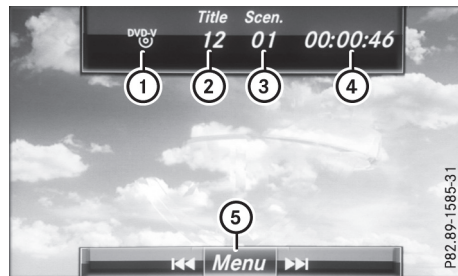Showing/hiding the control menu



- ① Type of data medium
- ② Current title
- ③ Current scene
- ④ Track time
- ⑤ Displays the menu


▶ **To show:** press the  or  button on the remote control.

▶ **To hide:** press the  or  button.

or

▶ Wait about eight seconds.

Showing/hiding the menu

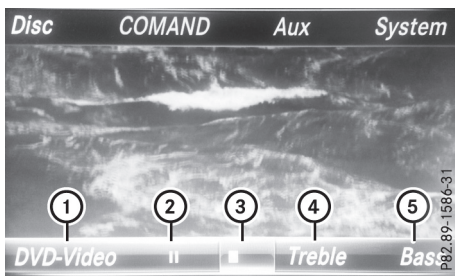

- ① Video DVD options
- ② Pause function
- ③ Stop function
- ④ Sets the treble
- ⑤ Sets the bass

► **To show:** press the **OK** button on the remote control.

► **To hide:** press the **▲** button and confirm **[]** by pressing the **OK** button.

Fast forwarding/rewinding

► Press and hold the **[⏮]** or **[⏭]** button on the remote control until the desired position has been reached.
You see the control menu.

Pause function

► **To show the menu:** press the **OK** button on the remote control.

► **To pause playback:** select **[⏸]** and press the **OK** button to confirm.
The **[⏸]** display changes to **[▶]**.

► **To continue playback:** select **[▶]** and press the **OK** button to confirm.
The menu is hidden.

Stop function

► **To show the menu:** press the **OK** button on the remote control.

► **To interrupt playback:** select **[■]** and press the **OK** button to confirm.
The **[⏸]** display changes to **[▶]**. The video image is hidden.

► **To continue playback:** select **[▶]** and press the **OK** button to confirm.
Playback continues from the point where it was interrupted. The menu is hidden.

► **To stop playback:** while playback is interrupted, select **[■]** again and press the **OK** button to confirm.
Playback stops and returns to the beginning of the DVD. **[▶]** is highlighted.

► **To restart playback:** select **[▶]** and press the **OK** button to confirm.
Playback starts from the beginning of the DVD.

Selecting a scene/chapter

Skipping forward/back

► Press the **[◀]** or **[▶]** button on the remote control.

or

► Press the **[⏮]** or **[⏭]** button.
The navigation menu (> page 179) appears for approximately eight seconds.

Selecting a scene/chapter directly

The examples illustrate how to select scene or chapter 5.

► **Option 1:** while the film is playing, press the **[*]** button on the remote control.

► Press a button, such as **[5JKL]**.

► **Option 2:** press the **OK** button on the remote control.

► Select **DVD-Video** and press the **OK** button to confirm.

► Select **DVD Functions** and press the **OK** button to confirm.

► Select **Scene Selection** and press the **OK** button to confirm.

► Select 5 using the **[▲]** or **[▼]** button and press the **OK** button to confirm.

In both cases, playback will begin from the 5th scene or chapter after a brief pause.

Selecting a film/track

- ▶ **Option 1:** press the **OK** button on the remote control.
- ▶ Select **DVD-Video** and press the **OK** button to confirm.
- ▶ Select **DVD functions** and press the **OK** button to confirm.
- ▶ Select **Title selection** and press the **OK** button to confirm.
- ▶ Press the **OK** button to select the list.
- ▶ Select a film or a title.
- ▶ **Option 2:** to select film 2, for example, press the **[2ABC]** button on the remote control. After a brief pause, the second film is played.

DVD menu

Calling up the DVD menu

The DVD menu is the menu stored on the DVD itself. It is structured in various ways according to the individual DVD and permits various actions and settings.

In the case of multi-language DVDs, for example, you can change the DVD language in the DVD menu.

- ▶ **To show the menu:** press the **OK** button on the remote control.
- ▶ Select **DVD-Video** and press the **OK** button on the remote control to confirm.
- ▶ Select **DVD Functions** and press the **OK** button to confirm.
- ▶ Select **Menu** and press the **OK** button to confirm. The DVD menu appears.

Selecting menu items in the DVD menu

- ▶ Select a menu item using the **[▲]**, **[▼]**, **[◀]**, **[▶]** buttons on the remote control and press the **OK** button to confirm. A menu appears.
- ▶ Confirm **Select** by pressing the **OK** button. A submenu is displayed.
- ▶ If available, additional options can now be selected. The Rear Seat Entertainment System then switches back to the DVD menu.

i Menu items which cannot be selected are shown in gray.

i Depending on the DVD, the menu items **Back (to movie)**, **Play**, **Stop**, **[◀◀]**, **[▶▶]** or **Go Up** may not function at all or not at certain points in the DVD menu. To indicate this, the **⊘** symbol appears in the display.

Stopping a film or skipping to the beginning or end of a scene

- ▶ Select any menu item from the DVD menu. The menu appears.
- ▶ **To stop the film:** select the **Stop** menu item and press the **OK** button on the remote control to confirm.
- ▶ **To skip to the end of a scene:** select the **[▶▶]** menu item and press the **OK** button to confirm.
- ▶ **To skip to the beginning of a scene:** select the **[◀◀]** menu item and press the **OK** button to confirm.

Moving up one level in the DVD menu

- ▶ Call up the DVD menu.
 - ▶ Press the **[↶]** back button on the remote control or select the corresponding menu item in the DVD menu.
- or
- ▶ Select any menu item in the DVD menu and press the **OK** remote control button to confirm.
 - ▶ Select **Go Up** and press **⊘** to confirm.

Back to the movie

- ▶ Press the **[↶]** back button repeatedly until you see the film.

or

- ▶ Select any menu item in the DVD menu and press the **OK** remote control button to confirm.
- ▶ Select the **Back (to movie)** menu item in the menu and press the **OK** button to confirm.

Setting the audio format

You can use this function to set the audio language or the audio format. The number of set-

tings is determined by the DVD content. It may also be possible to access the settings from the DVD menu. This function is not available on all DVDs.

- ▶ **To show the menu:** press the **OK** button on the remote control.
- ▶ Select **DVD-Video** and press the **OK** button on the remote control to confirm.
- ▶ Select **DVD Functions** and press the **OK** button to confirm.
- ▶ Select **Audio Language** and press the **OK** button to confirm.
A menu appears after a short while. The **•** dot indicates the currently set language.
- ▶ Select a language using the **▲** **▼** buttons and press the **OK** button to confirm.

Subtitles and camera angle

These functions are not available on all DVDs. The number of subtitle languages and camera angles available depends on the content of the DVD. It may also be possible to access the settings from the DVD menu.

- ▶ **To show the menu:** press the **OK** button on the remote control.
- ▶ Select **DVD-Video** and press the **OK** button on the remote control to confirm.
- ▶ Select **DVD Functions** and press the **OK** button to confirm.
- ▶ Select **Subtitles** or **Camera Angle** and press the **OK** button to confirm.
In both cases, a menu appears after a few seconds. The **•** dot indicates the current setting.
- ▶ Select a setting using the **▲** **▼** buttons and press the **OK** button to confirm.

Interactive content

DVDs can also contain interactive content (e.g. a video game). In a video game, you may be able to influence events, for example, by selecting and triggering actions. The type and number of actions depend on the DVD.

- ▶ Select an action using the **▲** **▶** **▼** **◀** buttons on the remote control and press the **OK** button to execute it. A menu appears and the first entry, **Select**, is highlighted.
- ▶ Press the **OK** button.

Active COMAND media source mode

Overview

You can transfer a media source selected in the multimedia system to the Rear Seat Entertainment System. If you switch the media source in the multimedia system, this will not be transferred to the Rear Seat Entertainment System. You can transfer these media sources to the Rear Seat Entertainment System:


- Radio
- CD or MP3 mode (CD, SD card, USB)
- Media Interface
- Video DVD mode

Follow the sequence described below when playing a media source from the multimedia system on the Rear Seat Entertainment System.

1. Switching on the function in the multimedia system

- ▶ Switch on the radio (▷ page 128).
- ▶ Switch CD or MP3 mode on (CD, SD card, USB) (▷ page 136).
- ▶ Switch on the media interface (▷ page 150).
- ▶ Switch to video DVD mode (▷ page 152).

2. Transferring the active media source to the Rear Seat Entertainment System

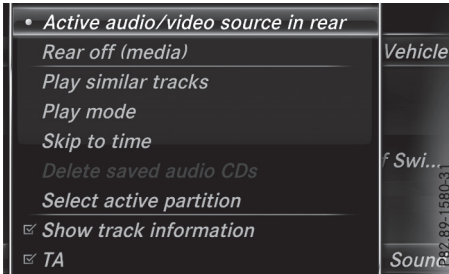

- ▶ To select the **Options** menu, turn and press the controller.
- ▶ Select **Active Aud./Vid. Source for Rear** by pressing the controller. The • dot indicates that the function is activated.
- ▶ **To switch off the function:** select **Rear Off (Radio)** or **Rear Off (Media)**. The • dot indicates that the function is deactivated.

3. Loading the active media source to the Rear Seat Entertainment System

- ▶ Select **COMAND** using the buttons on the remote control and press to confirm. A message appears stating that the desired audio or video source needs to be activated in the multimedia system. If the media source is activated in the multimedia system, it is loaded on the Rear Seat Entertainment System and is then played.

If **Rear Off** is activated in the multimedia system, the **COMAND is off or there is no active COMAND source.** message appears.

Radio mode functions



- ▶ **To select a station:** press the or button.
 - or
 - ▶ Press the or button. The radio selects the previous or next station in the alphabetical station list. DAB stations are displayed first, followed by stations with available station names. Stations showing station frequency are shown last.
- Additional setting option:
- ▶ Adjust the sound settings (▷ page 174).

Functions in CD mode

- ▶ **To select by skipping to a track:** press the or button.
- or
- ▶ Press the or button. The skip forward function skips to the next track. If more than 8 seconds of track time have elapsed, the function skips back to the beginning of the track. If less than 8 seconds of track time have elapsed, the function skips back to the beginning of the previous track.

Additional setting option:

- ▶ Adjust the sound settings (▷ page 174).

Audio DVD mode functions

- ▶ **To skip to the next or previous group:** press the button on the remote control.
- ▶ To select , highlight using the or button and press .

Additional setting option:

- ▶ Adjust the sound settings (▷ page 174).

MP3 mode functions

- ▶ **To select a track by skipping to a track:** press the ◀◀ or ▶▶ button on the remote control.

or

- ▶ Press the ◀◀ or ▶▶ button.
The skip forward function skips to the next track.
If the elapsed track time has exceeded 8 seconds, the function skips back to the beginning of the track.
If the elapsed track time is less than 8 seconds, the function skips back to the beginning of the previous track.

Additional setting option:

- ▶ Adjust the sound settings (▷ page 174).

DVD video mode functions

Hiding the menu:

- ▶ Press the ▲ or ▼ button on the remote control.

or

- ▶ Wait about eight seconds.
The menu is hidden.

Additional setting options:

- ▶ Adjust the brightness, contrast and color (▷ page 174).
- ▶ Change the picture format (▷ page 175).
- ▶ Adjust the sound settings (▷ page 174).

AUX mode

Introduction

You can connect external video sources with a sound and video signal to the Rear Seat Entertainment System:


- one external video source to each of the rear screens (AUX display)
- one external video source to the rear-compartment disc drive (AUX drive)

Operating the external video source; see the manufacturer's operating instructions.

For further details about external video sources, please consult an authorized Mercedes-Benz Center.

Connecting AUX equipment

AUX drive jacks

The AUX drive jacks are located on the rear-compartment drive to the right of the  (▷ page 171) button.

AUX display jacks

The AUX display jacks are on the side of the two rear screens (▷ page 169).




 

 
Connecting audio and video cables

- ▶ Insert the audio plugs for the left and right signals into the corresponding **L** and **R** jacks.
- ▶ Insert the video plug into the **V** jack.

Activating AUX mode

AUX drive

Requirements: the external video source is connected to the rear-compartment drive and playback is selected.







- ▶ Select **Aux** in the menu using the    buttons on the remote control and press the  button to confirm.
The AUX menu appears.
- ▶ Select **Source** from the AUX menu and press the  button to confirm.
- ▶ Select **Disc drive Aux** and press the  button to confirm.
Playback starts. If an external video source does not provide a video picture, an audio menu appears.

Displaying AUX





Requirements: the external video source is connected to the rear-compartment screen and playback is selected.

- ▶ Select a screen using the thumbwheel on the remote control (▷ page 170) until "**L REAR**"






(left-hand screen) or "R REAR" (right-hand screen) is highlighted in the window.

- ▶ Select **Aux** in the menu using the    buttons on the remote control and press the  button to confirm.
- ▶ Select **Source** from the AUX menu and press the  button to confirm.
- ▶ Select **Display Aux** and press the  button to confirm.
Playback starts. If an external video source does not provide a video picture, an audio menu appears.





Adjusting treble and bass

- ▶ Select **Treble** or **Bass** in the AUX menu and press the  button on the remote control to confirm.
A scale appears.
- ▶ Select a setting using the  or  button and press the  button to confirm.

Adjusting the brightness, contrast or color

- ▶ Select **Display Aux** or **Disc drive Aux** in the AUX menu and press the  button to confirm.
- ▶ Select **Brightness, Contrast** or **Color** and press the  button to confirm.
A scale appears.
- ▶ Select a setting using the  or  button and press the  button to confirm.

Changing the picture format

- ▶ Select **Display Aux** or **Disc drive Aux** in the AUX menu and press the  button to confirm.
- ▶ Select **Automatic, 16:9 optimize, 4:3** or **Zoom** using the   buttons and press the  button to confirm.
The dot in front of the menu item indicates the currently selected picture format.

