



COMAND

Supplement



2175841303

Order no. P217 0089 13 Part no. 217 584 13 03 Edition B-2017

COMAND Supplement



Mercedes-Benz

Symbols

In this Operator's Manual you will find the following symbols:

WARNING

Warning notes make you aware of dangers which could pose a threat to your health or life, or to the health and life of others.

Environmental note

Environmental notes provide you with information on environmentally aware actions or disposal.

 Notes on material damage alert you to dangers that could lead to damage to your vehicle.

 Practical tips or further information that could be helpful to you.

- ▶ This symbol indicates an instruction that must be followed.
- ▶ Several of these symbols in succession indicate an instruction with several steps.

(▷ This symbol tells you where you can find more information about a topic.

Dis- This text indicates a message in the
play multimedia display.

Parts of the software in the vehicle are protected by copyright © 2005 The FreeType Project <http://www.freetype.org>. All rights reserved.

Publication details

Internet

Further information about Mercedes-Benz vehicles and about Daimler AG can be found on the following websites:

<http://www.mbusa.com> (USA only)

<http://www.mercedes-benz.ca> (Canada only)

Editorial office

You are welcome to forward any queries or suggestions you may have regarding this Operator's Manual to the technical documentation team at the following address:

Daimler AG, HPC: CAC, Customer Service,
70546 Stuttgart, Germany

©Daimler AG: Not to be reprinted, translated or otherwise reproduced, in whole or in part, without written permission from Daimler AG.

Vehicle manufacturer

Daimler AG
Mercedesstraße 137
70327 Stuttgart
Germany

Welcome to the world of Mercedes-Benz

First of all, familiarize yourself with your multimedia system. Read these operating instructions, particularly the safety and warning notes, before you drive off.

This will help you to obtain the maximum pleasure from your multimedia system and avoid endangering yourself and others.

The equipment level and functions of your multimedia system may differ depending on:

- Model
- Order
- Country specification
- Availability

Mercedes-Benz therefore reserves the right to introduce changes in the following areas:

- design
- equipment
- technical features

The equipment in your vehicle may therefore differ from that shown in the descriptions and illustrations.

Consult an authorized Mercedes-Benz Center if you have further questions.

The Operator's Manual and all supplements are integral parts of the vehicle. You should always keep it in the vehicle and pass it on to the new owner if you sell the vehicle.

The technical documentation team at Daimler AG wishes you safe and pleasant motoring.

Mercedes-Benz USA, LLC

Mercedes-Benz Canada, Inc.

A Daimler Company

Index	4	Basic settings	63
Introduction	14	Destination entry	65
Operating safety	14	Personal POIs and routes	77
Data stored in the vehicle	15	Route guidance	80
Information on copyright	17	Real-time traffic reports	90
Your multimedia system equipment	17	Storing destinations	93
Overview and operation	18	Map functions	95
Overview	18	Navigation functions	103
Basic functions	23	Problems with the navigation system ..	104
SPLITVIEW	24	Telephone	106
Touchpad	27	Your multimedia system equipment	106
Character entry (telephony)	31	Important safety notes	106
Character entry (navigation)	32	General notes	106
Favorites	35	Telephone menu	107
System settings	37	Connecting/disconnecting a mobile phone	107
Your multimedia system equipment	37	Reception and transmission volume	112
Important safety notes	37	Using the telephone	112
Display settings	37	Mobile phone voice recognition	116
Time settings	39	Phone book	117
Text reader settings	40	Call lists	120
Voice Control System settings	41	Speed dial lists	122
Wi-Fi	41	Messages (text messages and e- mails)	123
Bluetooth® settings	43	Address book	129
Automatic volume adjustment	43	Online and Internet functions	136
Setting the system language	44	Your multimedia system equipment	136
Assigning a favorites button	44	Important safety notes	136
Importing/exporting data	45	General notes	136
Reset function	46	Conditions for access	136
Vehicle functions	47	Setting up an Internet connection (Canada)	137
Your multimedia system equipment	47	Establishing/ending the connection	140
Important safety notes	47	Mercedes-Benz Apps	141
Vehicle settings	47	Mercedes-Benz Companion	141
Seats	51	Web browser	143
Climate control settings	54	Radio	148
360° camera	58	Your multimedia system equipment	148
Rear view camera	59	Switching on the radio	148
Navigation	60	Overview	148
Your multimedia system equipment	60	Switching HD Radio on/off	149
Introduction	60	Setting the waveband	149
		Station	149

Tagging music tracks	151
Displaying station information	151
Calling up sound settings	151
Displaying information	152
Satellite radio	152
<hr/>	
Media	158
Your multimedia system equipment	158
Activating media mode	158
Audio/video mode	159
Media search	166
Media Register	167
Bluetooth® audio mode	171
Operation with the Media Interface	176
Audio AUX mode	178
Video AUX mode	179
Video DVD mode	180
Picture viewer	185
<hr/>	
Sound	187
Your multimedia system equipment	187
Sound settings	187
Burmester® surround sound system	188
Burmester® high-end 3D surround sound system	189
<hr/>	
SIRIUS Weather	192
Your multimedia system equipment	192
SIRIUS Weather	192

1, 2, 3 ...**360° camera**

Displaying images	58
Settings	58
Switching on/off	58

A**Access data of the mobile phone network provider**

Deleting	140
Editing	139
Making entries	138
Selecting	138

Acoustic locking confirmation

Activating/deactivating (COMAND)	49
--	----

Activating media mode

General notes	158
---------------------	-----

Adding bookmarks 145**Address book**

Adding a new contact	131
Adding information to a contact	131
Automatically importing contacts from the phone	134
Browsing	130
Calling up	130
Changing the category of an entry ..	132
Changing the display and sorting criteria for contacts	133
Deleting contacts	134
Deleting imported contacts	135
Displaying contact details	131
Editing a contact	132
Entering characters	31
Importing contacts	134
Introduction	129
Making a call	132
Receiving vCards	135
Saving a contact	134
Searching for a contact	130
Sending e-mails	132
Sending text messages	132
Starting route guidance	131
Storing a phone number as a speed dial number	133
Voice tags	133

Address entry menu 66**Adjusting the volume**

COMAND	23
Traffic announcements	23

Alternative Route 87**Ambient lighting**

Setting (COMAND)	47
------------------------	----

Audio AUX

Setting options	178
-----------------------	-----

Audio CD/DVD and MP3 mode

Gracenote® Media Database	165
Playback options	164

Automatic folding mirror function

Activating/deactivating (COMAND)	49
--	----

Automatic locking feature

Activating/deactivating (COMAND)	50
--	----

Automatic time

Switching on/off	39
------------------------	----

Automatic volume adjustment

General information	43
Switching on/off	44

AUX (audio)

Notes/socket	178
Switching to	178

Avoiding an area 100**B****Back button** 22**Bluetooth®**

Connecting a different mobile phone	111
---	-----

Bluetooth®

Activating audio mode	172
Activating/deactivating	43
Audio device mode and searching for mobile phones	175
Basic display (audio mode)	172
Connecting audio devices	172
De-authorizing (de-registering) a device	175
Device list	172
Displaying connection details	112
Displaying details	173
Entering the passcode	110

- External authorization (audio device) 173
 - Increasing the volume using COMAND 175
 - Interface 106
 - Playback options 174
 - Preparation 171
 - Reconnecting an audio device 175
 - Searching for a mobile phone 109
 - Selecting a playback option 174
 - Selecting a track 174
 - Starting and stopping playback 173
 - Starting playback if the Bluetooth® audio device has been stopped 174
 - Telephony 107
 - Telephony notes 106
 - Burmester® high-end 3D surround sound system**
 - Balance/fader 190
 - Calling up the sound menu 189
 - Equalizer 190
 - Equipment 189
 - Setting the sound profile 191
 - VIP & BAL selection 190
 - Burmester® surround sound system**
 - Balance/fader 189
 - Calling up the sound menu 188
 - Equalizer 188
 - Equipment 188
 - Surround sound 189
 - Buttons and controller** 21
- C**
- Call lists**
 - Displaying details 121
 - Opening and selecting an entry 120
 - Saving an entry in the address book 121
 - Car pool lanes** 64
 - Category list (music search)** 166
 - CD**
 - Inserting 161
 - Inserting/loading (DVD changer) ... 162
 - Notes on discs 161
 - Selecting a track 165
 - Sound settings (balance, bass, fader, treble) 187
 - Characters**
 - Entering (navigation) 32
 - Climate control**
 - Activating/deactivating cooling with air dehumidification 56
 - Calling up climate control (COMAND) 56
 - Climate control bar (COMAND) 54
 - Cooling with air dehumidification (COMAND) 56
 - Ionization (COMAND) 58
 - Perfume atomizer (COMAND) 58
 - Rear-compartment climate control (COMAND) 57
 - Setting the air distribution (COMAND) 55
 - Setting the airflow (COMAND) 55
 - Setting the climate mode (COMAND) 57
 - Setting the footwell temperature (COMAND) 57
 - Setting the temperature (COMAND) 55
 - Switching ionization on/off (COMAND) 58
 - Switching on/off (COMAND) 56
 - Climate control bar**
 - Calling up 55
 - COMAND**
 - Active multicontour seat 52
 - Basic functions 23
 - Controller 22
 - Display 19
 - Multicontour seat 52
 - Seat functions 51
 - Settings 145
 - Switching on/off 23
 - Telephone keypad overview 22
 - COMAND display**
 - Additional display area 38
 - Cleaning instructions 20
 - Setting 37
 - Contacts**
 - Deleting 134
 - Importing 134

D

Date format, setting	40
Day design, setting	37
Delayed switch-off time	
Setting (COMAND)	50
Deleting	
Call lists	122
Destination	
Saving to an SD card	94
Storing in the address book	93
Destination (navigation)	
Entering a destination using the map	74
Entering a point of interest	71
Entering using geo-coordinates	77
Entering using Mercedes-Benz Apps	76
Keyword search	69
Saving	93
Selecting an address book con- tact as a destination	71
Selecting from the list of last des- tinations	70
Dialing a number (telephone)	113
Display	
Selecting the design	37
Switching on/off	39
DVD	
Notes on discs	161
Removing/ejecting (DVD changer)	163

E

E-mail	
Answering	127
Calling up the settings menu	123
Changing the name of the e-mail account	124
Configuring an e-mail account	124
Configuring the e-mails displayed ..	124
Deactivating the e-mail function ...	124
Deleting	129
Displaying details	126
Downloading e-mails manually	124
Editing text templates	128
Forwarding	127

Inbox	125
Reading	125
Saving the sender in the address book	129
Settings	123
Storing the sender as a new entry in the address book	129
Using a phone number in the text ..	128
Using text templates	128
Writing	127

EASY-ENTRY/EXIT feature

Activating/deactivating (COMAND)	48
Entering the address (example)	66
Entering the city	66
Exterior lighting delayed switch- off time	
Setting (COMAND)	50

F

Factory setting (reset function)	46
Favorites	
Adding	35
Deleting	36
Displaying and calling up	35
Moving	36
Overview	35
Renaming	35
Favorites (Internet)	147
Favorites button	44

G

GPS reception	60
Gracenote® Media Database	165

H

Handwriting recognition	
Switching text reader function on/off	29
Touchpad	29
Heading up (navigation)	96
Home address	
Entering and saving	67

I

Incident (traffic report)	90
Interior lighting delayed switch-off time	
Setting (COMAND)	50
Interior motion sensor	
Arming/disarming (COMAND)	51
Intermediate destinations	
Accepting for the route	76
Creating	74
Editing	75
Entering	74
Searching for a gas station when the fuel level is low	76
Internet	
Conditions for access	136
Creating favorites	147
Entering the URL	143
Favorites manager	147
Favorites menu	147
Menu functions	144
Options menu	145
Selecting/setting access data	137
Setting automatic disconnection of the Internet connection	140
Setting up an Internet connection ..	137

K

Keyword search (navigation)	
Selecting search options	70
Selecting search results	69

L

Lane recommendations	
Explanation	83
Presentation	83
Lights	
Setting the ambient lighting (COMAND)	47
List of access data	
New provider	138
List of mobile phone network providers	
With the selected provider	138
Locator lighting	
Setting (COMAND)	49

Lumbar support

Adjusting (COMAND)	52
--------------------------	----

M**Making a call**

Using speed dial	113
Using the call lists	114
Using the phone book	114

Map (navigation)

Adjusting the scale	95
Building images	99
Displaying the next intersection	97
Elevation modeling	99
Heading	96
Map settings	95
Moving	62
North orientation	96
Notes	95
Rotating the 3D map	98
Selecting POI symbols on the map	96
Selecting text information on the map	97
Showing the map version	97
Switching highway information on/off	97
Updating	102
Map functions	95

Message

Selecting a program	53
---------------------------	----

Media Interface

Basic display	176
Mode	176
Playback options	178
Search	177
Selecting a music file	177
Switching to Media Interface	176
Video function	178

Media mode

Bluetooth® Audio	171
Connections for external media sources	158
Switching on	158

Media Register

Basic display	168
Calling up memory space information	170

- Copying files 168
- Deleting all files 170
- Renaming/deleting files 170
- Selecting a playback mode 171
- Switching on 168
- Media search**
- By folder 166
- Category list 166
- Current track list 166
- General notes 166
- Keyword search 167
- Music genres 167
- Selecting by cover 167
- Starting the media search 166
- Menu overview**
- CD/DVD audio and MP3 mode 162
- Mercedes-Benz Apps**
- Calling up 141
- Mercedes-Benz Companion**
- Authorizing 142
- Displaying vehicle data 143
- Door-to-door navigation (transferring a destination from an external device) 142
- Door-to-door navigation (transferring a destination from the vehicle) 142
- Introduction 141
- Navigating to the vehicle 143
- Requirements 142
- Microphone, switching on/off** 115
- Mobile phone**
- Authorizing 110
- Connecting (Bluetooth® interface) 107
- Connecting another mobile phone 111
- De-authorizing 111
- Displaying Bluetooth® connection details 112
- Enabling for Internet access 137
- MP3**
- Copyright 161
- Notes 159
- Safety notes 159
- Stop and playback function 165

N

Navigation

- Adjusting the volume of the navigation announcements 23
- Alternative route 87
- Avoiding an area 99
- Basic settings 63
- Blocking a route section affected by a traffic jam 89
- Calling up the compass display 103
- Calling up the menu 103
- Drive Information 103
- Entering a destination 65
- Entering a destination using the map 74
- Entering a point of interest 71
- Entering characters (character bar) 32
- GPS reception 60
- Important safety notes 60
- Info on navigation 104
- Lane recommendation 83
- Off-road/Off-map (off-road destination) 89
- Online map display 103
- Reading out traffic reports 92
- Repeating announcements 85
- Route flight 104
- Selecting a destination from the list of last destinations 70
- Setting route options (avoiding: highways, toll roads, tunnels, ferries) 63
- Setting the route type (short route, fast route, dynamic route or economic route) 63
- Showing/hiding the menu 61
- Starting route calculation 68
- Switching announcements on/off 86
- Switching to 61

Navigation announcements

- Switching off 23

Near Field Communication

- Switching on/off 43

NFC (Near Field Communication)

- Connecting a mobile phone 109

Switching on/off	43
North orientation (navigation)	96

O

Off-road	89
Online and Internet functions	
Calling up the device list	139
Enabling a mobile phone for Internet access	137
Ending the connection	141
Establishing a connection	140
Managing all Internet devices	140
Manually setting the access data of the mobile phone network provider	138
Mercedes-Benz Apps	141
Selecting the access data of the mobile phone network provider	138
Setting automatic disconnection of the Internet connection	140
Setting up an Internet connection ..	137
Web browser	143

P

Panel heating	
Activating/deactivating (COMAND)	48
Pause function	
Video DVD	185
Perfume atomizer	
Setting the perfume intensity (COMAND)	58
Personal POIs and routes	
Alert when approaching (personal POI)	78
Displaying on the map	77
Editing	79
Importing via Mercedes-Benz Apps	79
Recording the route	80
Saving	78
Selecting	79
Settings for personal POIs	77
Phone book	
Adding a new contact	119
Adding information to a contact	119
Calling up	117

Deleting a contact	120
Displaying the details of an entry ...	118
Entering characters	31
Saving a contact	119
Searching for a contact	118
Symbol overview	117

Phone call

Dialing	113
---------------	-----

Picture viewer

Changing view	186
Displaying pictures	185
Exiting the picture viewer	186

POI (navigation)

Category	71
Defining the position for the POI search	72
Entering	71

Previous destinations (navigation)

Q

Quick access for audio and telephone

Changing the station/music track	31
Sending DTMF tones	31

R

Radio

Activating/deactivating the station presets display	151
Deleting a station	150
Displaying information	152
Displaying station information	151
Displaying the artist and track	151
Overview	148
Setting the waveband	149
Sound settings (balance, bass, treble)	151
Storing stations	150
Switching on	148
Tagging music tracks (downloading/purchasing tracks from the iTunes Store®)	151

Radio station

Storing	150
---------------	-----

- Read-aloud function**
 - Automatic 93
 - Read-aloud function for e-mails** 126
 - Reading out**
 - Traffic reports on the route 92
 - Real-time traffic reports** 90
 - Rear view camera**
 - Displaying the image 59
 - Object detection 59
 - Opening the camera cover for cleaning (COMAND) 59
 - Switching object detection on/off 59
 - Switching on/off (COMAND) 59
 - Receiving vCards** 135
 - Redialing (telephone)** 114
 - Reserve fuel level**
 - Switching the function on/off in COMAND 64
 - Resetting (factory settings)** 46
 - Route (navigation)**
 - Selecting an alternative route 87
 - Setting route options (avoiding: highways, toll roads, tunnels, ferries) 63
 - Setting the route type (short route, fast route, dynamic route or economic route) 63
 - Starting calculation 68
 - Route guidance**
 - Continue 86
 - Freeway information 84
 - General notes 80
 - Lane recommendations 83
 - Off-road 89
 - Traffic reports 90
- S**
- Safety notes**
 - Audio CD/DVD and MP3 mode 159
 - Using the telephone 106
 - Satellite radio**
 - Displaying information 156
 - Overview 153
 - Presets menu view 155
 - Registering 152
 - Switching to 153
 - SatRadio**
 - Channel list updates 157
 - Memory functions 155
 - Music and sports alerts 155
 - Notes 152
 - Selecting a category 154
 - Selecting a channel 154
 - Tagging music tracks 156
 - SD card**
 - Inserting 164
 - Removing 164
 - Seat**
 - Massage function 53
 - Seat-belt adjustment function**
 - Activating/deactivating (COMAND) 49
 - Seats**
 - Adjusting the lumbar support (COMAND) 52
 - Balance (seat heating) 53
 - Resetting settings 54
 - Seat functions (COMAND) 51
 - Selecting for adjustment (COMAND) 52
 - Selecting stations**
 - Radio 149
 - Selecting the country** 67
 - Sending DTMF tones** 115
 - Setting access data**
 - Online and Internet 138
 - Setting the language**
 - COMAND 44
 - Setting the night design** 37
 - Setting the text reader speed** 40
 - Setting the volume**
 - Telephone calls 23
 - Settings**
 - Sound settings 187
 - SIRIUS weather display**
 - 5-day forecast 192
 - Daily forecast 192
 - Detail information 193
 - Information chart 192
 - Selecting a location for the weather forecast 193
 - Switching on/off 192
 - Weather map 195

- Sound**
- Switching on/off 23
- Sound settings**
- Balance/fader 187
- Calling up the sound menu 187
- Equalizer 187
- Speed dial**
- Deleting 122
- Setting up 122
- SPLITVIEW**
- From the driver's side 25
- Switching on/off 25
- Transferring a destination to the driver 26
- State/province**
- Selecting 70
- Station list** 150
- Stop function**
- Video DVD 185
- Storing stations**
- Radio 150
- Switching between summer time and standard time** 39
- Switching on media mode**
- Using the Media button 158
- Via the device list 159
- Via the main function bar 158
- Via the number keypad 159
- System settings**
- Automatic volume adjustment 43
- Bluetooth® 43
- Date 39
- Importing/exporting data 45
- Language 44
- Text reader speed 40
- Time 39
- Time zone 39
- Voice Control System 41
- Call waiting 116
- Calls with several participants 115
- Conference calls 116
- Connecting a mobile phone (general information) 107
- De-authorizing (disconnecting) a mobile phone 111
- Deleting a speed dial preset 122
- Deleting messages 129
- Displaying Bluetooth® connection details 112
- Downloading messages manually .. 124
- E-mail 123
- E-mail requirements 123
- E-mail settings 123
- Ending an active call 116
- Entering a number 113
- Entering phone numbers 113
- Establishing the connection from the mobile phone 110
- Function restrictions 107
- Functions available during a call ... 114
- General notes 106
- Incoming call during an existing call 116
- Making a call 113
- Message conditions 123
- Message settings 123
- Operating options 107
- Phone book 117
- Reading messages 125
- Reception and transmission volume 112
- Reconnecting a mobile phone automatically 111
- Rejecting a call (COMAND) 113
- Safety notes 106
- Sending DTMF tones 115
- Setting up a speed dial 122
- Switching between calls (call waiting) 115
- Switching between mobile phones 111
- Switching the microphone on/off .. 115
- Telephone menu overview 107
- Text message conditions 123
- Text message settings 123
- Text messages (SMS) 123

T

Telephone

- Accepting a call (COMAND) 112
- Adding a call 115
- Adjusting the volume for calls 23
- Authorizing a mobile phone (connecting) 110
- Call lists 120

- Toggling 115
 - Using the telephone 112
 - Writing e-mails 127
 - Writing text messages 126
 - Telephone keypad overview**
 - COMAND 22
 - Telephone number**
 - Entering 113
 - Text messages (SMS)**
 - Calling the sender 128
 - Calling up the settings menu 123
 - Configuring the text messages displayed 124
 - Deleting 129
 - Displaying details 126
 - Downloading manually 124
 - Editing text templates 128
 - Inbox 125
 - Reading 125
 - Reading aloud 126
 - Settings 123
 - Storing sender in address book 129
 - Storing the sender as a new address book entry 128
 - Using a phone number in the text .. 128
 - Using text templates 128
 - Writing 126
 - Time**
 - Setting 40
 - Setting the format 40
 - Setting the time 40
 - Setting the time zone 39
 - Setting the time/date format 40
 - Switching automatic time on/off 39
 - Touchpad**
 - Calling up quick access for audio and telephone 28
 - Changing the input language for handwriting recognition 30
 - Changing the station/music track 31
 - Character suggestions 30
 - Deleting characters 30
 - Entering a space 30
 - Entering characters 30
 - Gesture control 27
 - Handwriting recognition 29
 - Moving the map 28
 - Operating the touchpad 27
 - Overview 27
 - Quick access for audio and telephone 31
 - Switching 27
 - Switching input line 30
 - Zooming in on the map 29
 - Zooming out of the map 29
 - Tow-away alarm**
 - Arming/disarming (COMAND) 51
 - Traffic jam function** 89
 - Traffic reports**
 - Calling up a list 91
 - Real-time traffic report 91
 - Trunk lid opening height restriction**
 - Activating/deactivating (COMAND) 51
- ## U
- Updating the digital map** 102
 - USB audio mode**
 - Selecting a track 165
 - USB devices**
 - Connecting to the Media Interface 164
- ## V
- Vehicle**
 - Data acquisition 15
 - Vehicle settings**
 - Calling up 47
 - Video**
 - see Video DVD
 - Video AUX**
 - Activating/deactivating full screen mode 179
 - Setting options 179
 - Video DVD**
 - Control option 181
 - DVD functions 184
 - DVD menu 184
 - DVD's control menu 183
 - Function restrictions 181
 - Menu options 182
 - Notes on discs 180
 - Operation 180

Overview	182
Pause function	185
Picture settings	183
Playing conditions	180
Safety notes	180
Selecting a scene/chapter	185
Stop function	185
Switching to	181
Video menu	184
Video-AUX	
Connecting an external video source	179
Switching to	179
Voice Control System	
Settings	41
Volume, adjusting	
Navigation messages	23

W

Weather map (SIRIUS)	
Activating/deactivating display levels	196
Calling up	195
Legend	200
Moving	195
Showing/hiding the menu	195
Storm overview	201
Storm watch areas	201
Time stamp	200
Weather memory (SIRIUS)	
Selecting an area	195
Storing an area	195
Web browser	
Entering a web address	143
WiFi	
Activating	41
Connecting the device	42

Operating safety

Important safety notes

WARNING

If you operate information systems and communication equipment integrated in the vehicle while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Only operate the equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

The multimedia system calculates the route to the destination without taking account of the following, for example:

- traffic lights
- stop and yield signs
- merging lanes
- parking or stopping in a no parking/no stopping zone
- other road and traffic rules and regulations
- narrow bridges

The multimedia system can give incorrect navigation commands if the actual street/traffic situation does not correspond with the digital map's data. Digital maps do not cover all areas nor all routes in an area. For example, a route may have been diverted or the direction of a one-way street may have changed.

For this reason, you must always observe road and traffic rules and regulations during your journey. Road and traffic rules and regulations always have priority over the system's driving recommendations.

Navigation announcements are intended to direct you while driving without diverting your attention from the road and driving.

Please always use this feature instead of consulting the map display for directions. Looking at the icons or map display can distract you from traffic conditions and driving, and increase the risk of an accident.

Bear in mind that at a speed of only 30 mph (approximately 50 km/h), your vehicle covers a distance of 44 feet (approximately 14 m) every second.

This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65.

This equipment has very low levels of RF energy that is deemed to comply without maximum permissive exposure evaluation (MPE). However, it is recommended to install it at a distance of at least 8 inches (approx. 20 cm) between the radiation source and a person's body (not including limbs such as hands, wrists, feet and legs).

WARNING

Modifications to electronic components, their software as well as wiring can impair their function and/or the function of other networked components. In particular, systems relevant to safety could also be affected. As a result, these may no longer function as intended and/or jeopardize the operating safety of the vehicle. There is an increased risk of an accident and injury.

Never tamper with the wiring as well as electronic components or their software. You should have all work to electrical and electronic equipment carried out at a qualified specialist workshop.

Declarations of conformity

Vehicle components which receive and/or transmit radio waves

USA only: The wireless devices of this vehicle comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1) These devices may not cause interference, and
- 2) These devices must accept any interference, including interference that may cause undesired operation of the device.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Canada only: The wireless devices of this vehicle comply with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- 1) These devices may not cause interference, and
- 2) These devices must accept any interference, including interference that may cause undesired operation of the device.

Correct use

You need to observe the following information when using the multimedia system:

- the safety notes in this manual
- traffic rules and regulations
- laws and safety standards pertaining to motor vehicles

Using roof carriers may impair the correct functioning of a roof antenna (phone, satellite radio, GPS).

Attaching metalized retrofit film to the windshield may affect radio reception. This can have a negative impact on all other antennas (e.g. emergency call antenna) in the vehicle interior.

Protection against theft: this device is equipped with technical provisions to protect it against theft. Further information on protection against theft can be obtained from an authorized Mercedes-Benz Center.

Qualified specialist workshop

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Function restrictions

For safety reasons, some functions are restricted or unavailable while the vehicle is in motion. You will notice this, for example, because either you will not be able to select certain menu items or a message will appear to this effect.

Data stored in the vehicle

Data recording

A wide range of electronic components in your vehicle contain data memories.

These data memories temporarily or permanently store technical information about:

- the vehicle's operating state
- events
- malfunctions

In general, this technical information documents the state of a component, a module, a system or the surroundings.

These include, for example:

- operating conditions of system components, e.g. fluid levels
- the vehicle's status messages and those of its individual components, e.g. number of wheel revolutions/speed, deceleration in movement, lateral acceleration, accelerator pedal position
- malfunctions and defects in important system components, e.g. lights, brakes
- vehicle reactions and operating conditions in special driving situations, e.g. air bag deployment, intervention of stability control systems
- ambient conditions, e.g. outside temperature

This data is of an exclusively technical nature and can be used to:

- assist in detecting and rectifying faults and defects
- analyze vehicle functions, e.g. after an accident
- optimize vehicle function

The data cannot be used to trace the vehicle's movements.

When your vehicle is serviced, technical information can be read from the event data memory and fault data memory.

Services include, for example:

- repair services
- service processes
- warranty events
- quality assurance

The vehicle is read out by employees of the service network (including the manufacturer) using special diagnostic testers. You can obtain more information there, if required.

After a malfunction has been rectified, the information is deleted from the malfunction memory or is continually overwritten.

When operating the vehicle, situations are conceivable in which this technical data, in connection with other information (if necessary, after consultation with an authorized expert), could be traced to a person.

Examples include:

- accident reports
- damage to the vehicle
- witness statements

Further additional functions that have been contractually agreed upon with the customer allow certain vehicle data to be conveyed by the vehicle as well. The additional functions include, for example, vehicle location in case of an emergency.

COMAND/mbrace

If the vehicle is equipped with COMAND or mbrace, additional data about the vehicle's operation, the use of the vehicle in certain situations, and the location of the vehicle may be compiled through COMAND or the mbrace system.

For additional information please refer to the COMAND User Manual and/or the mbrace Terms and Conditions.

Event data recorders

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record data that will assist in understanding how a vehicle's systems performed in certain crash or near crash-like situations, such as during air bag deployment or when hitting a road obstacle. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

The EDR in this vehicle is designed to record such data as:

- how various systems in your vehicle are operating
- whether or not the driver and passenger seat belts are fastened

- how far (if at all) the driver is depressing the accelerator and/or brake pedal and
- how fast the vehicle is traveling

This data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data is recorded by your vehicle only if a non-trivial crash situation occurs; no data is recorded by the EDR under normal driving conditions and no personal data (e.g., name, gender, age, and crash location) are recorded. However, other parties, such as law enforcement, can combine the EDR data with the type of personal identification data routinely acquired during a crash investigation.

To read data recorded by an EDR, special equipment is required, and access to the vehicle or the EDR is needed. In addition to the vehicle manufacturer, other parties that have the special equipment, such as law enforcement, can read the information by accessing the vehicle or the EDR.

EDR data may be used in civil and criminal matters as a tool in accident reconstruction, accident claims, and vehicle safety. Since the Crash Data Retrieval CDR tool that is used to extract data from the EDR is commercially available, Mercedes-Benz USA, LLC ("MBUSA") expressly disclaims any and all liability arising from the extraction of this information by unauthorized Mercedes-Benz personnel.

MBUSA will not share EDR data with others without the consent of the vehicle owners or, if the vehicle is leased, without the consent of the lessee. Exceptions to this representation include responses to subpoenas by law enforcement; by federal, state or local government; in connection with or arising out of litigation involving MBUSA or its subsidiaries and affiliates; or, as required by law.

Warning: The EDR is a component of the Supplemental Restraint System ("SRS") Module. Tampering with, altering, modifying or removing the EDR component may result in a malfunction of the SRS Module and other systems.

State laws or regulations regarding EDRs that conflict with federal regulation are pre-empted. This means that in the event of such conflict, the federal regulation governs. As of February 2013, 13 states have enacted laws relating to EDRs.

Information on copyright

Information on licenses for free and Open Source software used in your vehicle and in the electronic components can be found on this website: <http://www.mercedes-benz.com/opensource>.


Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Overview

Components

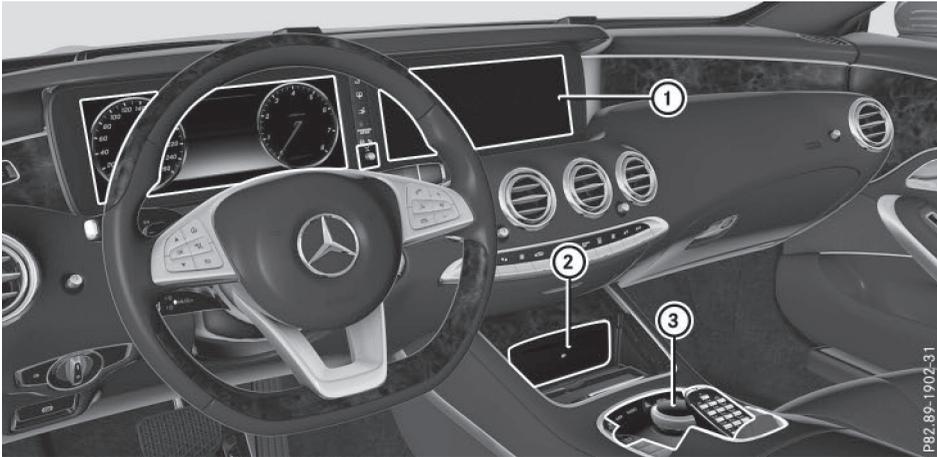

- ① Display
- ② DVD changer or single DVD drive
- ③ Controller and buttons

The image shows the equipment with telephone keypad.

The multimedia system consists of:

- the display
 - The display has 1440 x 540 pixels
- the DVD changer or single DVD drive
- the controller
- the touch-sensitive telephone keypad or the touchpad
- the buttons
- ports in the center console (2x USB, AUX)
 - An iPod® is connected via a USB cable.
- headphones for the front passenger (cordless or connected by means of a cable to the audio jack in the footwell)

Functions

- **HD FM radio and HD AM radio/satellite radio**
- **Media**
 - Media support: audio CD, MP3 CD, DVD video, 2x USB, SD card, iPod®, Bluetooth® audio, 10.8 GB Media Register on the hard drive
 - Music search using all media
- **Sound system**

You can select from three sound systems:

- Standard sound system
- Burmester® surround sound system
- Burmester high-end 3D surround sound system for ultimate listening pleasure

• Navigation system

- Destination entry using keyword search
- Realistic 3D map with textured city models
- Personal POIs and routes using SD memory card
- Navigation functions, e.g. Drive Information
- Dynamic route guidance via SIRIUS satellite radio

• Communication

- Data transfer via NFC
- Messaging functions (text messages, email)
- Address book
- Internet browser
- Mercedes-Benz Apps with online search, weather, Facebook, stock prices, news and much more
- Wi-Fi interface for the connection of a smartphone to the multimedia system
- Mercedes-Benz Mobile Website
- Wi-Fi hotspot functionality to connect a tablet PC or laptop in order to enable access to the Internet using the customer's mobile phone
- Mercedes-Benz Companion app

• SIRIUS Weather

- Weather data as an information chart (current forecast, 5-day preview, detailed information)
- Weather data on the weather map, e.g. rain radar data, storm characteristics and the track of tropical cyclones (hurricanes, typhoons)

• Vehicle functions

- Vehicle settings, such as ambient lighting, belt adjustment and tow-away alarm
- 360° camera
- Rear view camera
- Climate control functions, e.g. climate mode, perfume atomizer
- Setting the multicontour seat with new massage program

• Favorites button

- Faster access to up to twelve favorite functions using the favorites button and the number keys on the telephone keypad or the favorites button on the touchpad.


Display**General notes**

! Do not use the space in front of the display for storage. Objects placed here could damage the display or impair its function. Avoid any direct contact with the display surface. Pressure on the display surface may result in impairments to the display, which could be irreversible.

Wearing polarized sunglasses may impair your ability to read the display.

The display has an automatic temperature-controlled switch-off feature. The brightness is automatically reduced if the temperature is too high. The display may temporarily switch off completely.

Overview

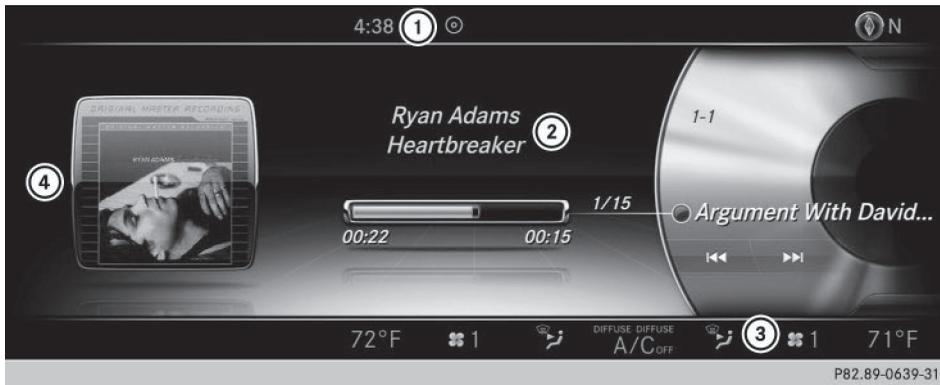

- ① Status bar with time, can show other displays
- ② Main display field
- ③ Climate control status display
- ④ Context display in additional display area

The example shows audio CD mode.

Cleaning instructions

- ❗ Do not touch the display. The display has a very sensitive high-gloss surface; there is a risk of scratching. If you have to clean the screen, however, use a mild cleaning agent and a soft, lint-free cloth.


The display must be switched off and have cooled down before you start cleaning. Clean

the display screen, when necessary, with a commercially available microfiber cloth and cleaning agent for TFT and LCD displays. Do not apply pressure to the display surface when cleaning it, as this could cause irreversible damage. Then, dry the surface with a dry microfiber cloth.

Avoid using alcoholic thinners, gasoline or abrasive cleaning agents. These could damage the display surface.


Buttons and controller

Overview

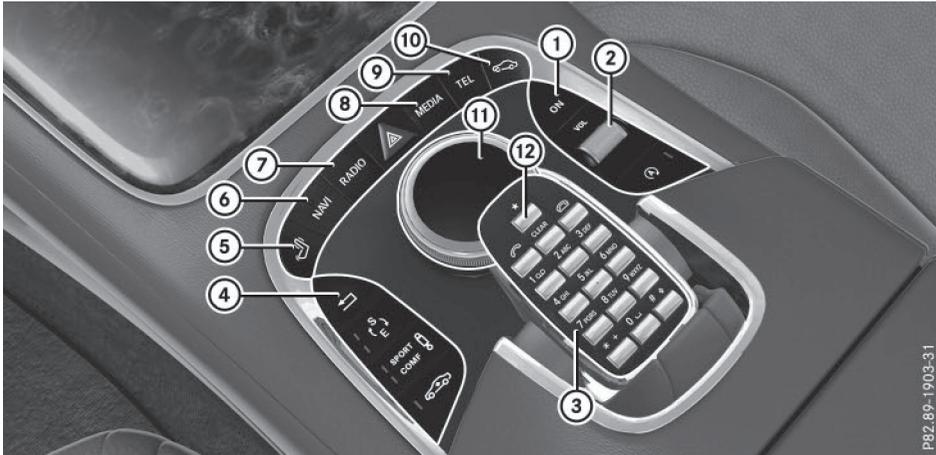

- ① Switches the multimedia system on/off
- ② Adjusts the volume or mutes
- ③ Telephone keypad
- ④ Back button
- ⑤ Seat adjustment button
- ⑥ Navigation button
- ⑦ Radio button
- ⑧ Media button
- ⑨ Telephone, address book and Internet button
- ⑩ Vehicle and system settings button
- ⑪ Controller
- ⑫  Favorites button

The image shows the equipment with telephone keypad.

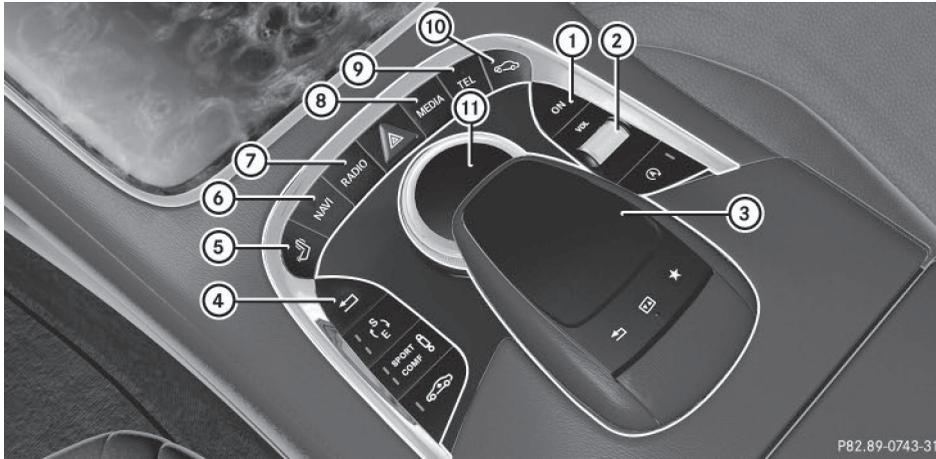

- ① Switches the multimedia system on/off
- ② Adjusts the volume or mutes
- ③ Touchpad
- ④ Back button
- ⑤ Seat adjustment button
- ⑥ Navigation button
- ⑦ Radio button
- ⑧ Media button
- ⑨ Telephone, address book and Internet button
- ⑩ Vehicle and system settings button
- ⑪ Controller

The image shows the equipment with touchpad.

Back button

You can use the  button to exit a menu or to call up the basic display of the current operating mode.

- ▶ **To exit the menu:** briefly press the  button.

The multimedia system changes to the next higher menu level in the current operating mode.

- ▶ **To call up the basic display:** press the  button for longer than two seconds.

The multimedia system changes to the basic display of the current operating mode.

Telephone keypad

The telephone keypad is touch-sensitive: as soon as one or several of the keys are gently touched, the telephone keypad is shown in the

multimedia system's display. The key being touched is highlighted.

 
The multimedia system can be equipped with a touchpad instead of a telephone keypad.

Controller

The controller in the center console lets you:

- select menu items on the display
- enter characters
- select a destination on the map
- save entries

The controller can be:

- turned
- slid left or right 
- slid forwards or back 
- slid diagonally 
- pressed briefly or pressed and held

Touchpad

The multimedia system can be equipped with a touchpad as an alternative to the telephone keypad.

As an alternative to the controller, the touchpad enables menu items to be selected and character entry including handwriting recognition, for example.

- ▶ **To activate the touchpad:** press the surface of the touchpad.

Further information (▷ page 27).

Basic functions

Switching the multimedia system on/off

- ▶ Press the  button on the center console to the right of the controller.
When you switch the multimedia system on, a warning message will appear. The multimedia system calls up the previously selected menu. If you switch the multimedia system off, playback of the current media source will also be switched off.

Adjusting the volume

Adjusting the volume for media sources

- ▶ Turn the thumbwheel to the right of the controller.
or
- ▶ Press the  or  button on the multifunction steering wheel.
The volume of the media source currently selected changes.

Adjusting the volume for traffic announcements and navigation announcements

During traffic or navigation announcements:

- ▶ Turn the thumbwheel to the right of the controller.
or
- ▶ Press the  or  button on the multifunction steering wheel.

- i** You can set the volume for navigation announcements to be different from the volume of the respective media source.

Adjusting the volume for phone calls

You can adjust the volume for hands-free mode during a telephone call.

- ▶ Turn the thumbwheel to the right of the controller.
or
- ▶ Press the  or  button on the multifunction steering wheel.

- i** Setting the volume for the Voice Control System voice output; see the separate operating instructions.

Switching the sound on or off

Media source sound

- ▶ Press the thumbwheel beside the controller.
or
- ▶ Press the  button on the multifunction steering wheel.

- i** If the audio output is switched off, the status line will show the  symbol. If you switch the media source or change the volume, the sound is automatically switched on.

- i** Even if the sound is switched off, you will still hear navigation system announcements.

Switching navigation announcements off and on again

- ▶ **To switch off navigation announcements:** press the thumbwheel beside the controller during the announcement.
The **Spoken driving recommendations have been deactivated.** message appears.
- ▶ **To switch navigation announcements on again:** switch the multimedia system off and then on again (▷ page 23).
or
- ▶ Start a new route calculation (▷ page 68).

or

- ▶ Select : while route guidance is active, show the menu and press the controller (> page 85).

Function menu



- ▶ Press the  button or the , , , or  button.
 - Media:** the basic display for the last media source set appears.
 - Navigation:** the map or the last navigation menu called up appears.
 - Radio:** the basic menu of the last radio mode set appears.
 - Telephone:** the basic menu of the telephone menu appears.
 - Vehicle functions:** the basic display appears.
- ▶ **For radio, media and telephone:** press the ,  or  button repeatedly. The menu for the available radio modes, media sources or communication functions is displayed.



- ▶ **To show the menu:** slide  the controller. The menu appears. Depending on the operation, the marking is shown in main function bar  or menu bar .
- ▶ **To select a menu item:** turn and press the controller. Once you have selected a menu item in the upper menu bar, the last menu set for the selected function appears. The lower menu bar shows functions within the current media mode.

Selecting the operating mode for a main function

You can select the available operating modes for the main functions, e.g. telephone.

In the telephone menu, you can:

- switch to telephone mode
- call up the address book
- call up the Digital Operator's Manual for the telephone



- ▶ Press the  button. If telephone mode was the last mode selected, the last telephone display selected will appear.
- ▶ To select **Phone**: slide  and press the controller. The menu appears. **Phone** is at the front.
- ▶ For example, to select **Address Book**: turn and press the controller. The address book appears.

SPLITVIEW

Method of operation

SPLITVIEW allows the front passenger to simultaneously use different multimedia systems

than the driver. Different content is seen depending on your perspective when viewing the display.

The navigation function, for example, can be used from the driver's side while a video is watched from the front-passenger side.

SPLITVIEW is operated with the COMAND remote control from the front-passenger side.

To do so, use the special radio headphones. Using the headphones on the correct sides ensures an optimal sound.

You can connect your own headphones to a special headphones jack. You can use the COMAND remote control to operate them.

Points to remember

- You can only adjust the volume for the headphones supplied, directly on the headphones.
- Only entertainment functions, i.e. radio, TV, video and Internet, for example, may be used with SPLITVIEW.
- Videos cannot be shown on the driver's side while the vehicle is in motion.
- If media from different sources are used, these can be used separately from the driver's and front-passenger sides.
Example:
A medium is being played on the DVD changer on the driver's side. It is not possible for the front passenger to play any other medium that is inserted in the DVD changer from the front-passenger side. However, other media can be used on the front-passenger side at the same time, including the radio, memory card, MEDIA REGISTER, Media Interface, USB or AUX.
- If you use the same medium on both the driver's and front passenger sides, settings can be made from both sides. In this case, the last setting made takes precedence.
- Requirement for Internet use (USA): mbrace must be activated for Internet access in the multimedia system on the driver's side (> page 136).
- Requirement for Internet use (Canada): a mobile phone must be connected via Bluetooth® or USB to the multimedia system on the driver's side (> page 136).

- The Internet can be separately used by both the driver and front passenger at the same time.
- The multifunction steering wheel can be used to control the functions which relate to the driver's side, but not for the front-passenger side.

Switching SPLITVIEW on/off

From the driver's side



- ▶ **To activate:** press the  button.
The Vehicle menu appears.
- ▶ Slide  the controller.
The menu bar is shown.
- ▶ To select  **On**, turn and press the controller.
The  SPLITVIEW symbol appears in the status bar. The menu item in the lower menu bar switches to  **Off**.
The front passenger sees the display of the function last activated. If the switch-on time was longer than 30 minutes previously, the display from the driver's side is shown.
- ▶ **To switch off:** to select  **Off**, turn and press the controller.
The display changes to  **On**.
 is hidden in the status bar.

From the front-passenger side



P82.87-8819-31

Operation takes place via the COMAND remote control.

- ▶ **To activate:** select the SPLITVIEW display by turning thumbwheel ① until the SPLITVIEW symbol appears in the window.

- ▶ Press the **ON** button.

- ▶ **To deactivate:** press button **ON**.

The display changes to **On**.

The SPLITVIEW symbol is hidden in the status bar.

The menu called up on the driver's side is shown.

SPLITVIEW is activated with the last settings, if:

- the multimedia system is switched off by removing the SmartKey from the ignition lock while SPLITVIEW is activated
- and switched on again within 30 minutes
If the multimedia system is switched on again after more than 30 minutes, SPLITVIEW is not activated.

If SPLITVIEW is activated on the front-passenger side, the settings from the driver's side will be used.

In media mode

SPLITVIEW can be activated from any media mode (e.g. Media Interface).

- ▶ **To activate:** slide the controller. The menu bar is shown.
- ▶ To select **Options**, turn and press the controller. A menu appears.
- ▶ Select **Start this Application in SplitView**. A window with the **Starting Application in SplitView...** message appears. SPLITVIEW switches on. The symbol appears in the status bar.
- ▶ **To deactivate:** from the driver's side, use the button (▷ page 25).
- ▶ From the front-passenger side, use the COMAND remote control.

Transferring a destination to the driver

Using SPLITVIEW you can select a destination from the front-passenger side and transfer this to the driver's side.


- ▶ Switch on SPLITVIEW (▷ page 25).
- ▶ To select **On**, turn and press the controller. The SPLITVIEW symbol appears in the display and the display switches to **Off**.
- ▶ Select in the main function bar with the COMAND remote control. A menu appears.
- ▶ Using the COMAND remote control, select **Mercedes-Benz Apps**. You see the selection of Mercedes-Benz Apps.
- ▶ Select **Google Local Search** with the COMAND remote control. A menu appears.
- ▶ Select a search position, e.g. **In the Vicinity of the Destination**. A menu appears.
- ▶ Select the type of search query. An input field appears.
- ▶ Enter the destination using the COMAND remote control and press the **OK** button. The Google™ results list appears.
- ▶ Select the destination using the COMAND remote control. A menu appears.
- ▶ Select **Set as Destination**.

- ▶ A prompt appears on the driver's side.
- ▶ Select **Yes** or **No**.
If you select **Yes**, the navigation data is used for route guidance.

Touchpad

Touchpad overview

- ❗ Do not use any sharp objects on the touchpad. This could damage the touchpad.

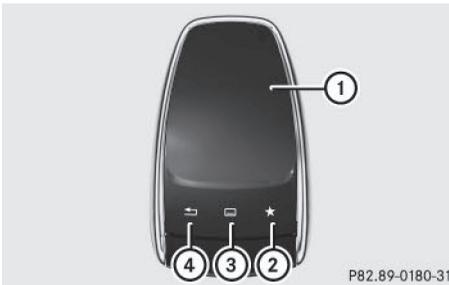

- ① Touch-sensitive surface
- ② Favorites button
- ③ Calls up quick access for audio and telephone
- ④ Back button

Using the touchpad, you can:

- select menu items in the display (▷ page 27)
- enter characters (handwriting recognition) (▷ page 29).
- control the active audio source (▷ page 31)
- create, manage and call up favorites (▷ page 35)
- enter destinations in the navigation system
- save entries

Further information on operating the touchpad (▷ page 27).


Switching the touchpad on/off

- ▶ Press the  button.
The vehicle menu is displayed.
- ▶ To select **System Settings**: slide , turn and press the controller.

- ▶ To select **Touchpad**: turn and press the controller.
- ▶ Select **Activate Touchpad**.
The touchpad is switched on or off .

Operating the touchpad


Selecting a menu item

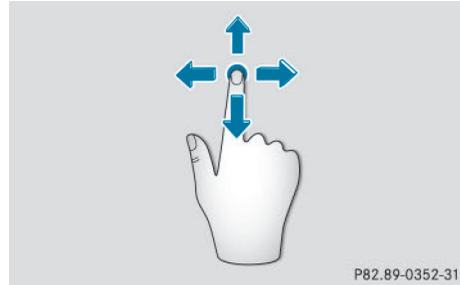

- ▶ Use one finger to touch the touch-sensitive surface.
- ▶ Swipe your finger up, down, to the left or right.
The selection in the display moves in accordance with the direction of movement.

You can navigate in lists or menus in this way.


Confirming a selection

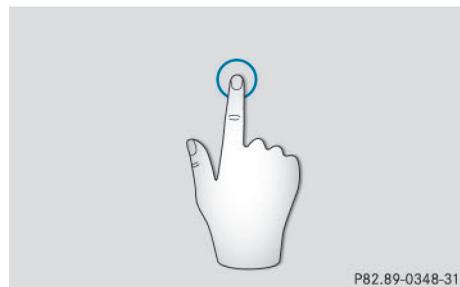

Do not press your finger too hard on the touchpad. This could cause malfunctions.

- ▶ Use one finger to press the touch-sensitive surface until you reach the pressure point.
A menu, an option or an application is started.

Calling up quick access for audio and telephone

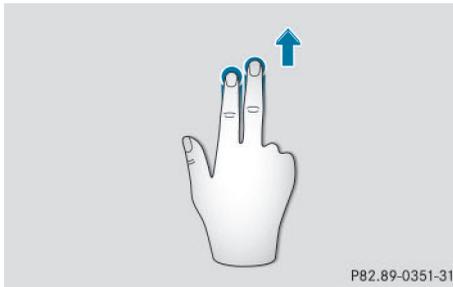


- ▶ Use two fingers to touch the lower part of the touch-sensitive surface.
- ▶ Swipe your fingers up. Quick access is displayed.

Further information on quick access:


- for audio (▷ page 31)
- for telephone (▷ page 31)

Hiding the quick access for audio and telephone

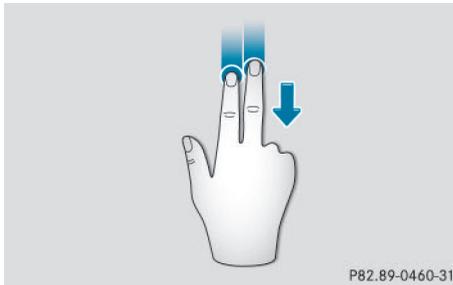

- ▶ Use two fingers to touch the touch-sensitive surface.
- ▶ Swipe your fingers down. Quick access is hidden.

Operating the control for vehicle and sound settings

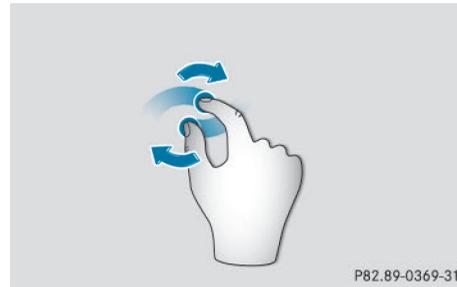


- ▶ Touch the touch-sensitive surface with two fingers, spaced slightly apart.
- ▶ Turn both fingers clockwise. The control setting is increased.


or

- ▶ Turn both fingers counter-clockwise. The control setting is decreased.

Moving the map

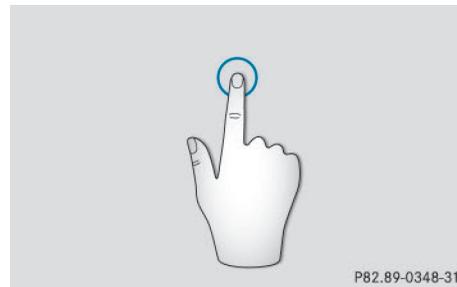


- ▶ Use one finger to press the touch-sensitive surface until you reach the pressure point. The crosshair is shown.

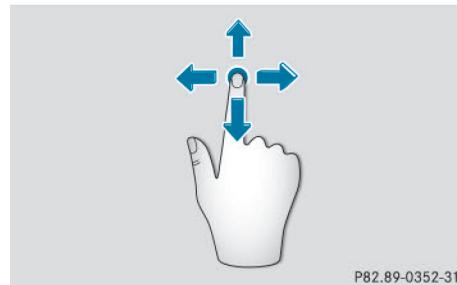


- ▶ Touch the touch-sensitive surface again with one finger.
- ▶ Swipe your finger in any direction. The map is moved in the direction of movement.

Zooming in on the map

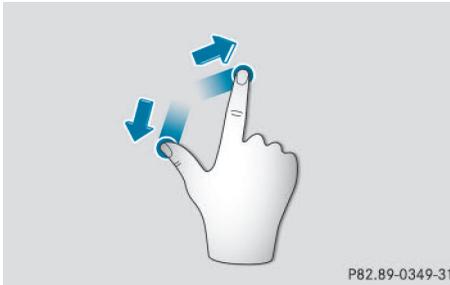

- ▶ Touch the touch-sensitive surface with two fingers, spaced slightly apart.
- ▶ Glide your fingers away from each other. The map scale is magnified.

Zooming out of the map

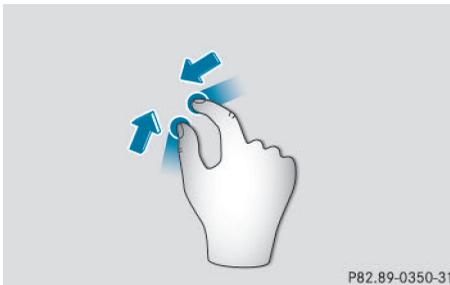

- ▶ Touch the touch-sensitive surface with two fingers, spaced far apart.
- ▶ Glide your fingers towards each other. The map scale is reduced.

Handwriting recognition

Handwriting recognition overview

You can use handwriting recognition for text, numbers or characters in any input line.



- ① Active input line
- ② Inserts a space (▶ page 30)
- ③ Illustration of the touch-sensitive surface
- ④ Deletes characters (▶ page 30)

If the character that you have entered can be interpreted in different ways, these options are displayed. More information on the character suggestions (▶ page 30).

You can additionally switch the handwriting recognition read-aloud function on and off.



- ① To exit the menu
- ② To return to handwriting recognition
- ③ To use the phone book or text templates
- ④ To change the input line or the position of the cursor
- ⑤ To change the input language
- ⑥ To finish character entry

- ▶ **To display the menu:** press the touchpad.

Switching the text reader function of the handwriting recognition on/off

You can switch the text reader function of the handwriting recognition on or off.

- ▶ Press the  button. The vehicle menu is displayed.
- ▶ To select **System Settings**: slide , turn and press the controller.

- ▶ To select **Touchpad**: turn and press the controller.
- ▶ To select **Read Out Handwriting Recognition**, turn and press the controller. The text reader function is switched on or off .

Entering characters

Prerequisite: an input line for text, numbers or characters has been selected.

- ▶ Use one finger to draw the desired character on the touch-sensitive surface. The character recognized is entered in the input line. You can draw the next character on the touch-sensitive surface.

If the character can be interpreted in different ways, these options are displayed.

More information on the character suggestions (> page 30).

Character suggestions

If a character is not clearly recognized, handwriting recognition suggests a range of characters.

- ▶ **To select a character suggestion**: turn the controller. The selected character is entered instead of the automatically recognized character. Character entry can be continued.

Inserting a space

Prerequisite: an input line for text, numbers or characters has been selected.

- ▶ Use your finger to touch the touch-sensitive surface and swipe to the right. A space is entered into the input line.

Deleting characters

Prerequisite: an input line for text, numbers or characters has been selected.

- ▶ Use your finger to touch the touch-sensitive surface and swipe to the left. The character last entered is deleted.

Switching input lines



- ▶ Press the touchpad. A symbol is shown.
- ▶ To select **[T]**: swipe your finger to the left or right and press.
- ▶ To select the input line: swipe up or down and press. The selected input line is active and character entry can be continued.

Moving the cursor within the input line



- ▶ Press the touchpad. A symbol is shown.
- ▶ To select **[T]**: glide your finger to the left or right and press.
- ▶ To move the cursor: glide to the left or right.

Changing the input language for handwriting recognition

Prerequisite: an input line for text, numbers or characters has been selected.

- ▶ Press the touchpad.
A symbol is shown.
- ▶ To select : glide your finger to the left or right and press.
The list of available input languages appears.
- ▶ To select a language: swipe up or down and press.
The input language for handwriting recognition has been changed.

Searching in lists

The phone book search is used as an example. You determine the first letter of the contact you are looking for with the first character you enter.

- ▶ Draw a letter on the touchpad surface.
The first contact with the selected first character is highlighted in the phone book.
Further information on handwriting recognition on the touchpad ([▷ page 29](#)).
- ▶ Draw additional letters on the touchpad surface one after another.
- ▶ **To complete the search and return to the phone book:** press the touchpad.

Switching between the controller and the touchpad as input device

Prerequisite: an input line for text, numbers or characters has been selected.

- ▶ **To switch from character entry using the controller to handwriting recognition on the touchpad:** use one finger to press the touchpad.
Handwriting recognition on the touchpad is active.
- ▶ **To switch from handwriting recognition on the touchpad to character entry using the controller:** press the controller.
Character entry using the controller is active.

Quick access for audio and telephone

Changing the station/music track



Depending on the audio source that is currently activated, you can use this function to select the next station or music track.

- ▶ Call up quick access ([▷ page 28](#)).
The current audio source is displayed.
- ▶ To select the previous or next station or music track: swipe to the left or right.
The selected station or music track is played.


Sending DTMF tones

The function is not supported by all mobile phones (see the manufacturer's operating instructions).

- ▶ Call up quick access during a call ([▷ page 28](#)).
- ▶ **To select characters:** glide your finger to the left or right and press.
Every character selected will be transmitted immediately.

Character entry (telephony)

Writing a text message is used as an example. Further information on writing a text message ([▷ page 126](#)).

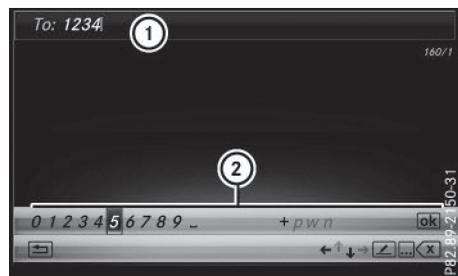

- ▶ **To select a character:** turn and press the controller.
The character selected in character bar ② is entered into telephone number input line ①.
- ▶ **To delete a character:** switch to the bottom line of the character bar by sliding Ⓞ↓ the controller.
- ▶ To select : turn and press the controller.
The character last entered is deleted.
- ▶ **To switch the input line:** switch to the bottom line of the character bar by sliding Ⓞ↓ the controller.
- ▶ To select : turn and press the controller.
or
- ▶ Slide ↑Ⓞ the controller repeatedly until the character bar disappears.
- ▶ To select the input line for the text of the text message: slide Ⓞ↓ and press the controller.
The input line for the text of the text message is selected. The character bar has been adapted for entering text.



- ▶ **To select a character:** turn and press the controller.
The character selected in character bar ④ is entered into text message input line ③.
- ▶ **To delete a character:** switch to the bottom line of the character bar by sliding Ⓞ↓ the controller.
- ▶ To select : turn and press the controller.
The character last entered is deleted.
- ▶ **To delete the entire entry:** switch to the bottom line of the character bar by sliding Ⓞ↓ the controller.
- ▶ To select : turn and press the controller, keeping it depressed until the entire entry has been deleted.

- ▶ **To change the country setting for the character bar:** switch to the bottom line of the character bar by sliding Ⓞ↓ the controller.
- ▶ To select : turn and press the controller.
The available languages are displayed.
- ▶ To select the language: turn and press the controller.
The country setting for the character bar has been changed.

Functions in the character bar

-  Switches between digits and symbols
-  Switches to upper-case/lower-case letters
-  Changes the country setting for the character bar
-  Deletes a character/an entry
-  Selects the input line
-  Moves the cursor within the input line
-  Confirms an entry
-  Cancels input
-  Inserts a paragraph

Character entry (navigation)

Character entry options

You can enter characters using the controller, or the telephone keypad or the touchpad, depending on the vehicle equipment. With the controller, you enter characters using a character bar. By pressing the corresponding key one or more times, you can enter the characters via the telephone keypad. To enter using the touchpad, draw the character in the entry field. The multimedia system supports this using a handwriting recognition function.

Entering characters using the character bar



- ① Characters **STUT** entered by the user (orange)
- ② Characters automatically added by the multimedia system **EBÜLL**
- ③ Switches to keyword search
- ④ Characters not currently available
- ⑤ Currently selected character
- ⑥ Characters currently available
- ⑦ Character bar

The example shows the address entry (▷ page 66).

- ▶ **To select a character:** turn and press the controller. Selected character ① is entered in the upper line. The multimedia system adds the missing characters and shows the entry that best matches the current input.


The characters are available ⑥ or not ④, depending on the characters already entered and the data stored in the digital map.

The symbol indicates that an entry exists more than once.

- ❗ Alternatively, depending on the vehicle equipment, you can enter characters using the telephone keypad or the touchpad.
- ▶ **To delete a character:** slide and turn the controller, then press it after selecting .
- ▶ **To delete an entire entry:** slide and turn the controller, then after selecting press and hold down the controller until the entire entry is deleted.

- ❗ Alternatively, you can also delete the entry using the telephone keypad.

- ▶ **To switch to keyword search:** slide and turn the controller, then press it after selecting ③ (▷ page 69).
- ▶ **To confirm an entry:** slide and turn the controller, then press it after selecting .
or
- ▶ Slide the controller repeatedly until the character bar disappears. The location selection list appears. The selected entry is highlighted.

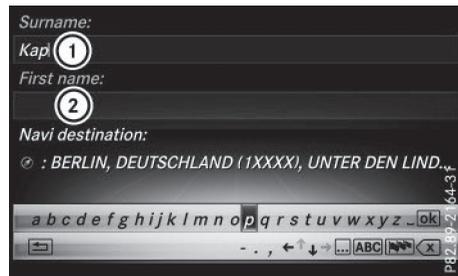

- ① Cursor
- ② Entry line

The example shows the character entry when you save a destination as a navigable contact in the address book (▷ page 67).

- ▶ **To select an input line:** slide and turn the controller, then press it after selecting or .
- or
- ▶ Slide the controller repeatedly until the character bar disappears.
- ▶ Turn and press the controller.
- ▶ **To move the cursor:** select the input line.
- ▶ Slide and turn the controller, then press it after selecting or .



- ▶ **To change the character bar language:** slide and turn the controller, then press it after selecting . A menu appears.
- ▶ To select the language: turn and press the controller. The character set for the selected language is set.

Functions in the character bar

- Switches between digits and symbols
- Switches the character bar to uppercase/lowercase letters
- Changes the country setting for the character bar
- Deletes a character/ an entry
- Switches to keyword search (▶ page 69)
- Selects the input line
- Moves the cursor within the input line
- Confirms an entry
- Cancels input

Entering characters using the telephone keypad

If your vehicle is equipped with a telephone keypad, you can also use this to enter characters.

- ▶ For example, to enter the letter **I**: press the number key briefly three times in succession. As soon as you touch the number key, the number is highlighted in the additional display area. The character appears at the bottom of the display the first time the key is pressed and shows all the available characters. It switches

to the next character each time the key is pressed.

- ▶ Wait until the character display goes out. The selected character is entered in the input line.
- ▶ **To delete the character:** press the button.
- ▶ **To delete an entire entry:** press and hold the button until the entire entry is deleted.


Entering characters using the touchpad



If your vehicle is equipped with a touchpad, you can also use this to enter characters (▶ page 27). Character entry is supported by a handwriting recognition function.

An example is the address entry (▶ page 66).

- ▶ With one finger, draw the desired character, e.g. the letter **B**, on the touch-sensitive surface.

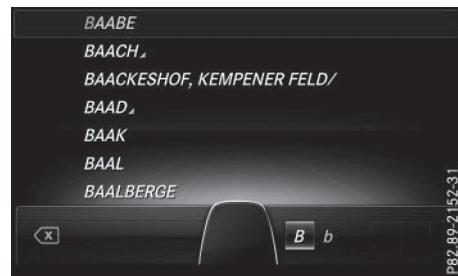


In the list (e.g. City), the first entry that starts with the letter entered is highlighted. You can draw the next character on the touch-sensitive surface.

If the character that you have entered can be interpreted in different ways, these options are displayed.

- ▶ **To select a character suggestion:** turn the controller.
The selected character is used for the list display instead of the automatically recognized character. Character entry can be continued.
- ▶ **To delete a character:** touch the touch-sensitive surface with your finger and glide your finger to the left.
The character last entered is deleted.
- ▶ **To complete the entry and switch to the list:** press the touchpad.

Favorites

Overview of favorites

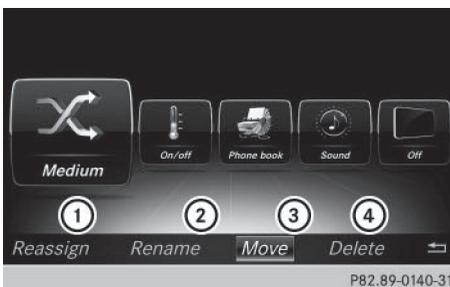

- ① To add a new favorite (▷ page 35)
- ② To rename a selected favorite (▷ page 35)
- ③ To move a selected favorite (▷ page 36)
- ④ To delete a selected favorite (▷ page 36)

Displaying the favorites overview:

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ To show the menu bar: slide Ⓞ↓ the controller.

You can manage a total of 20 favorites. Further information on how to select and display a favorite (▷ page 35).

Displaying and selecting favorites

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ To select a favorite: turn the controller.
- ▶ To call up a favorite: press the controller.

Adding favorites

Adding predefined favorites

- ▶ Press the favorites button on the controller.
- ▶ **To show the menu bar:** slide Ⓞ↓ the controller.
- ▶ To select **Reassign**: turn and press the controller. The categories and predefined favorites are displayed.
 - **Navigation**
 - **Entertainment**
 - **Tel**
 - **Vehicle**
 - **Climate Control**
- ▶ **To select a category:** turn the controller and press to confirm. The corresponding favorites are displayed.
- ▶ **To select a favorite:** turn and press the controller.
- ▶ **To add a favorite at the desired position:** turn and press the controller. If there is already a favorite at this position, then this will be deleted.

Adding your own favorites

You can store phone numbers from the phone book, radio stations or destinations as favorites. A phone number from the phone book is used as an example.


- ▶ Call up the phone book (▷ page 117).
- ▶ Search for the contact and display the phone number: (▷ page 118).
- ▶ **To add a telephone number as a favorite at the desired position:** press and hold the favorites button on the controller until the favorites are displayed.
- ▶ Turn and press the controller. If there is already a favorite at this position, it will be deleted and replaced by a new one.

Renaming favorites

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ To select the favorite to be renamed: turn the controller.

- ▶ To show the menu bar: slide  the controller.
- ▶ To select **Rename**: turn and press the controller.
- ▶ Enter characters using the controller (\triangleright page 31) or the touchpad (\triangleright page 29).
- ▶ To finish the entry: select **OK**.
The favorite has been renamed.

Moving favorites

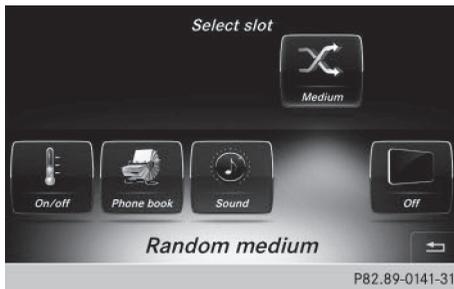

- ▶ Press the favorites button on the controller.
The favorites are displayed.
- ▶ To select the favorite to be moved: turn the controller.
- ▶ To show the menu bar: slide  the controller.
- ▶ To select **Move**: turn and press the controller.
- ▶ To store the favorite in the desired order: turn and press the controller.
The favorite has been moved.
If a favorite is stored over another favorite, the favorite underneath is deleted.

Deleting favorites

- ▶ Press the favorites button on the controller.
The favorites are displayed.
- ▶ **To select a favorite to be deleted**: turn the controller.
- ▶ **To show the menu bar**: slide  the controller.
- ▶ To select **Delete**: turn and press the controller.
- ▶ To select **Yes**: turn and press the controller.
The favorite is deleted.
- ▶ If you select **No**, the process will be canceled.

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Important safety notes

WARNING

If you operate mobile communication equipment while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Only operate this equipment when the vehicle is stationary.

You must observe the legal requirements for the country in which you are currently driving when operating mobile communications equipment in the vehicle.

Display settings

Setting the brightness

The brightness detected by the display light sensor affects the setting options for this function.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.

- ▶ To select **Display**: turn and press the controller. A menu appears.
- ▶ Select **Brightness**. A control appears.
- ▶ Select the desired brightness.
- i** The display brightness can be adjusted individually for the two multimedia system displays at night using the controller.

Display design


The multimedia system display features an optimized design for daytime and night-time operation. You can set the design by manually selecting day or night design or opt for an automatic setting.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.
- ▶ To select **Display**: turn and press the controller. A menu appears.
- ▶ Select **Day Mode**, **Night Mode** or **Auto**. The **•** dot indicates the current setting.

Design	Explanation
Day Mode	The display is set permanently to day design.
Night Mode	The display is set permanently to night design.
Auto	The multimedia system evaluates the data of the light sensor and automatically switches over the display design.

Additional display area

General information

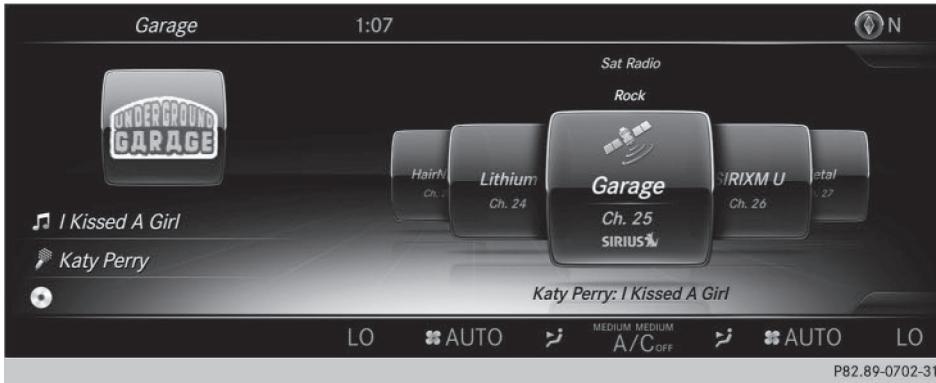

The additional display area occupies the left-hand or right-hand third of the display. The additional display area allows you to view various items of additional information. For instance, you can display an album cover in media mode or a permanent display, such as a small navigation map, in the additional display area.

You can select the following display elements for the additional display area:

- **Context-dependent**
In the additional display area, context-dependent information will be shown, e.g. an album cover in media mode.
- **Navigation Map**
The navigation map is shown in the additional area.
- **Entertainment Information**
Entertainment information is shown in the additional area, e.g. album cover, artist and track.
- **SIRIUS Weather**
SIRIUS weather information is shown in the additional area.
- **Consumption**
Consumption information is shown in the additional area.
- **Analog Clock**
A clock is shown in the additional area.

Selecting display contents for the additional display area

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.
A menu appears.
- ▶ To select **Display**: turn and press the controller.
A menu appears.
- ▶ Select **Additional Display Area**.
A menu appears.
- ▶ To select the desired display element: turn and press the controller.
The • dot indicates the current setting.

Switching the display on/off

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.
- ▶ Slide  the controller.
- ▶ To select **Display Off**: turn and press the controller.
The display goes out.
- ▶ **To switch the display on again**: press the controller.

Time settings

General information

The multimedia system can automatically set the time and date.

The following navigation system functions require the time, time zone and summer/standard time to be set correctly in order to work properly:

- route guidance on routes with time-dependent traffic guidance
- calculation of expected time of arrival

Switching automatic time on and off

The **Automatic Time Settings** function is used to activate or deactivate the automatic setting of the time and date. This function is activated when the vehicle leaves the factory.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Time**: turn and press the controller.
A menu appears.
- ▶ To switch **Automatic Time Settings** on or off : turn and press the controller.

Setting the time zone

To set the time zone, the **Automatic Time Settings** function must be activated (▶ page 39).

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Time**: turn and press the controller.
A menu appears.
- ▶ To select **Time Zone**:: turn and press the controller.
A list of countries appears. The • dot indicates the current setting.
- ▶ Select the country you are currently in by turning and pressing the controller.
The country is accepted. A time zone list may also be displayed, depending on the country selected.
- ▶ To select the desired time zone: turn and press the controller.
The time zone is accepted.
A list of available options for setting summer time appears (▶ page 39).

Setting summer and standard time

Using the **Daylight Saving Time** function, you can set the automatic changeover to summer time or switch the summer time settings on and off. The changeover to summer time advances the time by one hour.

The **Daylight Saving Time** function or **Automatic** option is not available in all countries.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Time**: turn and press the controller.
A menu appears.
- ▶ To select **Daylight Saving Time**: turn and press the controller.
A list of available options for setting summer time appears.
- ▶ To select **Auto, On** or **Off**: turn and press the controller.

Setting	Function
Automatic	The summer and standard time are automatically changed over.
On	The clock is advanced one hour ahead of standard time.
Off	The standard time for the chosen time zone is selected.

Setting the time manually

Using the manual time settings, you can set the time forward or back by up to several hours.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Time**: turn and press the controller. A menu appears.
- ▶ To select **Set Time Manually**: turn and press the controller. An analog clock appears.
- ▶ To set the hour: turn the controller.
- ▶ To highlight minutes: slide  the controller.
- ▶ To set minutes: turn and press the controller. The time is accepted. The **Automatic Time Settings** function is deactivated .

If **Automatic** is set for the summer time changeover, you can choose whether the automatic changeover should be maintained between summer and winter time.

The **Daylight Saving Time** function or **Automatic** option is not available in all countries.

- i** If **Automatic Time Settings** is reactivated, the previous settings for time zone and summer time changeover are restored.

Setting the time and date format

Use this function to set the time and date format for all displays in the vehicle.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Time**: turn and press the controller. A menu appears.
- ▶ To select **Format**: turn and press the controller.
- ▶ To select the desired date format: turn and press the controller. The **•** dot indicates the current setting.
- ▶ To select the desired time format: turn and press the controller. The **•** dot indicates the current setting.

Abbreviation	Meaning
YYYY/MM/DD	Year/Month/Day date format, year (all four digits)
YY/MM/DD	Year/Month/Day date format, year (two digits)
MM/DD/YYYY	Month/Day/Year date format, year (all four digits)
DD/MM/YYYY	Day/Month/Year date format, year (all four digits)
HH:MM (24 hrs)	Hours : Minutes (24 hour time format)
HH:MM (AM/PM)	Hours : Minutes (AM/PM time format)

Text reader settings

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.

- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.
A menu appears.
- ▶ To select **Text Reader Speed**: turn and press the controller.
A list appears.
- ▶ Select **Fast, Medium** or **Slow**.
The **•** dot indicates the current setting.

Voice Control System settings

Opening/closing the help window

- i** If the set system language is not supported by the Voice Control System, English will be selected.

The help window also shows you information on audible instructions:

- during individualization
- during subsequent operation of the Voice Control System
- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.
A menu appears.
- ▶ To select **Voice Control**: turn and press the controller.
- ▶ To switch **Help Window** on or off : turn and press the controller.

Further information on the Voice Control System; see the separate operating instructions.

Individualization

Using individualization, you can fine-tune the Voice Control System to your own voice. This will help improve voice recognition; see the separate operating instructions.


Wi-Fi

Overview

Establishing a Wi-Fi connection between the multimedia system and a Wi-Fi-enabled device, such as a tablet computer or smartphone, requires the following:

- Wi-Fi must be activated on the multimedia system and on the device to be connected.
- If the multimedia system is to be used as a Wi-Fi hotspot:
- The multimedia system must be connected to an Internet-enabled mobile phone via Bluetooth® or USB.
 - The Internet access data for the mobile phone network provider must be selected or set in the multimedia system.
 - An Internet connection must be established on the multimedia system.

Activating Wi-Fi

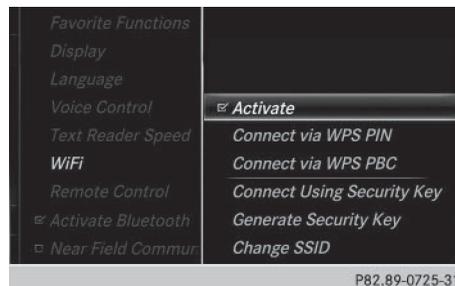

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ Select **System Settings**.
- ▶ Select **WiFi**.
The Wi-Fi menu appears.
- ▶ To switch **Activate** on or off : turn and press the controller.

Connecting the device

General notes

- i** The exact Wi-Fi connection procedure may vary depending on the device to be connected. Follow the instructions that are shown in the display. Further information can be found on the operating instructions for the device you wish to connect.

Connecting a device via WPS PIN

Requirement: for this type of connection, the device to be connected must support "Connect using WPS PIN".

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ Select **System Settings**.
- ▶ Select **WiFi**. The Wi-Fi menu appears.
- ▶ Select **Connect via WPS PIN**.
- ▶ Select the vehicle from the device to be connected and "Connect using WPS PIN". The vehicle is displayed with the SSID **MB WLAN XXXXX**. The device to be connected generates a PIN.
- ▶ Also enter this PIN into the multimedia system.

Connecting a device via WPS PBC

Requirement: for this type of connection, the device to be connected must support "Connect via push button".

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ Select **System Settings**.
- ▶ Select **WiFi**. The Wi-Fi menu appears.
- ▶ Select **Connect via WPS PBC**.
- ▶ Select the vehicle from the device to be connected and "Connect using WPS PBC". The

vehicle is displayed with the SSID **MB WLAN XXXXX**.

- ▶ Select **Continue** in the multimedia system.

Connecting the device via SSID and security key

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ Select **System Settings**.
- ▶ Select **WiFi**. The Wi-Fi menu appears.
- ▶ Select **Connect Using Security Key**.
- ▶ Select the vehicle from the device to be connected. The vehicle is displayed with the SSID **MB WLAN XXXXX**.
- ▶ Enter the security key that appears on the multimedia system display into the device to be connected.
- ▶ Confirm the entry.


Generating a new security key

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ Select **System Settings**.
- ▶ Select **WiFi**. The Wi-Fi menu appears.
- ▶ Select **Generate Security Key**.
- ▶ Select **Regenerate**. A new security key is generated.
- ▶ To save the security key: turn the controller and select **Save**. The Wi-Fi menu appears. The new security key will now be displayed and verified when a connection is established via the security key. The connection must be re-established with the newly created security key.

- i** Device connections established using the previous security key will no longer work after

the security key is changed. You have to reconnect these devices (> page 42).

Changing the name of the SSID

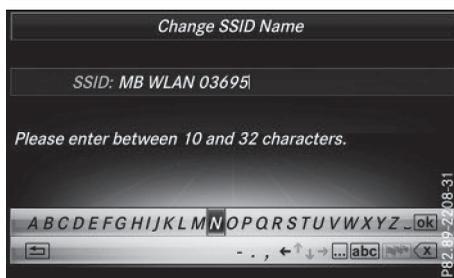

No characters can be entered while the vehicle is in motion.

- ▶ Press the button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide the controller.
- ▶ Select **System Settings**.
- ▶ Select **WiFi**. The Wi-Fi menu appears.
- ▶ Select **Change SSID**. A dialog for entering the SSID appears.
- ▶ Enter the new SSID.
- ▶ Select .
- ▶ Press the controller. Now, when establishing a connection, the vehicle will be shown with the new SSID both on the device to be connected and in the **Connect Using Security Key** menu.

i Device connections established using the previous SSID will no longer work after the SSID is changed. You have to reconnect these devices (> page 42).

Bluetooth® settings

General information about Bluetooth®

Bluetooth®-capable devices, e.g. mobile phones, need to comply with a certain profile in order to be connected to the multimedia sys-

tem. Every Bluetooth® device has its own specific Bluetooth® name.

Bluetooth® technology is a standard for short-range wireless data transmissions up to approximately 10 m.

You can use Bluetooth® to connect your mobile phone to the multimedia system, for example:

- use the hands-free system
- establish an Internet connection
- listen to music using Bluetooth® Audio
- exchange vCards

Bluetooth® is a registered trademark of Bluetooth Special Interest Group (SIG) Inc.

Activating/deactivating Bluetooth®

- ▶ Press the button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.
- ▶ To switch **Activate Bluetooth** on or off : turn and press the controller.

Switching Near Field Communication on/off

- ▶ Press the button. The **Vehicle** menu appears.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.
- ▶ To switch **Near Field Communication** on or off : turn and press the controller.

Automatic volume adjustment

General information

With the **Automatic Volume Adjustment** function, the volumes of different audio sources are

adjusted for each other, to compensate for relative differences in volume.

For example: changing from a relatively quiet to a relatively loud radio station. The volume for both stations sounds the same. Manual readjustment of the volume is not required.

The **Automatic Volume Adjustment** function is deactivated when the vehicle leaves the factory. Using this function, the dynamic range of the music is slightly reduced. To make the most of the audiophile sound quality, it is recommended to leave it off.

Switching the automatic volume adjustment on/off

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.
- ▶ To select **Automatic Volume Adjustment**: turn and press the controller. Switch the **Automatic Volume Adjustment** function on or off .

Setting the system language

General information

This function allows you to determine the language for the menu displays and the navigation messages. The selected language affects the characters available for entry.

- i** The navigation announcements are not available in all languages. If a language is not available, the navigation announcements will be in English.
- i** When you set the system language, the language of the Voice Control System will change accordingly. If it is not supported by the Voice Control System, English will be selected.

Setting the system language

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.
- ▶ To select **Language**: turn and press the controller. The list of languages appears. The • dot indicates the current setting.
- ▶ Select the desired language. The multimedia system loads the selected language and sets it.

Assigning a favorites button

On vehicles with a touchpad, the **Favorite Functions** function can be called up via the system menu or via the favorites button on the touchpad.

Calling up the Favorites function via the system menu

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.
- ▶ To select **Favorite Functions**: press the controller. The favorites are displayed.
- ▶ To select the desired function, for example **Phonebook**: turn and press the controller.

Calling up the Favorites function via the touchpad

- ▶ Press the favorites button on the touchpad. The favorites are displayed.
- ▶ To select the desired function, e.g. **Phonebook**: turn and press the controller.

Exiting the Favorites function

- ▶ Press the Favorites button again.
- or
- ▶ Press the  button.

Further information on favorites (> page 35).

Importing/exporting data

General notes


! Never remove the stick or card when writing data to the USB stick or the memory card. You may otherwise lose data.

Using this function you can do the following with your personal data:

- transfer your data from one multimedia system to another multimedia system
The transfer may be limited or not possible, depending on the vehicle's equipment.
- make a backup copy of your personal data (export data) and load it again (import data)
- protect your data from unwanted export by activating a pin prompt (presetting: deactivated)

You can either use an SD card or a USB storage device (e.g. a USB stick) as temporary storage. You can obtain further information on data import and export from an authorized Mercedes-Benz Center.

Activating/deactivating PIN protection

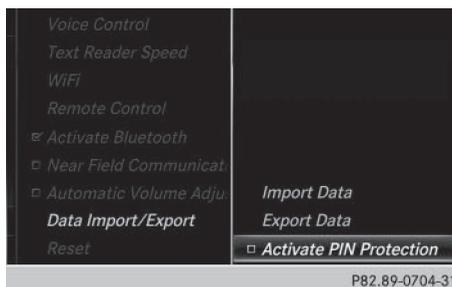

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.

- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller. A menu appears.
- ▶ To select **Data Import/Export**: turn and press the controller.
- ▶ To switch **Activate PIN Protection** on or off : turn and press the controller. When activating PIN protection, you will be prompted to enter a PIN.
- ▶ To enter the 4-digit PIN and select **ok** : turn and press the controller. You will be prompted to enter the PIN again.
- ▶ Enter the PIN again and select **ok** . The PIN prompt now protects your personal data from unwanted export.

i If you deactivate your PIN protection, you will first be prompted to enter your PIN. If you have forgotten your PIN, an authorized Mercedes-Benz Center can deactivate your PIN protection for you. Alternatively, you can deactivate PIN protection by resetting your personal data (> page 46).

Importing/exporting data

The following data can be exported:

- address data
 - system settings that you have made
 - bookmarks
 - radio station lists
- i** Personal music files in the MEDIA REGISTER cannot be saved and imported again using this function.
Mercedes-Benz is not liable for any loss of data.

Connecting a USB storage device

- ▶ Insert the SD memory card (> page 164).
- or
- ▶ Connect a USB device (e.g. a USB memory stick) (> page 164).

Importing or exporting data

i If you import data such as address data, the existing data on the multimedia system is overwritten. You will see a message to this effect. The multimedia system is restarted after the data import.

- ▶ Press the  button.
or
- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.
A menu appears.



- ▶ To select **Data Import/Export**: turn and press the controller.
- ▶ Select **Import Data** or **Export Data**.
If PIN protection is activated, a PIN prompt appears when you select **Export Data**.
- ▶ To enter the 4-digit PIN and select  : turn and press the controller.
PIN protection is deactivated.
- ▶ To select **Memory Card, USB 1** or **USB 2**: turn and press the controller.
This function exports all the data to the selected disc.
A window appears with the message that the data has been exported.

Reset function

General information

You can reset the multimedia system to the factory settings. Resetting is recommended before selling or transferring ownership of your vehicle, for example.

This includes the deletion of all of your personal data on the multimedia system. These include, for example:

- Station presets
- Entries in the destination memory

- Entries in the list of previous destinations in the navigation system
- address book entries

Data on the internal hard drive, e.g. music files in the Media Register, will be deleted during a reset. You can also delete music files from the Media Register using the **Delete All Media Files** function (▷ page 170).

In addition, an activated PIN protection, which you have used to protect your data against unwanted export, will be deactivated during a reset.

Mercedes-Benz is not liable for any loss of data.

Resetting the multimedia system

- ▶ Press the  button.
or
- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.
A menu appears.
- ▶ To select **Reset**: turn and press the controller.
A prompt appears asking whether you wish to reset.
- ▶ Select **Yes**.
A prompt appears again asking whether you really wish to reset.
- ▶ Select **Yes**.
A message appears. The multimedia system is reset to the factory settings and restarted.

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Important safety notes

WARNING


If you operate mobile communication equipment while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Only operate this equipment when the vehicle is stationary.

You must observe the legal requirements for the country in which you are currently driving when operating mobile communications equipment in the vehicle.

Vehicle settings

Calling up vehicle settings

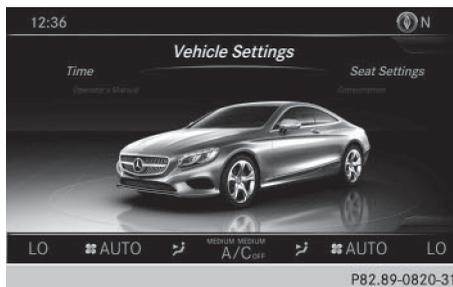

▶ Press the  button.

or

▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.

▶ To select **Vehicle Settings**: turn and press the controller.

The menu for the vehicle settings is active.

▶ To select the desired vehicle setting: turn and press the controller.

The main area with the setting element is active.

Selecting a different vehicle setting:

▶ To activate the menu for selecting the vehicle setting: slide  the controller.

Exiting the vehicle settings:

▶ To select : slide  and press the controller.

Ambient lighting

General notes

You can set the following for the ambient lighting:

- Zone

The zone setting determines the area in which the brightness setting is to be applied. If the Complete zone is selected for longer than 0.5 seconds, the brightness of the Front zone is adopted for the entire vehicle.

- Brightness

This setting makes an additional change to the brightness of the ambient lighting. The brightness change is only effective for the selected zone. For this reason, the zone for which the brightness change is to be active must be selected first.

- Color

This setting changes the color of the ambient lighting.

Setting the brightness of the zones



- ▶ Call up **Vehicle Settings** (▷ page 47).
- ▶ To select **Ambient Light**: turn and press the controller.
The left-hand setting element is active. The brightness value for the currently selected zone is displayed.
- ▶ To change the brightness value: turn the controller.
- ▶ To select a zone: slide  and turn the controller.

You can find further information in the vehicle Operator's Manual.

Setting the color



- i** Once a color is set, it is used for all zones. The brightness of the color used can be set separately for each zone.
- ▶ Call up **Vehicle Settings** (▷ page 47).
- ▶ To select **Ambient Light Color**: turn and press the controller.
The setting element is active.
- ▶ To select a color: turn the controller.

You can find further information in the vehicle Operator's Manual.

Switching the display lighting on/off

This display lighting adjustment function is only available if the vehicle is not equipped with the "Ambient lighting" package.

- ▶ Call up **Vehicle Settings** (▷ page 47).
- ▶ To select **Ambient Light: Display**: turn and press the controller.
The function switches on or off, depending on the previous setting.

- i** The brightness can be changed using the control between the two displays.

You can find further information on the interior lighting in the vehicle Operator's Manual.

Setting the easy entry and exit feature




The EASY-ENTRY/EXIT feature makes getting in and out of your vehicle easier. You can make the following settings for the EASY-ENTRY/EXIT feature:

- **Steering Column**
- **Steering Column and Seat**
- **Off**
- ▶ Call up **Vehicle Settings** (▷ page 47).
- ▶ To select **Easy Entry/Exit**: turn and press the controller.
The setting element is active.
- ▶ To change the setting: turn the controller.

When you activate the EASY-ENTRY/EXIT feature, the crash-responsive EASY-EXIT feature is also activated.

You can find further information on the crash-responsive EASY-EXIT feature in the vehicle Operator's Manual.

Activating/deactivating the panel heating

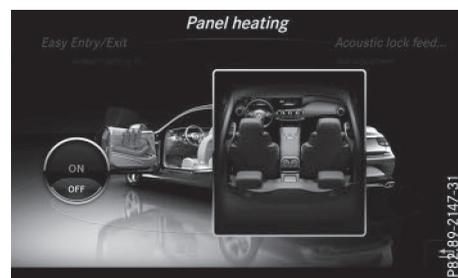

The panel heating function warms the surfaces with which the vehicle occupants frequently come into contact. Activation of the panel heating via the multimedia system as described below only works if seat heating is activated (see the vehicle Operator's Manual).

- ▶ Call up **Vehicle Settings** (> page 47).
- ▶ To select **Panel Heating**: turn and press the controller.
- ▶ To change the setting: turn the controller.

The seat-belt adjustment function adjusts the driver's and front-passenger seat belt to the upper body of the occupants.

- ▶ Call up **Vehicle Settings** (> page 47).
- ▶ To select **Belt Adjustment**: turn and press the controller.
The function switches on or off, depending on the previous setting.

You can find further information in the vehicle Operator's Manual.

Activating/deactivating the acoustic locking verification signal

P82.89-0825-31

You can also set an audible signal to confirm that the vehicle has been locked.

- ▶ Call up **Vehicle Settings** (> page 47).
- ▶ To select **Acoustic Lock Feedback**: turn and press the controller.
The function switches on or off, depending on the previous setting.

You can find further information on the locking feature in the vehicle Operator's Manual.

Switching the automatic mirror folding function on/off

P82.89-0827-31

When the **Automatic Mirror Folding** function is activated, the outside mirrors fold in automatically as soon as you lock the vehicle from the outside. The outside mirrors fold out automatically again as soon as you unlock the vehicle.

- ▶ Call up **Vehicle Settings** (> page 47).
- ▶ To select **Automatic Mirror Folding**: turn and press the controller.
The function switches on or off, depending on the previous setting.

You can find further information in the vehicle Operator's Manual.

Switching the seat belt adjustment on/off


P82.89-0826-31

Switching locator lighting on/off

If you switch on the **Locator Lighting** function, the exterior lighting is switched on for a short time when it is dark. The light switch must be set to **AUTO**.

The exterior lighting remains on for 40 seconds after the vehicle is unlocked. When you start the engine, the locator lighting is switched off and the automatic driving lights are activated.

You can find further information on the automatic headlamp mode in the vehicle Operator's Manual.

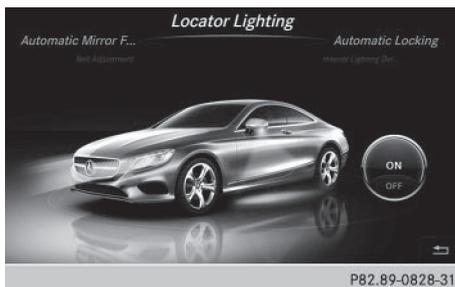


Switching locator lighting on/off

- ▶ Call up **Vehicle Settings** (> page 47).
- ▶ To select **Locator Lighting**: turn and press the controller. The function switches on or off, depending on the previous setting.

You can find further information in the vehicle Operator's Manual.

Activating/deactivating the automatic door locking mechanism

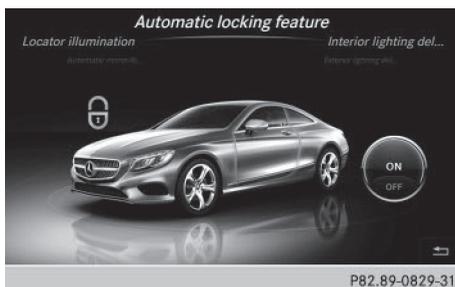


When the automatic locking feature is switched on, the vehicle is locked automatically when the ignition is switched on and the vehicle is traveling faster than walking pace.

- ▶ Call up **Vehicle Settings** (> page 47).
- ▶ To select **Automatic Locking**: turn and press the controller. The function switches on or off, depending on the previous setting.

You can find further information in the vehicle Operator's Manual.

Setting the switch-off delay time

Interior lighting switch-off delay time

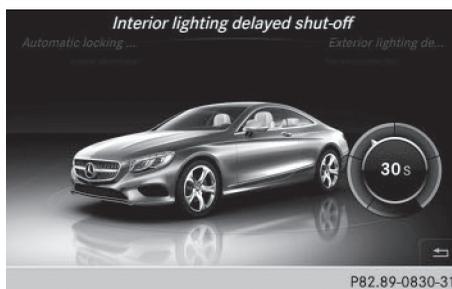

The interior lighting is activated for the duration of the switch-off delay time when the SmartKey is removed from the ignition lock.


- ▶ Call up **Vehicle Settings** (> page 47).
- ▶ To select **Interior Lighting Delayed Switch-off**: turn and press the controller. The setting element is active.
- ▶ To change the switch-off delay time: turn the controller.

You can find further information in the vehicle Operator's Manual.

Exterior lighting switch-off delay time

If you switch on the **Exterior Lighting Delayed Switch-off** function, the exterior lighting is switched on for a short time after the engine is switched off. The light switch must be set to **AUTO**.


The duration of the exterior lighting delayed switch-off time can be adjusted individually. The exterior lighting remains on for the maximum duration of 60 seconds after the engine is switched off. If you close all the doors and the tailgate, the exterior lighting switches off after the set time.

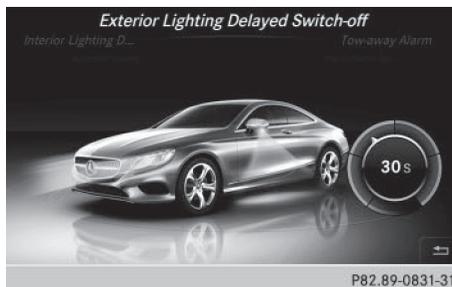

- ▶ Call up **Vehicle Settings** (> page 47).
- ▶ To select **Exterior Lighting Delayed Switch-off**: turn and press the controller. The setting element is active.
- ▶ To change the switch-off delay time: turn the controller.

- ▶ Call up **Vehicle Settings** (> page 47).
- ▶ To select **Interior Motion Sensor**: turn and press the controller. The function switches on or off, depending on the previous setting.

Arming/disarming the tow-away alarm

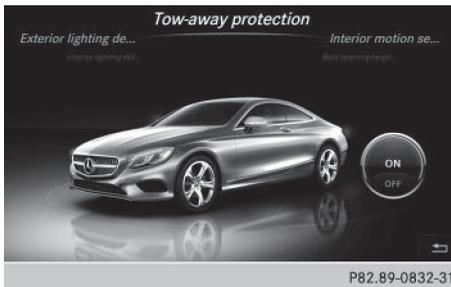

An audible and visual alarm is triggered if your vehicle's angle of inclination is altered while the tow-away alarm is armed. This can occur if the vehicle is jacked up on one side, for example.

- ▶ Call up **Vehicle Settings** (> page 47).
- ▶ To select **Tow-away Alarm**: turn and press the controller. The function switches on or off, depending on the previous setting.

Activating/deactivating the trunk lid opening height restriction



Activating the **Trunk Opening-height Restriction** function allows you to avoid bumping the trunk lid on a low garage ceiling, for example.

- ▶ Call up **Vehicle Settings** (> page 47).
- ▶ To select **Trunk Opening-height Restriction**: turn and press the controller. The function switches on or off, depending on the previous setting.

Activating/deactivating the interior motion sensor



When the interior motion sensor is activated, a visual and audible alarm is triggered if movement is detected in the vehicle interior. This can occur if someone reaches into the vehicle interior without authorization, for example.

Seats

Overview


Using the  button next to the controller or the seat settings menu item in the vehicle menu, you can call up the following adjustment functions:

- Backrest side bolsters
- Lumbar
- Shoulder area
- Massage
- Dynamics
- Seat heating balance

i You also can save and recall the current settings of a seat function using the memory button and the corresponding memory position switch. You can find further information

on the memory function in the vehicle Operator's Manual.

Selecting the adjustment function and seat

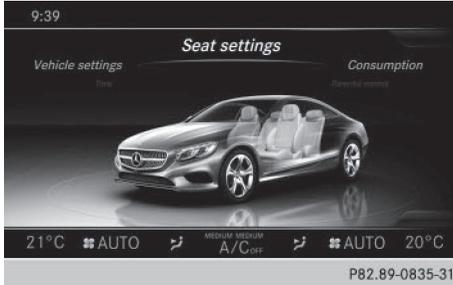

- ▶ Press the  button. The seat settings menu is shown.

or

- ▶ To select **Vehicle** from the main function bar: turn and press the controller.
- ▶ To select **Seat Settings** in the menu: turn and press the controller. The menu for selecting seat functions is activated.
- ▶ To select the required seat function: turn and press the controller.
- ▶ To switch between **Driver** and **Front Passenger**: slide   the controller.

Adjustment functions

Adjusting the backrest side bolsters



- ▶ Call up the seat functions (▷ page 52).
- ▶ To select **Backrest Sides**: turn and press the controller.

- ▶ To select a seat: slide   the controller.
- ▶ To change the setting: turn the controller. You will see the changes you have made in the settings display.
- ▶ **To exit the menu:** press the  button.

Adjusting the seat contour in the lumbar region of the seat backrest



This function allows you to adjust the air cushions in the lumbar region of the backrest (4-way lumbar support).

- ▶ Call up the seat functions (▷ page 52).
- ▶ To select **Lumbar**: turn and press the controller.
- ▶ To select a seat: slide   the controller.
- ▶ To activate the setting element: press the controller.
- ▶ To change the setting: slide   or   the controller. The change will be visible in the setting element.
- ▶ **To exit the menu:** press the  button.

Adjusting the shoulder area



- ▶ Call up the seat functions (▷ page 52).
- ▶ To select **Shoulders**: turn and press the controller.

- ▶ To select a seat: slide ◀⊙▶ the controller.
- ▶ To change the setting: turn the controller. You will see the changes you have made in the settings display.
- ▶ **To exit the menu:** press the ◀ button.

Adjusting the driving dynamics



- ▶ Call up the seat functions (▷ page 52).
- ▶ To select a seat: slide ◀⊙▶ the controller.
- ▶ To select **Dynamic Multicontour Seat:** turn and press the controller.

You can select:

- **0:** Off
- **1:** Level 1 (weak)
- **2:** Level 2 (strong)
- ▶ To select the setting: turn the controller.
- ▶ **To exit the menu:** press the ◀ button.

Seat heating balance



The balance function controls the distribution of heat on the seat backrest and cushion.

The balance function influences the currently set heating level of the seat heating (see the vehicle Operator's Manual).

- ▶ Call up the seat functions (▷ page 52).
- ▶ To select **Seat Heating Balance:** turn and press the controller.
- ▶ To select a seat: slide ◀⊙▶ the controller.
- ▶ To change the setting: turn the controller. You will see the changes you have made in the settings display.

The settings represent the following:

- **0** – the backrest and seat cushion are evenly heated according to the setting selected with the seat heating button.
- **1 to 3** increasing – the heat output to the seat cushion is reduced one level at a time.
- **1 to 3** decreasing – the heat output for the backrest is reduced one level at a time.
- ▶ **To exit the menu:** press the ◀ button.

Message programs

Overview

You can select the following message programs:

- **Hot Relaxing Massage, Back**
Relaxing massage program starting in the pelvic area, warm pressure points can be felt, full back massage, stretching the pelvic area, ending with gentle soothing movements
- **Hot Relaxing Massage, Shoulders**
Relaxing massage program starting in the pelvic area, warm pressure points can be felt, full back massage, stretching the pelvic area, ending with gentle soothing movements
- **Activating Massage**
Activating message through increasing twin-waves and then soothing movements
- **Classic Massage**
Massage with increasing waves, soothing movements
- **Mobilizing Massage**
Mobilization of the spinal column and the complete upper body by means of pressure point mobilizing massage at chest height
- **Active Workout**
The Active Workout program requires your active participation. It is suitable for training your stomach muscles during a traffic jam, for example, by means of targeted tensing and relaxing. You can use the program to be sporty in the vehicle.

As soon as you feel a pressure point in the backrest cushion, this indicates that you should press against this point.

- As soon as you feel pressure on your back, press against it.
- Keep the pressure under your feet even. Do not wedge yourself against the pedals.
- You will feel how your stomach muscles tense.
- Continue to breathe normally, do not hold your breath.
- When the pressure in the backrest cushion stops, stop pressing against it and relax briefly.

Selecting a massage program



- ▶ Call up the seat functions (▷ page 52).
- ▶ To select **Massage**: turn and press the controller.
- ▶ To select a seat: slide ◀⊙▶ the controller.
- ▶ To select massage programs: turn and press the controller.
The massage program runs for approximately 15 to 25 minutes, depending on the setting.
- ▶ To change the massage intensity: turn the controller to ① and press to confirm.
The intensity changes between gentle and vigorous each time the controller is pressed.
- ▶ **To exit the menu**: press the button.

Resetting all adjustments



- ▶ Call up the seat functions (▷ page 52).
- ▶ Select a seat (▷ page 52).
- ▶ To select **Reset**: turn and press the controller.
- ▶ To select a seat: slide ◀⊙▶ the controller.
- ▶ To reset: press the controller.
A prompt appears.
- ▶ To select **Yes** or **No**: turn and press the controller.
If you select **No** the process is canceled.
After selecting **Yes** all seat adjustments are reset to the default values (factory setting).

Climate control settings

Overview

You have the following options for adjusting climate control settings:

- using the climate control bar
- using the climate control menu


You can set the most important climate control functions such as temperature, airflow and air distribution using the climate control bar. The climate control bar is visible in most displays.

You can find all the climate control functions in the climate control menu. You can use the climate control bar (▷ page 54) to switch to the climate control menu.

Settings in the climate control bar

Overview

You can set the most important climate control functions directly in the climate control bar and change them in the climate control menu.

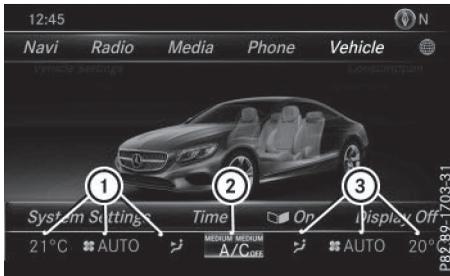

- ① Adjusts temperature, airflow and air distribution, left, as well as displaying the current setting
- ② Calls up the climate control menu, displays the current cooling and climate mode setting
- ③ Adjusts air distribution, airflow and temperature on the right and displays the current settings


Switching to the climate control bar:

- ▶ Press the button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ Slide , release, then slide again, turn and press the controller. A menu appears.

Calling up the climate control bar

- ▶ Press the button.
- or
- ▶ Press **Vehicle** in the main function bar. The vehicle menu is displayed.
- ▶ Slide the controller repeatedly until the climate control bar is activated.


Setting the temperature

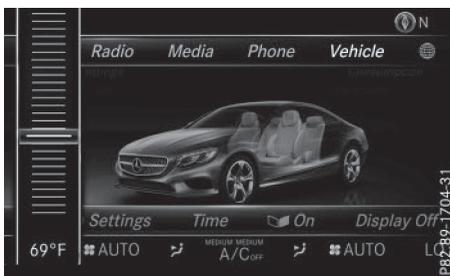

- ▶ Calling up the climate control bar (▷ page 55)
- ▶ To select the current temperature on the left or right: turn and press the controller. The temperature setting scale appears.
- ▶ To change the setting: turn the controller.

i You can also use the climate control menu (▷ page 56) to set the temperature.


Setting the airflow

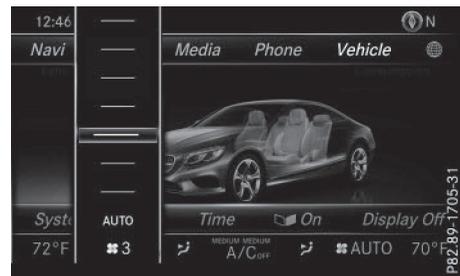

- ▶ Calling up the climate control bar (▷ page 55)
- ▶ To select on the left or right: turn and press the controller. The airflow setting scale appears.
- ▶ To change the setting: turn the controller.

i You can also use the climate control menu (▷ page 56) to set the airflow.

Setting the air distribution

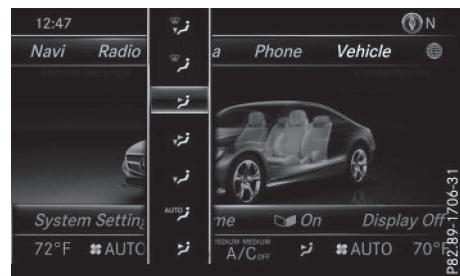

- ▶ Calling up the climate control bar (▷ page 55)
- ▶ To select the current air distribution display on the left or right, e.g. : turn and press the controller. The air distribution setting scale appears.
- ▶ To change the setting: turn the controller.


- i** You can also use the climate control menu (▷ page 56) to set the air distribution.

Settings in the climate menu

Overview

In the climate control menu there are settings available in the bottom bar and the main area.

Calling up the climate control menu

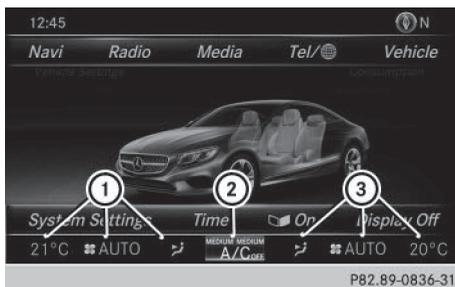

- ▶ Switch to the climate control bar (▷ page 55).
- ▶ To select from climate control bar ②: turn and press the controller. The menu for selecting climate control functions is activated.
- ▶ To select the desired climate control function: turn and press the controller. The selected climate control function appears.

Activating/deactivating climate control



This setting is made in the bottom bar of the climate control menu.

- ▶ Call up the climate control menu (▷ page 56).
- ▶ To switch to the footer: slide the controller.
- ▶ To select **Climate Ctrl On**: turn and press the controller.

The climate control is switched on or off depending on the settings.

If the climate control is switched off:

- the climate control setting functions are deactivated.
- the blower is switched off.
- the air recirculation flaps are closed

Activating/deactivating cooling with air dehumidification

This setting is made in the bottom bar of the climate control menu.

- i** Activating the cooling with air dehumidification facilitates the cooling of the vehicle interior even with high outside temperatures.
- ▶ Call up the climate control menu (▷ page 56).
- ▶ To switch to the footer: slide the controller.
- ▶ To select **A/C**: turn and press the controller.
- ▶ The cooling with air dehumidification function is activated or deactivated .
- i** The current status of the cooling function is displayed in the climate control bar: A/C ON - activated, A/C OFF - deactivated (▷ page 54).
- i** Deactivating the cooling with air dehumidification function reduces fuel consumption.

Activating/deactivating the synchronization function

This setting is made in the bottom bar of the climate control menu.

With the **Sync** (synchronization) option, you can decide whether you wish to activate the climate control settings for all zones together or separately.

- ▶ Call up the climate control menu (▷ page 56).
- ▶ To switch to the footer: slide  the controller.
- ▶ To select **Sync**: turn and press the controller. The synchronization function is activated or deactivated .

With the synchronization function switched off, you can alternate between driver and front passenger.

- ▶ To switch from the footer to the main area: slide  the controller.
- ▶ To switch between left and right: slide   the controller. Not all climate control functions allow switching between the driver and front passenger.

Further information on the synchronization function (see the vehicle Operator's Manual).

Rear-compartment climate control settings

This setting is made in the bottom bar of the climate control menu.

You can also set the rear-compartment air conditioning from the front.

- ▶ Call up the climate control menu (▷ page 56).
- ▶ To switch to the footer: slide  the controller.
- ▶ To select **Rear Setting**: turn and press the controller. Setting rear-compartment climate control is switched on. The vehicle interior display changes accordingly.
- ▶ To switch the setting back to the front again: select **Return to Front**. After a short time, the multimedia system automatically switches the adjustment functions back to the front.


Adjusting the footwell temperature



This setting is made in the main area of the climate control menu.

- ▶ Call up the climate control menu (▷ page 56).
- ▶ To select **Adjust Footwell**: turn and press the controller.
- ▶ If necessary, change sides: slide   the controller.
- ▶ To change the setting: turn the controller.
- ▶ To exit the menu: press the  button.

Adjusting the climate mode settings

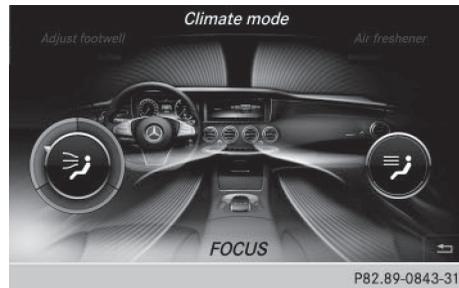

This setting is made in the main area of the climate control menu.

The setting is only active when the air-conditioning system is set to **AUTO** (see the vehicle Operator's Manual).

- ▶ Call up the climate control menu (▷ page 56).
- ▶ To select **Climate Mode**: turn and press the controller.
- ▶ If necessary, change sides: slide the controller to the left  or to the right .
- ▶ To change the setting: turn the controller.
- ▶ To exit the menu: press the  button.

The current airflow setting is shown in the climate control bar: **DIFFUSE**, **MEDIUM** or **FOCUS** (▷ page 54).

Setting the perfume atomizer



This setting is made in the main area of the climate control menu.

Further information about the perfume atomizer (see the vehicle Operator's Manual).

- ▶ Call up the climate control menu (▷ page 56).
- ▶ To select **Air Freshener**: turn and press the controller.
 - The setting element is active.
- ▶ To start/stop the perfume atomizer: press the controller.
- ▶ To set the intensity: turn the controller when the atomizer is switched on.
- ▶ To exit the menu: press the  button.

Switching ionization on/off



This setting is made in the main area of the climate control menu.

Further information on ionization (see the vehicle Operator's Manual).

- ▶ Call up the climate control menu (▷ page 56).
- ▶ To select **Ionization**: turn and press the controller.
 - The setting element is active.
- ▶ To switch the ionization on or off: turn the controller.
- ▶ To exit the menu: press the  button.

360° camera

General notes

The 360° camera covers the immediate surroundings of the vehicle and assists you, for instance when parking or at exits with reduced visibility.

The 360° camera is only an aid. It is not a replacement for your attention to your immediate surroundings. You are always responsible for safe maneuvering and parking. Make sure that no persons or animals are in the maneuvering range.

Further information on the 360° camera can be found in the vehicle Operator's Manual.

Displaying the 360° camera image

The 360° camera image can be displayed if:

- your vehicle is equipped with a 360° camera
 - the multimedia system is switched on
 - the **360° Camera** function is switched on
- ▶ Press the  button.
 - The vehicle menu is displayed.
 - ▶ Select **360° Camera**.
 - The 360° camera image appears in split-screen mode.

You will see the previous view on the display if, when the function is switched on:

- you turn the SmartKey to position **1** in the ignition lock
- you select transmission position **P**
- when you are driving at moderate speeds

Manually switching the display

- ▶ To select : slide  and press the controller.

Automatically switching the display:

- ▶ You can switch on the 360 camera display automatically using the reverse gear (▷ page 58).

Switching automatic mode of the 360° camera on/off

This function activates the 360° camera when reverse gear is engaged.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.
- ▶ Select **360° Camera**.
- ▶ Select **Activation by R gear**.
The function is switched on or off , depending on the previous status.

Opening the camera cover for cleaning

- ▶ To select **Open Camera Cover** in the 360° camera menu: turn the controller and press to confirm.
The **Please Wait...** message appears for approximately three seconds.
The camera cover opens.

The camera cover closes automatically if:

- the ignition is switched off
- the vehicle exceeds a moderate speed

Rear view camera

General notes

The rear view camera covers the immediate surroundings of the vehicle and assists you when parking.

The rear view camera is only an aid. It is not a replacement for your attention to your immediate surroundings. You are always responsible for safe maneuvering and parking. When maneuvering or parking, make sure that there are no persons, animals or objects in the area in which you are maneuvering.

You can find further information about the rear view camera in the vehicle Operator's Manual.

Switching the rear view camera automatic mode on/off

This function activates the rear view camera when reverse gear is engaged.

- ▶ Press the  button.
- or
- ▶ Press **Vehicle** in the main function bar.
The vehicle menu is displayed.
- ▶ Slide  the controller.
- ▶ To select **System Settings**: turn and press the controller.
- ▶ Select **Rear View Camera**.
The **Rear View Camera** menu appears.
- ▶ Select **Activation by R gear**.
The function is switched on or off , depending on the previous status.
When you start the vehicle and engage reverse gear, the camera cover opens automatically if the function is activated. The area behind the vehicle is shown with guide lines in the display (see the vehicle Operator's Manual).

Object detection

The rear view camera can detect moving and stationary objects. If, for example, a pedestrian or another vehicle is detected, these objects are marked with bars. The system is only able to detect and mark stationary objects when your vehicle is moving. By contrast, stationary objects will always be detected and marked.

Switching object detection on/off

- ▶ To select **Object Detection** in the rear view camera menu: turn and press the controller.
The function is switched on or off , depending on the previous status.

Opening the camera cover for cleaning

- ▶ To select **Open Camera Cover** in the rear view camera menu: turn and press the controller.
The **Please Wait...** message appears for approximately three seconds.
The camera cover opens.
The camera cover closes automatically if:
 - the ignition is switched off
 - the vehicle pulls away

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Introduction

Important safety notes

WARNING

If you operate information systems and communication equipment integrated in the vehicle while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Only operate the equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

The multimedia system calculates the route to the destination without taking account of the following, for example:

- traffic lights
- stop and yield signs
- merging lanes
- parking or stopping in a no parking/no stopping zone
- other road and traffic rules and regulations
- narrow bridges

The multimedia system can give incorrect navigation commands if the actual street/traffic situation does not correspond with the digital map's data. Digital maps do not cover all areas nor all routes in an area. For example, a route may have been diverted or the direction of a one-way street may have changed.

For this reason, you must always observe road and traffic rules and regulations during your journey. Road and traffic rules and regulations always have priority over the system's driving recommendations.

Navigation announcements are intended to direct you while driving without diverting your attention from the road and driving.

Please always use this feature instead of consulting the map display for directions. Looking at the icons or map display can distract you from traffic conditions and driving, and increase the risk of an accident.

General notes

Operational readiness of the navigation system

The navigation system must determine the position of the vehicle before first use or whenever operational status is restored. Therefore, you may have to drive for a while before precise route guidance is possible.

GPS reception

Among other things, correct functioning of the navigation system depends on GPS reception. In certain situations, GPS reception may be impaired, there may be interference or there may be no reception at all, e.g. in tunnels or parking garages.

Using roof carriers may impair the correct functioning of a roof antenna (phone, satellite radio, GPS).

Entry restriction

In certain countries, data entry is restricted if the vehicle is traveling at more than approximately 3 mph (5 km/h). The restriction is deactivated as soon as the vehicle speed drops below about 2 mph (3 km/h).

When the restriction is active, certain entries cannot be made. This will be indicated by the fact that certain menu items are grayed out and cannot be selected.

The following entries are not possible, for example:

- entering the destination city and street
- entering a destination via the map

- entering POIs in the vicinity of a city or via a name search
 - editing entries
 - direct entry via the telephone keypad (if available)
- Other entries are possible, such as entering points of interest in the vicinity of the destination or current position.

Switching to navigation mode



- ▶ Press the **NAVI** button.
If route guidance is active, the map is shown in full-screen mode. The map shows the vehicle's current position.
If no route guidance is active, the menu is also displayed. **Destination** is highlighted.

Additional activation option:

- ▶ To activate the menu: slide **↑** the controller (e.g. in radio mode).
- ▶ To select **Nav**i: turn and press the controller.

Access within navigation:

- ▶ From any menu, press the **NAVI** button.
The navigation menu appears.
- ▶ Press the controller.
The map shows the vehicle's current position.


Showing/hiding the menu

Using the menu, you can make a destination entry or select the navigation settings, for example. If no route guidance is active, the menu appears automatically after the navigation system is switched on. **Destination** is highlighted.

- ▶ **To show:** slide **⊙↓** the controller when the map is shown in full-screen mode.

or

- ▶ Swipe down the touchpad with one finger.
If there has been no route calculated, **Destination** is marked.
If a route has been calculated, **📍** is marked.

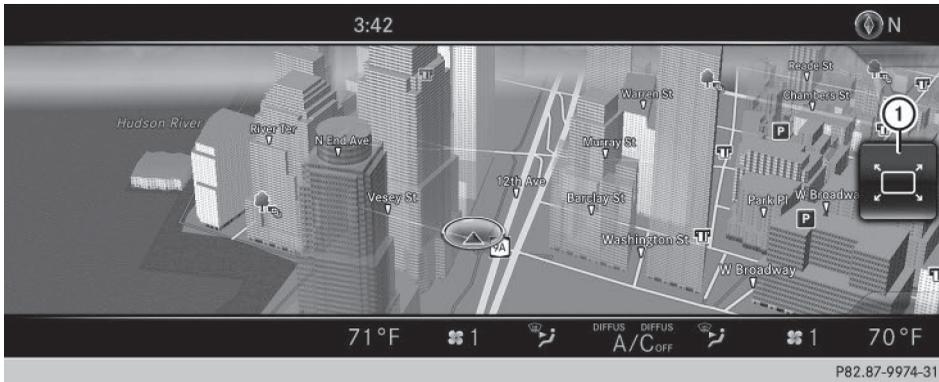

- ▶ **To hide:** press the  button.
- or
- ▶ Slide  the controller.
Full-screen symbol  is selected.
- ▶ Press the controller.

Moving the map




Requirement: the map is in full screen mode, the menu is faded out (▶ page 61).

- ▶ Press the controller.
The crosshair is shown.
- ▶ Slide , , or  the controller.
The map moves in the corresponding direction under the crosshair.
- ▶ To select a destination on the map: press the controller.
If navigable destinations are available, they will be displayed in a list.
- ▶ Turn and press the controller.
- ▶ To show the menu: press the controller.
- ▶ Select [Menu](#).

Basic settings

Selecting the route type

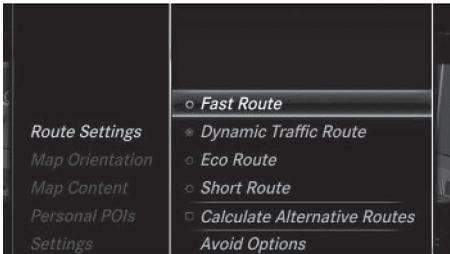


P82.89-0495-31

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Route Settings**.
- ▶ Select a route type.
 - A filled circle indicates the current selection.
 - With active route guidance, the multimedia system calculates a new route.
 - Route guidance active: a destination has been entered and the route has been calculated.
 - If there has been no route calculated, the multimedia system uses the selection as the new basic setting.

Fast Route	The multimedia system calculates a route with a short travel time.
Dynamic Traffic Route	Based on the Fast Route route type and includes traffic reports on the route for the route guidance. You can receive real-time traffic reports via satellite radio (▷ page 90).
Eco Route	The multimedia system calculates an economical route. The journey may take slightly longer compared to taking the fast route.
Short Route	The multimedia system calculates a short distance route.

- ▶ **To calculate alternative routes:** select **Calculate Alternative Routes**.
Switch the function on or off .
- Function activated: after each route calculation, route alternatives are offered that correspond to the local conditions (▷ page 87).
- If desired, you can have the navigation system calculate alternative routes even during route guidance (▷ page 87).

Setting route options

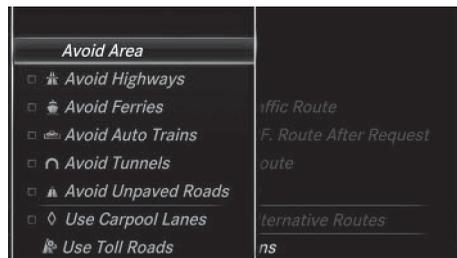

P82.87-9663-31

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Route Settings**.
- ▶ **To avoid/use route options:** select **Avoid Options**.
A menu appears.
- ▶ Select one of the options.
 - : using or avoiding route options is enabled
 - : using or avoiding route options is disabled
- **Avoid Area** (▷ page 99)
It is possible to avoid areas you do not wish to drive through.
- **Avoid Highways**
- **Avoid Ferries**
- **Avoid Auto Trains**
- **Avoid Tunnels**
- **Avoid Unpaved Roads**
The function is not available in all countries.
- **Use Toll Roads**
The route calculation includes roads which require you to pay a usage fee (toll).
- **Use Carpool Lanes**

If your vehicle meets the access conditions for carpool lanes, you can use this function.

Navigation includes carpool lanes if the carpool lanes option is activated.


Depending on local conditions, the multimedia system may not always be able to include all route options. A route may include a ferry, for instance, even though [Avoid Ferries](#) is enabled. The multimedia system will notify you of this visually as well as through a navigation message.

Navigation



- ▶ **To use toll roads:** turn and press the controller.
 - A menu appears.
- ▶ Select an option.
 - The options include using roads that require cash payment or electronic billing, or switching off the function.
- ▶ **To exit a menu:** slide ←(○)→ the controller.

Selecting announcements

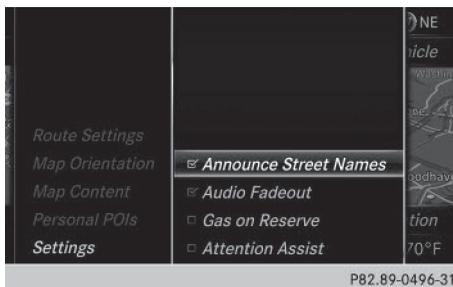

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide (○)↓ the controller.
- ▶ To select **Options:** turn and press the controller.

- ▶ Select **Settings**.
 - A menu appears.
- ▶ Select an option.
 - Switch the option on or off .

Announce Street Names	The multimedia system announces the name of the road onto which the upcoming change of direction leads. The function is not available in all countries.
Audio Fadeout	The volume of an active media source is automatically reduced during a navigation announcement.
Gas on Reserve	Function activated: once the reserve fuel tank level is reached, a message appears in the multimedia system to help you start the search for a gas station.
Attention Assist	Function activated: if ATTENTION ASSIST displays a warning in the multifunction display, a message appears in the multimedia system to help you start the search for a rest stop. If a route contains highways, a rest stop search is started in the vicinity. The map is shown with the message: Searching For a Rest Area in the Vicinity.... If service stations are found, the nearest service station is highlighted on the map. Further information about ATTENTION ASSIST can be found in the vehicle Operator's Manual.

Using car pool lanes

You can include carpool lanes (HOV or car sharing lanes) in the route calculation.

If you use HOV or carpool lanes, please observe the applicable laws as well as the local and time limitation conditions.

Carpool lanes may only be used under certain conditions. They can normally be used when there are two people in the vehicle. However,

there are also carpool lanes which can only be used when there are three or more people in the vehicle. In California, lone drivers can use a carpool lane if their vehicle's emission level or fuel consumption is below a fixed threshold.

Carpool lanes may be reserved for specific times (e.g. during the peak period).

Carpool lanes are indicated by a diamond symbol on specific road signs and on the road surface. The road signs may also include the designation CARPOOL. The lanes are arranged as a separate lane next to the others or are built as a physically separate lane.

Depending on the setting under [Use Carpool Lanes](#), the multimedia system uses carpool

lanes when calculating the route. The multimedia system then guides you in and out of carpool lanes using visual and acoustic driving directions.

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select [Route Settings](#).
- ▶ Select [Avoid Options](#).
- ▶ Select [Use Carpool Lanes](#).
Carpool lanes will either be used or avoided when calculating the route.

Destination entry

Important safety notes

WARNING

If you operate information systems and communication equipment integrated in the vehicle while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Only operate the equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

Destination entry may be blocked while driving, depending on the country specifications.

General notes

The various character entry options are described for the controller. Alternatively you can use the touchpad to enter characters and select menus ([▷ page 27](#)).

Using an address

Calling up the address entry menu



- ▶ To switch to navigation mode: press the **NAVI** button.
- ▶ To show the menu: slide **⊙↓** the controller.
- ▶ To select **Destination**: turn and press the controller.
- ▶ Select **Address Entry**.

Address entry options

Examples of how you can enter an address:

- City/ZIP code, street, house number
- City/ZIP code, street
- City/ZIP code, center
- City/ZIP code, street, intersection
- Street, City/ZIP code, house number
- Street, City/ZIP code, intersection

The address can be entered faster by entering the street before the city if the address has an unusual street name.

While entering an address, you can also switch to other destination entry options:


- Keyword search (▷ page 69)
- Map (▷ page 74)
- POI (▷ page 71)

Entering an address



The example shows how to enter an address, e.g. for your home address.

- ▶ In the address entry menu, select **Street**: press the controller (▷ page 66).
- ▶ Enter **BROADWAY**. Character entry (▷ page 32).

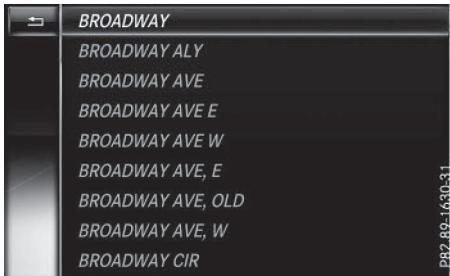

- ▶ **To call up the list:** slide \uparrow the controller repeatedly until the character bar disappears. or
- ▶ To select ok : turn and press the controller.



- ▶ To select **Town:** press the controller.
- ▶ Enter the city, e.g. **New York**. Then call up the list and select an entry. Proceed in the same way as when entering a street.
- ▶ To select **No.:** press the controller.
- ▶ Enter the house number. Then call up the list and select an entry. Proceed in the same way as when entering a street. The address entry menu shows the address. The adjacent map section shows the destination.

The city in which the vehicle is currently located (current vehicle position) is at the top of the list of cities. When destinations are entered using the character bar, the locations for which route guidance has already been carried out are more prominently available.

You can enter any of the cities, streets, ZIP codes, etc. which are stored in the digital map. However, ZIP codes are not available for some countries.

State/province and city are sufficient to start navigating. You can enter either a city or a ZIP code. The street and house number complete the destination address.

Entering additional address data

You can enter additional address data:

- **State/province**
You can use **Last Used** to select the last selected state (USA) or province (Canada). You can also select Mexico and The Bahamas.
- **ZIP code**
Entering a ZIP code will delete a previously entered city.
- **Center**
Entering a center will delete a previously entered street.
- **Intersection**
Entering an intersection will delete a previously entered house number.
- ▶ Select the address entry menu (▷ page 66).
- ▶ To select **State/Province**, **ZIP Code**, **Center** or **Intersection:** turn, slide \odot and press the controller.
- ▶ Select an entry (▷ page 66).

Saving an address

You can store the address entered as:

- a home address in the address book
- a navigable address book contact
For further information on the address book, see (▷ page 130)
- a personal destination on the SD card (▷ page 94)




- ▶ Call up the address entry menu (▷ page 66).
- ▶ To select **Save:** slide \odot , turn and press the controller.
- ▶ **As the home address:** select **As "My Address"**.
The home address is stored in the list of contacts under the entry **My Address**.



- ▶ **As a contact:** select **As New Contact**.
- ▶ Select **Not Classified, Home** or **Work**.
- ▶ Enter a surname and a first name (▷ page 31).
- ▶ To select **OK**: turn and press the controller. The destination address is saved in the address book as a navigable contact.

Starting route calculation

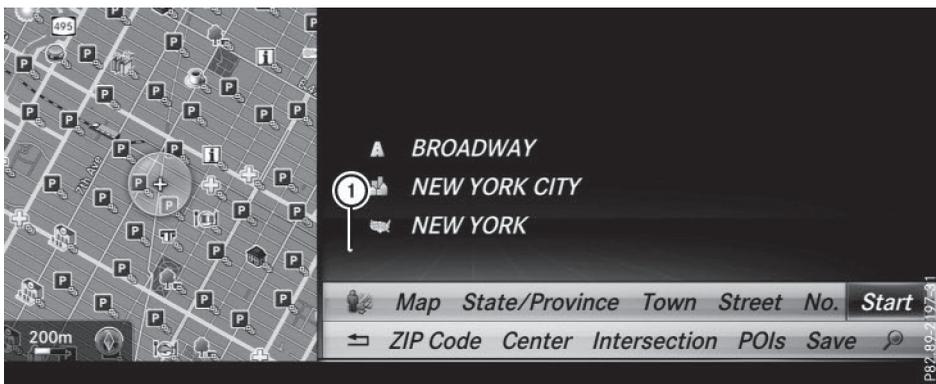

The entered destination appears in the address entry menu.

- ▶ To confirm **Start** or **Continue**: press the controller.
 - If you select **Start**: the route is calculated with the current route settings (▷ page 63). While route calculation is in progress, an arrow will indicate the direction to your destination. Once the route has been calculated, route guidance begins. If the vehicle is traveling on a non-digitized road, the system displays the linear distance to the destination, the direction to the destination and the **Road Not Mapped** message.
 - Selection **Continue**: If **Calculate Alternative Routes** is activated, alternative routes are calculated (▷ page 63). You can display these and select them for route guidance (▷ page 87).
 - If route guidance has already been activated, a prompt will appear asking whether you wish to end the current route guidance.
- ▶ To select **Cancel Active Route Guidance** or **Set as Intermediate Destination**: turn and press the controller.
 - Cancel Active Route Guidance** cancels the current route guidance and starts route calculation to the new destination.
 - Set as Intermediate Destination** adds the newly entered intermediate destination in addition to the existing destination. The intermediate destinations menu appears (▷ page 74).
- ❗ The route is calculated using digital map data. The calculation time depends on the distance from the destination, for example.
 - The calculated route may differ from the ideal route, e.g. due to roadworks or incomplete map data. Please also refer to the notes about the digital map (▷ page 102).
- ▶ **To call up keyword search:** select **🔍** by sliding **⏴**, turning and pressing the controller in the address entry menu.

For further information on the keyword search (▷ page 69).


- ▶ **To view the vicinity of the destination:** to select , turn and press the controller. You can explore the destination area.

Requirement for exploring a destination (USA): mbrace must be activated for Internet access (▷ page 136).

Requirement for exploring a destination (Canada): a mobile phone is connected to the multimedia system via Bluetooth® (▷ page 107) or USB (▷ page 176).

Keyword search

Entering keywords

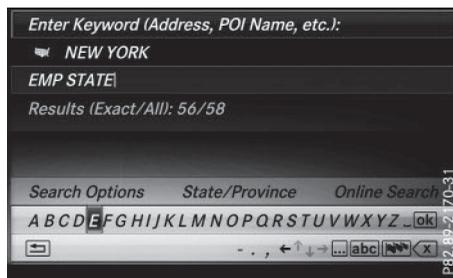

The keyword search is used to help find destinations using fragments of words. The keyword search is tolerant of errors.

It can be used for an address or a POI. For example, you can search for the Empire State Building in New York in this way.

The keyword search finds geographically tolerant hits. If, for example, you are searching for a street located on the edge of a major city, the search will also cover adjacent smaller cities.


The keyword search supports languages using Latin characters.

- ▶ **To switch to navigation mode:** press the  button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Destination:** turn and press the controller.
- ▶ Select **Keyword Search**.
- ▶ Enter the first few letters of the city and street or the POI, e.g. **EMP** and **STATE**. While entering the information, the number of exact matches/all hits is shown. ---/-- is displayed if fewer than three characters have been entered.

999+ is displayed if there are too many hits.

- ▶ Select  . The search results are displayed (▷ page 69).

Selecting search results

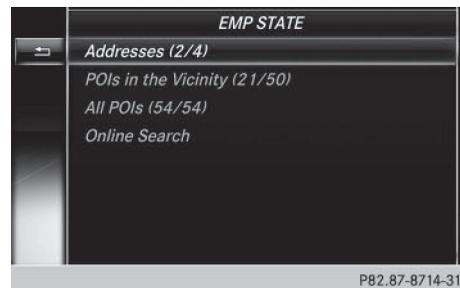

The search results are divided into categories, such as addresses. The number of exact/total hits is shown in brackets.

Further search results are displayed, if **POI Search** and/or **Fuzzy Search** are activated in the search options (▷ page 70).



- ▶ **To select an address:** press the controller. The search results are displayed.

Exact hits are shown at the very top of the list. Hits are listed alphabetically. The search term is highlighted in orange for exact matches.

- ▶ Select an entry: turn and press the controller. The address entry menu appears, showing the destination address.
- ▶ To start route calculation: select **Start** (▷ page 68).
- ▶ **To select a POI:** select **POIs in the Vicinity** or **All POIs** by turning and pressing the controller. A list appears.
- ▶ Select a POI. The POI is shown.
- ▶ To start route calculation: select **Start** (▷ page 68).
- ▶ **To use online search:** select **Online Search**. The search switches to the online functions. Online search requirement (USA): mbrace must be activated for Internet access (▷ page 136). Requirement for the online map display (Canada): a mobile phone is connected to the multimedia system via Bluetooth® (▷ page 107) or USB (▷ page 176).

Selecting search options

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Destination:** turn and press the controller.
- ▶ Select **Keyword Search**.
- ▶ To select **Search Options:** slide **↑⊙**, turn and press the controller.
- ▶ Select **Fuzzy Search** or **POI Search**. Switch the setting on or off . The error-tolerant search is useful if parts of the address are incomplete or the spelling is unclear. The POI search takes into account points of interest in the search.

Selecting a state/province

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.

- ▶ To select **Destination:** turn and press the controller.
- ▶ Select **Keyword Search**.
- ▶ To select **State/Province:** slide **↑⊙**, turn and press the controller. States/provinces are sorted alphabetically.
- ▶ To select a state/province: turn and press the controller.


Using online search

Requirement (USA): mbrace must be activated for Internet access (▷ page 136).

Requirement (Canada): a mobile phone is connected to the multimedia system via Bluetooth® (▷ page 107) or USB (▷ page 176).

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Destination:** turn and press the controller.
- ▶ Select **Keyword Search**.
- ▶ To select **Online Search:** slide **↑⊙**, turn and press the controller. The search switches to the online functions.

Selecting a destination from the list of last destinations

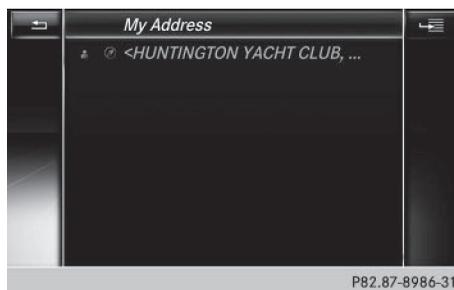

The last 50 destinations are stored automatically.

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Destination:** turn and press the controller.
- ▶ Select **From Previous Destinations**.


- ▶ Select the destination.
The address entry menu appears, showing the destination address.
- ▶ **To start route calculation:** select **Start** (▷ page 68).

Selecting an address book contact as a destination



You can select navigable address book contacts as the destination. These are identified by the  symbol. If you have already entered and saved your home address, you can select this as the destination by using **My Address**.

Selecting a POI category

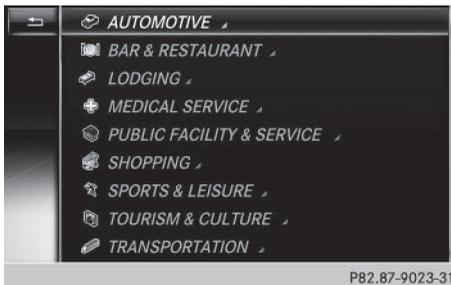

- ▶ Select a category or one of the searches listed in the table.
The  symbol after an entry shows that further categories are available.
- ▶ Select a sub-category.
The search for POIs starts.

If route guidance is active, first define the position for the POI search (▷ page 72).

If no route guidance is active, the POI search covers a 240 mile (400 km) radius around the current vehicle position.

Once the search is completed, the POI list is displayed.

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Destination:** turn and press the controller.
- ▶ Select **From Contacts**.
- ▶ Select the destination.
The address entry menu appears, showing the contact and associated destination address.
- ▶ **To start route calculation:** select **Start** (▷ page 68).

Selecting a destination from POIs

Calling up the POI menu

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Destination:** turn and press the controller.
- ▶ Select **From POIs**.

The search results display the following information:

- an arrow that shows the linear direction to the POI (search around vehicle position)
 - the linear distance to the POI
 - the name of the POI
- ▶ Select a POI.
The complete address of the POI is shown.

Selection	Instructions
Search By Name The search looks for all POIs on the digital map or around one of the three previously specified positions (▷ page 72).	<ul style="list-style-type: none"> ▶ To select Search By Name: turn and press the controller. ▶ Select All POIs or a position for the POI search. The search for POIs starts.
Search By Phone Number All POIs with a telephone number can be selected.	<ul style="list-style-type: none"> ▶ To select Search By Phone Number: turn and press the controller. The search for POIs starts.
Mercedes-Benz Service The search looks for authorized Mercedes-Benz Centers.	<ul style="list-style-type: none"> ▶ To select Mercedes-Benz Service: turn and press the controller. The search for POIs starts.

Defining the position for the POI search

You can define where the POI search is to be carried out during active route guidance by selecting **Near Destination** or **Along the Route**.

The POI search covers a 240 mi (400 km) radius around the selected position.

Selection	Instructions
Near Destination The search is performed in the vicinity of the destination.	<ul style="list-style-type: none"> ▶ Select a category or Search By Name (▷ page 71). ▶ Select Near Destination. The search for POIs starts.
Along the Route The search is performed along the route.	<ul style="list-style-type: none"> ▶ Select a category or Search By Name (▷ page 71). ▶ Select Along the Route. The search for POIs starts.
Current Position Searches in the vicinity of the current vehicle position.	<ul style="list-style-type: none"> ▶ Select a category or Search By Name (▷ page 71). ▶ Select Current Position. The search for POIs starts.

Selecting a POI

Requirement for "Calling up a POI": a mobile phone must be connected to the multimedia system (▷ page 107).


Requirement for "Viewing the vicinity of the destination" and "Calling up the website for the destination" (USA): mbrace must be activated for Internet access (▷ page 136).

Requirement for "Viewing the vicinity of the destination" and "Calling up the website for the destination" (Canada): a mobile phone must be connected via Bluetooth® (▷ page 107) or USB (▷ page 176) with the multimedia system.



- ▶ **To view the vicinity of the destination:** to select ①, turn and press the controller.
If street images are available, the street in the vicinity of the destination address is shown.
- ▶ **To call up the map:** select **Map**.
- ▶ Move the map, change the map scale and select the POI (▷ page 74).
- ▶ **To call up a POI:** select **Call**.
If a phone number is available, the multimedia system switches to the telephone function.
- ▶ **To call up the website for the destination:** select **www**.
If an Internet address is available, data is loaded from the Internet.
- ▶ **To save a POI:** select **Save** by turning the controller and pressing to confirm.
The POI can be saved as:
 - a navigable address book contact
 - a home address
- ▶ **To start route calculation:** press the controller to select **Start** (▷ page 68).

Using the map

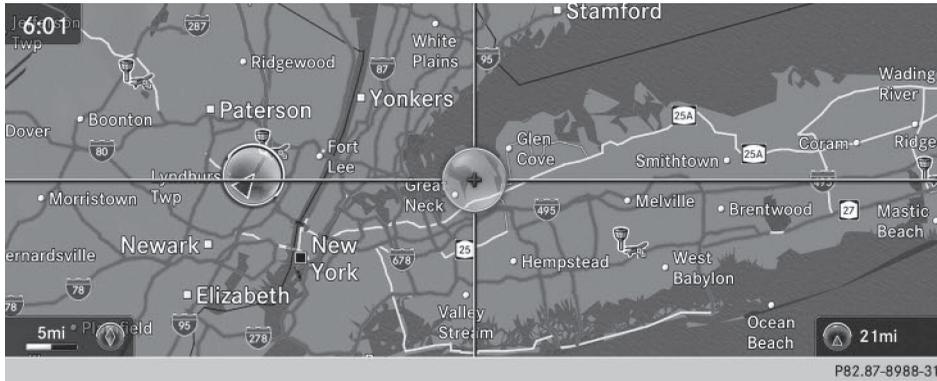

① Crosshair

② Distance of crosshair position from current vehicle position

► **To switch to navigation mode:** press the **NAVI** button.

► **To show the menu:** slide **⊙↓** the controller.

► To select **Destination:** turn and press the controller.

► Select **Using Map**.

The map with crosshair is shown.

► **To move the map:** slide **←⊙→**, **↑⊙↓** or **↻⊙↻** the controller.

► **To change the map scale:** turn the controller until the desired map scale is selected.

The scale is displayed at the bottom. Turning clockwise zooms out from the map; turning counter-clockwise zooms in.

► **To select a destination:** press the controller.

If several destinations are available in the area around the crosshair, these are also displayed.

► To select a destination from the selection list: turn and press the controller.

If the digital map provides navigable address data, you will see the destination address in the address entry menu.

► **To start route calculation:** select **Start** (▷ page 68).

Entering intermediate destinations

Introduction

You can also map the route to the destination yourself by entering up to four intermediate destinations. The sequence of the intermediate destinations can be changed at any time.

The navigation system provides a selection of predefined destinations in eight categories for this purpose, e.g. **Gas Station** or **Restaurants**. You can also use the destination entry options to enter intermediate destinations.

Creating intermediate destinations

► **To switch to navigation mode:** press the **NAVI** button.

► **To show the menu:** slide **⊙↓** the controller.

► To select **Destination:** turn and press the controller.

► Select **Intermediate Destinations**.

► To select a category or **Other:** turn and press the controller.

After selecting a category, the POIs which are available along the route and in the vicinity are displayed.

First, a search for destinations along the route is performed. The search for destinations is

then initiated in the area around the vehicle position.

- ▶ After selecting **Other**, select one of the destination entry options.

Selection	Step
Address Entry	▶ Enter a destination by address (▷ page 66).
Keyword Search	▶ Select a destination using a keyword search (▷ page 69).
From Previous Destinations	▶ Select a destination from the list of last destinations (▷ page 70).
From Contacts	▶ Select a contact from the address book as the destination (▷ page 71).
From POIs	▶ Select a point of interest (▷ page 71).
Using Map	▶ Enter a destination using the map (▷ page 74).
From Memory Card	▶ Select a personal POI (▷ page 79).
From Mercedes-Benz Apps	▶ Enter a destination from Mercedes-Benz Apps (▷ page 76).
Using Geo-Coordinates	▶ Enter a destination using the geo-coordinates (▷ page 77).



P82.89-0658-31

- ▶ To select a POI: turn the controller and press to confirm.

After selecting a POI or entering a destination, the address of the intermediate destination is displayed.

After entering a destination using the map, the address entry menu is displayed. **Start** is highlighted.


- ▶ **To call up a map:** select **Map** by turning and pressing the controller. You can move the map and select the destination.
- ▶ **To make a call:** select **Call**. If the intermediate destination has a telephone number and a mobile phone is connected to the multimedia system (▷ page 107), the call is connected.
- ▶ **To load data from the Internet:** select **www**. If an Internet address is available, data is loaded from the Internet.
- ▶ **To store an intermediate destination in the destination memory:** select **Save** (▷ page 93).
- ▶ **To accept an intermediate destination:** select **OK** by pressing the controller. The immediate destination is entered into position 1 of the intermediate destinations menu.
- ▶ **To enter another intermediate destination:** slide **↑** the controller and highlight **Add New**:
 - ▶ Press the controller.
 - ▶ Proceed as described above.

Editing intermediate destinations

You can perform the following functions:

- change intermediate destinations
- switch the sequence of the intermediate destinations in the intermediate destinations menu
- delete intermediate destinations

i You cannot edit POIs.

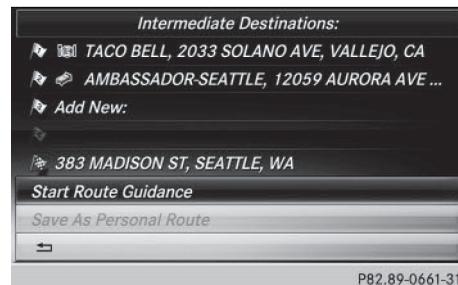

P82.89-0661-31

- ▶ To select an intermediate destination in the intermediate destinations menu: turn and press the controller.
A menu appears.
- ▶ **To change an intermediate destination:** select **Edit** in the menu.
- ▶ Change the address, e.g. the city and street.
- ▶ To select **OK**: turn and press the controller.
The intermediate destinations menu appears and displays the changed intermediate destination.

You can change the order of the intermediate destinations entered and the destination. To change the order, at least one intermediate destination and the destination must have been entered.

- ▶ **To change the order:** in the menu, select **Move**.
- ▶ Turn the controller and move the intermediate destination or destination to the desired position.
- ▶ Press the controller.
- ▶ **To delete an intermediate destination:** select **Delete** in the menu.

Accepting intermediate destinations for the route

- ▶ Insert the SD memory card (▷ page 164).
- ▶ To select **Start Route Guidance** in the intermediate destinations menu: press the controller.
The route is calculated with the entered intermediate destinations.
If an intermediate destination was passed during route guidance, a green tick mark will be entered in the intermediate destinations menu. Once the route has been recalculated, the intermediate destination is deleted from the intermediate destinations menu.

Saving as a personal route

You can save a route including intermediate destinations on the SD card.
Requirements: the SD card has the FAT data system format (e.g. FAT32).

- ▶ Insert the SD memory card (▷ page 164).
- ▶ To select **Save As Personal Route** in the intermediate destinations menu: press the controller.
The route is saved on the SD card under **Personal Routes**.

Searching for a gas station when the fuel level is low

Requirement: the setting **Gas on Reserve** must be enabled (▷ page 64).

If the fuel tank reserve level is displayed, you will see the **Reserve Fuel Would you like to start a search for surrounding gas stations?** message.

- ▶ To select **Yes** or **No**: turn and press the controller.
If you select **Yes**: the gas station search starts. When the search is complete, a list of the gas stations available along the route or in the vicinity is displayed.
If you select **No**: the search is canceled.
- ▶ Select the gas station.
The address of the gas station is displayed.
- ▶ To select **Start**: press the controller.
The selected gas station is entered into position 1 of the intermediate destinations menu. Route guidance begins.
If the intermediate destinations menu already contains four intermediate destinations, a prompt will be displayed, asking you whether you wish to enter the gas station into position 1. If you select **Yes**, the gas station is transferred into the list and intermediate destination 4 is deleted.

Entering a destination from Mercedes-Benz Apps

Requirement (USA): mbrace is activated for the Mercedes-Benz Apps (▷ page 136).

Requirement (Canada): a mobile phone is connected to the multimedia system via Bluetooth® (▷ page 107) or USB (▷ page 176).

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.

- ▶ To select **Destination**: turn and press the controller.
- ▶ Select **From Mercedes-Benz Apps**.
A list shows the available destinations that have been transmitted to the vehicle up to this point.

Using geo-coordinates

- ▶ **To switch to navigation mode**: press the **NAVI** button.
- ▶ **To show the menu**: slide **⊙↓** the controller.
- ▶ To select **Destination**: turn and press the controller.
- ▶ Select **Using Geo-Coordinates**.
Geo-coordinates are entered in degrees, minutes and seconds.

Entering the latitude and longitude coordinates

- ▶ To change the value: turn the controller.
- ▶ To move the selection within the line: slide **←⊙→** the controller.
- ▶ To move the selection between lines: slide **↑⊙↓** the controller.
- ▶ To confirm the value: press the controller.

Saving a destination

- ▶ To select **Save**: turn and press the controller.
The destination can be saved:
 - a navigable address book contact
 - to the SD card
 - a home address

Starting route calculation

- ▶ To select **Start Route Guidance**: turn and press the controller.

Personal POIs and routes

General notes

The use of personal POIs for displaying traffic surveillance equipment is not permitted in every country. Please observe the country-specific regulations and always drive at a suitable speed. Personal POIs are filed in categories:


- **Not Classified**
Standard entry for personal POIs
- **Mercedes-Benz Apps**

Personal POIs (destinations, routes) that you have imported via the online functions.

- Categories which you have created yourself, e.g. on your PC
- Personal routes are not categorized.

Settings for personal POIs

Displaying on the map

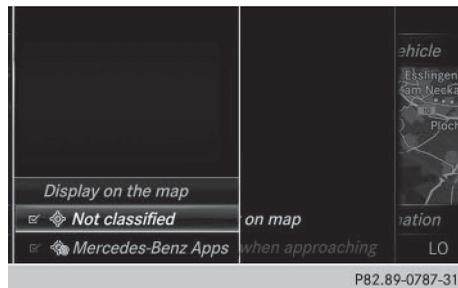


Requirements: an SD card with personal POIs is inserted (▷ page 164). The SD card has the FAT data system format (e.g. FAT32).

All personal POIs of the selected category are displayed on the map with a corresponding symbol.

If the "Alert when approaching" (▷ page 78) function is activated, the symbols are displayed up to a map scale of 2 km.

- ▶ **To switch to navigation mode**: press the **NAVI** button.
- ▶ **To show the menu**: slide **⊙↓** the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Personal POIs**.
- ▶ Select **Display on the Map**.
The menu displays the categories available on the SD card.
- ▶ To select a category: turn the controller and press to confirm.
All personal POIs in the selected category are displayed or not displayed , depending on the previous status.

Alert when approaching

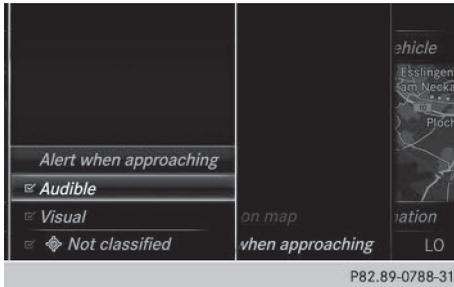

Requirements: an SD card with personal POIs is inserted (▷ page 164). The SD card has the FAT data system format (e.g. FAT32).

If the vehicle is approaching a personal POI, this is highlighted on the map and/or an audible signal sounds.

For this purpose both the corresponding function "Alert when approaching" and the category containing the personal POI must be activated.

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide $\odot \downarrow$ the controller.
- ▶ To select **Options:** turn and press the controller.
- ▶ Select **Personal POIs**.
- ▶ Select **Approaching POI Cue**.
The menu displays the categories available on the SD card.
- ▶ Select **Audible** or **Optical**.
The function is switched on or off , depending on the previous status.
- ▶ To select a category: turn the controller and press to confirm.
The function is switched on or off , for all personal POIs of this category, depending on the previous setting.

Saving personal POIs and routes

General notes

Personal POIs and routes are geodata which are saved in open GPX format (GPS Exchange format) on the SD card.

Requirements: the SD card has the FAT data system format (e.g. FAT32).

Personal POI from current vehicle position or crosshair position

- ▶ Insert the SD memory card (▷ page 164).
- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ When the map is displayed, press the controller until a message appears.
The current vehicle position is saved to the **Not Classified** category on the SD card and also stored in the "Last destinations" memory.
If the "Move map" function is selected (▷ page 62), the crosshair position is saved.
- i** If no SD card is inserted, the personal POI will only be stored in the "Last destinations" memory.

Personal POI from destination address

- ▶ Insert the SD memory card (▷ page 164).
- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ Call up the address entry menu and enter the destination address (▷ page 66).
- ▶ To select **Save:** slide $\odot \downarrow$ the controller.
- ▶ Turn and press the controller.
- ▶ To select **To Memory Card:** turn and press the controller.
- ▶ Enter a name.
- ▶ Select a category.
The current address is saved as a personal POI on the SD card.
- i** You can select a destination from the **From Previous Destinations** or **From Contacts** memories and save it on the SD card.
 - **From Previous Destinations** (▷ page 70)
 - **From Contacts** (▷ page 71)

Personal route from a tour including intermediate destinations

- ▶ Insert the SD memory card (▷ page 164).
- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ Enter a destination, e.g. by address (▷ page 66).
- ▶ Start route calculation (▷ page 68).

- ▶ Create intermediate destinations (▷ page 74).
- ▶ To select **Save As Personal Route** in the intermediate destinations menu: turn and press the controller.
The route is saved in the "Personal routes" folder on the SD card.

Importing personal destinations and routes via Mercedes-Benz Apps

You can use Mercedes-Benz Apps (e.g. Download POI, Local Search) to import destinations to the navigation system. These have their own symbol and are filed in the **Mercedes-Benz Apps** category.

You can save the imported destinations and routes as personal POIs and routes (▷ page 78).

When importing routes, please note:

- The Mercedes-Benz Apps may generate a route based on a different map from the one used by the multimedia system. Points on the route may therefore be situated off the digital roads.
- The Mercedes-Benz Apps minimize the number of route points offered.
For this reason an imported route commenced in the multimedia system may deviate from the original route from the Mercedes-Benz Apps.

Selecting and editing personal POIs and routes

Selecting



The example shows a personal POI.

- ▶ Insert the SD memory card (▷ page 164).
- ▶ **To switch to navigation mode:** press the **NAVI** button.

- ▶ **To show the menu:** slide **⊙↓** the controller.
 - ▶ To select **Options:** turn and press the controller.
 - ▶ Select **From Memory Card.**
The menu displays the categories available on the SD card.
 - ▶ To select a category or **Personal Routes:** turn and press the controller.
The available personal POIs or route entries are displayed.
 - ▶ Select personal POI or personal route.
The address of the personal POI appears or the personal route is displayed in the map.
- If a large number of entries are stored, a register for quick selection appears. Personal POIs and routes can be saved and sorted with different character sets (e.g. ABC, Cyrillic, Arabic).
- ▶ **To select a register:** slide **⊙→** the controller.
 - ▶ To select a character: turn and press the controller.
 - ▶ **To select a character set for sorting:** slide **⊙→** the controller to select **☐☐☐☐**.
 - ▶ Press the controller.
The available character sets are displayed. The **•** dot indicates the current setting.
 - ▶ Turn and press the controller.

Editing



The example shows a personal route.

- ▶ Select personal POI or personal route (▷ page 79).
- ▶ **To explore a personal POI or route:** turn and press the controller to select **Map.**
The map with the crosshair appears and shows the destination.
- ▶ Scroll the map (▷ page 62).
- ▶ Set the map scale (▷ page 95).

- ▶ To return to the menu: press the  button.
- ▶ **To place a call to the personal POI:** select **Call**.
If a mobile phone is connected to the multimedia system and the telephone number is available, the call is connected (> page 114).
- ▶ **To change the name and symbol:** select **Edit**.
 - ▶ Select **Change Name** or **Edit Icon**.
 - ▶ To change name: enter character (> page 31).
 - ▶ To change symbol: select a symbol.
The symbol is saved.
- ▶ **To delete a personal POI or route:** select **Delete**.
A prompt will appear.
- ▶ Select **Yes** or **No**.
If you select **Yes**, the personal destination or personal route is deleted.
- ▶ **To select the outward and return route:** select **Swap**.
The starting and destination positions of your personal route, and thus the direction for route guidance, are switched round. One-way streets or restricted intersections are taken into consideration. Therefore, the outward and return routes may differ from each other.
- ▶ **To save a personal POI:** select **Save**.
- ▶ Continue saving (> page 93).
- ▶ **To start route guidance:** select **Start**.

Recording the route

General notes

Routes are recorded using the SD card.

Requirements: the SD card has the FAT data system format (e.g. FAT32).

When recording the route, bear in mind the following:

- If the SD card is inserted, it must not be removed during recording.
- If route recording is started manually, it must be finished manually before the multimedia system is switched off (e.g. when the engine is switched off).
- The multimedia system minimizes the number of route points recorded. Therefore when the recorded route is subsequently commenced, it may differ from the route that was originally recorded.

Starting/finishing route recording

- ▶ Insert the SD memory card (> page 164).
- ▶ **To switch to navigation mode:** press the  button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Destination:** turn and press the controller.
- ▶ Select **From Memory Card**.
- ▶ Select **Start Route Recording**.
The route is recorded and REC appears at the bottom edge of the screen.
- ▶ To stop recording, select **End Route Recording** from the menu.
The route is stored under **Personal Routes**.

Displaying/editing the recorded route

- ▶ Insert the SD memory card (> page 164).
- ▶ **To switch to navigation mode:** press the  button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Destination:** turn and press the controller.
- ▶ Select **From Memory Card**.
- ▶ Select **Personal Routes**.
Previously recorded routes are displayed.
- ▶ To select a route: turn and press the controller.
The map appears with a menu. The recorded route is shown on the map in blue.
- ▶ **To start route calculation:** select **Start**.
- ▶ **To change the name and symbol:** select **Edit**.
 - ▶ Select **Change Name** or **Edit Icon**.
 - ▶ To change name: enter character (> page 31).
 - ▶ To change symbol: select a symbol.
The symbol is saved.

Route guidance

General notes

The multimedia system calculates the route to the destination without taking account of the following, for example:

- traffic lights
- stop and yield signs
- parking or stopping restrictions

- road narrowing
- temporary traffic rules and regulations

The navigation system can give differing driving recommendations if the actual street/traffic situation does not correspond with the digital map's data. For example, if the road layout or the direction of a one-way street has been changed.

For this reason, you must always observe road and traffic rules and regulations during your journey. Road and traffic rules and regulations always have priority over system driving recommendations.

Route guidance begins once a route has been calculated (> page 68).

The navigation system guides you to your destination by means of driving recommendations in the form of audible navigation announcements and route guidance displays.

The route guidance displays can be seen if navigation mode is switched on.

If you do not follow the navigation announcements or if you leave the calculated route, the navigation system automatically calculates a new route to the destination.

If the digital map contains the corresponding information, the following applies:

- During route guidance, the navigation system tries to avoid roads with restricted access. Those roads, for example, that are closed to through-traffic.
- Roads that have time restrictions (e.g. closed on Sundays and public holidays) are considered for route guidance on days when they are open. For this purpose, the relevant times must be correctly stored in the database.

Displays during route guidance

Change of direction

Changes of direction have three phases:

- Preparation phase
- Announcement phase
- Change-of-direction phase


Changes in direction are also shown in the multifunction display (see the vehicle Operator's Manual).

Preparation phase: the navigation system prepares you for the upcoming change of direction.

Based on the example display below, the change of direction is announced by the "Prepare to turn right message", for instance. You see the full-screen map.


Announcement phase: the navigation system announces the imminent change of direction. The change of direction is announced ahead of time, such as with the announcement "Turn right in 0.5 miles".

The display is now split into two sectors. The map is shown on the left side of the display, and a detailed image of the intersection or a 3D image of the imminent change of direction is shown on the right side of the display.

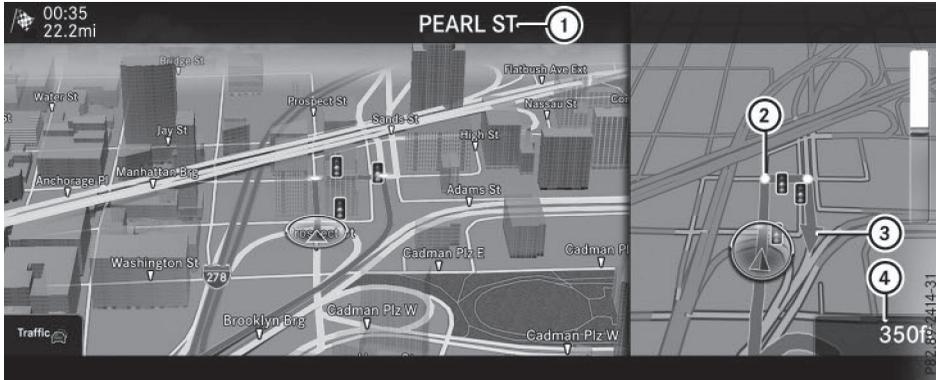


- ① Next road
- ② Point at which the change of direction takes place (white dot)
- ③ Change of direction (turn right here)
- ④ Distance to the next change of direction

Change-of-direction phase: the navigation system announces the immediate change of direction. The change of direction is announced ahead of time, e.g. with the announcement "Now turn right". The display is split in two like in the announcement phase.

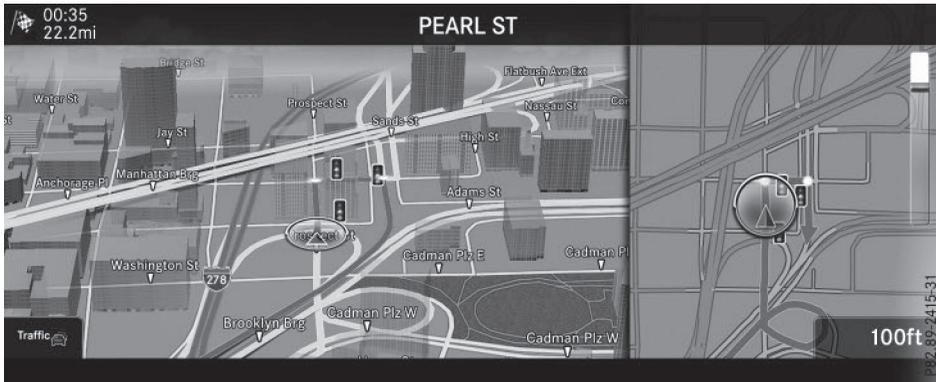


The change of direction is performed when the light-colored bar on the right drops down to 0 ft and the current vehicle position symbol has reached the white change-of-direction point.

When the change of direction is completed, the map will appear in full screen mode again.

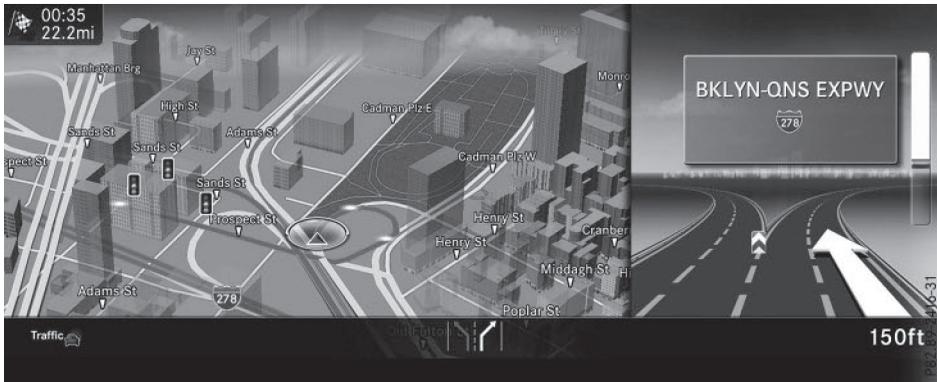

The image shows an example of route guidance at a highway intersection when driving on a highway.

Lane recommendations

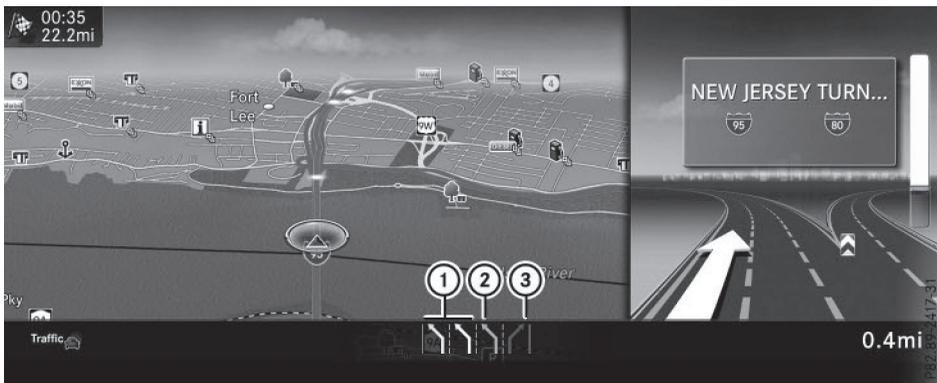

- ① Recommended lanes (white)
- ② Possible lane (light gray)
- ③ Lanes not recommended (dark gray)


If the digital map contains the relevant data, the navigation system can display lane recommendations on multi-lane roads for the next change of direction.

Recommended lane ①: in this lane, you will be able to complete the next change of direction and the one after that.

Possible lane ②: you will be able to complete the next change of direction only in this lane.

Lane not recommended ③: you will not be able to complete the next change of direction if you stay in this lane.

The navigation system shows the lane recommendations for the next two changes of direction. The multifunction display also shows lane recommendations (see the vehicle Operator's Manual).

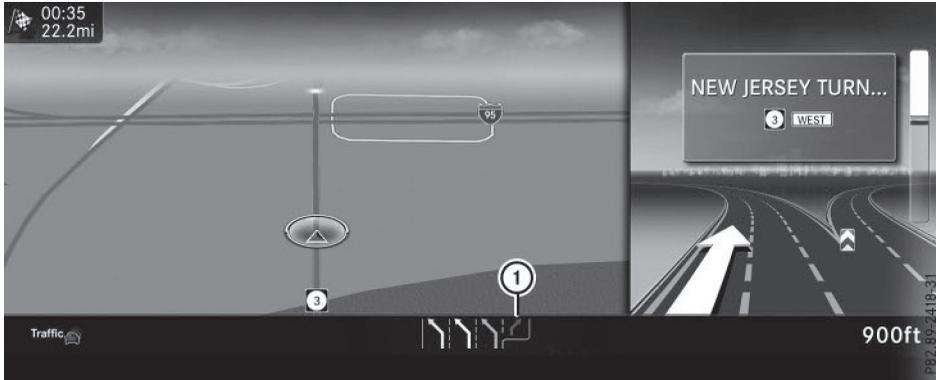

① Approaching new lane

During the change of direction, new lanes may be added. These will be shown in the display of lane recommendations with a lower boundary line.




Once the destination is reached, you will see the checkered flag. Route guidance is finished.

Highway information

Requirement: the [Highway Information](#) map content must be enabled (▷ page 97).



Display mode: while driving on the highway, gas stations, rest stops, rest areas and highway exits are displayed along with their immediate distances from the current vehicle position.

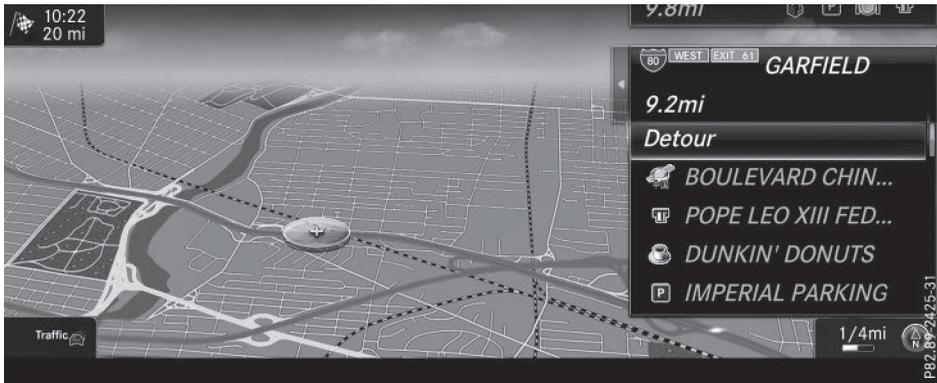

Highway information facilitates route guidance to a POI (e.g. rest stops, highway exits) and use of the traffic jam function. The remaining route on the highway in this case is blocked in the direction of travel from the selected exit.

- ▶ **To call up the selection mode:** while displaying the highway information, slide the controller.

The marker is on the highway information. The associated position is marked on the map.
- ▶ **To start route guidance and use additional functions:** select a POI by turning and pressing the controller.

The POI details are displayed.

The POI can now be:

 - Store in the address book (▷ page 93)
 - View on the map (▷ page 77)
 - Call if a phone is connected and a phone number is available (▷ page 114)
 - Select for route guidance and calculate a route to it (▷ page 68)
- ▶ **To use the traffic jam function:** select **Detour** by turning and pressing the controller.

The traffic jam function appears (▷ page 89).

Navigation announcements

Repeating navigation announcements

If you missed the current navigation announcement, you can call it up again.

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide the controller.
- ▶ To select : turn and press the controller.

- i** If the **Repeat Spoken Driving Recommendations** function has previously been added as a favorite, you can alternatively select the function using the favorites button (▷ page 35).

Setting the volume manually

- ▶ Set the volume using the thumbwheel during the navigation announcement.
- i** When you start the engine, the volume will be at its lowest setting.

Switching navigation announcements on/off

- ▶ **To switch off navigation announcements:** during a navigation announcement, press the thumbwheel to the right of the controller.

or

- ▶ Press the  button on the multifunction steering wheel during a navigation message. The **Spoken driving recommendations have been deactivated.** message appears.

- ▶ **To switch navigation announcements back on:** press the controller.

- ▶ Select : turn and press the controller. The multimedia system automatically switches the navigation announcements back on when:

- a new route is calculated
- the vehicle is started

A navigation message is given if the route is recalculated during dynamic route guidance due to new traffic reports (> page 90).

Canceling/continuing route guidance

Canceling route guidance

- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Destination:** turn and press the controller.
- ▶ Select **Cancel Active Route Guidance.** The blue route line is no longer shown on the map.

Resuming route guidance

- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Destination:** turn and press the controller.
- ▶ Select **Continue Route Guidance.** A new route is calculated.

Route information


Destination information



- ▶ **To switch to navigation mode:** press the  button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Route:** turn and press the controller.
- ▶ Select **Destination Information.** The destination and existing intermediate destinations are displayed with distances, travel time and arrival time.
- ▶ **To select destination or intermediate destination:** turn and press the controller. The address appears.

- ▶ Select **Save**.
The destination or intermediate destination can be saved as:
 - a navigable address book contact
 - a home address
- ▶ To call up the map, select **Map**.
- ▶ Move the map, change the map scale and select the destination or the intermediate destination (▷ page 74).
- ▶ To call the destination or intermediate destination, select **Call**.
If a phone is connected and a phone number is available, the multimedia system switches to the telephone function.

Taking an alternative route

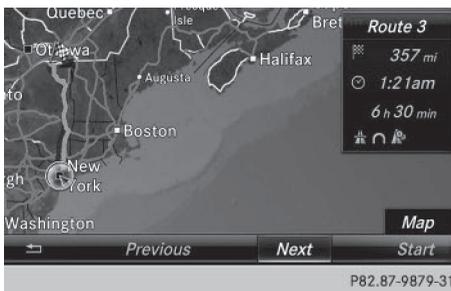


If the **Calculate Alternative Routes** setting is activated , different routes will be offered each time a route is calculated (▷ page 63).

The multimedia system can also display these for the current route.

The economic route is displayed with a green line. The other routes are displayed with a dark blue line.

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Route**: turn and press the controller.
- ▶ Select **Alternative Route**.
Route 1 is shown.
- ▶ To display additional routes: select **Next** or **Previous**.
- ▶ **To start a new route guidance:** select **Start**.

Route list

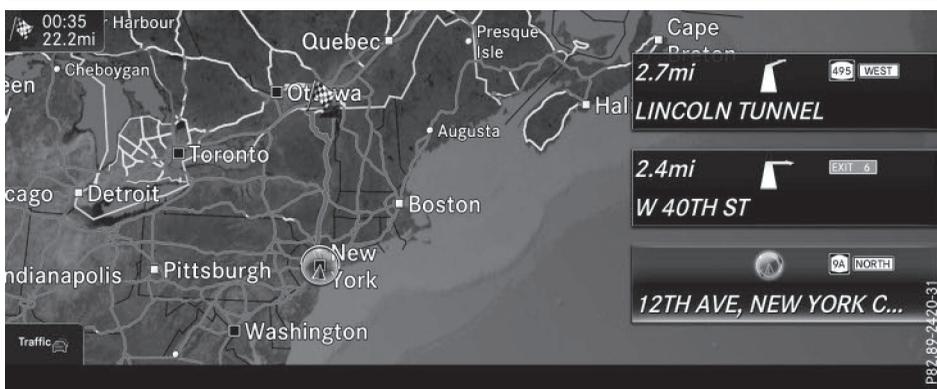

Navigation

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Route**: turn and press the controller.
- ▶ Select **Route List**.
The route list shows the next change of direction and the immediate distances from the current vehicle position.
- ▶ **To display additional route sections:** turn the controller.
The position of the change of direction that belongs to the respective route section is indicated on the map with a cross.

Where am I?



- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Position**: turn and press the controller.
- ▶ Select **Where am I?**.
The street you are currently on and the previous and next intersections are displayed.

Traffic jam function



- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide the controller.
- ▶ To select **Route**: turn and press the controller.
- ▶ Select **Detour**.
- ▶ **To specify the start of the traffic jam section:** select **Beginning**.
The next possible traffic jam section starting point is marked.
- ▶ Turn the controller.
The marking moves along the route to the next starting position.
- ▶ Press the controller.
The start of the traffic jam is set.
- ▶ **To specify the end of a traffic jam section:** select **End**.
The next possible traffic jam section end point is marked.
- ▶ Turn and press the controller.
- ▶ **To calculate the detour:** select **Start**.

Off-road

General notes

The navigation system may guide you to off-road routes that your vehicle cannot drive on without causing damage to the tires and wheels or the vehicle itself. It is the driver's sole responsibility to determine the suitability of the route. The condition of the off-road routes may vary, and their driveability may be affected by different factors such as time of day, season and current weather conditions, which the navigation system cannot judge or take into account.

Route guidance to an off-road destination

The navigation system can also guide you to destinations which are within the area of the digital map, but which are not themselves on the map.

These destinations are known as off-road destinations, which you can enter using the map, for example. In these cases, the navigation system guides you for as long as possible with navigation announcements and displays on roads known to the system.

If the vehicle reaches an area which is not part of the digital map, the display appears as a split-screen view. On the right, an arrow appears that points to the off-road destination. You will hear the announcement: "Please follow the arrow on the display". As the vehicle approaches the destination, you will see a display to this effect.

Route guidance from an off-road location to a destination

Off-road location: the vehicle's position is on the digital map, but the map does not contain any information about that location. The navigation system is able to guide you to a destination even from an off-road location.

At the start of route guidance, you will see the **Road Not Mapped** message, an arrow and the distance to the destination. The arrow shows the compass heading to the actual destination. As soon as the vehicle is back on a road known to the system, route guidance continues in the usual way.

Off-road during route guidance

Due to road construction, for example, there may be differences between the data on the digital map and the actual course of the road. In such cases, the system will temporarily be unable to locate the vehicle position on the digital map. The vehicle is therefore in an off-road position.

In the display, you will then see the **Road Not Mapped** message, an arrow and the distance to the destination. The direction arrow shows the compass heading to the destination.

As soon as the system can assign the vehicle position to the map again, route guidance continues in the usual way.

Real-time traffic reports

Requirements


- ① This function is currently not available for Canada.

In order to receive real-time traffic reports via satellite radio, you need to subscribe to SIRIUS XM Satellite Radio Traffic Message Service.

Further information on satellite radio (> page 152).

The multimedia system can receive traffic reports via satellite radio and take account of these for route guidance in the navigation system. Received traffic reports are displayed on the map either as text or as symbols.

Real-time traffic reports on the map

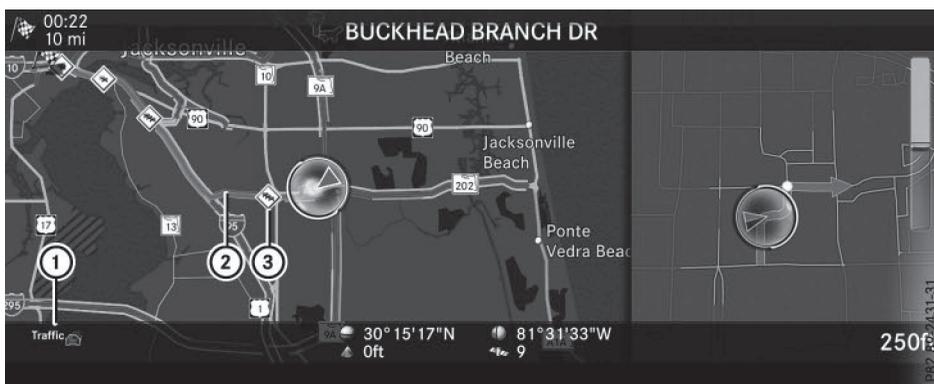

- ① Traffic reports can be received or traffic reports are available
- ② Icon delimiting the section of the route affected (color lines)
- ③ Traffic incident on the route (traffic jam symbol)


If display ① is not shown, traffic reports cannot be received.

The navigation system can show certain traffic incidents on the map. Traffic reports are shown on the map at scales of 1/32 mi to 20 mi.

► **To hide the menu:** slide and press the controller.

The map can be seen in the full-screen display.

► **To set the map scale:** turn the controller until the desired map scale is selected.

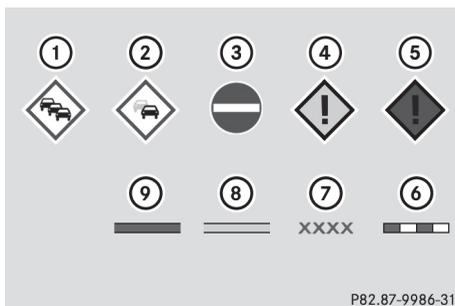

- ① Traffic jam on the route
- ② Slow-moving traffic on the route
- ③ Road blocked


- ④ Traffic jam
- ⑤ Traffic warning
- ⑥ Dashed red and white line delimiting the traffic warning
- ⑦ Road block (crosses along the affected road)
- ⑧ Slow-moving traffic (orange line along the affected route)
- ⑨ Traffic jam (red line along the affected route)

Displaying real-time traffic reports

Starting a search for traffic reports


- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Traffic**: turn and press the controller.
- ▶ To close the report: press the controller.

Traffic symbol information

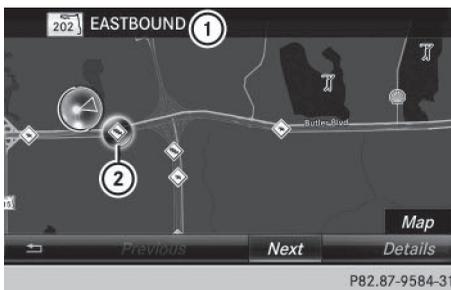

- ① Affected roads with indication of direction
- ② Symbol for report type, e.g. traffic flow message

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Traffic**: turn and press the controller.
- ▶ To select **Traffic Symbol Information**: turn and press the controller. The map appears and shows the available traffic information as icons. The first traffic information is highlighted.
- ▶ To highlight additional traffic symbols, select **Next** or **Previous**.
- ▶ **To move the map:** select **Map**. You can move the map to enable further traffic information to be displayed.

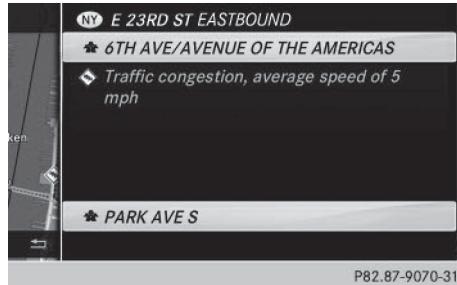

You can have the traffic report relevant to a traffic icon shown.


- ▶ To select **Details**: turn and press the controller.

The report shows the following information:

- State/province, road and display of the affected direction
- Section of the road to which the traffic report applies
- Traffic icon and traffic report

- ▶ **To close the detailed display:** press the  button.

Displaying reports on the route

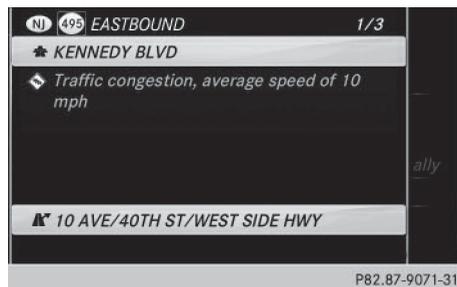


The function is only available while route guidance is active. It shows the available traffic reports affecting the current route.

If there are no reports for the route or the function is not supported in the selected language:

the **Messages On Route** menu item is gray and cannot be selected.

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Traffic:** turn and press the controller.
- ▶ To select **Messages On Route:** turn and press the controller.
The traffic report window appears. Several traffic reports may be available for the calculated route, marked for example by 1/3. The report shows the following information:
 - State/province, road and display of the affected direction
 - Section of the road to which the traffic report applies
 - Traffic icon and traffic report
- ▶ **To display the next/previous traffic report:** turn the controller.
- ▶ **To close the display:** press the **↩** button.

Displaying all traffic reports

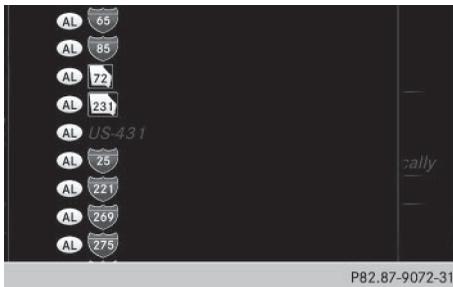

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Traffic:** turn and press the controller.
- ▶ To select **All Messages:** turn and press the controller.
A list is shown containing all roads, areas or regions affected by traffic reports. Roads, areas or regions not on the route also appear in the list.
- ▶ **To select the road, area or region:** turn the controller and press to confirm.
The traffic report is displayed. There may be several traffic reports for the affected road.

You can find an example of a traffic report here: (▷ page 91).

- ▶ **To close the display:** press the **↩** button.

Settings for the display on the map

You can switch these displays on/off on the map:

- Incidents
- Speed & Flow
- Free Flow
- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Traffic:** turn and press the controller.
- ▶ To select **Traffic Information On Map:** turn and press the controller.
- ▶ Select **Incidents**, **Speed & Flow** or **Free Flow**.
The display is activated or deactivated .

Reading out traffic reports on the route

Introduction

The text reader function is only available while route guidance is active. It reads out traffic reports affecting the current route.

You can select from the following text reader properties:

- Language (▷ page 44)
 - Text reader speed (▷ page 40)
- You can start the text reader function manually or set it to automatic.

Starting the text reader function manually

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Traffic:** turn and press the controller.
- ▶ Select **Read Out All Messages on Route**.
The multimedia system reads out the reports in sequential order.

If there are no reports for the route, the **Read Out All Messages on Route** menu item is gray and cannot be selected.

- ▶ **To cancel the read-aloud function:** select **Cancel Read-Aloud Function**.

The multimedia system reads the current report aloud and then exits the read-aloud function.

Automatic text reader function

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙** the controller.
- ▶ To select **Traffic:** turn and press the controller.
- ▶ Select **Read Traffic Announcements Automatically**.
Depending on the previous status, switch the option on or off .

Recalculating the route dynamically

The **Dynamic Traffic Route** route type takes into account all of the traffic reports it receives for the current route when calculating the route (▷ page 63).

If you have selected **Dynamic Traffic Route** as the route type, the multimedia system guides you to your destination along the updated route.

Storing destinations

General notes


If a route to a destination has been calculated, the destination is saved to the last destinations memory. If the memory is full, the oldest destination is overwritten. When you save the current vehicle position or a crosshair position, this position is stored in the "Last destinations" memory.

You can save destinations permanently in the address book and on an SD card. For instance, this is possible immediately after entering an address.

Requirements: the SD card has the FAT data system format (e.g. FAT32).

- i** Equipment with touchpad: alternatively, you can carry out these steps on the touchpad (▷ page 27).

Storing the destination in the address book

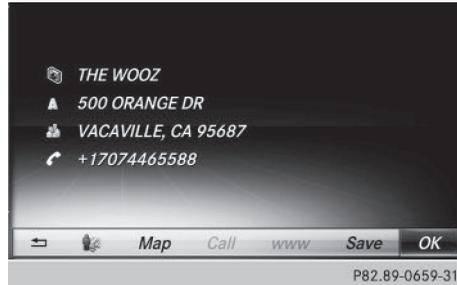

The example shows a POI.

- ▶ To select **Save:** turn and press the controller. A menu appears.
- ▶ **New contact:** select **As New Contact**.
If the address book already contains contacts, the entry **Add to Contact** is also available.
- ▶ Select **Not Classified, Home** or **Work**.
An input menu shows the destination address.
- ▶ Enter a surname and a first name. Character entry (▷ page 31).
- ▶ To select **OK:** turn and press the controller.
The **Saving Successful** message appears. The destination address is saved in the address book as a navigable contact.
- ▶ **To add to a contact:** select **Add to Contact**.
The address book appears.
- ▶ Search for a contact (▷ page 130).
- ▶ Press the controller.
The **Saving Successful** message appears. The destination address is added to a contact in the address book.
Telephone numbers are not transferred to the telephone number fields of the address book. After selecting the destination address from the address book for navigation, the associated telephone number will be displayed.
If the contact already has two destination addresses, a prompt will appear asking if a destination address should be overwritten.

- ▶ Select **Yes** or **No**.
If you select **Yes**, a list showing both destination addresses appears.
- ▶ To select the destination address: turn and press the controller.
The destination address is overwritten.

Saving a destination to an SD card

- ▶ Insert the SD memory card (▷ page 164).
- ▶ Enter an address (▷ page 66).
If the address has been entered in full, the destination can be saved.
- ▶ To select **Save**: turn and press the controller.
A menu appears.
- ▶ Select **To Memory Card**.
- ▶ **Not Classified** or, if available, select a category that you have created yourself.
An input menu appears.
- ▶ Enter a surname and a first name. Character entry (▷ page 32).
- ▶ Select **OK**.
The **Saving Successful** message appears.
The destination is saved to the SD card.

Saving the current vehicle position

- ▶ **To switch to navigation mode**: press the **NAVI** button.
- ▶ **To show the menu**: slide **⊙↓** the controller.
- ▶ To select **Position**: turn and press the controller.
- ▶ Select **Save**.
The current vehicle position is saved in "Last destinations".

Saving the crosshair position

- ▶ **To switch to navigation mode**: press the **NAVI** button.
- ▶ **To display the crosshair**: press the controller.
- ▶ Move the map to the desired position (▷ page 62).
- ▶ **To show the menu**: press the controller.

- ▶ To select **Position**: turn and press the controller.
- ▶ Select **Save**.
The crosshair position is saved in the last destinations.

Editing the last destinations

☰	HUNTINGTON YACHT CLUB, 91 1ST AVE, NEW YORK CITY, NY	Details
	COLUMBUS WAY, PARSIPPANY TR	Delete
	4254 BROADWAY, NEW YORK CIT	Delete All
	SOUTH BOMBAY S BOMBAY RI	
	388 PACIFIC ST, NEW YORK CITY,	
	East River FDR DR N, NEW YORK C	
	466 FLUSHING AVE, NEW YORK C	
	120 BROADWAY, NEW YORK CITY,	

P82.87-9673-31

- ▶ **To switch to navigation mode**: press the **NAVI** button.
- ▶ **To show the menu**: slide **⊙↓** the controller.
- ▶ To select **Destination**: turn and press the controller.
- ▶ Select **From Previous Destinations**.
The "Last destinations" memory appears.
- ▶ **To save the destination**: select the destination.
- ▶ Store the destination in the address book (▷ page 93).
- ▶ **To view the details**: while in the "Last destinations" memory, turn the controller and highlight the entry.
- ▶ Slide **⊙→** the controller.
A menu appears.
- ▶ To select **Details**: press the controller.
- ▶ **i** The destination address can be changed if desired. For instance, a different street or house number can be selected.
- ▶ **To delete one or all destinations**: while in the "Last destinations" memory, turn the controller and highlight the entry.
- ▶ Slide **⊙→** the controller.
A menu appears.

- ▶ To select **Delete** or **Delete All**: turn and press the controller.
A prompt appears.
- ▶ Select **Yes** or **No**.
Selecting **Yes** deletes the selected destination or all destinations.

Map functions


General notes

Company logos displayed on the map are trademarks of the respective companies and used solely for the purpose of indicating the locations of these companies. The use of such logos on the map does not indicate approval of, support of or advertising by these companies for the navigation system itself.

- ▶ **i** Equipment with a touchpad: alternatively you can carry out this operation using the touchpad (> page 27).

Map settings

Setting the map scale

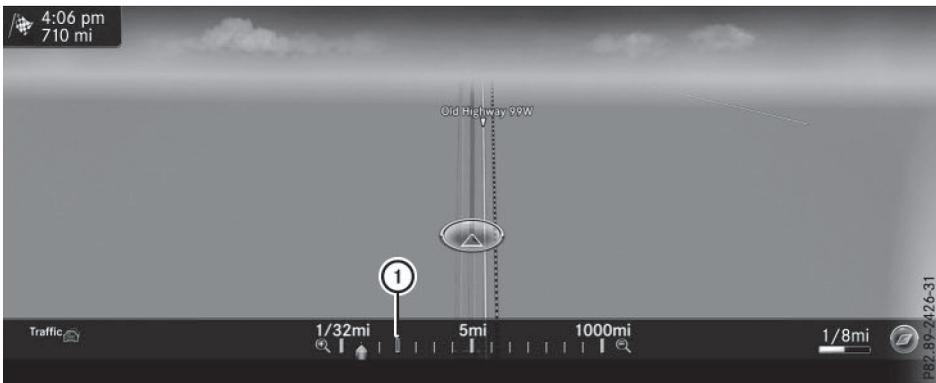


Requirement: the map is in full screen mode, the menu is faded out (> page 61).

The lower left-hand section of the map shows the currently set map scale and compass needle.

Right-hand-drive vehicles: the currently set map scale and compass needle are displayed in the lower right-hand section of the map.

- ▶ **To show the map in full screen mode:** to hide the menu, push the  button.
- or
- ▶ Slide up  or down  the controller to the center of the map and press.
- ▶ **To set the map scale:** as soon as you turn the controller, the scale bar appears on the bottom of the display.
- ▶ Turn the controller until the needle points to the desired map scale.
Rectangle ① in the scale bar indicates the last map scale set when a scale was selected. Once you are finished selecting a map scale, the new map scale will be shown.
Once you are finished selecting a map scale, the new map scale will be shown.

Selecting map orientation

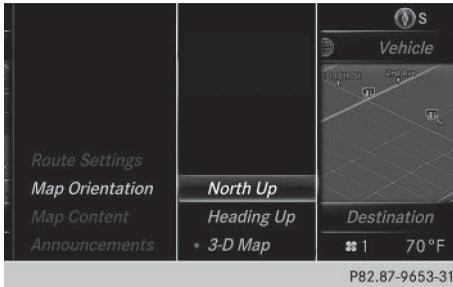


Navigation

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Map Orientation**.
The **•** dot indicates the current setting.
- ▶ Turn and press the controller.
The map orientation is set.

Change map direction	Explanation
North Up	The map view is displayed so that north is always up.
Heading Up	The map view is aligned to the direction of travel. The direction of travel is always at the top; the red tip of the symbol points north.
3-D Map	The map view is aligned to the direction of travel. The map displays a 3D oblique view with elevation; the red tip of the symbol points north.

Selecting POI symbols on the map

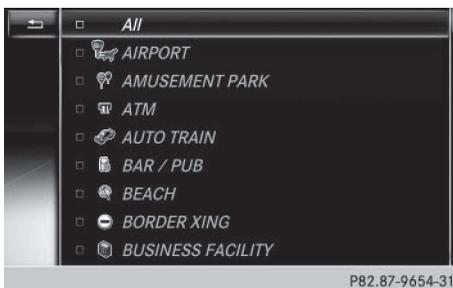

POIs can be displayed as symbols in the map display. POIs include, for example, gas stations, hotels and restaurants.

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Options**: turn and press the controller.

- ▶ Select **Map Content**.
- ▶ Select **POI Symbols On Map**.
The **•** dot indicates the current setting.
- ▶ Turn and press the controller.
Default Symbols shows symbols of predefined categories in the map.
Custom Symbols allows symbols to be selected from other/all available categories.
- ▶ Turn and press the controller.
You have the option of selecting symbols to be displayed or not displayed on the map.

The list shows all symbols that are contained on the digital map across all countries. However, not all points of interest are available in all countries. As a result, certain point of interest symbols may not be displayed on the map, even if the symbol display is switched on.

Selecting text information on the map

At the bottom of the display, you can specify whether to display geo-coordinates or not to display text information for the street you are currently on.

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Map Content**.
- ▶ Select **Text Information On Map**.
The **•** dot indicates the current setting.
- ▶ Turn and press the controller.
Current Street shows the current street at the bottom of the display.
Geo-coordinates shows the longitude and latitude, elevation and number of satellites received.
The elevation shown may deviate from the actual elevation.
- ▶ Turn and press the controller.

Switching highway information on/off

While driving on the highway, gas stations, rest stops, rest areas and highway exits are displayed along with their immediate distances from the current vehicle position (▷ page 84).

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Map Content**.
- ▶ Select **Highway Information**.
Switch the display in the map on or off .
- Further information (▷ page 84).

Displaying the next crossroads


If route guidance is not active, the next crossroads can be displayed at the upper edge of the display.

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ Select **Options**.
- ▶ Select **Map Content**.
- ▶ Select **Next Intersecting Street**.
Switch the display in the map on or off .

Showing the map version

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Map Content**.
- ▶ Select **Map Version**.
Information on the current map version is shown. Information about new versions of the digital map can be obtained from an authorized Mercedes-Benz Center.

Rotating the 3D map

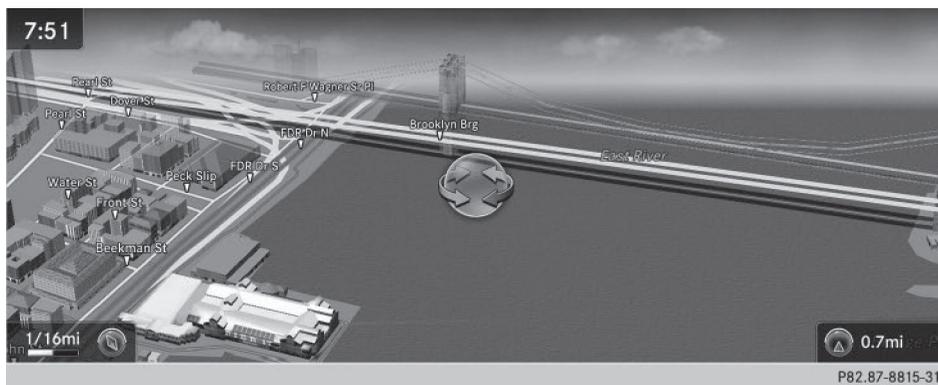

You can use this function to explore the vicinity of the destination in a 3D view. The function is available in all map scales.

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Position**: turn and press the controller.
- ▶ Select **3D Map Rotation**.
- ▶ Turn the controller to change to the 3D map perspective.

Other functions:

- Moving the map (> page 62)
- Changing the map scale (> page 95)

Map display

Displaying the navigation map




The navigation map and satellite images are shown in globe projection. This allows for a realistic map display free from distortion in all map scales.

Other functions:

- Moving the map (▷ page 62)
- Setting the map scale (▷ page 95)

Building images

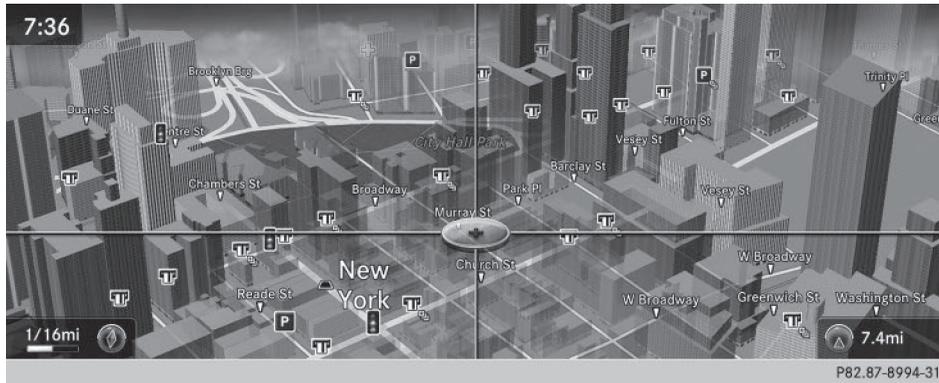

In the map scales 1/32 mi (20 m) and 1/16 mi (50 m) important buildings are depicted realistically on the map. Other buildings are shown as models.

Elevation model



Cities located in mountainous regions are realistically depicted using elevation modeling.

Avoiding an area

General notes

The navigation system enables you to avoid areas you do not wish to drive through.

If you activate or deactivate a route block while route guidance is active, the navigation system will calculate a new route. If you activate or deactivate a route block while route guidance is inactive, the navigation system will use the new setting for the next route guidance.

The calculated route may include an area to be avoided if:

- your destination is located in such an area
- there is no alternative route of comparable length available

Highways within blocked areas are always taken into consideration in the route calculation.

- ❗ Equipment with a touchpad: alternatively you can carry out this operation using the touchpad (> page 27).

Avoiding a new area

Navigation



- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Options:** turn and press the controller.
- ▶ Select **Route Settings**.
- ▶ Select **Avoid Options**.
- ▶ Select **Avoid Area**.
- ▶ Select **Avoid New Area**.
A menu appears.
- ▶ Select **Using Map** or **Address Entry**.
If you select **Using Map**, the map with crosshair appears.
If you select **Address Entry**, the address entry menu appears where you can enter the address (> page 66). The map appears with the crosshair after the address is entered.
- ▶ **To select an area:** when the map with crosshair appears, press the controller.
A red square appears on the map, symbolizing the area to be blocked.
- ▶ To change the size of the area, turn the controller.
The map scale is shown at the bottom of the display. The needle is on the map scale currently selected.
- ▶ When the desired size is set, press the controller.
The area is entered into the list.

Turning an area on/off and displaying/changing the area



- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Options:** turn and press the controller.
- ▶ Select **Route Settings**.
- ▶ Select **Avoid Options**.
- ▶ Select **Avoid Area**.
A list appears.
- ▶ **To switch an area to avoid on/off:** select an area by turning and pressing the controller.
The area is avoided or not avoided .
- ▶ **To display/change an area:** to select an area, turn the controller.
- ▶ Slide **⊙→** the controller.
- ▶ To select **Display/Change:** press the controller.
The map with the crosshair appears.
The area currently blocked is displayed as a red square.
- ▶ To move the area to a new location: slide **←⊙→**, **↑⊙↓**, **↻⊙↻** and press the controller.
- ▶ To change the size of the area: press the controller.
- ▶ To accept changes: press the controller.
A message appears stating that the area has been set.

Deleting one/all areas

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **⊙↓** the controller.
- ▶ To select **Options:** turn and press the controller.
- ▶ Select **Route Settings**.
- ▶ Select **Avoid Options**.
- ▶ Select **Avoid Area**.
A list appears.
- ▶ **To delete an area:** mark an area by turning the controller.
- ▶ Slide **⊙→** the controller.
- ▶ Select **Delete**.
A prompt appears asking whether you wish to delete the area.

- ▶ Select **Yes** or **No**.
After selecting **Yes**, the area is deleted.
- ▶ **To delete all areas:** slide  the controller when the list is displayed.
- ▶ Select **Delete All**.
A prompt appears asking whether you wish to delete all areas.
- ▶ Select **Yes** or **No**.
After selecting **Yes**, all areas are deleted.

SIRIUS XM service

Displaying SIRIUS XM service information

You can display the SIRIUS XM service information.

- ▶ **To switch to navigation mode:** press the  button.
- ▶ **To show the menu:** slide  the controller.
- ▶ To select **Traffic:** turn and press the controller.
- ▶ Select **SIRIUS Service**.
The window on the right half of the display shows the telephone number of the provider (SIRIUS XM) and the serial number of your service module.

Registering for the SIRIUS XM traffic report service

- ▶ Call the provider telephone number shown on the display.
-  You can also have the satellite service activated online. To do so, visit the SIRIUS XM Radio website at <http://www.sirius.com> (USA).

Once the connection has been established:

- ▶ Follow the service employee's instructions.
The activation process may take up to ten minutes.

If registration is not included when purchasing the system, your credit card details will be required to activate your account.

Updating the digital map

Introduction

The digital maps generated by the map software become outdated in the same way as conventional road maps. Optimal route guidance can only be provided by the navigation system in conjunction with the most up-to-date map software.

Information about new versions of the digital map can be obtained from an authorized Mercedes-Benz Center. You can have the digital map updated there using a data medium, or you can update it yourself.

Updating at an authorized Mercedes-Benz Center

If an update for your map software is available, you will receive it free of charge at your Mercedes-Benz Service Center during your vehicle's annual service. You can arrange a separate appointment for this at your Mercedes-Benz Service Center on request.

The update can only be performed:

- at an authorized Mercedes-Benz Center
- for map data for North America

The map software is not provided on DVD.

Carrying out a manual update

After the free update of the map data has expired or when buying map data, you can update the data yourself.

The update process may take some time (up to 45 minutes), depending on the size of the digital map. The update will be completed more quickly if the vehicle is stationary. If you begin the update while the vehicle is stationary and the starter battery has insufficient power, the multimedia system may switch off automatically. This protects the battery. In order to prevent

this, a suitable power supply to the vehicle must be maintained.

Navigation functions

Calling up the navigation system menu

- ▶ **To switch to navigation mode:** press the **NAVI** button.
- ▶ **To show the menu:** slide **↑** the controller. **Navi** is highlighted in the main function bar.
- ▶ Press the controller. The navigation menu appears.
- ▶ Turn the controller to display the navigation functions one after another.
- ▶ To change to the map: turn the controller until **Navigation** is shown and then press the controller.
- ▶ **i** Equipment with touchpad: alternatively, you can carry out these steps on the touchpad (▷ page 27).

Calling up the online map display

Requirement (USA): mbrace must be activated for Internet access (▷ page 136).

Requirement (Canada): a mobile phone is connected to the multimedia system via Bluetooth® (▷ page 107) or USB (▷ page 176).

- ▶ Call up the navigation menu (▷ page 103).
- ▶ Turn the controller until **Online Map Display** is brought to the front.
- ▶ Press the controller. The online connection is established. Once the connection is established, the Google Maps™ map appears around the current vehicle position.
- ▶ Move the map (▷ page 62) and change the map scale (▷ page 95).
- ▶ To exit the online map display: press the **↩** button.

Calling up the compass display



- ▶ Call up the navigation menu (▷ page 103).
- ▶ Turn the controller until **Compass** is brought to the front.
- ▶ Press the controller. The compass display provides the following information:
 - The current direction of travel with bearing (360 degree format) and compass direction
 - Longitude and latitude coordinates in degrees, minutes and seconds
 - Height (rounded off) above sea level
 - Number of GPS satellites from which a signal can be received
- ▶ To exit the compass display: press the **↩** button.

Drive information



- ▶ Call up the navigation menu (▷ page 103).
- ▶ Turn the controller until **Drive Information** is brought to the front.
- ▶ Press the controller. The **Starting Drive Information. Please Wait...** message appears. You will then see maps with the current vehicle position and the vicinity of the destination

in different scales, these are automatically displayed one after another.

USA: if mbrace is activated for Internet access, additional information can be displayed, e.g. weather at the destination (▷ page 136).

Canada: if a mobile phone is connected to the multimedia system via Bluetooth® (▷ page 107) or USB (▷ page 176), additional information, such as the weather at the destination, can be displayed (▷ page 136).

- ▶ To exit Drive Information: press the controller.
- ▶ Press the  button.

Route flight

- ▶ Call up the navigation menu (▷ page 103).
- ▶ Turn the controller until **Route Flight** is brought to the front.

- ▶ Press the controller.
- ▶ Select .

The route will then be flown along from a helicopter view.
- ▶ **To stop the route flight:** select .
- ▶ **To exit the route flight:** press the controller.
- ▶ Press the  button.

Info on navigation

- ▶ Call up the navigation menu (▷ page 103).
- ▶ Turn the controller until **Info on Navigation** is brought to the front.
- ▶ Press the controller.

The Digital Operator's Manual is opened at the section on navigation.

Problems with the navigation system

Problem	Possible causes/consequences and ▶ Solutions
The multimedia system does not resume route guidance after the journey has been interrupted.	<p>Route guidance is canceled if you interrupt the journey for more than two hours.</p> <p>"Interrupting the journey" refers to stopping the vehicle.</p> <p>"Continuing route guidance" refers to switching the multimedia system back on and driving on.</p> <p>▶ Continue route guidance manually (▷ page 86).</p>

Problem	Possible causes/consequences and ▶ Solutions
The multimedia system is unable to determine the vehicle's position.	<p>The multimedia system must identify the vehicle's position again after it has been transported.</p> <p>Example:</p> <ul style="list-style-type: none"> • After transporting the vehicle by ferry • After transporting the vehicle by motorail <p>▶ Start the vehicle and pull away.</p> <p>The multimedia system calculates the vehicle's position. Depending on the driving situation, this may take some time.</p> <p>Route guidance may be restricted during the determination of the vehicle's position.</p> <p>When positioning is complete, route guidance is resumed with navigation announcements and route guidance displays.</p>

Problem	Possible causes/consequences and ► Solutions
The Navigation Unavailable Please refer to the Operator's Manual . message appears.	<p>The multimedia system has an integrated hard drive on which the digital map is stored.</p> <p>To protect the hard drive against damage, the multimedia system deactivates it at very high and low temperatures. The navigation system will then be temporarily unavailable.</p> <ul style="list-style-type: none"> ► Let the vehicle and the multimedia system heat up or cool down to a normal temperature. ► To hide the message: switch the multimedia system off and then on again.

Problem	Possible causes/consequences and ► Solutions
While the map is being updated from an external data medium, you see a message informing you that the data medium containing the digital map is incompatible with the vehicle software.	<p>The data medium containing the digital map cannot be used for the update.</p> <ul style="list-style-type: none"> ► To confirm the message: press the controller. ► Remove the data medium. ► Have the system database checked at an authorized Mercedes-Benz Center.

Problem	Possible causes/consequences and ► Solutions
The map software update has failed.	<p>The data medium is dirty.</p> <ul style="list-style-type: none"> ► Clean the data medium. ► Restart the update.
	<p>The data medium is scratched.</p> <ul style="list-style-type: none"> ► Consult an authorized Mercedes-Benz Center.
	<p>There is overheating due to excessive temperatures in the vehicle interior.</p> <ul style="list-style-type: none"> ► Wait until the vehicle interior has cooled down. ► Restart the update.
	<p>The multimedia system's integral hard disk has been physically damaged.</p> <ul style="list-style-type: none"> ► Consult an authorized Mercedes-Benz Center.

Problem	Possible causes/consequences and ► Solutions
The multimedia system asks for an activation code during the map update.	<p>The digital map is secured with an activation code.</p> <ul style="list-style-type: none"> ► Consult an authorized Mercedes-Benz Center.

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Important safety notes

WARNING

If you operate mobile communication equipment while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Only operate this equipment when the vehicle is stationary.

If you make a call on your mobile phone while driving, always use hands-free mode. Only use the mobile phone when road, weather and traffic conditions permit. Some jurisdictions prohibit the driver from using a mobile phone while driving a vehicle.

Bear in mind that at a speed of 30 mph (approximately 50 km/h), the vehicle covers a distance of 44 feet (approximately 14 m) per second.

Excessive levels of electromagnetic radiation may cause damage to your health and the health of others.

There is scientific discussion surrounding the possible health risks posed by electromagnetic fields. You can reduce this risk by using an exterior antenna.

Therefore, connect your mobile communications equipment to the vehicle's exterior antenna wherever possible.

General notes

Bluetooth® interface

A Bluetooth® interface is available for telephony.

If your mobile phone supports the Bluetooth® profile PBAP (**Phone Book Access Profile**), the contacts are automatically displayed in the multimedia system. If your mobile phone does not support the PBAP Bluetooth® profile, the multimedia system will attempt to display the contacts using alternative methods.

You can use the message function if your mobile phone supports the MAP Bluetooth® profile (**Message Access Profile**).

With a suitable mobile phone, you can use the hands-free system and receive vCards via the Bluetooth® interface.

You can obtain more information about suitable mobile phones on the Internet at <http://www.mercedes-benz.com/connect>.

You can also obtain more information by calling.

In the USA, you can get in touch with the Mercedes-Benz Customer Assistance Center on 1-800-FOR-MERCEDES (1-800-367-6372).

In Canada, you can get in touch with the Customer Relations Center on 1-800-387-0100.

HD Voice®

The multimedia system supports telephone calls in HD Voice®. The voice quality can be improved with this procedure.

Requirements for HD Voice®:

- Your mobile phone and mobile phone network provider support HD Voice®.
- The mobile phone and mobile phone network provider of the person you are calling support HD Voice®.

Depending on the quality of the connection, the voice quality may fluctuate.

Call disconnection while the vehicle is in motion

A call may be disconnected if:

- there is insufficient network coverage in certain areas
- you move from one transmitter/receiver area (cell) into another and no channels are free
- you use a SIM card that is not compatible with the network available

Operating options

You can operate the telephone by:

- using the controller:
 - turning
 - sliding ←○→ or ↑○↓
 - pressing
- using the touchpad (▷ page 27)
- using the  or  button on the multi-function steering wheel
- using the Voice Control System (see the separate operating instructions)


Function restrictions

You may have to wait before using telephony via the multimedia system in the following situations:

- if the mobile phone is switched off
- if Bluetooth® is switched off on the mobile phone
- if the mobile phone is not (or not yet) logged into a mobile phone network
- if the Bluetooth® function is switched off in the multimedia system

The telephone automatically tries to log on to a network. If no network is available, you may not be able to make a "911" emergency call. If you attempt to make an outgoing call, the **No Service** message will appear for a short while.

Telephone menu

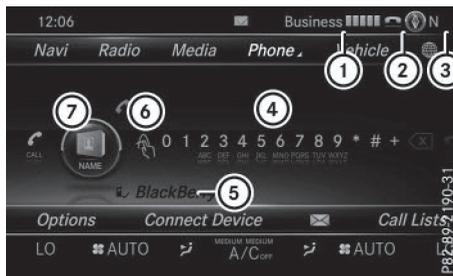

- ① Mobile phone network provider
- ② Signal strength of the mobile phone network
- ③ Receiver icon  or 
- ④ Telephone menu character bar

- ⑤ Bluetooth® device name of the currently connected mobile phone
- ⑥ Enters characters using the touchpad
- ⑦ Displays the phone book

Symbols ① to ③ and ⑤ are not shown until after a mobile phone has been connected to the multimedia system. The symbols depend on your mobile phone and your mobile phone network provider. Further information on connecting a mobile phone (▷ page 107).

Symbol ② shows the current signal strength of the mobile phone network. If all bars are filled, you have optimum reception.

If no bars are shown, reception is either very poor or there is none at all.

- Receiver icon shows whether a call is active/being connected  or not .

Calling up the telephone menu:

- ▶ Press **TEL**.

Showing the menu bar:

- ▶ Slide  the controller.

If the mobile phone connected supports the MAP Bluetooth® profile (**Message Access Profile**), the  menu item is available. Further information on text messages and e-mail (▷ page 123).

If you have an unread text message or e-mail, the  mail symbol is displayed in the status bar. The symbol disappears once you have read the text message or e-mail. The  symbol is displayed as soon as the message memory on the connected mobile phone is full. The symbol disappears once you delete at least one message.

Connecting/disconnecting a mobile phone

Requirements

For telephony via the Bluetooth® interface, you require a Bluetooth®-capable mobile phone. The mobile phone must support Hands-Free Profile 1.0 or above.

On the multimedia system

- ▶ Activate Bluetooth® (▷ page 43).
- ▶ Switch on NFC (▷ page 43).

On the mobile phone

- ▶ Switch on the mobile phone and enter the PIN when prompted to do so (see the manufacturer's operating instructions).
- ▶ Activate Bluetooth® and, if necessary, Bluetooth® visibility for other devices (see the manufacturer's operating instructions).
This visibility is for restricted periods of time on some mobile phones (see the manufacturer's operating instructions).
- ▶ Set the Bluetooth® device name for the mobile phone if necessary.

The device names for all of one manufacturer's products might be identical. To make it possible to clearly identify your mobile phone, change the device name (see the manufacturer's operating instructions). The name can be freely selected.

If the mobile phone supports the PBAP (Phone Book Access Profile) and MAP (Message Access Profile) Bluetooth® profiles, the following information will be transmitted after you connect:

- Phone book
- Call lists
- Messages

The battery of the mobile phone should always be kept sufficiently charged in order to prevent malfunctions.

- i** Not all mobile phones available on the market are equally suitable. You can obtain more detailed information about suitable mobile phones and about the connection between the mobile phone and the multimedia system on the Internet at www.mercedes-benz.com/connect.

You can also obtain more information by calling.

In the USA, you can get in touch with the Mercedes-Benz Customer Assistance Center on 1-800-FOR-MERCEdes (1-800-367-6372).

In Canada, you can get in touch with the Customer Relations Center on 1-800-387-0100.

- i** Some displays (e.g. the signal strength) depend on the supported version of the Hands-Free Profile.

Procedure and general information**Authorizing a mobile phone (connecting)**

If you connect your mobile phone using NFC (Near Field Communication) the NFC area of your mobile phone has to touch the NFC logo on the DVD changer/single DVD drive. The authorization then starts automatically. The NFC range varies depending on the mobile phone and can be identified by the logo. Further information (see the manufacturer's operating instructions).

Before using your mobile phone without NFC with the multimedia system, you will need to search for the phone (▷ page 109) and then authorize it (▷ page 110). Depending on the mobile phone, authorization either takes place by means of Secure Simple Pairing or by entering a passkey. The multimedia system automatically makes the procedure that is relevant for your mobile phone available. You can recognize Secure Simple Pairing by the fact that a code is displayed on the mobile phone and on the multimedia system. You can recognize the passkey system by the fact that you have to enter a code on the mobile phone and on the multimedia system. The mobile phone is always connected automatically after authorization.

If the multimedia system does not detect your mobile phone, this may be due to particular security settings on your mobile phone. You can also start the search procedure and authorization on the mobile phone (▷ page 110).

Device-specific information on authorizing and connecting Bluetooth®-capable mobile phones can be obtained from an authorized Mercedes-Benz Center or via the Internet at <http://www.mercedes-benz.com/connect>.

You can authorize up to 15 mobile phones. After authorization, the connection of the last two telephones used always functions automatically. Only one mobile phone can be connected to the multimedia system at any one time.

De-authorizing (disconnecting) a mobile phone

The connection is terminated automatically if you leave the receiver range of the multimedia system or deactivate Bluetooth® on your mobile phone.

If you no longer want the Bluetooth® connection to be established automatically, the mobile phone must be de-authorized (disconnected) (▷ page 111).

Establishing a connection via NFC (Near Field Communication)



① NFC range on the DVD changer/single DVD drive

- ▶ **Mobile phone:** touch the NFC logo on the DVD changer/single DVD drive with the NFC area of the mobile phone. The message indicating that a connection via NFC is being established is displayed in the multimedia system. A code may be displayed in the multimedia system and on the mobile phone.

The code is the same

- ▶ **Multimedia system:** select **Yes**.
- ▶ **Mobile phone:** confirm the code. Depending on the mobile phone used, you may have to confirm the connection to the multimedia system and for the PBAP and MAP Bluetooth® profiles. The prompt to confirm may take up to two minutes to be displayed. You may also save the confirmation on the mobile phone (see the manufacturer's operating instructions). The mobile phone is now authorized and connected to the multimedia system. You can now speak using the hands-free system. To ensure an optimum language quality, you can set the mobile phone's transmission and reception volume (▷ page 112).

The code is different

- ▶ **Multimedia system:** select **No**. The process is canceled. Repeat the authorization.

If no connection can be established with NFC, check whether NFC is activated on the mobile phone and the mobile phone is unlocked. The NFC range varies depending on the mobile phone; see the manufacturer's operating instructions.

Searching for a mobile phone



- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **Connect Device**: turn and press the controller. The device list is displayed.
- ▶ To select **Search for Phones**: turn and press the controller. A message is displayed that Bluetooth® must be activated on the mobile phone and must be made visible to other devices.
- ▶ To select **Start Search**: press the controller. The available mobile phones are displayed in the device list.

The duration of the search depends on the number of Bluetooth® telephones within range and their characteristics.

If a new phone is found, it appears in the device list with the **📱** symbol. You can now authorize (connect) the mobile phone found (▷ page 110).

If the device list is already full, you will be requested to de-authorize a mobile phone (▷ page 111).

When you call up the device list again, de-authorized devices will be removed from the list. To update the device list, start the search again.

Symbols in the device list

Symbol	Explanation
	New mobile phone found, not yet authorized.
	Mobile phone is authorized, but is not connected.
•	Mobile phone is authorized and connected.

Authorizing a mobile phone (connecting)**Authorization via Secure Simple Pairing**

If the multimedia system has found your mobile phone, you can authorize (connect) it.

- ▶ To select a mobile phone from the device list: turn the controller and press to confirm. A code is displayed in the multimedia system and on the mobile phone.

The code is the same

- ▶ **Multimedia system:** select **Yes**.
- ▶ **Mobile phone:** confirm the code. Depending on the mobile phone used, you may have to confirm the connection to the multimedia system and for the PBAP and MAP Bluetooth® profiles. The prompt to confirm may take up to two minutes to be displayed. You may also save the confirmation on the mobile phone (see the manufacturer's operating instructions).
The mobile phone is now authorized and connected to the multimedia system. You can now speak using the hands-free system.

To ensure an optimum language quality, you can set the mobile phone's transmission and reception volume (▷ page 112).

The code is different

- ▶ **Multimedia system:** select **No**.
The process is canceled. Repeat the authorization.

Authorization via passkey entry (access code)

If the multimedia system has found your mobile phone, you can authorize (connect) it.

- ▶ To select a mobile phone from the device list: turn the controller and press to confirm. The input menu for the passkey is displayed. The passkey is a one- to sixteen-digit number combination which you can choose yourself.
- ▶ **Multimedia system:** enter the passkey using the character bar.
- ▶ Select **OK** once all the numbers have been entered.
- ▶ **Mobile phone:** enter the same passkey and confirm your entry. Depending on the mobile phone used, you may have to confirm the connection to the multimedia system and for the PBAP and MAP Bluetooth® profiles. The prompt to confirm may take up to two minutes to be displayed. You may also save the confirmation on the mobile phone (see the manufacturer's operating instructions).
The mobile phone is now authorized and connected to the multimedia system. You can now speak using the hands-free system.

To ensure an optimum language quality, you can set the mobile phone's transmission and reception volume (▷ page 112).

If the **Authorization Failed** message appears, you may have entered a different passkey or exceeded the prescribed time limit. Repeat the procedure.

- i** Some mobile phones require a passkey with four or even more digits.
- i** If you wish to re-authorize the mobile phone after de-authorizing it, you can choose another passkey for it.
- i** Mercedes-Benz recommends de-authorization in the multimedia system as well as on the mobile phone (▷ page 111). Subsequent authorization may otherwise fail.

Establishing the connection from the mobile phone

The Bluetooth® device name of the multimedia system is **MB Bluetooth**.

- ▶ **Multimedia system:** call up the telephone menu.
- ▶ To switch to the menu bar: slide  the controller.

- ▶ To select **Connect Device**: turn and press the controller.
The device list is displayed.
- ▶ To select **Connect via Phone**: turn and press the controller.
A message is displayed, stating that you can start the search on your mobile phone.
- ▶ **Mobile phone**: start the search for a Bluetooth® device (see manufacturer's operating instructions).
The multimedia system is displayed with the name **MB Bluetooth** in the mobile phone's device list.
- ▶ Select **MB Bluetooth**.
A prompt appears in the multimedia system display asking if the mobile phone should be authorized.
- ▶ **Multimedia system**: select **Yes**.
If **No** is selected, the procedure is canceled. If your mobile phone supports Secure Simple Pairing, a code is now displayed on both devices.

The code is the same

- ▶ **Multimedia system**: select **Yes**.
- ▶ **Mobile phone**: confirm the code. Depending on the mobile phone used, you may have to confirm the connection to the multimedia system and for the PBAP and MAP Bluetooth® profiles. The prompt to confirm may take up to two minutes to be displayed. You may also save the confirmation on the mobile phone (see the manufacturer's operating instructions).
The mobile phone is now authorized and connected to the multimedia system. You can now speak using the hands-free system.
To ensure an optimum language quality, you can set the mobile phone's transmission and reception volume (▷ page 112).

The code is different

- ▶ **Multimedia system**: select **No**.
The process is canceled. Repeat the procedure.
If your mobile phone does not support Secure Simple Pairing, an input menu is displayed for the passkey. The passkey is a one- to sixteen-digit number combination which you can choose yourself. Enter the same passkey in both the multimedia system and on the mobile phone and confirm. Depending on the mobile phone used, you may have to confirm the connection to the

multimedia system and for the PBAP and MAP Bluetooth® profiles.

Reconnecting automatically

The multimedia system always searches for the last connected mobile phone.

If no connection can be made to the most recently connected mobile phone, the system searches for the mobile phone that was connected before that one.

Switching between mobile phones

If you have authorized more than one mobile phone, you can switch between the individual phones.

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **☉↓** the controller.
- ▶ To select **Connect Device**: turn and press the controller.
The device list is displayed.
- ▶ To select the desired mobile phone: turn and press the controller.
The selected mobile phone is searched for and connected if it is within Bluetooth® range and if Bluetooth® is activated.

Only one mobile phone can be connected at any one time. The currently connected mobile phone is indicated by the ● dot in the device list.

- i** You can only switch to another authorized mobile phone if you are not currently making a call.

De-authorizing (disconnecting) a mobile phone

Mercedes-Benz USA, LLC recommends de-authorization in the multimedia system as well as on the mobile phone. Subsequent authorization may otherwise fail.

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **☉↓** the controller.

- ▶ To select **Connect Device**: turn and press the controller.
The device list is displayed.
 - ▶ To highlight the desired mobile phone in the device list: turn the controller.
 - ▶ To select : slide  the controller.
 - ▶ To select **Deauthorize**: turn and press the controller.
A prompt appears, asking whether you really wish to de-authorize this device.
 - ▶ To select **Yes**: turn and press the controller.
The mobile phone is de-authorized.
- i** Before re-authorizing the mobile phone, you should also delete the device name **MB Blue-tooth** from your mobile phone's Bluetooth® list.

Displaying connection details

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Connect Device**: turn and press the controller.
The device list is displayed.
- ▶ To highlight the desired mobile phone: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Details**: turn and press the controller.
The following information concerning the selected mobile phone is shown:
 - Bluetooth® device name
 - Bluetooth® address
 - Availability status (shown after a new search)
 - Authorization status
- ▶ **To close the detailed display**: slide  the controller.

Reception and transmission volume

Once the mobile phone has been authorized, you can optimize the transmission and reception volume settings. To find out about the best possible settings for your mobile phone, visit <http://www.mercedes-benz.com/connect>.

You can also obtain more information by calling. In the USA, you can get in touch with the Mercedes-Benz Customer Assistance Center on 1-800-FOR-MERCEDES (1-800-367-6372). In Canada, you can get in touch with the Customer Relations Center on 1-800-387-0100.



- ▶ To call up the telephone menu: press the  button.
 - ▶ To switch to the menu bar: slide  the controller.
 - ▶ To select **Connect Device**: turn and press the controller.
The device list appears.
 - ▶ To highlight the desired mobile phone in the device list: turn the controller.
 - ▶ To select : slide  the controller.
 - ▶ To select **Reception Volume** or **Transmission Volume**: turn and press the controller.
 - ▶ To select a volume setting: turn the controller.
 - ▶ To accept changes: press the controller.
- i** Incorrect settings may have an impact on the quality of calls.

Using the telephone

Accepting a call

- ▶ To select  **Accept**: press the controller.
or
- ▶ Press  on the multifunction steering wheel.
The call is accepted.

Additional functions available during a call (▷ page 114).

Adjusting the call volume (▷ page 112).

Further information about ending a call (▷ page 116).

- i** If the phone number of the caller is transferred, it appears in the display. If the phone number is saved in the phone book, the contact's name is also displayed. If the phone number is not transferred, **Unknown** is shown in the display.

Rejecting a call

- ▶ To select  **Reject**: turn and press the controller.
- or
- ▶ Press  on the multifunction steering wheel.

Making a call

Using the telephone menu

- ▶ To call up the telephone menu: press the  button.
- ▶ To select the sequence of numbers: turn and press the controller for each number.
- ▶ To select  in the telephone menu: turn and press the controller. The call is made.

Further information about ending a call (▷ page 116).

Using the touchpad

- ▶ To call up the telephone menu: press the  button.
- ▶ To select : turn and press the controller.
- ▶ Draw the sequence of numbers on the touch-sensitive surface.
- ▶ To select  in the telephone menu: turn and press the controller. The call is made.

Further information about the touchpad (▷ page 29).

Using favorites

This function can be used when a telephone number has been added as a favorite. Further information about adding favorites (▷ page 35).

- ▶ Press the favorites button on the controller. The favorites are displayed.
- ▶ To select a telephone number: turn the controller.
- ▶ To make a call: press the controller.

Using speed dial

Option 1

- ▶ To call up the telephone menu: press the  button.
- ▶ To highlight a number from the character bar: turn the controller.
- ▶ Press the controller for longer than two seconds. The telephone menu displays the selected entry. The number is dialed.

Option 2

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ To select **Speed Dial Preset List**: turn and press the controller. The speed dial list is displayed.
- ▶ To select an entry and make a call: turn and press the controller. The telephone menu displays the selected entry. The number is dialed.

Option 3 (with telephone keypad)

- ▶ Press one of the number keys on the telephone keypad for longer than two seconds. The telephone menu displays the selected entry. The number is dialed.

Further information on setting up speed dial (▷ page 122).

Further information about ending a call (▷ page 116).

Redial

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To select  in the telephone menu: turn and press the controller. The list of outgoing calls is displayed. The most recently dialed number is at the top.
- ▶ To select an entry and make a call: turn and press the controller.

For redialing using the multifunction steering wheel (see the vehicle Operator's Manual).

Further information about ending a call (▷ page 116).

Using call lists

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ To select **Calls Received** or **Calls Dialed**: turn and press the controller. The relevant list is displayed.
- ▶ To select an entry and make a call: turn and press the controller.

Selecting and placing a call using the multifunction steering wheel (see vehicle Operator's Manual)

Further information about ending a call (▷ page 116).

Using the phone book

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To select **Name** in the telephone menu: turn and press the controller.
- ▶ Search for a contact (▷ page 118).
- ▶ To make a call: press the controller.

Selecting and placing a call using the multifunction steering wheel (see vehicle Operator's Manual)

Further information about ending a call (▷ page 116).

Using the telephone keypad on the controller

If your vehicle is equipped with a telephone keypad, you can use this function.

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ Enter the digits using the telephone keypad. As soon as one of the buttons on the telephone keypad is touched, the corresponding button is highlighted in the display.
- ▶ To select  in the telephone menu: turn and press the controller. The call is made.

Functions available during a call

Overview



- ① Adds a call (▷ page 115)
- ② Person you are calling
- ③ Symbol for active telephone connection
- ④ Ends a call
- ⑤ Switches the microphone on/off (▷ page 115)
- ⑥ Sends DTMF tones (not possible with all mobile phones) (▷ page 115)

Other functions:

- Accepting a waiting call (▷ page 116)
 - Call waiting (▷ page 115)
 - Conducting a conference call (▷ page 116)
- Availability depends on the network (only possible on GSM networks) and the Bluetooth® mobile phone.

Adds a call



① Adds a call

If the mobile phone network provider and the mobile phone support the function, you can make another call during an existing call. The previously active call is held.

- ▶ To select **2**: turn and press the controller.
- ▶ To make a call, e.g.:
 - Using the telephone menu (▷ page 113)
 - Using redial (▷ page 114)
 - Using the call lists (▷ page 114)
 - Using the phone book (▷ page 114)
 - Using speed dial (▷ page 113)

Switching the microphone on/off

This function is available in the telephone menu during an active phone call.

Switching off the microphone:

- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **Microphone Off**: turn and press the controller.
If the microphone is switched off, the **⊗** symbol and the **The microphone is off.** message are displayed.

Switching on the microphone:

- ▶ Select **Microphone On**.
The **⊗** symbol disappears. The **The microphone is on.** message is shown.

Sending DTMF tones

This function is not supported by all mobile phones.

Answering machines or other devices can be controlled by DTMF tones, e.g. for remote query functions.

- ▶ If you would like to listen to the messages on your answering machine, for example, dial the corresponding number.

Transmitting individual characters

- ▶ Once a connection has been established to the answer phone, select the desired characters in the telephone menu: turn and press the controller each time.
Every character selected will be transmitted immediately.

or

- ▶ Press the corresponding number button on the telephone keypad.

Calls with several participants

Switching between calls (call waiting)



If you make another call, you can switch between the two calls (call waiting). This function depends on your mobile phone network provider and the mobile phone (see the manufacturer's operating instructions).

The calls are marked 1 and 2. The active call is highlighted.

Switching between the calls

- ▶ To select **1** or **2**: turn and press the controller.

or

- ▶ Press **↶** on the multifunction steering wheel.
The selected call is active. The other call is on hold.

Ending the active call

- ▶ To select  in the telephone menu: turn and press the controller.

or

- ▶ Press  on the multifunction steering wheel.

The other call is still on hold.

- ▶ To activate the call on hold: select  **Resume**.

The call on hold is activated. If you select  **Hang Up**, the call on hold is also ended.

- i** On some mobile phones, the call on hold is activated as soon as the active call is ended.

Conference call

You can interconnect active and held calls. This permits several parties to hear one another and speak with one another. This function depends on your mobile phone network provider and the mobile phone (see the manufacturer's operating instructions).



- ▶ Add a call (▷ page 115).

or

- ▶ Answer an incoming call (▷ page 116).
- ▶ To select **Conference** in the telephone menu: turn and press the controller. The new participant is included in the conference call. **Conference** is displayed in the telephone menu.

Incoming call during an existing call (call waiting)

The call waiting function depends on your mobile phone network provider and your mobile phone. Depending on the mobile phone used, behavior when answering a call may vary (see the manufacturer's operating instructions).

Call waiting: if you receive a call while already in a call, a message is shown. You also hear a tone. You can decide whether to accept or reject the call.

Accepting

- ▶ To select  **Accept:** press the controller.

or

- ▶ Press  on the multifunction steering wheel.

The incoming call is active, the previously active call is on hold. You can switch back and forth between both calls (call waiting) (▷ page 115).

- i** Depending on the mobile phone, you may also be able to accept the incoming call (call waiting) on your mobile phone. This function and behavior depends on your mobile phone network provider and the mobile phone (see the manufacturer's operating instructions).

Rejecting

- ▶ To select  **Reject:** turn and press the controller.

or

- ▶ Press  on the multifunction steering wheel.

The behavior after the call is rejected depends on your mobile phone and mobile phone network provider.

Option 1: The originally active call is continued and the incoming call is rejected.

Option 2: The originally active call is ended and the incoming call is accepted.

Option 3: Both calls are ended.

Ends an active call

- ▶ To select  in the telephone menu: turn and press the controller.

or

- ▶ Press  on the multifunction steering wheel.

The active call is ended.

Mobile phone voice recognition

You can start or end voice recognition on your mobile phone with this function. Further infor-

mation on the voice recognition service; see the manufacturer's operating instructions.

To start the mobile phone voice recognition:

- ▶ Connect the mobile phone to the multimedia system (▷ page 107).
- ▶ Press and hold the  button on the multifunction steering wheel for more than one second.
You can now use the mobile phone voice recognition.

To end the mobile phone voice recognition:

- ▶ Press  on the multifunction steering wheel.
The mobile phone voice recognition is stopped.

Phone book

Introduction

The phone book displays the contacts from the address book which have a phone number.

The phone book of the mobile phone is automatically displayed in the multimedia system after the connection is established (default setting). You can deactivate automatic calling up (▷ page 134).

In the telephone book, you can:

- Create new contacts (▷ page 119)
- Add information to contacts (▷ page 119)
- Search for contacts (▷ page 118)
- Store contacts (▷ page 119)
- Delete contacts (▷ page 120)

Further information on importing contacts (▷ page 134).

When you import, save, edit or add contacts, they will be permanently saved in the multimedia system. These contacts will remain available even when you connect the multimedia system to a different mobile phone. You can view these contacts even without a mobile phone.

Calling up the phone book



- ▶ To call up the telephone menu: press the  button.
- ▶ To select **Name** in the telephone menu: turn and press the controller.
If the phone book contains contacts, they will be displayed in alphabetical order. The character bar at the bottom of the display is active. You can now search for a contact (▷ page 118).
Further information on the symbols shown (▷ page 117).

i You can also call up the phone book with the multifunction steering wheel; see the Vehicles Operator's Manual.

Symbol overview

Symbol	Explanation
	Contact that has been entered, edited or saved in the multimedia system
	Contact with voice tag These contacts have also been assigned a voice tag. For more information, see the separate operating instructions.
	Contact that was called up from a mobile phone
	Contact imported from the SD memory card or USB device
	Contact imported via the Bluetooth® interface

Searching for a contact

Using the character bar



Telephone

You determine the first letter of the contact you are looking for with the first character you enter.

- ▶ To select characters: turn the controller and press to confirm.
The first contact with the selected first character is highlighted in the phone book. If there are similar contacts, the next different character is shown. For example, with contacts such as **Jana** and **John**, the beginnings of the names are identical. The next different characters **A** and **O** are offered for selection.
- ▶ Select the characters of the contact you are searching for one by one, pressing and confirming with the controller each time.
- ▶ To end the search: select **ok**.
The contacts in the phone book are displayed.
- ▶ To select a contact: turn and press the controller.

The  symbol indicates that a contact contains more than one phone number.

- ▶ To select a contact with the  symbol: turn the controller and press to confirm.
The phone numbers are displayed. The  symbol changes to .
- ▶ To call a telephone number: turn and press the controller.

Back to the character bar

- ▶ Press the  button repeatedly until the character bar is displayed.

Information about character entry (▷ page 31).

Using the telephone keypad on the controller

If your vehicle is equipped with a telephone keypad, you can use this function.

You determine the first letter of the contact you are looking for with the first character you enter.

- ▶ For example, to enter the letter **C**: press the  number key briefly three times in succession.
As soon as you touch the number key, the number is highlighted in the additional display area.
The character appears at the bottom of the display the first time the key is pressed and shows all the available characters. It switches to the next character each time the key is pressed.

Using the touchpad

You determine the first letter of the contact you are looking for with the first character you enter.

- ▶ Draw the letter on the touchpad surface.
The first contact with the selected first character is highlighted in the phone book.
Further information on handwriting recognition on the touchpad (▷ page 29).
- ▶ Draw additional letters on the touchpad surface one after another.
- ▶ To complete the search and return to the phone book: press the touchpad.
- ▶ To select and call the contact: glide up or down and press.

Using the multifunction steering wheel


- ▶ Dial a number from the phone book; see the vehicle Operator's Manual.

Displaying the details of a contact

	Allwald, Doris	Details
	Armado, Lena	Delete Entry
	Arnhauser, Dirk	Save
	Auer, Beate	Add Phone No.
	Bauer, Ute	Speed Dial
	Bruder, Astrid	New
	Drewer, Klaus	
	Engels, Jan	
	Erenkönig, Elke	

P82.89-0185-31

- ▶ To highlight a contact in the phone book: turn the controller.
 - ▶ To select : slide  the controller.
 - ▶ To select **Details**: turn and press the controller.
The detailed view appears.
- Closing the detailed display
- ▶ To select : turn and press the controller.

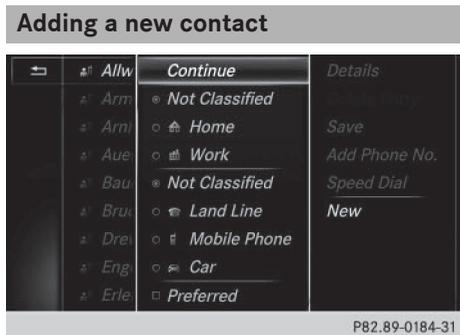

- ▶ Slide  the controller repeatedly in the phone book until the selection list appears.
- ▶ To select : slide  the controller.
- ▶ To select **New**: turn and press the controller.
- ▶ To select a category for the number, e.g. **Home**: turn the controller and press to confirm.
- ▶ To select a telephone category, e.g. **Mobile Phone**: turn the controller and press to confirm.
If you have marked a number as preferred, it is shown at the top of the list.
- ▶ To select **Continue**: turn and press the controller.
The input menu with data fields is displayed.
- ▶ Enter characters using the controller (▷ page 31), for example.
- ▶ To finish and save an entry: select .
The contact is created in the phone book and in the address book.

Adding information to a contact

A maximum of five telephone numbers can be saved for one contact.

- ▶ To highlight a contact in the phone book: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Add Phone No.**: turn and press the controller.
- ▶ To select a category for the number, e.g. **Home**: turn the controller and press to confirm.
- ▶ To select a telephone category, e.g. **Mobile Phone**: turn the controller and press to confirm.
If you have marked a number as preferred, it is shown at the top of the list.
- ▶ To select **Continue**: turn and press the controller.
The telephone number has been saved.

If five numbers are already stored for the contact you are searching for, a prompt will appear asking whether you wish to overwrite one of the existing numbers.

If you wish to overwrite one of the phone numbers:

- ▶ To select **Yes**: turn and press the controller.
A list of the existing five phone numbers is displayed.
- ▶ To select the phone number to be overwritten from the list: turn the controller and press to confirm.
The entry field for the new phone number is displayed.
- ▶ Enter characters using the controller (▷ page 31), for example.

If you do not wish to overwrite any of the phone numbers:

- ▶ To select **No**: turn and press the controller.
The process is canceled.

Saving a contact

Saved contacts are indicated in the phone book by different symbols (▷ page 117).

- ▶ Search for a contact on the mobile phone  (▷ page 118).
- ▶ To select : slide  the controller.
- ▶ To select **Save**: turn and press the controller.
The contact has now been saved. The contact is identified by the  symbol in the phone book.

- i** Saved contacts are also displayed in the address book.

Saving or editing the contact data in the multimedia system does not change the contacts on the mobile phone. If automatic calling-up of phone contacts is activated, the multimedia system displays the copy  with the changed data.

Deleting a name

You can delete contacts that have been added, supplemented, saved or imported in the multimedia system.

If there are one or several phone numbers saved under the contact, the contact is deleted from the phone book and the address book.

If there are additional entries under the contact, such as a navigable destination, only the phone numbers are deleted. The contact is retained in the address book with the remaining entries.

- ▶ To highlight a contact in the phone book: turn the controller.
- ▶ To select : slide  → the controller.
- ▶ To select **Delete Entry**: turn and press the controller.
A prompt appears asking whether the contact should be deleted.
- ▶ To select **Yes**: turn and press the controller.
The phone number is deleted.

Closing the phone book

- ▶ To select  from the character bar: turn the controller and press to confirm.
- or
- ▶ Press the  button.

Call lists

Introduction

If your mobile phone supports the PBAP Bluetooth® profile, the call lists from the mobile phone are displayed in the multimedia system. If your mobile phone does not support the PBAP Bluetooth® profile, the multimedia system will attempt to display the mobile phone call lists using alternative methods. If the mobile phone call lists cannot be displayed, the multimedia system generates its own call lists. These are

not the same as the call lists in your mobile phone.

The call lists option is not available unless a mobile phone is connected to the multimedia system.

If the contact for an incoming call is not saved in the address book, you can use the call list to save the telephone number. You can save this telephone number as a new contact in the address book or add it to an existing contact (▷ page 121).

- ❗ If you connect a different mobile phone to the multimedia system, the call lists from the new mobile phone are displayed.

Opening the call list and selecting an entry



Example: list of selected phone numbers

- ① Date and time (if available)
 - ② Telephone number of the highlighted entry and symbols (if assigned)
- ▶ To call up the telephone menu: press the  button.
 - ▶ To switch to the menu bar: slide  ↓ the controller.
 - ▶ To select **Call Lists**: turn and press the controller.
 - ▶ To select **Calls Received** or **Calls Dialed**: turn and press the controller.
The relevant list is displayed.
 - ▶ To highlight an entry: turn the controller.
 - ▶ To make a call: press the controller.

Closing the call list

- ▶ To select : slide  and press the controller.
- or
- ▶ Press the  button.
The list is closed.


Displaying details from a list entry

Abbreviated list entries can also be shown in full.

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ To select **Calls Received** or **Calls Dialed**: turn and press the controller.
The relevant list is displayed.
- ▶ To highlight the desired entry: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Details**: turn and press the controller.
The details are displayed.
- ▶ To go back to the list: slide  the controller repeatedly until the list is highlighted.

Saving telephone numbers

Adding new entries to the address book

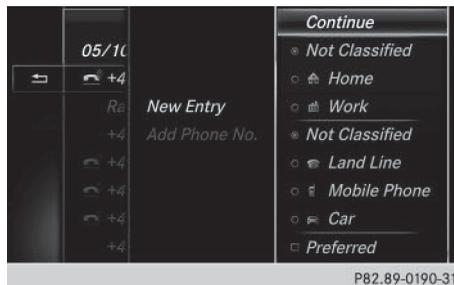

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Call Lists**: turn and press the controller.

- ▶ To select **Calls Received** or **Calls Dialed**: turn and press the controller.
The relevant list is displayed.
- ▶ To highlight the desired telephone number: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Save**: turn and press the controller.
- ▶ Select **New Entry**.
- ▶ Select a number category, e.g. **Home**.
- ▶ Select a telephone category, e.g. **Mobile Phone**.
The selected category is marked with •.
If you have marked a number as **Preferred**, it is shown at the top of the list.
- ▶ Select **Continue**.
The entry field for the name of the new contact is displayed. The entry field for the telephone number is filled in automatically.
- ▶ Enter characters using the controller (\triangleright page 31), the telephone keypad or the touchpad (\triangleright page 29), depending on the vehicle's equipment.
- ▶ To finish and save an entry: select  .
The new contact has been created.

Adding information to an address book entry

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ To select **Calls Received** or **Calls Dialed**: turn and press the controller.
The relevant list is displayed.
- ▶ To highlight the desired telephone number: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Save**: turn and press the controller.
- ▶ Select **Add to Contact**.
- ▶ Select a number category, e.g. **Home**.
- ▶ Select a telephone category, e.g. **Mobile Phone**.
- ▶ Select **Continue**.
The address book is displayed.

- ▶ Search for the desired entry (▷ page 130).
- ▶ Press the controller when you have finished searching.
The telephone number has been saved.
A maximum of five telephone numbers can be saved for one contact.

If five numbers are already stored for the contact you are searching for, a prompt will appear asking whether you wish to overwrite one of the existing numbers.

If you wish to overwrite one of the phone numbers:

- ▶ To select **Yes**: turn and press the controller.
A list of the existing five phone numbers is displayed.
- ▶ To select the phone number to be overwritten from the list: turn the controller and press to confirm.
The entry is overwritten with the new telephone number.

If you do not wish to overwrite any of the phone numbers:

- ▶ To select **No**: turn and press the controller.
The process is canceled.

Deleting call lists

Call lists which are generated and managed by the multimedia system can be deleted in the multimedia system.

You cannot delete call lists from the multimedia system which are displayed on a mobile phone that supports the PBAP Bluetooth®.

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ Select **Delete Call Lists**.
A prompt appears asking whether you wish to delete all call lists.
- ▶ To select **Yes**: turn and press the controller.
The call lists are deleted.

i If you delete call lists from the mobile phone (see the manufacturer's operating instructions), the multimedia system updates the call list display the next time it connects.

Speed dial lists

Setting up speed dial

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To call up the menu bar: slide **⊙↓** the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ Select **Speed Dial Preset List**.
The speed dial list is displayed.
- ▶ To highlight a memory position for the speed dial: turn the controller.
If you highlight an entry that already exists in the speed dial list, this is overwritten with the new entry.
- ▶ To select **[4□]**: slide **⊙→** the controller.
- ▶ Select **Assign Speed Dial Preset**.
The phone book is displayed.
- ▶ Search for a contact (▷ page 118).
- ▶ To select a contact: turn and press the controller.
The phone number has been saved as a speed dial.

Deleting a speed dial number

Deleting a speed dial preset

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To call up the menu bar: slide **⊙↓** the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ Select **Speed Dial Preset List**.
The speed dial list is displayed.
- ▶ To highlight the memory position you want to delete: turn the controller.
- ▶ To select **[4□]**: slide **⊙→** the controller.
- ▶ To select **Delete Speed Dial Preset**: turn and press the controller.
- ▶ To select **Yes**: turn and press the controller.
The speed dial preset has been deleted.

Deleting all speed dial presets

- ▶ To call up the telephone menu: press the  button.
- ▶ To call up the menu bar: slide  the controller.
- ▶ To select **Call Lists**: turn and press the controller.
- ▶ Select **Speed Dial Preset List**.
The speed dial list is displayed.
- ▶ To highlight the desired memory position: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Delete All Speed Dial Presets**: turn and press the controller.
- ▶ To select **Yes**: turn and press the controller.
All speed dials are deleted.

Messages (text messages and e-mails)

Requirements

To use the message functions, the connected mobile phone must support the MAP Bluetooth® profile. When connecting the mobile phone, you may have to accept the prompt for the MAP Bluetooth® profile.

With some mobile phones, some settings still have to be made after connecting to the multimedia system (see the manufacturer's operating instructions). The messages are then displayed the next time you connect to the multimedia system.

An e-mail account must be set up on the mobile phone for the e-mail function (see the manufacturer's operating instructions).

To read and write e-mails in the multimedia system, the e-mail account first needs to be configured (> page 124).

Some mobile phones with the MAP Bluetooth® profile:

- only show new text messages
- do not support the deleting or editing of text messages
- do not support the drafts folder for text messages
- do not support the sending of text messages

- do not support the e-mail function
- do not send messages when in a locked status

Not all mobile phones available on the market are equally suitable. Further information about settings and supported functions of Bluetooth®-capable mobile phones can be found on the Internet at

<http://www.mercedes-benz.com/connect>.

You can also obtain more information by calling.

In the USA, you can get in touch with the Mercedes-Benz Customer Assistance Center on 1-800-FOR-MERCEDES (1-800-367-6372).

In Canada, you can get in touch with the Customer Relations Center on 1-800-387-0100.

Function restrictions

Text messages cannot be written while the vehicle is in motion.

General notes

New messages are identified by the  symbol in the display of the multimedia system and an audible signal. Once you have read all the messages, the symbol is no longer displayed.

The multimedia system displays the 100 newest text messages and e-mails.

The  symbol is displayed when the mobile phone's message memory is full. The symbol is no longer displayed if you delete messages.

Settings

Calling up the settings menu for messages

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select : turn and press the controller.
The message menu is displayed.

- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Settings**: turn and press the controller.
The text message settings and the available e-mail accounts of the connected mobile phone will be displayed.

Configuring the text messages displayed

- ▶ Call up the settings menu for messages (▷ page 123).
- ▶ To highlight **Text Message**: turn the controller.
- ▶ To select : slide  the controller.
A menu with the following options is shown:
 - **All Messages**
All the messages are displayed.
 - **New Messages**
Only the messages that are new on the mobile phone are displayed. You can also display the last 100 text messages using the **Download** option in the message menu.
 - **Off**
The messages are not displayed automatically. You can display the 100 newest text messages from the mobile phone using the **Download** option in the message menu.
- ▶ To select the required option: turn and press the controller.

Configuring the e-mails displayed

- ▶ Call up the settings menu for messages (▷ page 123).
- ▶ To highlight an e-mail account: turn the controller.
- ▶ To select : slide  the controller.
A menu with the following options is shown:
 - **All Messages**
All the messages are displayed.
 - **New Messages**
Only the messages that are new on the mobile phone are displayed. You can also display the last 100 text messages using the **Download** option in the message menu.
 - **Off**
The messages are not displayed automatically. You can display the last 100 text

messages using the **Download** option in the message menu.

- ▶ To select the required option: turn and press the controller.

Configuring an e-mail account

- ▶ Call up the settings menu for messages (▷ page 123).
- ▶ To select an e-mail account: turn and press the controller.
The e-mail account is now configured. E-mails can now be received and sent in the multimedia system.

Deactivating the e-mail function

- ▶ Call up the settings menu for messages (▷ page 123).
- ▶ To select **E-Mail Off**: turn and press the controller.
E-mail reception is deactivated.

Changing the displayed name of the e-mail account

Some mobile phones:

- do not support the changing of the displayed name
- support only the e-mail address of the e-mail account
- ▶ Call up the settings menu for messages (▷ page 123).
- ▶ To highlight an e-mail account: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Own E-Mail Address**: turn and press the controller.
The input menu for entering your own e-mail address is displayed.

Downloading messages manually

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select : turn and press the controller.
The message menu is displayed.

- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **Download**: turn and press the controller.

Downloading text messages and e-mails from the phone


- ▶ Select **From the Phone**.
The messages are downloaded. If you have selected **Automatic Download** in the e-mail settings, manual downloading is not possible.

Updating from the e-mail server by the mobile phone

- ▶ Select **From the E-Mail Server**.
The e-mails in the mobile phone are updated. This function is not supported by all mobile phones.

Reading messages

In the message menu

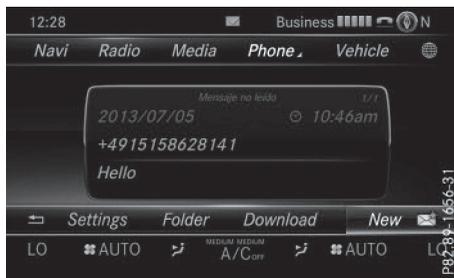


The message menu contains all the unread text messages and e-mails. If the corresponding folder is called up, the messages are displayed sorted by text messages and e-mails.

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select : turn and press the controller. The message menu is displayed with the unread messages.
- ▶ To select the message: turn and press the controller. The message text is displayed.
- ▶ To close the message text: press the button.

If you want to read messages that have already been read again, you have to call up the corresponding message folder (▶ page 125).

In the message folder

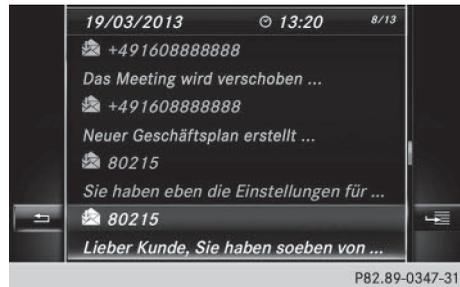

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select : turn and press the controller. The message menu is displayed.
- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **Folder**: turn and press the controller.
- ▶ To select **Text Message** or **E-Mail**: turn and press the controller. The selected folder is displayed.
- ▶ To select the message: turn and press the controller. The message is displayed.
- ▶ To scroll through the message or select phone numbers in the text: turn the controller. The display scrolls up or down line by line, or skips to the next or previous telephone number and automatically highlights it.
- ▶ To return to the list: press .

The following sub-folders can be selected for text messages and e-mails:

- **Inbox**
This folder contains all the incoming messages.
- **Outbox**
This folder contains all the outgoing messages.
- **Drafts**
This folder contains all the messages that you have saved as a draft.

- ▶ **i** Folders cannot be selected if they are empty.

Depending on the mobile phone used, the sub-folder function may be available.

Read-aloud function for messages

- ▶ To start the read-aloud function: press the controller when the message is displayed.
- ▶ To select **Read Aloud**: turn and press the controller.
The multimedia system reads the message aloud.

- ▶ To cancel the read-aloud function: press the  button.

or

- ▶ Press the controller, select **Cancel Read-Aloud Function** and press the controller again.

You can set the language (▷ page 44) and the speed (▷ page 40) of the read-aloud function.

Displaying details and phone numbers

The multimedia system can also show a shortened sender display in full.

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select : turn and press the controller. The message menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **Folder**: turn and press the controller.
- ▶ To select **Text Message** or **E-Mail**: turn and press the controller. The selected folder is displayed.
- ▶ To highlight the desired message: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Details**: turn and press the controller. The detailed view appears.
- ▶ **To close the detailed display**: slide  the controller.
- ▶ **To return to the telephone menu**: press the  button.

Writing text messages

Writing a new text message



Observe the requirements for the message function (▷ page 123).

- ▶ To call up the telephone menu: press the  button.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select : turn and press the controller. The message menu is displayed.
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **New**: turn and press the controller.
- ▶ To select **Text Message**: turn and press the controller. The text message input menu is displayed. The **To:** input line is selected.

Entering a recipient

- ▶ Enter characters using the controller (▷ page 31), the telephone keypad or the touchpad (▷ page 30), depending on the vehicle's equipment.

or

- ▶ To enter a phone number from the phone book: select the  symbol. The contacts from the address book which have a phone number are displayed.
- ▶ Search for and select an entry (▷ page 118). The number is copied to the recipient line.

Entering text and sending text messages

- ▶ If the phone number was entered manually, first select the text input line: select  in the character bar.
- ▶ Enter characters.

The multimedia system contains templates which you can use to compile your messages (▷ page 128).

- ▶ To send the text message: select **OK**.

Answering a text message

Observe the requirements for the message function (▷ page 123).

- ▶ Display the message (▷ page 125).
- ▶ Press the controller.
- ▶ To select **Reply**: turn and press the controller. The text message input menu is displayed. The addressee's details are automatically filled in using the details in the original message.

Writing e-mails

Writing a new e-mail



Observe the requirements for the message function (▷ page 123).

- ▶ To call up the telephone menu: press the **TEL** button.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **✉**: turn and press the controller. The message menu is displayed.
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **New**: turn and press the controller.
- ▶ To select **E-Mail**: turn and press the controller. The e-mail input menu appears. The **To:** input line is selected.

Entering a recipient

- ▶ Enter characters using the controller (▷ page 31), the telephone keypad or the

touchpad (▷ page 30), depending on the vehicle's equipment.

or

- ▶ To insert an e-mail address from the address book: select the **👤** symbol. The contacts from the address book which have an e-mail address are displayed.
- ▶ Search for and select an entry (▷ page 118). The e-mail address is copied to the addressee line.

Entering the subject

- ▶ To select the **Subject:** input line: select **↓** in the character bar.
- ▶ Enter characters.

Entering text and sending e-mails

- ▶ To select an input line for text: select **↓** in the character bar.
 - ▶ Enter characters.
- The multimedia system contains templates which you can use to compile your messages (▷ page 128).
- ▶ To send the e-mail: select **OK**.

Answering an e-mail

Observe the requirements for the message function (▷ page 123).

- ▶ Display the message (▷ page 125).
- ▶ To call up a menu: press the controller.
- ▶ To select **Reply**: turn and press the controller. The e-mail input menu appears. The addressee's details are automatically filled in using the details in the original message.

When replying to an e-mail, you can also select **Reply to All** instead of **Reply**. In this case, the reply is sent not just to the sender but to all those who received the original message.

Forwarding an e-mail

Observe the requirements for the message function (▷ page 123).

- ▶ Display the message (▷ page 125).
- ▶ To call up a menu: press the controller.
- ▶ To select **Forward**: turn and press the controller. The input menu appears. The subject line is automatically filled in with the same details as those in the original message.

Text templates

Using text templates



- ① Displays text templates
- ▶ Select the input line for a text message (▷ page 126) or e-mail (▷ page 127).
- ▶ To select text templates ① in the character bar: turn and press the controller. The text templates are displayed.
- ▶ To select and insert a text template: turn and press the controller. The text template is inserted into the text message or e-mail.

Editing text templates



- ① Displays text templates
- ▶ Select the input line for a text message (▷ page 126) or e-mail (▷ page 127).
- ▶ To select text templates ① in the character bar: turn and press the controller. The text templates are displayed.
- ▶ To highlight the text template to be edited: turn the controller.
- ▶ To select : slide  → the controller.
- ▶ To select **Edit**: turn and press the controller. The text template is displayed in an input line.
- ▶ Edit the text template as desired. Further information on character entry using the con-

troller (▷ page 31) and on handwriting recognition on the touchpad (▷ page 29).

- ▶ To adopt changes to the text template, select : turn and press the controller. The text template has been changed.

Calling a text message sender

- ▶ Display the message (▷ page 125).
- ▶ To call up a menu: press the controller.
- ▶ To select **Call Sender**: turn and press the controller. The call is made.

Using a phone number in the text

Numbers in text messages that are highlighted can be used.

- ▶ To highlight and select a usable phone number while the message is displayed: turn and press the controller.
- ▶ To select **Use**: press the controller.
- ▶ To select **Call**: turn and press the controller. The call is made.

i It is possible that a highlighted numerical sequence may not contain a telephone number.

Storing the sender as a new entry in the address book

Storing the sender of a text message

- ▶ To call up the menu when a text message is displayed: press the controller.
- ▶ To select **Save Number**: turn and press the controller.
- ▶ To select **New Entry**: turn and press the controller.
- ▶ Select a number category, e.g. **Home**.
- ▶ Select a telephone category, e.g. **Mobile Phone**.
- ▶ Select **Continue**. The input line for the name of the new contact is displayed. The input line for the telephone number is filled in automatically.
- ▶ Enter characters using the controller (▷ page 31), the telephone keypad or the

touchpad (▷ page 30), depending on the vehicle's equipment.

- ▶ To finish the entry: select **OK**.
The new contact has been created.

Saving the sender of an e-mail

- ▶ To call up the menu when an e-mail is displayed: press the controller.
- ▶ To select **Save Sender's E-Mail Address**: turn and press the controller.
- ▶ To select **New Entry**: turn and press the controller.
- ▶ Select a category, e.g. **Home**.
- ▶ Select **Continue**.
The input line for the name of the new contact is displayed. The input line for the e-mail address is filled in automatically.
- ▶ Enter characters using the controller (▷ page 31), the telephone keypad or the touchpad (▷ page 30), depending on the vehicle's equipment.
- ▶ To finish the entry: select **OK**.
The new contact has been created.

Adding the sender to an address book entry

Storing the sender of a text message

- ▶ To call up the menu when a text message is displayed: press the controller.
- ▶ To select **Save Number**: turn and press the controller.
- ▶ To select **Add Phone Number**: turn and press the controller.
- ▶ To select a category for the number, e.g. **Home**: turn the controller and press to confirm.
- ▶ To select a telephone category, e.g. **Mobile Phone**: turn the controller and press to confirm.
- ▶ To select **Continue**: turn and press the controller.
The address book is displayed.
- ▶ Search for the desired entry (▷ page 130).
- ▶ Press the controller when you have finished searching.
The telephone number has been added.
A maximum of five telephone numbers can be saved for one contact.

Saving the sender of an e-mail

Up to two e-mail addresses can be saved for one contact.

- ▶ To call up the menu when an e-mail is displayed: press the controller.
- ▶ To select **Save Sender's E-Mail Address**: turn and press the controller.
- ▶ To select **Add**: turn and press the controller.
The address book is displayed.
- ▶ Search for the desired entry (▷ page 130).
- ▶ Press the controller when you have finished searching.
The e-mail address has been added.

Deleting messages

- ▶ Call up the message folder (▷ page 125).
- ▶ To select the message: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Delete**: turn and press the controller.
- ▶ To select **Yes**: turn and press the controller.
The message is deleted.

i This delete function is not supported by all mobile phones. The **Delete failed**. message then appears.

Address book

Introduction

Always pay attention to traffic conditions.

Familiarize yourself with the address book functions before beginning your journey.

You can use the multimedia system when the road and traffic conditions permit. You could otherwise become involved in an accident in which you or others could be injured.

The address book displays all the contacts from the various sources (mobile phone, memory card, USB device, the phone book of the multimedia system, navigation).

You can use the contacts to make telephone calls, navigate and to write messages.


If a mobile phone is connected to the multimedia system and automatic calling up is activated (▷ page 134), the mobile phone's contacts are displayed in the address book. If you disconnect

the mobile phone from the multimedia system, these contacts are no longer displayed in the address book.

When you import, save, edit or add contacts, they will be saved in the multimedia system. These contacts will remain available even when you connect the multimedia system to a different mobile phone. You can view these contacts even without a mobile phone.

- ❗ The address book can store a total of 5000 contacts.
 - 2000 entries are reserved for permanently saved contacts.
 - 3000 entries are reserved for contacts that you can load from the mobile phone.
- ❗ Before selling your vehicle, delete the contacts saved in the multimedia system using the reset function (▷ page 46).

Calling up the address book

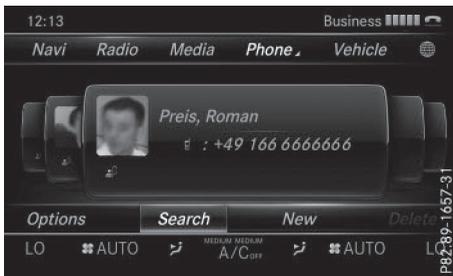

- ▶ To call up the telephone menu: press the **[TEL]** button.
- ▶ To switch to the main function bar: slide **↑** the controller.
- ▶ To select **Phone**: press the controller.
- ▶ To select **Address Book**: turn and press the controller.
- ▶ To browse in the address book: turn the controller.

An address book entry can also include a picture. This is shown to the left of the address data. Address book entries with pictures can only be created by importing vCards (vcf files). Further information on importing vCards (▷ page 134). The quality of the picture depends on the picture's resolution.

Searching for a contact

Using the character bar

- ▶ Call up the address book (▷ page 130).
- ▶ To switch to the menu bar: slide **⊙↓** the controller.
- ▶ To select **Search**: turn and press the controller.
- ▶ To select characters: turn the controller and press to confirm.

The first contact with the selected first character is highlighted in the address book. If there are similar contacts, the next different character is shown. For example, with contacts such as **Jana** and **John**, the beginnings of the names are identical. The next different character **A** and **O** are offered for selection.
- ▶ Select the characters of the contact you are searching for one by one, pressing and confirming with the controller each time.
- ▶ To end the search: select **[ok]**.

The contacts in the address book are displayed.
- ▶ To select a contact: turn and press the controller.

Back to the character bar

- ▶ Press the **[←]** button repeatedly until the character bar is displayed.

Information about character entry (▷ page 31)

Using the touchpad

- ▶ Call up the address book (▷ page 130).
- ▶ To switch to the menu bar: glide down.
- ▶ Select **Search**.
- ▶ Draw a letter on the touchpad surface.

The first contact with the selected first character is highlighted in the address book. Further information on handwriting recognition on the touchpad (▷ page 29).
- ▶ Draw additional letters on the touchpad surface one after another.
- ▶ To complete the search and return to the phone book: press the touchpad.
- ▶ To select and call the contact: glide up or down and press.

Adding a new contact

You can enter address data directly into the address book. If you store telephone numbers in the phone book of the multimedia system, these are also saved in the address book. If you store a navigation destination, the multimedia system creates an address book entry that includes the complete navigable address data.

- ▶ Call up the address book (▷ page 130).
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select **New**: turn and press the controller. The surname and first name input lines are displayed.
- ▶ Enter characters using the controller (▷ page 31), the telephone keypad or the touchpad (▷ page 29), depending on the vehicle's equipment.
- ▶ To save surnames and first names: select  .
The details for the contact are displayed.
- ▶ To add the desired entry (e.g. **Add E-Mail Address**): turn and press the controller. Depending on the type of entry, the corresponding input menu appears.
- ▶ Enter characters using the controller (▷ page 31), the telephone keypad or the touchpad (▷ page 29), depending on the vehicle's equipment.
- ▶ To finish and save an entry: select  .

Displaying contact details



P82.89-0187-31

- ▶ Call up the address book (▷ page 130).
- ▶ To select a contact: turn and press the controller.
The details for the contact are displayed.

The entries can be categorized as follows:

-  Business details
-  Home details

i An address book entry can contain the following information:

- name
- first name
- company
- up to five telephone numbers
- two email addresses
- Internet address
- two addresses
- two navigation addresses (transferred from navigation(▷ page 67))
- geo-coordinates

Adding information to a contact

- ▶ Call up the address book (▷ page 130).
- ▶ To select a contact: turn and press the controller.
The details for the contact are displayed.
- ▶ To add a desired entry (e.g. **Add E-Mail Address**): turn and press the controller. Depending on the type of entry, the corresponding input menu appears.
- ▶ Enter characters using the controller (▷ page 31), the telephone keypad or the touchpad (▷ page 29), depending on the vehicle's equipment.
- ▶ To finish and save an entry: select  .

A maximum of five telephone numbers can be saved for one contact.

Starting route guidance to an address or geo-coordinates

If an address with a ZIP code is saved, the address can be used for route guidance. If the ZIP code cannot be assigned to an exact address, you can adjust the destination subsequently using the controller.

- ▶ Call up the address book (▷ page 130).
- ▶ To select a contact: turn and press the controller.
The details for the contact are displayed.

- ▶ To select the address or geo-coordinates: turn and press the controller. The navigation menu is displayed.
- ▶ To select **Start Route Guidance**: slide  and press the controller. The route to the destination address is calculated and route guidance starts.

Making a call

- ▶ Call up the address book (▷ page 130).
- ▶ To select a contact: turn and press the controller. The details for the contact are displayed.
- ▶ To select a telephone number: turn and press the controller. The number is dialed. Further information about the functions during a call (▷ page 114).

Sending text messages

- ▶ Call up the address book (▷ page 130).
- ▶ To select a contact: turn and press the controller. The details for the contact are displayed.
- ▶ To highlight the telephone number: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Send Text Message**: turn and press the controller. The entry fields for a text message are displayed.

Observe the requirements for the message function (▷ page 123).

Sending an e-mail

- ▶ Call up the address book (▷ page 130).
- ▶ Select an entry: turn and press the controller. The details for the contact are displayed.
- ▶ To select an e-mail address: turn and press the controller. The entry fields for an e-mail are displayed (▷ page 127).

Observe the requirements for the message function (▷ page 123).

Displaying sub-entry information

- ▶ Call up the address book (▷ page 130).
- ▶ Select an entry: turn and press the controller. The details for the contact are displayed.
- ▶ To highlight the desired entry: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Details**: turn and press the controller. The display is shown in full.
- ▶ To close the detailed display: press the  button.

Editing a contact

	Förster, Frank	Edit
	Add Company Name	Details
	Telephone	Voice tag
	+49 1987654321	Save
	Add Phone Number	Delete entry
	E-mail	
	mail@internet.de	
	Add E-Mail Address	
	Internet	

P82.89-0186-31

- ▶ Call up the address book (▷ page 130).
- ▶ To select a contact: turn and press the controller. The details for the contact are displayed.
- ▶ To highlight the desired entry: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Edit**: turn and press the controller. The entry field for the selected entry is displayed.

Information about character entry (▷ page 31).

Changing the category of an entry

- ▶ Call up the address book (▷ page 130).
- ▶ Select an entry: turn and press the controller. The details for the contact are displayed.
- ▶ To highlight the desired entry: turn the controller.
- ▶ To select : slide  the controller.

- ▶ To select **Change Category**: turn and press the controller.
- ▶ To select a category: turn the controller and press to confirm.

Storing the phone number as a speed dial number

- ▶ Call up the address book (▷ page 130).
- ▶ Select an entry: turn and press the controller. The details for the contact are displayed.
- ▶ To highlight the desired telephone number: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Speed Dial**: turn and press the controller.
- ▶ To select **Assign Speed Dial Preset**: turn and press the controller.
- ▶ To select a memory position for the speed dial: turn and press the controller. The phone number has been saved as a speed dial.

Voice tags

Introduction

You can enter voice tags via the Voice Control System (see the separate operating instructions). Once you have assigned a voice tag to an address book entry, you can call up this entry with a voice command and dial a phone number, for example. You can add one voice tag per address book entry.

Adding or changing a voice tag

- ▶ Call up the address book (▷ page 130).
- ▶ Search for an address book entry with or without a voice tag  (▷ page 130).
- ▶ To select : slide  the controller.
- ▶ To select **Voice Tag**: turn and press the controller.
- ▶ To select **Add**: turn and press the controller. Subsequent operation is voice-controlled. The Voice Control System guides you through the dialogs.

Deleting a voice tag

- ▶ Call up the address book (▷ page 130).
- ▶ Search for an address book entry with a voice tag (▷ page 130).
- ▶ To select : slide  the controller.
- ▶ To select **Voice Tag**: turn and press the controller.
- ▶ To select **Delete**: turn and press the controller.
- ▶ To select **Yes**: turn and press the controller. The voice tag is deleted.

Listening to a voice tag

- ▶ Search for an address book entry with a voice tag (▷ page 130).
- ▶ To select : slide  the controller.
- ▶ To select **Voice Tag**: turn and press the controller.
- ▶ To select **Listen**: turn and press the controller. You hear the voice tag.

Changing the display and sorting criteria for contacts

- ▶ Call up the address book (▷ page 130).
- ▶ To show the menu bar: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Display and Sorting**: turn and press the controller.

You have the following options:

- **Last Name, First Name** (default setting)
The contacts are sorted by surname and displayed with a comma.
- **Last Name First Name**
The contacts are sorted by surname and displayed without a comma.
- **First Name Last Name**
The contacts are sorted by first name and displayed without a comma.
- ▶ To select the required option: turn and press the controller. The contacts are sorted and displayed according to the selection.

Automatically importing contacts from the phone

Depending on the mobile phone used, you can set whether the contacts should be called up automatically after the mobile phone is connected to the multimedia system.

- ▶ Connect a mobile phone (▷ page 107).
- ▶ Call up the address book (▷ page 130).
- ▶ To show the menu bar: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Automatically Import Contacts from Phone**: turn and press the controller.
You can allow or suppress the automatic download.

Saving a contact

Saved contacts are indicated in the phone book by different symbols (▷ page 117).

- ▶ Call up the address book (▷ page 130).
- ▶ To select a contact: turn and press the controller.
The details for the contact are displayed.
- ▶ To select : slide  the controller.
- ▶ To select **Save**: turn and press the controller.
The contact has now been saved.

- i** If the saved address book entry contains a phone number, the entry is also displayed in the phone book.

Saving or editing the contact data in the multimedia system does not change the contacts on the mobile phone. If automatic downloading of phone contacts is activated, the multimedia system displays the copy  with the changed data. To add additional data, such as additional phone numbers or e-mail addresses, select this contact. In this way, you avoid creating additional copies of the mobile phone entry.

Deleting a name

- ▶ Call up the address book (▷ page 130).
- ▶ Search for a contact (▷ page 130).

- ▶ To select : slide  the controller.
- ▶ To select **Delete Entry**: turn and press the controller.
- ▶ To select **Yes**: turn and press the controller.
The contact is deleted.

Importing contacts

Information and requirements

Contacts can be imported as vCards (vcf files). A vCard is an electronic business card. A memory card, USB device or a Bluetooth® connection can be used for importing.

- i** Up to 2000 entries can be imported into the address book. A message notifies you when the maximum number is reached. In order to be able to then import new contacts, you have to delete existing contacts (▷ page 134).

Source	Requirements
Memory card	The SD card is inserted. It contains importable contact details.
USB device	The USB device is inserted into the USB port. It contains importable contact details.
Bluetooth® connection	If the sending of vCards is supported via Bluetooth®, vCards can be received on mobile phones or netbooks, for example. Bluetooth® must be activated in the multimedia system and on the respective device; see the manufacturer's operating instructions.

Importing from the memory card or USB device

Contacts imported from the memory card or from a USB device are identified by the  symbol.

The following conditions must be fulfilled in order to import vCards:

- vCards (vcf files) may be located in the main directory or in folders. The multimedia system

allows for a targeted selection of the corresponding directories.

- vCards must have the file extension ".vcf".
- i** The multimedia system supports vCards in versions 2.1 and 3.0.



- ▶ To switch to the menu bar in the telephone menu or the address book: slide the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Download Contacts**: turn and press the controller.
- ▶ To select **From Memory Card** or **From USB device**: turn and press the controller.

Receiving vCards via Bluetooth®



Multimedia system

- ▶ To switch to the menu bar in the telephone menu or the address book: slide the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Download Contacts**: turn and press the controller.
- ▶ To select **From Bluetooth Device**: turn and press the controller.
If the multimedia system is connected to a mobile phone, the connection is terminated.

vCards can now be received by a device (PC, mobile phone) via Bluetooth®.

External device

- ▶ Start the data transfer; see the manufacturer's operating instructions.
The number of vCards received is displayed in the multimedia system.

Multimedia system

- ▶ To end reception: press the controller or the button.
If a mobile phone was connected, the connection to the mobile phone is established again.

Received vCards are identified by the symbol in the address book.

- i** If you switch to another main function, e.g. navigation, while receiving vCards, the reception of vCards will be terminated.

Deleting imported contacts

- ▶ To change to the menu bar when in the address book or the telephone menu: slide the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Delete Contacts**: turn and press the controller.
- ▶ Select one of the following options:
 - **Internal Contacts**
 - **Imported from Storage Device**
 - **Imported from Bluetooth Devices**
 - **Downloaded from Phone**
 Turn and press the controller.
- ▶ To select **Yes**: turn and press the controller.
The contacts are deleted.
- i** If automatic calling up of the contacts is deactivated (▶ page 134), the **Downloaded from Phone** option is available.

Closing the address book

- ▶ Press the button.

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Important safety notes

WARNING

If you operate information systems and communication equipment integrated in the vehicle while driving, you will be distracted from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Only operate the equipment when the traffic situation permits. If you are not sure that this is possible, park the vehicle paying attention to traffic conditions and operate the equipment when the vehicle is stationary.

You must observe the legal requirements for the country in which you are driving when operating the system.

General notes

Connection difficulties while the vehicle is in motion

The connection may be lost if:

- the mobile phone network coverage is insufficient
- the vehicle has moved into a mobile phone cell with no free channels
- the SIM card used is not compatible with the network available

Function restrictions

You will not be able to use the Mercedes-Benz Apps and Internet connection, or will no longer be able to use them, or may have to wait before using them, in the following situations:

- if the mobile phone is switched off
- if your mobile phone has not been enabled for Internet access
- if the Bluetooth® function is switched off on the multimedia system and the desired phone is supposed to be connected via Bluetooth®
- if the Bluetooth® function is switched off on the mobile phone and the phone is supposed to be connected via Bluetooth®
- if the mobile phone is not connected via USB and the phone is supposed to be connected via USB
- if neither the mobile phone network nor the mobile phone allow simultaneous use of a phone and an Internet connection
- if the mobile phone has not been enabled for Internet access via Bluetooth® and/or USB

The driver is not permitted to call up websites while driving and use of the Mercedes-Benz Apps is restricted.

i It is possible that you may not be able to receive calls when an Internet connection is active. This depends on the mobile phone and the mobile phone network used.

Conditions for access

USA: to use Mercedes-Benz Apps and Internet access, mbrace must be activated and operational. Furthermore, mbrace must be activated for Mercedes-Benz Apps and Internet access. Take note of the connection priorities. An emergency call has the highest priority. When a service call, e.g. a breakdown service call or the MB Info Call, is active, an emergency call can still be initiated. A service call, on the other hand, has priority over a current Internet connection. Therefore, you cannot establish an Internet connection during a service call.

Canada: a mobile phone must be connected via Bluetooth® (▷ page 107) or USB (▷ page 176) with the multimedia system. Furthermore, you need a valid mobile service contract with a data

option, which is used to calculate the associated connection costs.

Conditions for a Bluetooth® connection

- The mobile phone supports at least one of the Bluetooth® profiles DUN (**Dial-Up Network**) or PAN (**Personal Area Network**).

The Bluetooth® profiles DUN and PAN enable the Internet connection of the mobile phone to be made available to the system.

Conditions for a USB connection

- The mobile phone supports at least one of the USB classes:
 - RNDIS (**R**emote **N**etwork **D**river **I**nterface **S**pecification)
 - CDC/NCM (**N**etwork **C**ontrol **M**odel)
 - CDC/ECM (**E**thernet **C**ontrol **M**odel)
 - CDC/ACM (**A**ccess **C**ontrol **M**odel)

The USB classes enable the mobile phone Internet connection to be made available to the system.

The terms of use are shown when the system is used for the first time and then once a year thereafter. Only read and accept the terms of use when the vehicle is stationary.

The driver is not permitted to call up websites while driving and use of the Mercedes-Benz Apps is restricted.

- **i** The availability of individual Mercedes-Benz Apps may vary depending on the country.

Setting up an Internet connection (Canada)

Procedure and general information

In order to set up a mobile phone for Internet access, your mobile phone must be connected to the multimedia system via Bluetooth® (▷ page 107) or USB (▷ page 164).


If you are using Internet access for the first time, you must enable the connected mobile phone for Internet access (▷ page 137). If the connected mobile phone supports the Bluetooth® PAN profile or the USB classes RNDIS, CDC/NCM or CDC/ECM, you do not need to make additional settings. The Internet connection is established. If the connected mobile phone does not support the named Bluetooth® profile or the named USB classes, predefined

(▷ page 138) or manual access data (▷ page 138) must be set.

While initializing the mobile phone for the Internet connection, access data which is already on the mobile phone may be overwritten. You should therefore check the settings on the mobile phone (see the manufacturer's operating instructions).

Enabling the mobile phone for Internet access

- ▶ To display the main function bar: slide **↑**  the controller.
- ▶ To select : turn and press the controller. The menu with the Internet functions is displayed.
- ▶ To switch to the menu bar: slide **↓**  the controller.
- ▶ To select **Settings**: turn and press the controller.
- ▶ To select **Configure Internet Settings**: turn and press the controller. A message is displayed telling you that the settings for the Internet functions depend on your mobile phone network provider and your mobile phone.
 - If a mobile phone has already been enabled, the device list is displayed.
- ▶ To select **Start Search**: turn and press the controller. Mobile phones are displayed that:
 - are connected to the multimedia system
 - fulfill the conditions for the Internet functions
 - have not yet been set up for the Internet function

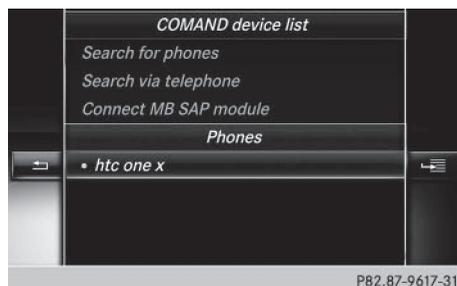


P82.87-9617-31

- ▶ To select a mobile phone from the device list: turn the controller and press to confirm. If the mobile phone supports the Bluetooth® PAN profile or the USB classes RNDIS, CDC/NCM or CDC/ECM, Internet access is set up. You can use the Internet functions. If the connected mobile phone does not support the named Bluetooth® profile or the named USB classes, predefined (▷ page 138) or manual access data (▷ page 138) must be set.

Setting access data of the mobile phone network provider

Selecting the predefined access data of the mobile phone network provider

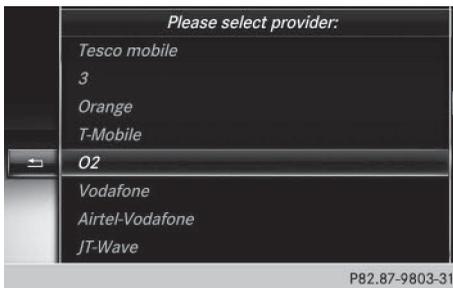


- ▶ To select **Predefined Settings**: turn and press the controller. A list of countries appears.

If the mobile phone network provider provides multiple access data options, the relevant access data still has to be selected. This depends on the data package used, for example. To check whether the predetermined dial-in data corresponds with the dial-in data provided by your mobile phone network provider, proceed as follows (▷ page 139) and select **Manual Settings**. The access data is displayed. The access data for the mobile phone network provider is selected once for the mobile phone connected and is loaded again each time the mobile phone is connected. Establishing a connection (▷ page 140).

You must set the access data of the mobile phone network provider who provides the SIM card and the associated data package (access settings) for the connected mobile phone. The access data remains the same when you are in a

different country (roaming). The access data of another network is **not** selected.

Manually setting the access data of the mobile phone network provider

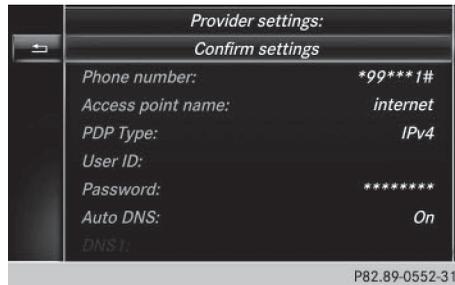

- ▶ To select **Manual Settings**: turn and press the controller. An overview of the provider settings appears.
- ▶ Set access data (▷ page 138).
- ▶ To confirm settings: select **Confirm Settings** and turn and press the controller.

The access data for the mobile phone network provider is selected once for the mobile phone connected and is loaded again each time the mobile phone is connected. Establishing a connection (▷ page 140).

You must set the access data of the mobile phone network provider who provides the SIM card and the associated data package (access settings) for the connected mobile phone. The access data remains the same when you are in a different country (roaming). The access data of another network is **not** selected.

Setting access data

Set the access data in accordance with your data package. You can contact your mobile phone network provider to obtain the precise access data.

Explanation of the access data


Input field	Meaning
Phone Number:	Access number for establishing the connection The access number depends on the mobile phone used. For GSM/UMTS mobile phones, *99***1# is used as a standard.
Access Point:	APN network access point (Access Point Name) You can obtain this information from your mobile phone network provider. Entry is not necessary for all mobile phone network providers and mobile phones.
PDP Type:	Internet protocol used. You can obtain this information from your mobile phone network provider.
User ID:	The user identification can be obtained from your mobile phone network provider. Entry is not necessary for all mobile phone network providers.
Password:	The password can be obtained from your mobile phone network provider. Entry is not necessary for all mobile phone network providers.
Auto DNS:	Automatic allocation of DNS servers is activated. If the function is deactivated, the DNS server addresses must be entered manually. DNS (Domain Name Service).
DNS1: DNS2:	Fields for entering the DNS server addresses manually. The address can be obtained from your mobile phone network provider.

Managing existing access data

Calling up the device list

- ▶ To display the main function bar: slide ↑ the controller.
- ▶ To select : turn and press the controller. The menu with the Internet functions is displayed.
- ▶ To switch to the menu bar: slide Ⓞ↓ the controller.
- ▶ To select **Settings**: turn and press the controller.
- ▶ To select **Configure Internet Settings**: turn and press the controller. The device list is displayed.

Editing the access data

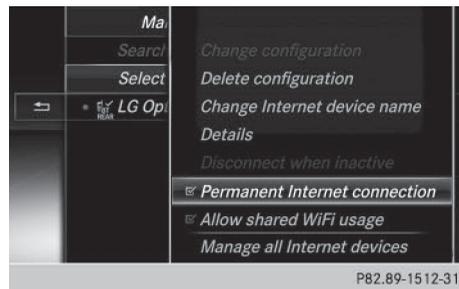

The mobile phone must be connected with the system for the access data to be changed. When the Internet connection is active, you cannot edit or delete the access data of the currently set mobile phone network provider.

- ▶ Call up the device list (▷ page 139).
- ▶ To highlight the desired mobile phone in the device list: turn the controller.
- ▶ To select : slide Ⓞ→ the controller.
- ▶ To select **Change Configuration**: turn and press the controller.
- ▶ Select **Predefined Settings** or **Manual Settings**.

The provider settings are displayed. In order to edit the access data of the mobile phone network provider you have two options:

- Option 1: select the predefined access data of the mobile phone network provider (▷ page 138).
- Option 2: manually set the access data of the mobile phone network provider (▷ page 138).

Canceling Internet access permission for a mobile phone


- ▶ Call up the device list (▷ page 139).
- ▶ To highlight the desired mobile phone in the device list: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Delete Configuration**: turn and press the controller.
A prompt appears asking whether you wish to delete the Internet configuration.
- ▶ To select **Yes**: turn and press the controller.
The Internet access permission for the mobile phone is now canceled. The mobile phone can now no longer be used by the system for Internet functions.

Setting automatic disconnection of the Internet connection

If a preset time has elapsed during which the Internet functions have not been used, the Internet automatically disconnects.

- ▶ Call up the device list (▷ page 139).
- ▶ To highlight the desired mobile phone in the device list: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Disconnect Automatically When Inactive**: turn and press the controller.
- ▶ To select **5 Minutes, 10 Minutes** or **20 Minutes**: turn and press the controller.

Managing all Internet devices

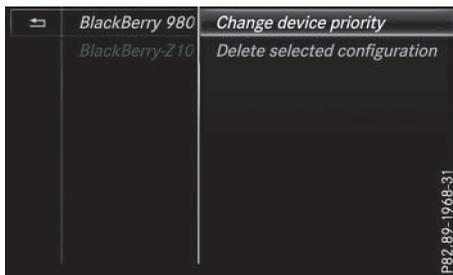

If multiple mobile phones have been enabled for Internet usage, these can be given priorities. The system then selects the mobile phone with

the highest priority to establish an Internet connection.

- ▶ Call up the device list (▷ page 139).
- ▶ To highlight the mobile phone: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Manage All Internet Devices**: turn and press the controller.
A menu appears.
- ▶ To highlight a mobile telephone: turn the controller.
- ▶ To select : slide  the controller.
- ▶ To select **Change Device Priority**: turn and press the controller.
- ▶ To move the desired mobile phone up or down: turn and press the controller.
The mobile phone's priority is changed.
The priority of the mobile phones is determined by the hierarchy. The mobile phone at the top of the list has the highest priority.

Establishing/ending the connection

Establishing the connection

Read the conditions for establishing a connection (▷ page 136).

A connection can be established, for example by:

- entering a web address (▷ page 143)
- calling up a Mercedes-Benz App (▷ page 141)
- calling up a favorite
- establishing an Internet connection via a wireless networking device. The "Allow shared WiFi usage" option must be activated in the multimedia system for this (▷ page 41)

Ending the connection

- ▶ Select **Cancel** in the connections window.

Connection status



- ① Display of existing connection and signal strength of the mobile phone network

In most cases, the current connection status is then shown in the status bar when you switch to another main function.

Detailed connection status

- ▶ To display the main function bar: slide ↑⊙ the controller.
- ▶ To select ⊕: turn and press the controller. The menu with the Internet functions is displayed.
- ▶ To switch to the menu bar: slide ⊙↓ the controller.
- ▶ To select **Settings**: turn and press the controller.
- ▶ To select **Connection Status**: turn and press the controller. The following information is displayed:
 - the volume of transferred data
 - connection status
 - the device name of the mobile phone

Ending the connection

USA: you cannot cancel the connection yourself. The Internet connection is automatically terminated if the system does not recognize any user input within a five-minute time period.

Canada:

- ▶ To display the main function bar: slide ↑⊙ the controller.
- ▶ To select ⊕: turn and press the controller. The menu with the Internet functions is displayed.

- ▶ To switch to the menu bar: slide ⊙↓ the controller.

- ▶ To select ⊕: turn and press the controller.

If the mobile phone Internet connection is canceled, the multimedia system tries to reconnect. You should therefore always end the connection in the multimedia system.

Mercedes-Benz Apps

General notes

To be able to use Mercedes-Benz Apps, you have to register and confirm the terms and conditions.

Calling up Mercedes-Benz Apps

- ▶ To display the main function bar: slide ↑⊙ the controller.
- ▶ To select ⊕: turn and press the controller.
- ▶ To select **Mercedes-Benz Apps**: turn and press the controller.
- ▶ To call up the app: turn and press the controller.

You can find further Mercedes-Benz Apps and information under:

<http://apps.mercedes-benz.com/apps/>

- ❗ The available features are country-dependent. License fees may be applicable.

Mercedes-Benz Companion

Introduction

The Mercedes Benz Companion app is available in the USA.

The Mercedes-Benz Companion app enables door-to-door navigation.

Door-to-door navigation means:

- The current destination is transferred from the vehicle's multimedia system to an external device (iPhone® or Apple Watch®).

This enables you to continue navigating to a destination which is in a pedestrian zone, for example.

- Conversely, a destination can be selected on the external device and transferred to the vehicle's multimedia system.

Requirements

Observe the following requirements for using Mercedes-Benz Companion:

- The iPhone® must be switched on and logged into a mobile phone network.
- The iPhone® must have an IOS version higher than version 8.0.
- Mercedes-Benz Companion must be installed on the iPhone® and activated (see the manufacturer's operating instructions).
- The iPhone® must be connected to the multimedia system (> page 107).
- Mercedes-Benz Companion must be authorized on the multimedia system (> page 142).
- To use door-to-door navigation, location access must be enabled on the iPhone®.
- The Apple Watch® must be connected to the iPhone® (see the manufacturer's operating instructions).

Authorizing Mercedes-Benz Companion

If you wish to use Mercedes-Benz Companion with the multimedia system, you must first authorize it.

If you wish to use door-to-door navigation, you must first enable location finding on your iPhone®.

On the multimedia system

- ▶ Switch on the multimedia system.
A prompt appears asking for permission for Mercedes-Benz Companion to connect with the vehicle.
- ▶ Give authorization.

On the iPhone®

- ▶ Call up Mercedes-Benz Companion
A prompt appears asking permission for Mercedes-Benz Companion to access location details.
- ▶ Allow access.
Door-to-door navigation using Mercedes-Benz Companion can now be used.

Door-to-door navigation (transferring a destination from the vehicle to an external device)

You can transfer the destination from the vehicle to an iPhone® or Apple Watch®.

This way, you can navigate on foot to a destination that cannot be reached by vehicle.

In the vehicle

- ▶ Switch off the engine and remove the Smart-Key.
The current destination and the vehicle's location are transferred from the multimedia system to the iPhone® or Apple Watch®.

On the iPhone®

- ▶ Select the destination and select the pedestrian symbol.
- ▶ Start navigation.

If using the iPhone® to navigate, you will be guided to your destination via navigation displays and spoken instructions.

If you use an Apple Watch®, navigation is done via the watch.

The Apple Watch® assists you with route guidance by vibrating, emitting acoustic signals and giving spoken commands.

Door-to-door navigation (transferring a destination from an external device to the vehicle)

You can transfer the destination from an external device to the vehicle's multimedia system:

- via the Apple Watch®
- via the iPhone®

On the iPhone®

- ▶ Select Mercedes-Benz Companion.
- ▶ Select **Send a Destination**.
- ▶ Enter the destination.
A list of possible destinations is displayed.
- ▶ Select the destination.
- ▶ Transfer the destination to the vehicle.

On the Apple Watch®

- ▶ Select Mercedes-Benz Companion.
- ▶ Select **Send to Car**.
- ▶ Select **Find destinations**.
- ▶ Say the destination.
- ▶ Confirm the entered text with **Done**.
A list of possible destinations is displayed.
- ▶ Select the destination.
- ▶ Transfer the destination to the vehicle.

In the vehicle and on the multimedia system

- ▶ Switch on the multimedia system.
The destination in the Apple Watch® or iPhone® is transferred to the multimedia system.
- ▶ Accept the displayed destination.
Route guidance starts.
- ▶ **i** You also have the option of transferring destinations or coordinates from other applications to Mercedes-Benz Companion.

Navigating to the vehicle

You can be guided to the vehicle's location:


- via the Apple Watch®
- via the iPhone®

On the iPhone®

- ▶ Select **Send a Destination**.
- ▶ Select the vehicle location and the pedestrian symbol.
- ▶ Start navigation.

On the Apple Watch®

- ▶ Select **Locate Car**.
- ▶ Select the car symbol.
- ▶ Start navigation.

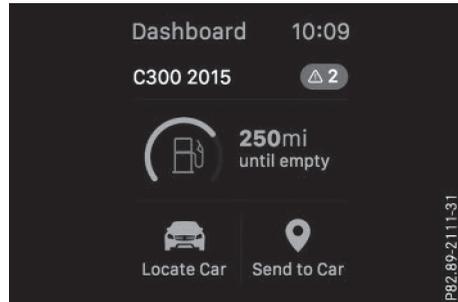Displaying vehicle information

Mercedes-Benz Companion allows you to display vehicle data on the Apple Watch® or iPhone®, for example:

- Fuel level and range
- Maintenance interval
- Tire pressure
- ▶ Select Mercedes-Benz Companion.
The vehicle information is displayed.

Web browser**Calling up a website****Function restrictions**

Internet pages cannot be shown while the vehicle is in motion.

Entering a web address

- ▶ To display the main function bar: slide **↑** the controller.
- ▶ To select **🌐**: turn and press the controller.
The menu with the Internet functions is displayed.

- ▶ To select **www**: turn and press the controller. An input menu for the web address is displayed.
- ▶ Enter characters using the controller (▷ page 31) or the number keypad.
- ▶ To finish entry and call up a website: select  .

Selecting a web address from the list

- ▶ When the character bar is displayed, slide  the controller.
- ▶ To select the desired web address: turn and press the controller. The web address can still be changed as desired.
- ▶ To call up a website: select  . The website is called up.

Navigating the website

Step	Result
<ul style="list-style-type: none"> ▶ Turn the controller. 	Navigates from one selectable item (e.g. link, text field or menu) to the next and highlights the respective element on the website.
Sliding the controller: <ul style="list-style-type: none"> ▶ Left or right  ▶ Up or down  ▶ Diagonally  	Moves the pointer on the page.
<ul style="list-style-type: none"> ▶ Press the controller. 	Opens the selected item.
<ul style="list-style-type: none"> ▶ Press . 	Calls up the menu.

Menu functions




- ① Closes the browser
- ② Goes back/forward
- ③ Refreshes/cancels
- ④ URL entry
- ⑤ Favorites
- ⑥ Closes the window
- ⑦ Options

- ▶ **To show the menu:** press the  button.
 - ▶ **To call up the Options menu:** select  by turning and pressing the controller.
 - ▶ **To close the website:** select .
 - ▶ **To call up the previous website:** select .
 - ▶ **To call up the next website:** select .
 - ▶ **To refresh the website:** select . The website is refreshed. This procedure may take some time.
- i** While the website is loading, a cross appears in the menu. This can be used to cancel the loading procedure.
- ▶ **To enter a URL:** select .
 - ▶ Enter a web address (URL) (▷ page 143).
 - ▶ **Favorites:** select .
 - ▶ **To close the active window:** select .

Options menu

Opening in a new window

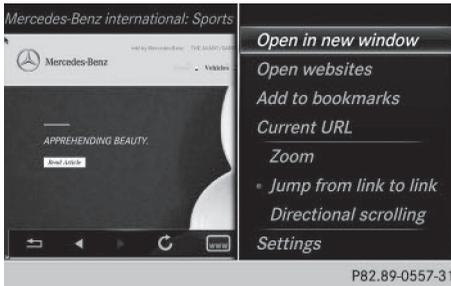

In order to be able to use this function, the cursor must be on a link.

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.
- ▶ Select [Open In A New Window](#).
The website is opened in a new window.

Adding to bookmarks

Adds the current website to the favorites. The website can then be called up using the menu. You can store up to 20 favorites in the menu.

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.
- ▶ Select [Add to Bookmarks](#).
- ▶ Select [Save As Global Bookmark](#) or [Save As Local Bookmark](#).

Current URL

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.
- ▶ Select [Current URL](#).
The URL appears.

Zoom

You can use this function to enlarge web pages.

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.
A menu appears. The • dot indicates the current setting.
- ▶ Select [Zoom](#).

- ▶ To navigate on the web page: slide , ,  or  the controller.
- ▶ To zoom in on the web page: turn the controller.

Jumping from link to link

You can use this function to skip from one link to the next on a website.

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.
A menu appears. The • dot indicates the current setting.
- ▶ Select [Jump From Link To Link](#).
If a website has been called up and the controller is turned, the cursor jumps from link to link.


Directional scrolling

You can use this function to scroll up and down on the web page.

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.
A menu appears. The • dot indicates the current setting.
- ▶ Select [Directional Scrolling](#).
If a website has been called up and the controller is turned, the cursor moves up or down depending on the direction of the turn.

Settings

Settings overview

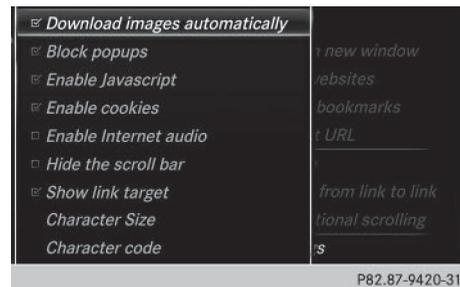

- ▶ **To show the menu:** press the  button.
- ▶ To select : turn and press the controller.
A menu appears.
- ▶ Select [Settings](#).

You can activate/deactivate the following settings:

- **Download Images Automatically**

It may take some time to download the contents of websites that contain a large amount of images. Therefore, it may be useful to deactivate this option.

- **Block Pop-Ups**

Popups are windows (usually with advertisements) which are displayed automatically when you call up a website. You can block these displays.

- **Activate Javascript**

Javascript makes it possible to display and interact with dynamic content on the website.

- **Allow Cookies**

Some websites save information in small text files (cookies) on your system. You can determine whether cookies may be stored.

- **Enable Internet Audio**

You can switch the browser's audio playback on or off here.

- **Hide Scroll Bars**

You can show or hide the scroll bar here.

- **Show Link Target**

You can display the link's URL here.

- **Character Size**

You can select the font size which is used when displaying the website.

- **Character Code**

You can select a different character set here, e.g. if the characters of a website appear distorted.

Changing settings

- ▶ To select the desired setting: turn and press the controller.


Switch the setting on or off .

Changing the character size or character code

- ▶ Select **Character Size** or **Character Code**.
- ▶ To select the setting you require: turn and press the controller.

- ▶ **i** If you change the settings, the websites may not be displayed correctly.

Deleting private data

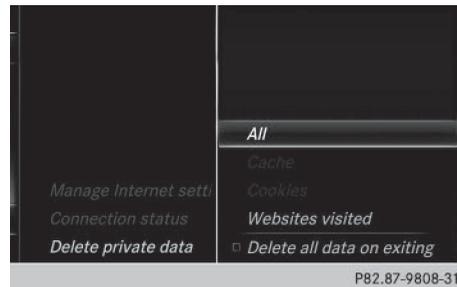

P82.87-9808-31

- ▶ To display the main function bar: slide \uparrow \odot the controller.
- ▶ To select \oplus : turn and press the controller. The menu with the Internet functions is displayed.
- ▶ To show the menu: slide \odot \downarrow the controller.
- ▶ To select **Settings**: slide \odot \downarrow , turn and press the controller. A menu appears.
- ▶ To select **Delete Private Data**: turn and press the controller.
- ▶ To select the setting you require: turn and press the controller.

or

- ▶ Select **Delete All Data On Exit**. Switch the setting on or off .

Option	Function
All	Deletes all personal data.
Cache	Deletes data in the cache.
Cookies	Deletes cookies that are created by websites which you have called up.
URL History	Deletes all websites visited (path).
<input checked="" type="checkbox"/> Delete All Data On Exit	If this function is activated <input checked="" type="checkbox"/> , all personal data is deleted when you exit the Internet browser.

- ▶ **i** If you reset the multimedia system to the factory settings (reset function), this data and the settings are deleted (▷ page 46).

Favorites

Introduction

Favorites are frequently visited websites.

Creating favorites

Adding a favorite in the menu

- ▶ To display the main function bar: slide **↑**  the controller.
- ▶ To select : turn and press the controller. The menu with the Internet functions is displayed.
- ▶ Select **www**.
- ▶ Enter the web address (URL) and name using the character bar and press  .

Adding to favorites

- ▶ To call up the menu: press the  button.
- ▶ To select : turn and press the controller.
- ▶ Select **Add to Bookmarks** (▷ page 145).

Selecting favorites

- ▶ To display the main function bar: slide **↑**  the controller.
- ▶ To select : turn and press the controller. The menu with the Internet functions is displayed.
- ▶ To select the **Internet Favorites** menu: turn and press the controller. The Favorites menu appears.
- ▶ Select the desired bookmark. The favorite is opened in a new window.

Editing favorites

- ▶ To display the main function bar: slide **↑**  the controller.
- ▶ To select : turn and press the controller. The menu with the Internet functions is displayed.
- ▶ To select the **Internet Favorites** menu: turn and press the controller. The Favorites menu appears.

- ▶ To bring the desired favorites to the front.
- ▶ To select **Edit**: slide  and press the controller. An input menu appears.
- ▶ Enter a web address (URL).
- ▶ Press the touchpad or controller.
- ▶ Select .
- ▶ Press the touchpad or controller.
- ▶ Slide  the controller.
- ▶ Enter a name.

Deleting favorites

- ▶ To display the main function bar: slide **↑**  the controller.
- ▶ To select : turn and press the controller. The menu with the Internet functions is displayed.
- ▶ To select the **Internet Favorites** menu: turn and press the controller. The Favorites menu appears.
- ▶ Select the desired favorites.
- ▶ Select **Delete**. A prompt appears.
- ▶ Select **Yes**. The favorite is deleted.

Closing the browser

- ▶ Select  in the browser menu (▷ page 144)
- or
- ▶ Press the  button for longer than two seconds. A prompt appears, asking whether you want to close the Internet browser.
- ▶ Select **Yes**. The application is closed.

Your multimedia system equipment


These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Switching on the radio

- ▶ Press the **RADIO** button.
The Radio menu appears. You will hear the last station played on the last waveband selected.

Overview

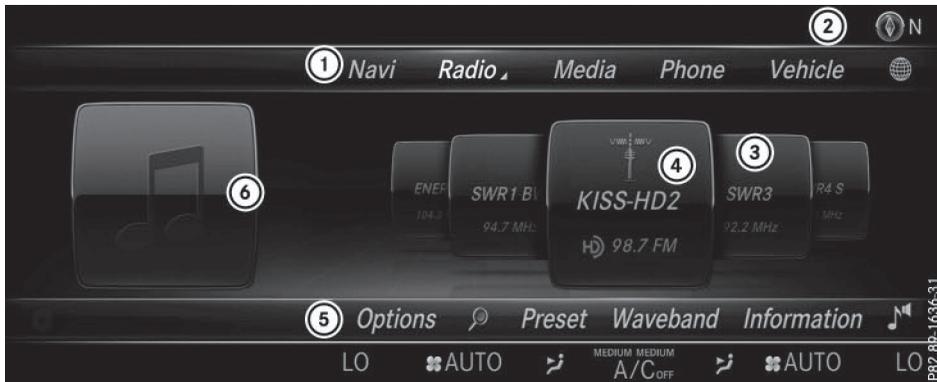

- ① Main function bar
- ② Status bar with compass display
- ③ Main display field with available stations and relevant information
- ④ Display of radio station selected
- ⑤ Radio menu bar
- ⑥ Additional display area

The following functions are available using the radio main function bar:

- **HD Radio FM**: HD FM radio mode
- **HD Radio AM**: HD MW radio mode
- **Sat Radio**: satellite radio
- **Radio Station Presets**: 100 preset positions for radio stations
- **Info on Radio**: information on radio in the Digital Operator's Manual

The following functions are available using the radio menu bar:

- **Options**: radio options
- : searches for stations by name
- **Preset**: station presets menu
- **Band**: selects wavebands

- **Info**: displays additional information about the current station (radio text)
- : sound settings, Burmester® sound

Switching HD Radio on/off



- ▶ In radio mode: slide the controller .
- ▶ To select **Options**: turn and press the controller.
- ▶ By selecting or in front of **HD Radio**, you determine whether HD radio is switched on or off.

If HD radio is switched off, the system does not switch to digital radio and it is not possible to select any sub-channels.

- **i** HD Radio™ and the HD, HD Radio, and “Arc” logos are proprietary trademarks of iBiquity Digital Corp.

Setting the waveband

Button activation

- ▶ Press the  button. A menu appears with a selection of **HD Radio FM**, **HD Radio AM**, **Sat Radio**, **Info on Radio** and **Radio Station Presets**.
- ▶ To select the required waveband: turn and press the controller.

Using the main function bar

- ▶ In radio mode: slide  the controller. The radio main function bar and menu bar appear. **Radio** is active.
- ▶ Press the controller. A menu appears with a selection of **HD Radio FM**, **HD Radio AM**, **Sat Radio**, **Radio Station Presets** and **Info on Radio**.
- ▶ To select the required waveband: turn and press the controller.

Using the menu bar

- ▶ In radio mode: slide  the controller.
- ▶ To select **Band**: turn and press the controller. A menu appears with a selection of **HD Radio FM**, **HD Radio AM** and **Sat Radio**.
- ▶ To select the required waveband: turn and press the controller.

Station

Selecting a station

Using the main display field

All currently available stations are displayed.

- ▶ In radio mode: turn the controller until the desired station is in the center.

Using the current station list



- **i** The station list is available in HD FM radio mode or HD AM radio mode. It includes all stations that can be received.
- ▶ In radio mode: press the controller. The station list appears with the stations currently available.
- ▶ To select the desired station: turn and press the controller.

Using frequency entry

- ▶ In radio mode: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Enter Frequency**.
An additional menu appears.

HD FM radio mode:

- ▶ To select the **HD FM Frequency** option: turn and press the controller.
- ▶ Enter the frequency of the desired station in the entry field.

HD MW radio mode:

- ▶ To select the **HD AM Frequency** option: turn and press the controller.
- ▶ Enter the frequency of the desired station in the entry field.

Satellite radio mode:

- ▶ Select the **SatRadio Channel** option.
- ▶ Enter the number of the desired channel in the entry field.

Station presets:

- ▶ Select the **Radio Station Presets** option.
- ▶ Enter the station preset of the desired station.

Using the search function

- ▶ In radio mode: slide  the controller.
- ▶ Select  and enter the first letters of the required station using the controller.
- ▶ Press **OK** to confirm.
The multimedia system displays a list of available stations.
- ▶ To select stations from the list: turn the controller and press to confirm.

Using station presets

- ▶ Quick setting:
Briefly press a number key, e.g. .
The station stored in second place is set.

Using the preset position

- ▶ In radio mode: slide  the controller.
- ▶ To select **Preset**: turn and press the controller.

- ▶ To select **Enter Preset**: turn and press the controller.
- ▶ Enter the station preset of the desired station.

Station list


- ▶ In radio mode: press the controller.
The station list appears with the stations currently available.

Saving/deleting a station

Frequencies have already been stored in the multimedia system. There are 100 preset positions available.

Quick save

- ▶ Press and hold a number key, e.g. , until a tone sounds. The station is saved to second place in the radio station presets.

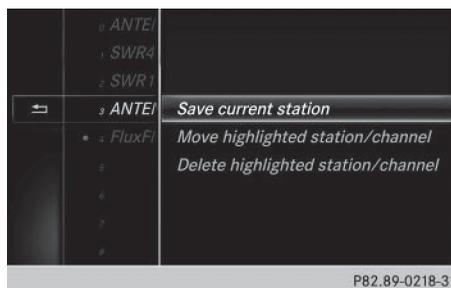

Storing current stations

- ▶ In radio mode: slide  the controller.
The radio menu bar appears.
- ▶ To select **Preset**: turn and press the controller.
- ▶ To select the **Save Current Station/Channel** option: turn and press the controller.
- ▶ To select the position of the required preset entry: turn and press the controller.

or

- ▶ Select the **Edit Station Preset** option.
- ▶ Select the position of the required preset: turn the controller.
This can also be a preset position that is already occupied, which is then overwritten by the current station.
- ▶ Slide  the controller.
An additional menu appears.

- ▶ To select the **Save Current Station/Channel** option: turn and press the controller. The currently set station is stored in the selected preset position. A tone signals a successful preset entry.

or

- ▶ In the main display field, press and hold the controller. A list of current allocated preset positions appears.
- ▶ To select the position of the required preset and confirm: turn the controller and press.

Moving highlighted stations

- ▶ In radio mode: slide $\odot \downarrow$ the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ Select **Edit Station Preset**.
- ▶ To select the required preset entry: turn the controller.
- ▶ Slide $\odot \rightarrow$ the controller. An additional menu appears.
- ▶ To select **Move Highlighted Station/Channel**: turn and press the controller. The list of stored stations appears again.
- ▶ To move the highlighted station to the new position: turn the controller and press to confirm.

Deleting highlighted stations

- ▶ In radio mode: slide $\odot \downarrow$ the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ Select **Edit Station Preset**.
- ▶ To select the required preset entry: turn the controller.
- ▶ Slide $\odot \rightarrow$ the controller. An additional menu appears.
- ▶ To select **Delete Highlighted Station/Channel**: turn and press the controller.
- ▶ If you really wish to delete the highlighted station, select **Yes**: turn and press the controller. Otherwise, select **No**: turn and press the controller.

Activating/deactivating the station presets display

You can use this function to change to the station presets display.

Activating

- ▶ In radio mode: slide $\odot \downarrow$ the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ To select **Station Preset View: On**: turn and press the controller. The station preset display appears.
- ▶ To switch between the stored stations: turn the controller.

Deactivating

- ▶ In radio mode: slide $\odot \downarrow$ the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ To select **Station Preset View: Off**: turn and press the controller. A view of the last waveband you listened to appears.

Tagging music tracks

This function allows you to transfer the music track currently playing to an Apple® device and then purchase it in the iTunes store®.

- ▶ In radio mode: slide $\odot \downarrow$ the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Tag This Track**. A message appears about storing the track information.

Displaying station information

- ▶ In radio mode: slide $\odot \downarrow$ the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ You can determine whether or not the artist, track or station name are shown in the main display area with or before **Show Station Information**.

Calling up sound settings

- ▶ In radio mode: slide $\odot \downarrow$ the controller.
- ▶ To select $\boxed{\text{J}^{\text{A}}}$: turn and press the controller. The sound menu appears (> page 187).

Displaying information



This function is available in HD FM radio and HD AM radio mode.

Reception is only possible if the radio stations provide the relevant information.

- ▶ In radio mode: slide the controller.
- ▶ To select **Info**: turn and press the controller. Information on the currently received program is displayed.

If available, you will see:

- the track that is currently being played
- the artist of the track that is currently being played
- the album name
- the channel abbreviation
- the logo of the station or Artist Experience®

Back to radio display:

- ▶ To select **Info**: slide and press the controller.

Satellite radio

General notes

The satellite radio mode requires satellite radio equipment and registration with a satellite radio provider.

Note that the categories and channels shown in the illustrations depend on the program content offered by the provider. The illustrations and descriptions in these operating instructions may therefore differ from the channels and categories offered by the provider.

Satellite radio mode may be temporarily unavailable or interrupted for a variety of reasons. These include environmental or topographical conditions as well as other factors beyond the

control of Mercedes-Benz USA, LLC. This means operation may not be possible in certain areas. These include:

- tunnels
- parking garages
- locations inside or next to buildings
- locations in the vicinity of other structures

Sirius XM® Satellite Radio offers more than 140 digital-quality radio channels, providing 100% commercial-free music, sports, news and entertainment.


Sirius XM® Satellite Radio uses a fleet of high-performance satellites to broadcast around the clock throughout the USA and Canada.

The satellite radio program is available for a monthly fee. Details are available from the Sirius XM® Service Center and at <http://www.siriusxm.com> (USA) or <http://www.siriusxm.ca> (Canada).

Your new Mercedes-Benz vehicle comes with Sirius XM® Satellite Radio pre-installed at the factory. This service is free for a six-month trial period. About a month before the trial period ends, information will be provided on how to extend this subscription. An acoustic signal sounds and a message is shown, describing how the subscription can be extended.

- ① Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. and its subsidiaries. All other marks, channel names and logos are the property of their respective owners. All rights reserved.

Registering satellite radio

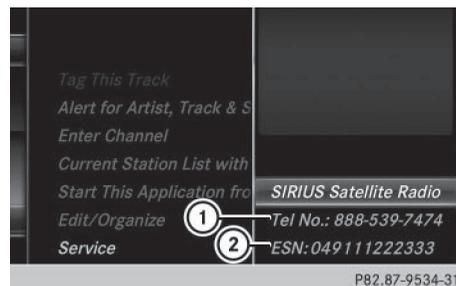

- ① Phone number of provider
- ② Sirius XM® ID of your satellite receiver

- ⑥ Keyword search
- ⑦ Options menu
- ⑧ Artist & track
- ⑨ Additional display area

Channel information ③ can be viewed in detail (▷ page 156).

Additional display area ⑨ shows the specific SIRIUS XM Satellite Radio logos of the different channels.

Selecting a category

Satellite radio channels are sorted into categories. You can choose between various categories such as News/Discussions, Sports and Country (if available). The category list is sorted alphabetically. The content of the categories is sorted by channel numbers.

- ▶ **To call up the category list:** select **Category** in the menu bar by turning and pressing the controller.

The category list appears.

- ▶ **To select a category:** turn the controller and press to confirm. The category selected is shown in the display. You hear the channel last selected for this category.

The • dot indicates the current setting.

At the beginning of the category list, the **All Channels** category appears. This category enables you to browse all available channels.

Selecting a channel

Channel search

- ▶ When the display/section window is selected, slide ◀⊙ or ⊙▶ the controller. The multimedia system searches in both directions (ascending and descending) and stops at the next channel found in the selected category.


Entering channel numbers directly

- ▶ In satellite radio mode, slide ⊙↓ the controller.
- ▶ To select **Options**: turn and press the controller. The satellite radio menu appears.

- ▶ To select **Direct Entry**: turn and press the controller. An input menu appears.
- ▶ To select a channel number: turn and press the controller. The multimedia system sets the selected channel.

- ⓘ You can only select currently permitted digits.

Selecting a channel via the satellite radio station list

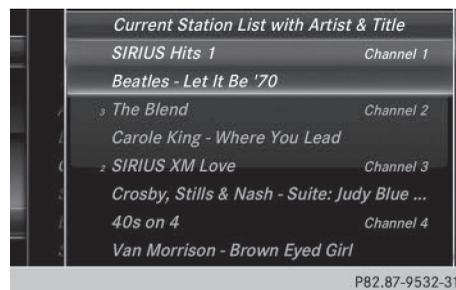

You can select the channel using the station list displaying the artists and tracks that are currently playing.

- ▶ In satellite radio mode, slide ⊙↓ the controller.
- ▶ To select **Options**: turn and press the controller. The satellite radio menu appears.
- ▶ To select **Current Station List with Artist & Title**: turn and press the controller. The channel list appears.
- ▶ Select the desired channel

Keyword search

- ▶ In satellite radio mode, slide  the controller.
- ▶ To select the keyword search  in the menu bar: turn and press the controller.
- ▶ To enter the required search term: turn and press the controller.
Direct and indirect results are shown.
- ▶ Select the required result.
The relevant channel is played.

Memory functions

Quick save:

- ▶ Set the desired channel in satellite radio mode.
- ▶ Press and hold the controller until the preset list appears.
- ▶ To select the preset number: turn and press the controller.
A tone confirms that the storing process was successful.

Saving a channel using the edit function:

- ▶ In satellite radio mode, slide  the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ To select **Edit Station Preset**: turn and press the controller.
The list of saved channels appears.
- ▶ To select the preset: turn the controller and press for about 2 seconds.
The newly saved channel overwrites the existing preset.

 There are 100 presets available.

Presets menu view

You can use this function to change to the station presets display.

Activating

- ▶ In radio mode: slide  the controller.
- ▶ To select **Preset**: turn and press the controller.

- ▶ To select **Station Preset View: On**: turn and press the controller.
The station preset display appears.
- ▶ To switch between the stored stations: turn the controller.

Deactivating

- ▶ In radio mode: slide  the controller.
- ▶ To select **Preset**: turn and press the controller.
- ▶ To select **Station Preset View: Off**: turn and press the controller.
A view of the last waveband you listened to appears.

Music and sports alerts

General notes

This function makes it possible to store a program alert for your favorite artists, tracks or sporting events.

You can store up to 30 music and sports alerts (favorites).


Music alerts can only be saved whilst a track is being played. You can also specify sports alerts via the menu option. The system then continuously searches through all the channels. If a match is found with a saved message, you will be informed. A window appears with the respective information.

Setting a music alert

- ▶ In satellite radio mode, slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Alert for Artist, Track & Sports Event**: turn and press the controller.
A menu appears.
- ▶ Select **Add New Alert**.
A window with a prompt appears.
- ▶ Select **Artist** or **Track**.
The alert is set for the current artist or track.

 If an alert cannot be set, the **No Alerts Available** message appears.

Setting a sports alert

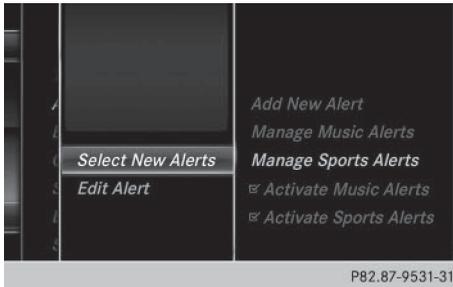

- ▶ In satellite radio mode, slide the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Alert for Artist, Track & Sports Event**: turn and press the controller. A menu appears.
- ▶ Select **Manage Sports Alerts**. A menu appears.
- ▶ Select **Select New Alerts**. A menu appears.
- ▶ Select the desired team from a league, e.g. college, NBA, NHL, NFL or MLB. The alert function for the sports team is added.

The music alert window appears

- ▶ To select **Change To** or **Ignore**: turn and press the controller. If you select **Change To**, the channel is changed and the favorite artist or track is played. If you select **Ignore**, the current channel will continue playing.

Editing music and sports alerts

- ▶ To select **Alert for Artist, Track & Sports Event**: turn and press the controller. A menu appears.
- ▶ Select **Manage Music Alerts** or **Manage Sports Alerts**. A list of set alerts appears.

Tagging music tracks

If the channel supports this function, you are able to transfer the music track currently playing to an Apple® device. You can then purchase it in the iTunes® store.

- ▶ In satellite radio mode, slide the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Tag This Track**: turn and press the controller. A message about saving this music track on the Apple® device appears.

Displaying information



- ▶ In satellite radio mode, slide the controller.
- ▶ To select **Info**: turn and press the controller. Information on the currently received program is displayed.

If available, you will see:

- the channel logo
 - the channel abbreviation
 - the artist of the current track
 - the current track.
- ▶ **To return to the radio display**: select **Info** by sliding and pressing the controller.

Displaying service information

The provider's customer service center is available by phone at any time to answer any general questions or questions on the versions available.

- ▶ In satellite radio mode, slide  the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select **Service**: turn and press the controller.
The provider's details appear.
- ▶ **To return to the main display**: press the  button.

Channel list updates

During reception of a new channel list, the **Updating Channels...** message is shown. The channel last selected is switched to mute until the update has been completed. Satellite radio mode is not available during this process. Once the update has been completed, the satellite radio basic menu appears. The channel last selected will be played if it is still available.

Sound settings

Information on sound settings (> page 187).



Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.


Activating media mode

General notes

There are several ways to activate media sources using the multimedia system.

The relevant sections of the Operator's Manual describe the simplest way to activate a media source. This section describes all options for activating media sources. If you wish to play external media sources, the default display must already be turned on.

Connections for external media sources

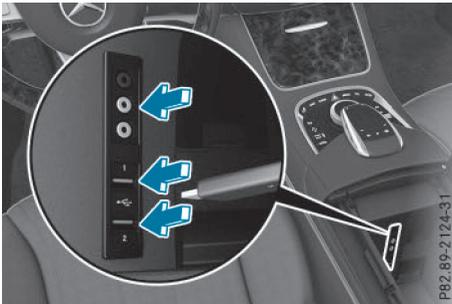

The following external media sources can be used:

- Apple® devices (e.g. iPhone®)
- USB devices (e.g. USB stick, MP3 player)
 - Two USB ports are located in the stowage space under the armrest.
- CD
- DVD video
- SD cards

- AUX cable
- Devices with Bluetooth® connection

Activating media using the button

- ▶ To call up the media menu: press the **MEDIA** button.
The last media source you have set is displayed.
- ▶ Press the **MEDIA** button again.
The menu appears with the available media sources.
- ▶ To select the media source: turn the controller and press to confirm.

Depending on the vehicle equipment, the following media sources will be available:

- **Disc**
- **Memory Card**
- **Media Register**
- **Media Interface 1**
- **Media Interface 2**
- **Bluetooth Audio**
- **Aux**

If playable music files are found, they will be played by the multimedia system.


Activating media using the main function bar

- ▶ To display the main function bar: slide **↑**  the controller.
- ▶ To select **Media**: turn and press the controller.
The last media source you have set is displayed.
- ▶ To select **Media** in media mode: slide **↑**  and press the controller.
The menu appears with the available media sources.
- ▶ To select the media source: turn the controller and press to confirm.
If the media source contains music or video files, these will be played. The corresponding basic menu will be shown.

Activating media using the number keypad

- i** If you touch a key in the touch-sensitive number keypad, the number field is displayed in the additional display area.
- ▶ Touch any number key when in media mode. The number field is shown. The active media source is highlighted.
- ▶ To select a media source: press the corresponding number key.
If the media source contains music or video files, these will be played. The corresponding basic menu will be shown.
- ▶ **To select a track from the active media source:** press the **[*]** key on the number keypad.
An input field appears.
- ▶ To enter a track number: use the number keypad to enter the desired numbers.
The track is played.
- ▶ **To show track information:** press the **[#]** key on the number keypad
An additional field appears with the track information.

Activating media using the device list

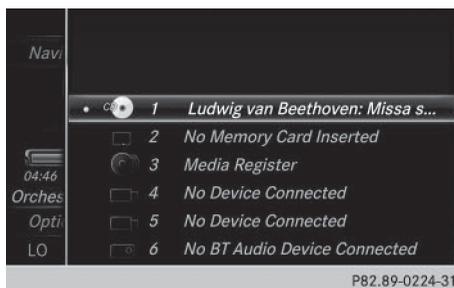

- ▶ In media mode, slide **⊙** the controller.
The media menu bar appears.
- ▶ To select **Devices**: turn and press the controller.
The available media sources will be shown. The **•** dot indicates the current setting.
- ▶ Select the media source.
If the media source contains music or video files, these will be played. The corresponding basic menu will be shown.

Switching on automatically

After inserting a CD or DVD, this media mode is automatically switched on by the multimedia system.

If playable music files are found, they will be played by the multimedia system.

If a media function is already switched on in the multimedia system, this will be interrupted and the basic display of the CD/DVD mode will appear. If another function, such as navigation, is being operated, the basic display will not change. Only the music from the last inserted CD or DVD will be played.

Audio/video mode

Important safety notes

⚠ WARNING

The CD/DVD drive is a class 1 laser product. If you open the housing of the CD/DVD drive, there is a risk of exposure to invisible laser radiation. This laser radiation could damage your retina. There is a risk of injury.

Never open the housing. Always have maintenance and repair work carried out at a qualified specialist workshop.

⚠ WARNING

Handling discs while driving may distract you from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Handle discs only when the vehicle is stationary.

Bear in mind that at a speed of only 30 mph (approximately 50 km/h), the vehicle covers a distance of 44 ft (approximately 14 m) per second.

Notes on audio/video mode

Permissible data carriers

- CD-R, CD-A and CD-RW
- DVD-R, DVD-V and DVD-RW

- SD card
- USB storage device

Permissible file systems

- ISO 9660/Joliet standard for CDs
- UDF for video DVDs
- FAT16, FAT32, exFAT and NTFS for SD card and USB storage media

Multisession CDs

For multisession CDs, the content of the first session determines how the multimedia system processes the CD. The multimedia system plays only one session and gives priority to the audio CD session.

File structure of a data carrier

When you create a disc with compressed music files, the tracks can be organized in folders. A folder may also contain subfolders. The disc may contain no more than eight directory levels. Files beyond the eighth level will not be recognized by the system.

- i** The multimedia system supports data carriers with up to 50,000 files.

In the case of data media with more than 64 GB of stored data, only files in folders with the following names are supported: Music, Pictures, Video.

Track and file names

When you create a disc with compressed music files, you can assign names to the tracks and folders.

If MP3 or WMA files are stored in the root directory itself, the root directory will also be treated as a folder.

You should observe the following when assigning track names:

- track names must have at least one character
- track names must have an extension of a supported audio or video format, e.g. .mp3, .aac or .m4v.
- there must be a dot between the track name and the extension

Example of a correct track name:
"Track1.mp3".

Permissible formats

The multimedia system supports the following audio and video formats:

Audio formats	MP3, WMA, CDA, AAC formats (.aac, .mp4, .m4a and .m4b)
Video formats	DVD-V, MPEG, WMV, M4V, AVI up to 720p

Copy-protected iTunes® music files with the .m4p file extension are not supported.

Permissible bit and sampling rates

The multimedia system supports MP3 and WMA files of the following type:

Format	Bit rates [kbit/s]	Sampling rates [kHz]
MP3	32-320 (fixed and variable bit rates)	8-48
WMA	5-384 (fixed bit rates)	8-48

The multimedia system does not support WMA files of the following type:

- DRM (Digital Rights Management) encrypted files
- files with variable bit rates
- WMA Pro
- 5.1 surround sound

- i** Only use tracks with a bit rate of at least 128 kbit/s and a sampling rate of at least 44.1 kHz. Lower rates can cause a noticeable deterioration in quality.

Selecting an active partition (USB mass storage devices only)

You can select this function for USB storage devices if the storage device is partitioned. Up to 9 partitions (primary or logical, FAT, FAT32 and NTFS) are supported.

Selecting an active partition

- ▶ Select a USB storage device (▷ page 158).
- ▶ Slide  the controller.
The media menu bar is shown.
- ▶ To select **Options** in the media menu bar: turn and press the controller.
- ▶ Select **Select Active Partition**.

Notes on copyright

Audio or video files that you create or reproduce yourself for playback are generally subject to copyright protection.

In many countries, reproductions, even for private use, are not permitted without the prior consent of the copyright holder.

Make sure that you know about the applicable copyright regulations and that you comply with these.

Notes on CDs/DVDs

! Do not affix stickers or labels to the discs. They could peel off and damage the drive.

The drive is designed to receive EN 60908 standard discs. Therefore, you can only use discs with a maximum thickness of 1.3 mm.

If you insert thicker discs, e.g. those that contain data on both sides (DVD on one side and audio data on the other), they cannot be ejected and can damage the drive.

Do not use discs with an 8 cm diameter, even when using an adapter. Only use round discs with a 12 cm diameter.

Discs with copy protection are not compatible with the audio CD standard and therefore may not be able to be played.

Playback problems may occur when playing copied discs.

There may be playback problems if you play CDs that you have copied yourself with a storage capacity of more than 700 MB.

- i** The multimedia system is able to play back audio CDs in multichannel audio format.

Inserting and removing a disc from the single CD/DVD drive

Before inserting a CD or DVD, ensure that the cup holder is empty and the protective flap is open. Before removing a disc, be aware that the CD or DVD can become hot.

Inserting

- ▶ Press the  button on the single drive. If there is a disc already inserted, it will be ejected.
- ▶ Insert a disc into the disc slot with the printed side facing up.

The drive closes and the disc is played.

If the CD or DVD is started in Media mode, the corresponding basic menu will be shown. If the CD or DVD is started from another application (e.g. navigation), the display will not change.

- i** The drive may not be able to play discs with copy protection.

Removing

- ▶ Press the  button.
The drive ejects the disc.
- ▶ Remove the ejected disc from the slot. If you do not take the disc out of the slot, it is drawn in again automatically after a short while.

Menu overview



Media


- ① Cover view (if available)
- ② Artist and album
- ③ Main function bar
- ④ Media menu bar
- ⑤ Track display on the disc
- ⑥ Track number and number of tracks in the track list
- ⑦ Numerical time display
- ⑧ Graphic time display

Inserting a CD/DVD into the DVD changer

The DVD changer has a magazine with six trays. Before inserting a CD or DVD, ensure that the cup holder is empty and the protective flap is open.

Inserting a CD/DVD into the magazine tray

- ▶ Press the  button. The magazine menu appears.

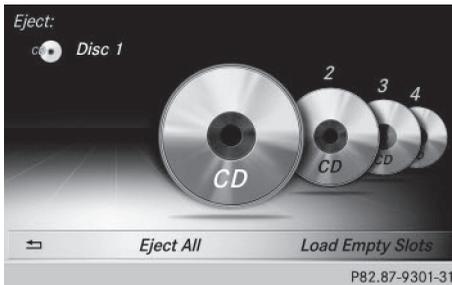

P82.87-9301-31

- ▶ To select the magazine tray: turn the controller and press to confirm. The DVD changer switches to the selected magazine tray. The **Please Wait...** message appears. You will then see the **Please insert disc 1.** message, for example.
- ▶ Insert a disc into the disc slot with the printed side facing up.



P82.87-9302-31

Loading all empty magazine trays

- ▶ Press the  button.
The magazine menu appears.
- ▶ To select **Load Empty Slots**: slide , turn and press the controller.
The multimedia system switches to the next empty magazine tray.
The **Please Wait...** message appears.
You will then see the **Please insert disc 1.** message, for example.
- ▶ Insert a disc into the disc slot with the printed side facing up.
Once the disc is loaded, the DVD changer switches to the next empty tray.
If you take too long inserting the next disc, the last inserted disc is played.
- ▶ Repeat these steps until all magazine trays are filled.
The DVD changer plays the last inserted disc.

Canceling the loading process

- ▶ Press the  button.
- or
- ▶ To select  in the magazine menu: turn and press the controller.

Ejecting a single disc

- ▶ Press the  button.
The magazine menu appears. The current disc is marked.
- ▶ To select a disc: turn the controller and press to confirm.
The DVD changer ejects the disc.
- ▶ Take the disc out of the slot.


Ejecting all CDs/DVDs

- ▶ Press the  button.
The magazine menu appears.
- ▶ Select **Eject All**.
The last active disc is ejected.
A message appears, for example **Please remove disc 1..**
- ▶ Remove the disc.
- ▶ Repeat the last step until the magazine is empty.
If you take too long removing the disc, the disc is re-loaded.

Exiting a menu:

- ▶ Press the  button.
- or
- ▶ Select  in the magazine menu.

Inserting a CD/DVD into the DVD changer

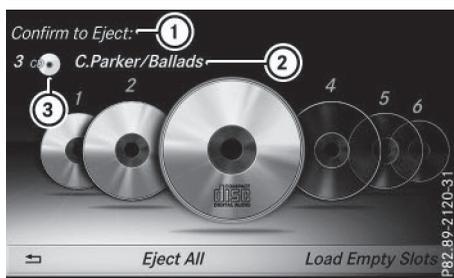

- ① Active ejection
- ② Disc name
- ③ Type of data medium

If you remove one disc while playing another disc, the DVD changer interrupts playback. Playback continues once the disc has been ejected. Before removing a disc, be aware that the CD or DVD can become hot.

Inserting and removing an SD card

Important safety notes

WARNING

SD cards are small parts. They can be swallowed and cause choking. This poses an increased risk of injury or even fatal injury. Keep the SD card out of the reach of children. If a SD card is swallowed, seek medical attention immediately.

- ❗ If you are no longer using the SD card, you should remove it and store it outside the vehicle. High temperatures can damage the card.

The multimedia system supports the following memory cards:

- SD cards (**S**ecure **D**igital)
- SDHC cards (**S**ecure **D**igital **H**igh **C**apacity)
- SDXC cards (**S**ecure **D**igital **e**Xtended **C**apacity)

Inserting an SD card

- ▶ Insert the SD card into the SD card slot until the SD card engages. The side with the contacts must face down.
Only if the memory card has been selected as a media source, is the medium played and the files loaded in the background. If there are no supported audio or video files, you will see a message to this effect.
- ▶ Select the media source (▷ page 158).

Removing an SD card

- ▶ Press the SD card.
The SD card is ejected.
- ▶ Remove the SD card.

Connecting USB devices

There are two USB ports located in the stowage compartment in the center console (▷ page 158).

- ▶ Connect the USB device to the USB port.
The data medium will only be played and the files will only be loaded in the background if the corresponding media display is visible. Otherwise, the system does not automatically switch to USB. If there are no supported audio or video files, you will see a message to this effect.
- ▶ Select the media source (▷ page 158).
- ❗ MP3 players must support Media Transfer Protocol (MTP).

Selecting the playback option

- ▶ In media mode, slide  the controller.
The media menu bar is shown.
- ▶ To select **Options**: turn and press the controller.

Playing similar tracks

- ▶ To select **Play More Like This**: turn and press the controller.
The multimedia system automatically creates and plays a track list with similar tracks. If there are no comparable tracks on the data carrier, you will see a message to this effect.
- ▶ Select the required track.

Selecting Play mode

- ▶ To select **Playback Mode**: turn and press the controller.
- ▶ Select **Normal Track Sequence**.
The current track list is played in the order it is stored on the data medium.
- ▶ Select **Random Track List**.
The current track list is played in random order.
- ▶ Select **Random Medium**.
All tracks on the data medium are played in random order.

Skip to time

- ▶ To select **Skip to Time**: turn and press the controller.
A menu appears.
 - ▶ To set the time: turn the controller.
- or
- ▶ Set the desired time using the number keypad.

Selecting an active partition

- ▶ To select **Select Active Partition**: turn and press the controller.
With the **Select Active Partition** option, you can select a partition in the USB data carrier.

Saving files to Media Register

- ❗ With the **Save Files to Media Register** option, you can transfer supported audio, image or video files to the multimedia system hard drive.
- ▶ To select the **Save Files to Media Register** option: turn and press the controller.
A menu appears (▷ page 168).

Managing Media Register

- ▶ Delete or rename individual files in the Media Register (▷ page 170).
- ▶ Delete all files in the Media Register (▷ page 170).
- ▶ Call up information on the preset (▷ page 170).

Showing track information

- ▶ To switch the function **Show Track Information** on or off : turn and press the controller.
You display or hide information for Track, Artist and Album in the main display field.

Continuing/stopping playback

- ▶ **To stop playback:** in audio or video mode, slide  the controller. The media menu bar is shown.
- ▶ To select  in the media menu bar: turn and press the controller. Playback is interrupted. The display changes to .
- ▶ **To continue playback:** in audio or video mode, slide  the controller. The media menu bar is shown.
- ▶ To select  in the media menu bar: turn and press the controller. Playback is continued from the point of interruption. The symbol changes to .

Selecting a track

Selecting a track using the current track list

- ▶ To display the current track list: press the controller in the basic display. The category list appears.
- ▶ Select **Current Tracklist**.
- ▶ To select a track: turn the controller and press to confirm.

Selecting a track by skipping to a track

- ▶ To skip forward or back to a track: turn or briefly slide    the controller in the media basic display.

Selecting a track using the number keypad

- ▶ Press the  key on the number keypad. A numerical entry field appears. The number of positions offered corresponds to the number of tracks in the current track list. Only numbers that correspond to a track number in the current track list can be entered.
 - ▶ To enter the track number using the number keys: briefly press the desired numbers on the number keypad. The track plays after the last possible number is entered.
- i** Pressing and holding a number key for more than two seconds completes the entry, and the corresponding track is played.

Searching for a track

- ▶ In media mode, slide  the controller. The media menu bar is shown.
- ▶ To select **Search:** turn and press the controller. The category list is shown.
- ▶ Select a category, e.g. **Artists**. Sub-categories appear with the selection of the main category (depends on the multimedia system default settings and the music tracks available).
- ▶ Select a sub-category. If the sub-category **Artists** contains music tracks, these will be displayed.

Gracenote® Media Database

General notes

This function is available in CD mode.



There is a version of Gracenote® music recognition technology, Emeryville, California, USA on the multimedia system hard disk. You will recognize this by the logo in the bottom right-hand corner of certain audio displays.

If the audio CD does not contain any CD text information, the multimedia system can use the Gracenote® Media Database to identify unknown audio tracks when in CD mode.

Carrying out an Internet update of metadata

The **Updating Metadata Via Internet** option allows any missing metadata for an audio CD (e.g. cover, track, album, artist) to be uploaded retrospectively to the internal Gracenote® database.

An Internet connection is required for this (> page 140).

Selecting Internet update of metadata

- ▶ In media mode, slide  the controller. The media menu bar is shown.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Updating Metadata Via Internet** in the selection list.

A connection with the Gracenote® data server is established. The missing data is loaded, saved and displayed in the main display field. If there is no data found or there is no Internet connection, a corresponding error message will appear.

Switching the Gracenote® data display on/off

- ▶ Activate CD mode (▷ page 161).
- ▶ To select **Gracenote Media Database**: turn and press the controller.
- ▶ **Show Track Information**: switch function on or off . If the function is deactivated, **Track 1** is shown instead of the Gracenote® data in the basic display, for example.

Media search

Starting the media search

- ▶ In media mode, slide  the controller. The media menu bar appears.
- ▶ To select **Search**: turn and press the controller. The category list appears.

General notes

The multimedia system plays back files from the following data media:

- Disc (audio CD/DVD)
- Memory card
- Media Register
- USB storage device
- Apple® devices (folder, year and photos are not available)

The categories are displayed according to the data available.

Category list

- ▶ In media mode, slide  the controller. The media menu bar is shown.
- ▶ To select **Search**: turn and press the controller. The category list is shown.

Depending on the connected media sources and files, the following categories are listed:

- **Current Tracklist**
- **Folder**
- **Select By Cover**
- **Keyword Search**
- **Playlists**
- **Artists**
- **Albums**
- **Track**
- **Year**
- **Genres**
- **Composers**
- **Videos**
- **Photos**

i The categories are available as soon as the entire media content has been read and analyzed.

If the same device is reconnected with unchanged media content, these categories are available more quickly.

When connecting Apple® devices, the categories “Folder”, “Year” and “Photos” are not available.

Searching a track using the current track list


- ▶ To select **Current Tracklist** in the category list (▷ page 166): turn and press the controller. The selection list appears.
- ▶ Select the required track.

Searching for a track via a folder

Playable files can be searched for in the active data medium's directories.

- ▶ To select **Folder** in the category list (> page 166): turn and press the controller. The folder list appears.
- ▶ Select the required folder. The track list appears.
- ▶ Select the required track.

Searching for a track via cover view

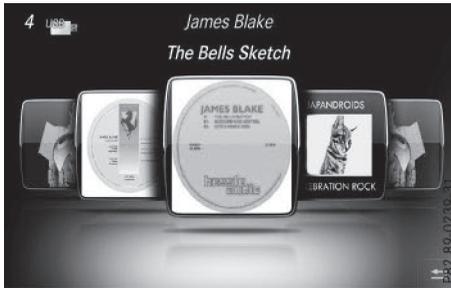

- ▶ To select **Select By Cover** in the category list (> page 166): turn and press the controller. A menu with cover views appears. The multimedia system searches in all media sources.
- ▶ Select the required cover. Track playback is started automatically.

Searching for a track via music genre

- ▶ To select **Genres** in the category list (> page 166): turn and press the controller. The multimedia system searches in all media sources. A selection list with Genre and media sources appears.
- ▶ Select the desired music genre. A selection list with music tracks from the selected genre appears.
- ▶ Select a music track. The track is played. The basic menu for the active media source is shown.
- ▶ To exit the selection list: press the  button.

Searching for a track via a keyword

- ▶ To select **Keyword Search** in the category list (> page 166): turn and press the controller. The input field appears.
- ▶ To select the required characters: turn and press the controller for each one (> page 31). Entering just part of the name of a track or artist is enough. The search result then displays the entire text.
- ▶ Select  . The search results are displayed. The numbers behind the results, for example **Tracks (5/0)**, mean: 5 results that contain the exact keyword searched for and 0 results that are similar.
- ▶ Select one of the results. Keywords that have already been searched for are displayed in the "Search history" without having to enter them completely. They can be accepted directly and displayed in the search result.
- ▶ Select an entry. Albums and covers (if available) are shown. The multimedia system searches in all media sources.
- ▶ Select an album. The tracks are listed.
- ▶ Select a track. The basic display appears and playback starts.

Media Register

General notes

You can store music files, photos or video files in the Media Register. The memory capacity is 10.8 GB.

- i** Keep your original music files, photos and video files in a secure location. An error in the multimedia system may result in the loss of files stored in the Media Register. Mercedes-Benz is not liable for any loss of data.

Switching on the Media Register

- ▶ In media mode press the **MEDIA** button.
The menu appears with the available media sources.
- ▶ To select **Media Register**: turn and press the controller.
Playback begins at the point last listened to.

If there are no files, you will see a message to this effect.

Further options for switching on:

- using the number keypad: (▷ page 159)
- using the main function bar: (▷ page 158)
- using the device list: (▷ page 159)
- using the **MEDIA** button: (▷ page 158)

Media Register basic display



- ① Main function bar
- ② Artist and album
- ③ Display for the active data medium
- ④ Display of current track in the track list
- ⑤ Media menu bar
- ⑥ Numerical time display
- ⑦ Graphic time display
- ⑧ Cover view (if available)

Copying files to the Media Register

General notes

You can copy photos, music files and videos from the following data mediums:


- discs in a DVD changer or a single DVD drive
- SD card
- USB storage device
- MP3

i Data can be copied from an MP3 player if the MP3 player can be configured as a mass storage device.

Video files from DVD-V cannot be copied.

While copying, several functions will not be available. If this is the case, you will see a message to this effect.


1. Selecting a data medium

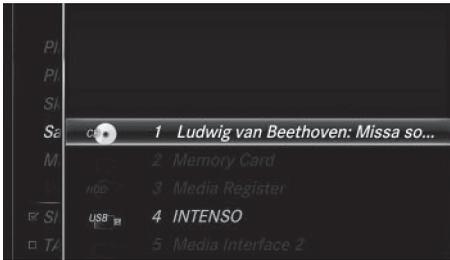

P82.89-0245-31

- ▶ In media mode: press the **MEDIA** button. The menu appears with the available media sources.
- ▶ To select the media source: turn the controller and press to confirm.
- ▶ To switch to the menu bar: slide **⊙**↓ the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Save Files to Media Register**. The media list appears. A data medium from which files can be copied is selected automatically.
- ▶ **i** The **Save Files to Media Register** function can be reached from any media application.
- ▶ Select the displayed data medium. The data medium is loaded. If the data medium contains files that can be copied, a selection menu appears.

2. Selecting files

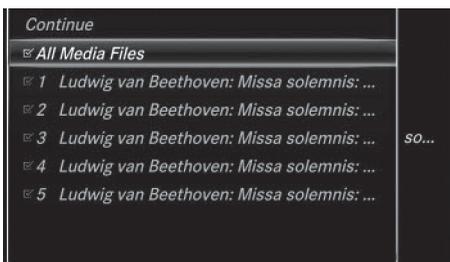

P82.89-0246-31

- ▶ To select **All Media Files**: turn and press the controller. This command copies all files from the selected data medium. The symbol next to **All**

Media Files is filled in. All subsequent entries have a checkmark beside them.

- ▶ Select a folder. A checkmark next to the folder entry highlights the selection.
- ▶ To select **Continue**: turn and press the controller. The copying menu appears.

3. Starting the copying process



Media


In the example, files are copied from a USB stick to the MEDIA REGISTER.

- ▶ To select **Start**: press the controller.
- ▶ **i** The selection of a target folder is optional. If there is no target folder given, the selected files are saved to the main directory of the Media Register.
- ▶ To select **Target Folder**: turn and press the controller.
- ▶ Select a folder.
- ▶ Select **Continue**.
- ▶ To select **Start**: press the controller. The copying procedure starts and is shown in the progress bar. It may take some time for the copying process to be completed, depending on the amount of data. If there is not enough memory space, a message to this effect appears. Once the copying procedure is complete, you will hear the first track of the copied album. You can now copy more files to the Media Register.
- ▶ **To cancel copying**: select **Cancel**. Files are stored in the Media Register up until the point of cancellation.

- ▶ **i** It is possible to change to a different function (e.g. radio) during the copying procedure. The copying procedure continues in the background. While the copying procedure is taking

place, this is shown by a symbol in the status bar.


Renaming/deleting files

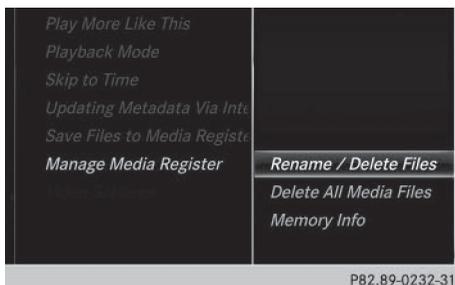

P82.89-0232-31

Media

- ▶ In media mode: press the **MEDIA** button. The menu appears with the available media sources.
 - ▶ To select the media source: turn the controller and press to confirm.
 - ▶ To switch to the menu bar: slide **⊙**↓ the controller.
 - ▶ To select **Options**: turn and press the controller.
 - ▶ Select **Manage Media Register**.
 - ▶ Select **Rename / Delete Files**. The file list is displayed.
 - ▶ To highlight the file: turn and press the controller.
 - ▶ Slide **⊙**→ the controller. You can select between **Edit** and **Delete**.
- i** Only folders can be renamed.

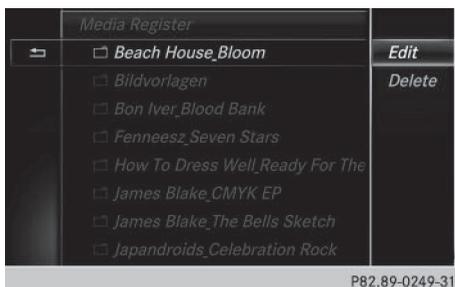

P82.89-0249-31

Renaming a file

- ▶ To select **Edit**: turn and press the controller. An input field appears.
- ▶ Rename folder.
- ▶ To save changes with **OK**: turn and press the controller. Renaming a folder only changes the file name. Depending on whether or not the **Show Track Information** option has been selected, this change may not be seen in the main display field.

Deleting a file

- ▶ To select **Delete**: turn and press the controller.

Deleting all files

- !** In order to prevent malfunctions, do not use **COMAND** during this time.

This function deletes all files from the Media Register.

- ▶ In media mode: press the **MEDIA** button. The menu appears with the available media sources.
- ▶ To select the media source: turn the controller and press to confirm.
- ▶ To switch to the menu bar: slide **⊙**↓ the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Manage Media Register**.
- ▶ Select **Delete All Media Files**. A message appears.
- ▶ To select **Yes**: turn and press the controller. All files are deleted.

Calling up memory space info

- ▶ In media mode: press the **MEDIA** button. The menu appears with the available media sources.
- ▶ To select the media source: turn the controller and press to confirm.
- ▶ To switch to the menu bar: slide **⊙**↓ the controller.
- ▶ To select **Options**: turn and press the controller.

- ▶ Select **Manage Media Register**.
- ▶ Select **Memory Info**.

Playback options

General notes

The following options are available:

- **Normal Track Sequence**: the tracks are played in the normal order (e.g. track 1, 2, 3 etc.).
 - **Random Medium**: all tracks on the data medium are played in random order (e.g. track 3, 8, 5 etc.).
 - **Random Track List**: the current track list is played in random order (e.g. 3, 8, 5 etc.).
- i** The **Normal Track Sequence** option is automatically selected when you change the disc you are currently listening to or when you select a different medium. If an option is selected, it remains selected after the multimedia system has been switched on or off.

Selecting Play mode

- ▶ In media mode: press the **MEDIA** button. The menu appears with the available media sources.
- ▶ To select **Media Register**: turn and press the controller.
- ▶ To switch to the menu bar: slide **⊙** the controller.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Playback Mode**. The options list appears. The • dot indicates the current setting.
- ▶ Select the desired option. The option is switched on. For all options except **Normal Track Sequence**, a corresponding icon appears in the main display.

Bluetooth® audio mode

Requirements

The Bluetooth® function must be activated in the multimedia system (▶ page 43).

Bluetooth® audio mode requires a Bluetooth®-capable audio device.

Check your Bluetooth® audio device for the following; see the manufacturer's operating instructions:

- **Bluetooth® audio profile**
The Bluetooth® audio device must support the A2DP and AVRCP Bluetooth® audio profiles.
- **Bluetooth® visibility**
Certain Bluetooth® audio devices do not just require activation of the Bluetooth® function. In addition, your device must be made "visible" to other devices.
- **Bluetooth® device name**
This device name is predetermined but can usually be changed. For a clear selection of the Bluetooth® device, Mercedes-Benz recommends that you customize the device name.

- i** **A2DP (Advanced Audio Distribution Profile)**: Bluetooth® audio profile for audio data transmission
- AVRCP (Audio Video Remote Control Profile)**: Bluetooth® audio profile for audio data playback

- i** The Bluetooth® device must be visible to the multimedia system for authorization. After authorization, the multimedia system even finds the Bluetooth® device when it is not visible.

General notes

Before using your Bluetooth® audio device with the multimedia system for the first time, you will need to authorize it.

When you authorize a new Bluetooth® audio device, it is connected automatically. Connection involves first searching for a Bluetooth® audio device and then authorizing it.

You can authorize up to 15 Bluetooth® devices.

- i** If you authorize a mobile phone that supports Bluetooth® audio, the A2DP and AVRCP Bluetooth® audio profiles are connected automatically.

The mobile phone is then entered:

- in the Bluetooth® telephone list (▷ page 109)
- in the Bluetooth® device list (▷ page 172)

Mercedes-Benz recommends authorizing a mobile phone in Bluetooth® telephony (▷ page 110).

Bluetooth® audio basic display



- ① Audio transmission status (depending on the Bluetooth® audio device, also title name and artist)
- ② Data medium position in the media list
- ③ Sound settings
- ④ To connect the device
- ⑤ To stop or start playback
- ⑥ Name of the connected Bluetooth® audio device (example)
- ⑦ Options menu

Switching to Bluetooth® audio

- ▶ In media mode: press the **MEDIA** button. The menu appears with the available media sources.
- ▶ To select **Bluetooth Audio**: turn and press the controller. The multimedia system activates the Bluetooth® audio device. The basic display then appears. Playback starts.

If you see the **No Bluetooth Audio Device Connected** message, you will need to authorize the Bluetooth® audio device first (▷ page 172).


- ❗ If the connected Bluetooth® audio device supports metadata and if the corresponding

data is available, then the artist, track and album name can be displayed.

Searching for and authorizing a Bluetooth® audio device

Searching for a Bluetooth® audio device

- ▶ Switch on Bluetooth® audio mode (▷ page 172).
- ▶ Slide the controller. The media menu bar is shown.
- ▶ To select **Connect Device**: turn and press the controller.
- ▶ To select **Search for Audio Devices**: press the controller. A message appears.
- ▶ Select **Start Search**. The multimedia system searches for Bluetooth® audio devices within range and adds them to the Bluetooth® device list. The duration of the search depends on the number of Bluetooth® audio devices within range and their characteristics.

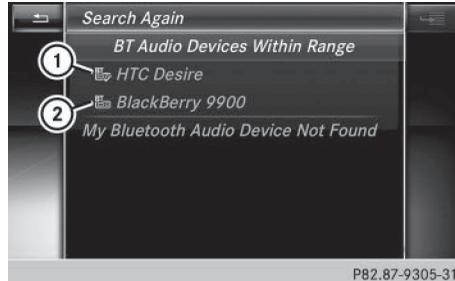

- ① Bluetooth® audio player within range and already authorized
- ② Newly detected mobile phone with Bluetooth® audio mode in range

The Bluetooth® device list displays all authorized devices, whether they are within range or not. After a device search, devices which are within range but not authorized are also displayed.

If the multimedia system cannot find your Bluetooth® audio device, external authorization may follow (▷ page 173).

Authorizing a Bluetooth® audio device

- ▶ In the Bluetooth® device list, select a Bluetooth® audio device that has not yet been authorized: turn and press the controller. Authorization starts.

Depending on which Bluetooth® audio device is being used, the device can be authorized either by entering a passkey or by Secure Simple Pairing. You can find information on this in the "Authorizing (connecting) a mobile phone" section (▶ page 110).

After successful authorization, the Bluetooth® audio device is connected and starts playing.

- i** With some Bluetooth® audio devices, playback must initially be started on the device itself, so that the multimedia system can play the audio data. Bluetooth® must also be given as a media output location for the audio device used.
- i** The Bluetooth® audio device must support Bluetooth® version 2.1 for connection via Secure Simple Pairing. The multimedia system creates a six-digit code which is displayed simultaneously on both devices that are to be connected.
For some Bluetooth® audio devices, the pairing must also be confirmed within 10 seconds.

External authorization

If the multimedia system does not find your Bluetooth® audio device, this may be due to particular security settings on your Bluetooth® audio device. In this case, check whether your Bluetooth® audio device can locate the multimedia system.

The Bluetooth® device name of the multimedia system is **MB Bluetooth**.

- ▶ Switch on Bluetooth® audio mode (▶ page 172).
- ▶ Slide  the controller. The media menu bar is shown.
- ▶ To select **Connect Device**: turn and press the controller.

- ▶ To select **Connect via Audio Device**: turn and press the controller.
- ▶ Start the authorization on your Bluetooth® audio device (see the manufacturer's operating instructions).
After successful authorization, the Bluetooth® audio device is connected and starts playing.

With some Bluetooth® audio devices, playback must initially be started on the device itself, so that the multimedia system can play the audio data.

Device-specific information on authorizing and connecting Bluetooth®-capable mobile phones can be found on the Internet at <http://www.mercedes-benz.com/connect>.

Displaying details

- ▶ To select a Bluetooth® audio device from the Bluetooth® device list: turn the controller (▶ page 172).
- ▶ To select : slide  the controller.
- ▶ To select **Details**: turn and press the controller.
The following information concerning the selected mobile phone is shown:
 - Bluetooth® name
 - Bluetooth® address
 - Availability status (shown after an update)
 - Authorization status
- ▶ **To close the detailed display**: press the  button.


Starting/stopping playback

- ▶ **To start playback**: To select : turn and press the controller.
Playback starts.  is selected.
- ▶ **To stop playback**: select .
A message appears.  is selected.
- ▶ **To continue playback**: select .
A message appears.  is selected.

Starting playback if the Bluetooth® audio device has been stopped

During the search for mobile phones (▷ page 109), the connection with the Bluetooth® audio device is terminated. The **No Bluetooth Audio Device Connected** message appears in the Bluetooth® audio basic display (▷ page 172). The **Connect Last Used Player** message cannot be confirmed.

When the search is finished, the Bluetooth® audio device can be reconnected.

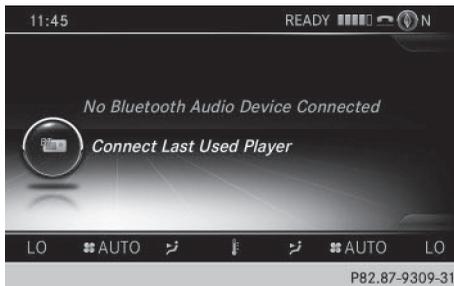

- ▶ To confirm the **Connect Last Used Player** message in the basic display: press the controller.

Depending on the Bluetooth® audio device used, playback starts immediately or you must start playback manually.

In this case, you will see the **Bluetooth Audio Device Paused** message.

- ▶ To select **Start playback**: : slide and press the controller. Playback resumes from the beginning.

Selecting a track

The function is not supported by all Bluetooth® audio devices.

Some mobile phones impair function with regard to the following criteria:

- the number of tracks that can be selected.
- the time period until the next or previous track is played.

- ▶ Use the multifunction steering wheel to switch to the media menu in the on-board computer; see the vehicle Operator's Manual.

- ▶ **To skip forward or back to a track:** press the or button on the multifunction steering wheel.

- ▶ **Rapid scroll:** press and hold the or button on the multifunction steering wheel until the desired track is reached. If you press and hold the or buttons, the rapid scrolling speed increases after a short time.

- ❗ During rapid scrolling, track names are not displayed but only Track+1, Track+2, etc. (or Track-1, Track-2, etc.). There are no playback times shown for tracks that have been played. This is available as an optional function starting with AVRCP Version 1.3.

Playback options

General notes

If the Bluetooth® audio device supports the corresponding function, the following options are available:

- **Normal Track Sequence:** the tracks are played in the normal order (e.g. track 1, 2, 3 etc.).
- **Audio data playback** is determined by the order in which the tracks are written to the data medium. Alphabetical order is the most common. Once all the tracks in a folder have been played, the tracks in the next folder are played.
- **Random Track List:** the current track list is played in random order (e.g. 3, 8, 5 etc.).
- **Random Medium:** all tracks on the data medium are played in random order (e.g. track 3, 8, 5 etc.).

Playback options are optional functions and are not, or only partially, supported by Bluetooth® audio devices.

Selecting the playback option

- ▶ Slide the controller.
- ▶ To select **Options**: turn and press the controller.

- ▶ Select **Playback Mode**.
 - A ● dot indicates the current setting.
- ▶ Select the desired option.
 - If you select **Random Track List**, a corresponding message appears in the display or selection window.

Increasing the volume in the multimedia system

- ▶ Slide  the controller in the Bluetooth® audio basic display (▷ page 172).
 - ▶ To select **Options**: turn and press the controller.
 - ▶ To select **Volume**: turn and press the controller.
 - A menu appears. The ● dot indicates the current setting.
 - ▶ Select **Standard** or **Boost**.
 - Information on audio AUX mode (▷ page 178).
- i** If play back on the Bluetooth® audio player is too quiet, the **Boost** function may be used. It is recommended, however, that you increase the volume on the Bluetooth® audio player directly.

Reconnecting a Bluetooth® audio device

The Bluetooth® audio profiles are connected automatically under the following circumstances:

- one of the last two mobile phones to have been connected has also been used as a Bluetooth® audio player (if this function is supported by the mobile phone).
 - the mobile phone is automatically connected. The Bluetooth® audio player is then connected.
- i** For an automatic connection with the multimedia system, the mobile phone must be within range.
- For most Bluetooth® audio devices, the "automatic connection" must be activated by ticking a box. Depending on the device used, this prompt often occurs during authorization (see the manufacturer's operating instructions).

If the **No Bluetooth Audio Device Connected** message appears, you have two options to reconnect the Bluetooth® audio device.

Option 1:

- ▶ To confirm the **Connect Last Used Player** message in the basic display: press the controller.
 - If the multimedia system can locate the Bluetooth® audio device, it will be connected and start playing.

Option 2:

- ▶ Slide  the controller.
 - The media menu bar is shown.
- ▶ To select **Connect Device**: turn and press the controller.
- ▶ To select a Bluetooth® audio device: turn and press the controller.
 - If the Bluetooth® audio device has been authorized, playback starts.

Bluetooth® audio device and simultaneous search for mobile phones

- i** When searching for a mobile phone (▷ page 109) or a new Bluetooth® audio device, the connection to an already activated Bluetooth® audio device is separated.

In the Bluetooth® audio basic display, you will see the **No Bluetooth Audio Device Connected** message, and the **Connect Last Used Player** menu item cannot be selected.

De-authorizing (deregistering) a Bluetooth® audio device

- ▶ To select a Bluetooth® audio device from the Bluetooth® device list: turn the controller (▷ page 172).
 - ▶ To select : slide  the controller.
 - ▶ To select **Deauthorize**: press the controller.
 - A prompt appears asking whether you really wish to de-authorize this device.
 - ▶ Select **Yes**.
 - If you select **Yes**, the device will be deleted from the Bluetooth® device list.
- i** Before re-authorizing the Bluetooth® audio device, you should also delete the device name **MB Bluetooth** from your Bluetooth®

audio device's Bluetooth® list (see the Bluetooth® audio device's operating instructions).

Media Interface in the multimedia system has two USB connections.


The USB ports are located in the stowage compartment under the armrest (▷ page 158).

Operation with the Media Interface

General notes

Media Interface is a universal interface for the connection of mobile audio and video devices.

Media Interface basic display

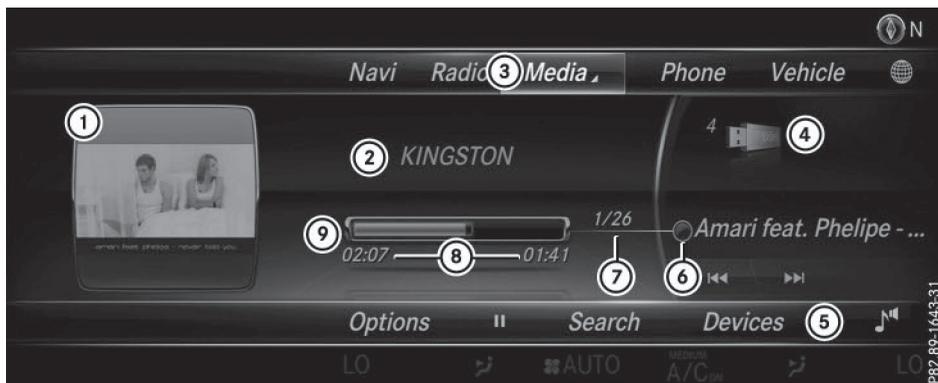

- ① Cover view (if available)
- ② Artist, album or name of the disc
- ③ Main function bar
- ④ Display for the active data medium
- ⑤ Media menu bar
- ⑥ Title display in the media list
- ⑦ Current track and number in the track list
- ⑧ Numerical time display
- ⑨ Graphic time display

Switching to Media Interface

- ▶ Connect the data medium to USB port 1 or USB port 2 (▷ page 164).
- ▶ Select the basic menu for Media Interface 1 or Media Interface 2 (▷ page 158). If playable media files are found, they will be played by the multimedia system. If you remove a device, the **No Device Connected** message appears.

Supported devices

The following data media can be connected to the multimedia system via Media Interface:

- iPod®
- iPhone®
- iPad®
- MP3
- USB devices

i iPod®, iPhone® and iPad® are registered trademarks of Apple Inc., Cupertino, California, USA.

i Audio files, photos and video files can be played back.

For details and a list of supported devices, visit <http://www.mercedes-benz.com/connect>. Then follow the instructions in the "Media Interface" section.

Or call the Mercedes-Benz Customer Assistance Center at 1-800-FOR-MERCEdes (1-800-367-6372) (for the USA) or Customer Relations at 1-800-387-0100 (for Canada).

Supported data formats

Music	MP3, WMA, AAC
Video	MPEG, WMV, MOV, AVI, MP4
Images	JPG, JPEG, BMP, PNG

i Video files from Apple® devices cannot be played using the USB port.

Selecting a music file

Selecting with the controller

- ▶ **To display the current track list:** press the controller in the basic display.
- ▶ Select **Current Tracklist**.
The track list for the active data medium appears.
- ▶ To select a track: turn the controller and press to confirm.
- ▶ **To skip forward or back to a track:** turn the controller in the basic display.
The selected track is played.

Selecting with fast forward/rewind

- ▶ With the media source active in the basic display, slide ◀⊙▶ the controller and hold it until the desired position has been reached.

Searching for a track

Selecting Search using media menu bar

- ▶ To switch to the menu bar: slide ⊙↓ the controller.
- ▶ To select **Search**: turn and press the controller.
The category list appears.

Overview

The following categories are listed:

- **Current Tracklist**
- **Folder**
- **Select By Cover**
- **Keyword Search**
- **Playlists**
- **Artists**
- **Albums**
- **Track**
- **Genres**
- **Year**
- **Composers**
- **Videos**
- **Photos**
- **Podcasts**
- **Audiobooks**

i The functions are available as soon as the entire media content has been read and analyzed.

If the same device is reconnected with unchanged media content, these functions are available more quickly.

The audio books and podcasts categories are only available for Apple® devices.

When connecting Apple® devices, the categories "Folder", "Year" and "Photos" are not available.

- ▶ To select a category, e.g. **Current Tracklist**: turn and press the controller.
The selection list appears.
- ▶ Select the required track.

Searching for tracks via keywords

- ▶ To select **Keyword Search** in the category list: turn and press the controller.
- ▶ Enter and confirm the characters of the desired search using the controller (▷ page 167).
Search results are sorted according to the available categories, displayed and can then be selected.

Selecting the playback option

- ▶ In media mode, slide  the controller. The media menu bar is shown.
- ▶ To select **Options**: turn and press the controller.
- ▶ To select the desired playback option: turn and press the controller.

Additional information on playback options (▷ page 164).

Selecting video settings

If playable video files are found, they will be played by the multimedia system.

- ▶ To switch on full-screen mode: press the controller in the basic display.
- ▶ To show the video menu: slide  the controller in full-screen mode. The Media Interface menu bar appears.
- ▶ To select **Options**: turn and press the controller.
- ▶ Select **Video Settings**.
- ▶ Change the settings (▷ page 183).

Audio AUX mode**Notes on audio AUX mode**

External audio sources may have different volumes, which can mean that system messages such as traffic announcements and navigation system announcements are much louder. If necessary, deactivate the system messages or adjust their volume manually.

AUX also provides the option of connecting a Media Player to the multimedia system.

To connect an external audio source to the audio AUX, you will require an audio AUX cable.

- i** You will find further information online at <http://www.mercedes-benz.com/connect>. Or call the Mercedes-Benz Customer Assistance Center at 1-800-FOR-MERCEdes (1-800-367-6372) (for the USA) or Customer Relations at 1-800-387-0100 (for Canada).

Switching to audio AUX mode

- ▶ Connect an external audio source.
The AUX port is located in the stowage compartment in the center console. The audio AUX is not selected automatically.
- ▶ Press the  button.
The menu for the last accessed media source appears.
- ▶ To select **Media**: slide  and press the controller.
The menu appears with the available media sources.
- ▶ To select **Aux**: turn and press the controller. The medium is played if the audio source is switched on and playback is activated.

- i** Please see the manufacturer's operating instructions for how to operate the external audio source.

Setting the audio AUX options

- ▶ To show the menu bar: slide  the controller.
- ▶ To select **Options**: turn and press the controller.
A menu appears. You can set **Mono/Stereo** or **Volume**.

Selecting Mono or Stereo

- ▶ To select **Mono/Stereo**: turn and press the controller.
A menu appears.
- ▶ Select **Mono** or **Stereo**.
The • dot indicates the current setting.

Selecting volume settings

- ▶ To select **Volume**: turn and press the controller.
- ▶ Select **Standard** or **Boost**.
Standard: the volume of the external audio source is adjusted to a standard value.
Boost: the volume of the external audio source is raised by approximately 10 dB.

The • dot indicates the current setting.

- ▶ **i** A device which is connected as an external audio source may seem quieter or louder in the vehicle, or the usual maximum volume cannot be achieved. On some devices, it is possible to adjust the volume separately. In this case, start at a medium volume and increase it gradually. This enables you to determine whether the system is able to play the music at high volume without distorting it.

Video AUX mode

Notes on video AUX mode

External video sources may have different volumes, which can mean that system messages such as traffic announcements and navigation system announcements are much louder. If necessary, deactivate the system messages or adjust their volume manually.

Video AUX is another option for playing videos via the multimedia system.

To connect an external video source to the video AUX, you will require a video AUX cable.

- ▶ **i** If you only use an audio AUX cable, you will only be able to hear the sound from the video being played.

Videos cannot be shown on the driver's side while the vehicle is in motion.

Switching to AUX video mode

- ▶ Connect the external video source. The video AUX port is located in the stowage compartment in the center console. The video AUX is not selected automatically.
- ▶ Press the **MEDIA** button. The last media source you have set is displayed.
- ▶ To select **Media**: slide **↑** and press the controller. The menu appears with the available media sources.
- ▶ To select **Aux**: turn and press the controller. The AUX video menu appears.

- ▶ To select **Audio/Video** in the menu bar: slide **⊙** and press the controller.

The **Source Type Selection** menu appears.

- ▶ To select **Video**: turn and press the controller. The • dot indicates the current setting.

If the video source is connected and playback selected, the image from the external video source will appear if **Video** is selected.

Please see the manufacturer's operating instructions for how to operate the external video source.

Information about sound settings

(▷ page 187)

Switching full-screen mode on/off



- ▶ **To switch on:** in video AUX mode, slide **↑** and press the controller. The menu bars disappear.
- ▶ The full-screen symbol appears: press the controller. The full screen appears.
- ▶ **To switch off:** press the controller. The menu is displayed.

Setting further options

- ▶ To switch to the menu bar: slide **⊙** and press the controller.
- ▶ To select **Options**: turn and press the controller. A menu appears. You can set **Video Settings**, **Mono/Stereo** and **Volume**.

Selecting video settings

- ▶ Select **Video Settings**.
- ▶ Select the preferred screen format, such as **16:9**.

The ● dot indicates the current setting. The screen format is adjusted.

If the **Automatic Daylight Adjustment** and **Dynamic Image Enhancement** □ functions are deactivated, the following settings can be made manually:

- **Bright.**
- **Contrast**
- **Color**

Selecting mono/stereo:

- ▶ To select **Mono/Stereo**: turn and press the controller.
- ▶ Select **Mono** or **Stereo**.
The ● dot indicates the current setting.

Selecting volume settings

- ▶ Select **Volume**.
- ▶ Select **Standard** or **Boost**.
Standard: the volume of the external audio source is adjusted to a standard value.
Boost: the volume of the external audio source is raised by approximately 10 dB.
The ● dot indicates the current setting.

Video DVD mode

Important safety notes

WARNING

The CD/DVD drive is a class 1 laser product. If you open the housing of the CD/DVD drive, there is a risk of exposure to invisible laser radiation. This laser radiation could damage your retina. There is a risk of injury.

Never open the housing. Always have maintenance and repair work carried out at a qualified specialist workshop.

WARNING

Handling discs while driving may distract you from traffic conditions. You could also lose control of the vehicle. There is a risk of an accident.

Handle discs only when the vehicle is stationary.

Bear in mind that at a speed of only 30 mph (approximately 50 km/h) your vehicle covers a

distance of 44 feet (approximately 14 m) every second.

General notes

Notes on discs

 Do not affix stickers or labels to the discs. They could peel off and damage the drive.

The drive is designed to receive EN 60908 standard discs. Therefore, you can only use discs with a maximum thickness of 1.3 mm.

If you insert thicker discs, e.g. those that contain data on both sides (DVD on one side and audio data on the other), they cannot be ejected and can damage the drive.

Do not use discs with an 8 cm diameter, even when using an adapter. Only use round discs with a 12 cm diameter.

The variety of data media, writers and writing software means that the multimedia system may not be able to play discs that you have copied yourself.

DVD playback conditions

The multimedia system can play back video DVDs produced according to the following standards:

- Region code 1 or region code 0 (no region code)
- PAL or NTSC standard

You will generally find the relevant details either on the DVD itself or on the DVD case.

With DVDs that do not meet the standard requirements, you may encounter playback problems.

 Observe the following notes:

- It is also possible to play video DVDs with a different region code, provided that they are produced in accordance with the PAL or NTSC standard. If you insert a video DVD with a different region code, a message to this effect appears.
- The multimedia system is set to region code 1 at the factory. This setting can be changed at an authorized Mercedes-Benz

Center. The region code can be changed up to five times.

- If a DVD cannot be played back according to national color transfer methods (PAL or NTSC standards), problems with the image, sound or playback may occur.

Control options

There are four control menus available in video DVD mode.

Most DVDs have their own control menu. The DVD is operated directly using the controller or DVD functions.

Control menu and function	Operation
<ul style="list-style-type: none"> • DVD's control menu Selection of title, scene, language, subtitles ... 	Operation with the controller
<ul style="list-style-type: none"> • Options menu Selection of brightness, contrast, color, format 	Operation using the Options menu bar, video settings
<ul style="list-style-type: none"> • Video menu Selection of scene, fast forward or rewind 	In full-screen mode, slide  the controller
<ul style="list-style-type: none"> • DVD functions Selection of title, scene, language, subtitles ... 	In full-screen mode, press the controller

Function restrictions

Depending on the DVD, certain functions or actions may not function at all. The symbol  appears in the display.

Switching on video DVD mode

- Insert and eject a disc from the single drive (> page 161)
- Insert a disc into the DVD changer (> page 162)
- Eject a disc from the DVD changer (> page 163)

Further options for switching on:

- Using the number keypad (> page 159)
- Using the main function bar (> page 158)
- Using the device list (> page 159)
- Using the  button (> page 158)

DVD overview



Media

- ① Main function bar
- ② Main display field
- ③ Media menu bar
- ④ Additional display area with title, scene and time display

The DVD basic display can be shown in the following situations:

- ▶ **To show the DVD menu:** press the button.
- ▶ **To show it in the currently playing video:** slide the controller.
The video menu appears.
- ▶ Press the controller.
The basic display appears.

Switching on DVD full-screen mode

It is possible to switch from the DVD basic display to full screen mode as follows:

- ▶ Slide the controller.
The main function bar and menu bar are hidden. A full-screen symbol will be shown.
- ▶ Press the controller.
The full-screen mode appears.

Selecting menu options

- ▶ To select **Options**: slide the controller when in full-screen mode
The video menu appears.
- ▶ Press the controller.
The DVD basic display appears.

- ▶ To switch to the menu bar: slide the controller.
- ▶ To select **Options**: turn and press the controller.
A menu appears.

Skip to time

- ▶ To select **Skip to Time**: turn and press the controller.
A menu appears.
- ▶ To set the time: turn the controller.
or
Set the desired time using the number keypad.

- ▶ To hide the menu: press the button.

Displaying the DVD functions

- ▶ To select **DVD Functions**: turn and press the controller.
A menu appears (▷ page 184).


Selecting video settings

- ▶ Select **Video Settings**.
A menu appears.

Video settings

Dynamic image enhancement

The dynamic image enhancement function automatically matches brightness, contrast and color to the film being played.

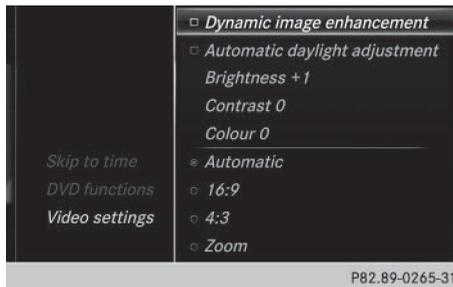

- ▶ Select **Video Settings** (▷ page 182).
- ▶ Switch **Dynamic Image Enhancement** on or off .

Manual image enhancement



In order to manually adjust the brightness, contrast and color, the dynamic image enhancement function and the automatic daylight adjustment feature must be switched off.

- ▶ Select **Video Settings** (▷ page 182).
- ▶ To select **Brightness**, **Contrast** or **Color**: turn and press the controller.
A sliding menu appears.

- ▶ To select the required value: turn the controller.
- ▶ To exit the sliding menu: slide ◀⊙ the controller.

Setting the picture format

- ▶ Select **Video Settings** (▷ page 182).
The following screen format options are available for the DVD currently being played:

- **Auto**
- **16:9**
- **4:3**
- **Zoom**

- ▶ To set the picture format: turn and press the controller.
The dot before the menu entry shows the selected format.


Showing the DVD's control menu

Most DVDs have their **own control menu** which can be operated using the controller.

Showing the DVD's control menu

- ▶ To show DVD functions: in full screen video mode, press the controller.
The DVD functions menu is shown.
- ▶ To select **Menu** from the DVD functions menu: turn and press the controller.
The DVD functions menu is hidden and the DVD's menu entries (e.g. scenes, language, trailers) are displayed.
- ▶ To select a menu entry: turn and press the controller.

Operating the video menu

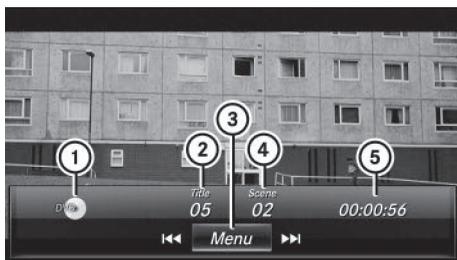

P82.89-0267-31

- ① Type of data medium
- ② Current title
- ③ Shows the menu bars for the DVD basic display
- ④ Current scene
- ⑤ Track time

Operating the video menu

- ▶ To show the video menu: slide the controller while the video is in full screen mode.
- ▶ To hide the video menu: slide the controller.
- ▶ To select the next or previous scene: turn the controller clockwise/counter-clockwise.
- ▶ To fast forward or rewind: slide the controller and hold until the desired position has been reached.
- ▶ To show the menu bars for the DVD basic display: press the controller. The video menu is hidden and the DVD basic menu appears.

DVD functions

Showing/hiding the DVD functions

- ▶ To show DVD functions: in full screen video mode, press the controller. The DVD functions menu is shown.
- ▶ To hide DVD functions: select from the DVD functions.
- ▶ To show the DVD basic display: select from the DVD functions.

Overview of DVD functions



P82.89-0268-31

- ① Activates DVD control menu
- ② Hides DVD functions
- ③ Shows the DVD basic display
- ④ Confirms entry in control menu
- ⑤ Navigates DVD lists
- ⑥ Jumps to the start of the scene
- ⑦ Displays camera perspectives
- ⑧ Shows subtitles
- ⑨ Selects language
- ⑩ Stops playback
- ⑪ Pauses playback

Using the DVD functions



P82.89-0269-31

- ▶ In full-screen mode, press the controller. The DVD functions menu is shown. It is possible to navigate in the DVD's control menu when the arrows in the upper menu bar are activated.
- ▶ To select the arrow to navigate in the menu: turn the controller. The active arrow is highlighted.
- ▶ To select a menu entry: press the controller. The next menu entry in the direction of the arrow is highlighted.
- ▶ To call up a highlighted menu entry: turn the controller until is highlighted.

- ▶ Press the controller.
The selected DVD scene is played.
- ▶ To hide DVD functions: select  using the controller.
- ▶ Press the controller.
The DVD functions menu is hidden.

If there are functions such as **Display camera perspectives** on the DVD, these functions are shown in the DVD functions menu.

- ▶ To call up Display camera perspectives: turn and press the controller

Continuing/stopping playback

Interrupting playback

- ▶ Show the DVD functions (> page 184).
- ▶ To select  from the DVD functions menu: turn and press the controller.
The  display changes to . Playback is stopped.

Continuing playback

- ▶ Select .
- ▶ Playback continues from the point where it was interrupted.

Stops playback

- ▶ While playback is interrupted select  again.

Restarting playback

- ▶ Select .
- ▶ Playback restarts from the beginning.

Pausing/continuing playback

Pausing playback

- ▶ Show the DVD functions (> page 184).
- ▶ Select : turn and press the controller.
The  display changes to .

Continuing playback

- ▶ Select .

Selecting a scene/chapter

If the film is divided into scenes and chapters, you can select these directly while the film is running or you can skip progressively through them. This is not possible at certain points for some DVDs (e.g. during the opening credits).

It may also be possible to select the scene or chapter from the functions stored on the DVD.

- ▶ **To skip forward or back:** in the video menu, turn the controller.
The next or previous scene in the film is skipped to.

i The DVD functions can also be used to make selections (> page 184).

Picture viewer

General notes

If there are pictures on the active data medium, you can view them on the multimedia system.

The following data media and picture formats are supported:

- **Data media:** Media Register, CD, DVD, USB devices, SD cards
- **Picture formats:** jpeg, jpg, bmp, png

The maximum image resolution is 20 megapixels.

It is not possible to view a picture from the driver's side while the vehicle is in motion.

Displaying pictures

- ▶ In media mode, slide  the controller.
The media menu bar is shown.
- ▶ To select **Search:** turn and press the controller.
The category list appears.
- ▶ To select **Photos:** turn and press the controller.
A directory list appears. Folders and picture files can be shown.
- ▶ Select a folder or picture.
If there is no picture on the data medium, an empty list is shown.

Searching for pictures on other data media

- ▶ You can search for pictures on other data media.
In the directory list, slide  the controller.
The device list appears.
- ▶ To select a data medium with picture files: turn the controller and press to confirm.
A directory list appears. Folders and picture files can be shown.
- ▶ Select a folder or picture.

Starting a slide show


- ▶ While viewing a picture, press the controller. The image menu appears.
- ▶ To select **Start Slideshow**: turn and press the controller. The slide show starts.
- ▶ To end the slide show: press the controller. The image menu appears.
- ▶ Select **End Slide Show**.

Closing the picture viewer

- ▶ Press the controller. The menu appears.
- ▶ To select **Close Picture Viewer**: turn and press the controller. The multimedia system returns to the last accessed media function.

Changing the picture view

Media

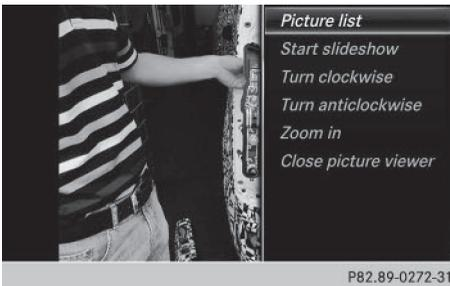

PB2.89-0272-31

- ▶ Press the controller. The image menu appears.
 - ▶ To select **Turn Clockwise**: turn and press the controller. The picture rotates 90 degrees.
 - ▶ Select **Turn Counterclockwise**. The picture rotates 90 degrees.
 - ▶ Select **Zoom In**. The size of the picture increases. After you have zoomed into the picture, you can move the section of the picture.
 - ▶ To move the section of the picture: slide $\uparrow \odot \downarrow$ and $\leftarrow \odot \rightarrow$ the controller.
 - ▶ To revert to the original size: press the controller
- or
- ▶ Press the  button.

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

Sound settings

Calls up the sound menu

You can select various sound settings while in radio mode or another media mode. It is possible to set more bass for radio mode than for audio CD mode, for example. The respective sound menu can be called up from the menu bar of the desired mode.

- ▶ Switch to radio mode (▷ page 148).
- or
- ▶ Switch to media mode (▷ page 158).
- ▶ To switch to the menu bar: slide  the controller.
- ▶ To select : turn and press the controller. The menu appears with the last setting accessed, e.g. **Balance/Fader**.

Sound menu overview

Function	Options
Equalizer	Sets treble, mid-range and bass
Balance/fader	Moves the sound focus: right/left and front/rear

Setting treble, mid-range and bass



- ▶ Call up the sound menu (▷ page 187).
- ▶ Turn the controller until **Equalizer** is brought to the front.
- ▶ To activate rotary menus for treble, mid-range and base: slide  the controller.
- ▶ To switch between the rotary menus: slide  or  the controller.
- ▶ To make the desired **Equalizer** settings: turn the controller. Rotary menus show the set values.
- ▶ To return to the menu: slide  the controller.
- ▶ To return to the basic menu: press the  button briefly.

Sound

Adjusting the balance/fader



Balance moves the focus of the sound between left and right.

Fader moves the focus of the sound between front and rear.

- ▶ Call up the sound menu (▷ page 187).
- ▶ Turn the controller until **Balance/Fader** is brought to the front and then slide  the controller.

- ▶ To activate the menu for balance and fader: press the controller.
- ▶ To adjust the balance focus: slide ◀⊙ or ⊙▶ the controller.
- ▶ To adjust the fader focus: slide ⊙↓ or ↑⊙ the controller.
An image shows the sound focus set.
- ▶ To exit the menu: press the  button.

Burmester® surround sound system

General notes

The Burmester® surround sound system is available for all functions in the radio and media modes.

The Burmester® surround sound system has a total output of 590 watts and is equipped with 13 loudspeakers.

For the best sound, we recommend that the **Automatic Volume Adjustment** function is deactivated (▷ page 44). For further information on automatic volume adjustment, see (▷ page 43).

If using Bluetooth® audio mode, we recommend you select the **Boost** setting (▷ page 175).

Calling up the sound menu

You can select different sound settings in radio mode and other media modes. It is possible to set more bass for radio mode than for audio CD mode, for example. The respective sound menu can be called up from the menu bar of the desired mode.

- ▶ Switch to radio mode (▷ page 148).
- or
- ▶ Switch to media mode (▷ page 158).
- ▶ To switch to the menu bar: slide ⊙↓ the controller.
- ▶ To select : turn and press the controller. The menu appears with the last setting accessed, e.g. **Balance/Fader**.

Overview of Burmester® surround sound system

Function	Options
Equalizer	Sets treble, mid-range and bass
Balance/fader	Moves the sound focus: right/left and front/rear
Surround	Optimizes sound playback for all seats

Setting treble, mid-range and bass



- ▶ Call up the sound menu (▷ page 188).
- ▶ Turn the controller until **Equalizer** is in the center.
- ▶ Slide ⊙↓ the controller. The rotary menus for treble, mid-range and bass are activated.
- ▶ To switch between the rotary menus: slide ◀⊙ or ⊙▶ the controller.
- ▶ To make the desired **Equalizer** settings: turn the controller. The rotary menus show the set values.
- ▶ To return to the menu: slide ↑⊙ the controller.
- ▶ To return to the basic menu: press the  button briefly.

Adjusting the balance/fader



Balance moves the focus of the sound between left and right.

Fader moves the focus of the sound between front and rear.

- ▶ Call up the sound menu (▷ page 188).
- ▶ Turn the controller until **Balance/Fader** is brought to the front and then slide $\odot \downarrow$ the controller.
- ▶ To activate the menu for balance and fader: press the controller.
- ▶ To adjust the balance focus: slide $\leftarrow \odot$ or $\odot \rightarrow$ the controller.
- ▶ To adjust the fader focus: slide $\odot \downarrow$ or $\uparrow \odot$ the controller.
An image shows the sound focus set.
- ▶ To exit the menu: press the $\square \leftarrow$ button.

Setting surround sound



The setting optimizes the sound playback for the selected seat position.

Switching on/off

- ▶ Call up the sound menu (▷ page 188).
- ▶ Turn the controller until **Surround** is in the center.

- ▶ Slide $\odot \downarrow$ the controller.
The left-hand rotary menu to switch surround sound on and off is activated.
- ▶ To switch on **Surround**: turn the controller.

Setting the focus

- ▶ Slide $\odot \rightarrow$ the controller.
The right-hand rotary menu is activated.
- ▶ To set **Front, Rear** or **All Seats**: turn the controller.
The menu symbol, text and image show the selected setting.

i The focus can be set regardless of whether or not surround sound is activated.

- ▶ To exit the menu: press the $\square \leftarrow$ button.

Burmester® high-end 3D surround sound system

General notes

The Burmester® high-end 3D surround sound system is available for all functions in the radio and media modes.

For the best sound, we recommend that the **Automatic Volume Adjustment** function is deactivated (▷ page 44). For further information on automatic volume adjustment, see (▷ page 43).

If using Bluetooth® audio mode, we recommend you select the **Boost** setting (▷ page 175).

Calling up the sound menu

You can select different sound settings in radio mode and other media modes. It is possible to set more bass for radio mode than for audio CD mode, for example. The respective sound menu can be called up from the menu bar of the desired mode.

- ▶ Switch to radio mode (▷ page 148).
- or
- ▶ Switch to media mode (▷ page 158).
- ▶ To switch to the menu bar: slide $\odot \downarrow$ the controller.
- ▶ To select $\square \leftarrow$: turn and press the controller.
The menu appears with the last setting accessed, e.g. **Sound Profile**.

Overview of Burmester® high-end 3D surround sound system

Function	Options
Equalizer	Sets treble, mid-range and bass
Balance/fader	Moves the sound focus: left/right and front/rear
VIP & BAL selection	Optimizes sound playback for individual seats
Sound profile	Five defined sound settings: Pure / Easy Listening / Live/Surround / 3D-Sound

Sound

i 3D sound is not available for cabriolets.

Setting treble, mid-range and bass



- ▶ Call up the sound menu (▷ page 189).
- ▶ Turn the controller until **Equalizer** is in the center.
- ▶ Slide $\odot \downarrow$ the controller. Rotary menus for treble, mid-range and bass are activated.
- ▶ To switch between the rotary menus: slide $\leftarrow \odot$ or $\odot \rightarrow$ the controller.
- ▶ To make the desired **Equalizer** settings: turn the controller. Rotary menus show the set values.
- ▶ To return to the menu: slide $\uparrow \odot$ the controller.
- ▶ To return to the basic menu: press the $\leftarrow \square \rightarrow$ button briefly.

Adjusting the balance/fader




You can use balance to move the focus of the sound between left and right.

You can use fader to shift the focus of the sound between the front and rear seats.

- ▶ Call up the sound menu (▷ page 189).
- ▶ Turn the controller until **Balance/Fader** is in the center and slide $\odot \downarrow$.
- ▶ To activate the menu for balance and fader: press the controller.
- ▶ To adjust the balance: slide $\leftarrow \odot$ or $\odot \rightarrow$ the controller.
- ▶ To adjust the fader: slide $\odot \downarrow$ or $\uparrow \odot$ the controller. An image shows the sound focus set.
- ▶ To return to the basic menu: press the $\leftarrow \square \rightarrow$ button briefly.

VIP & BAL selection

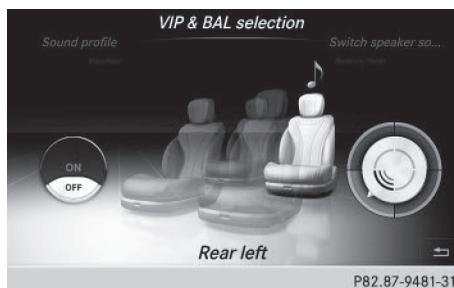

The **VIP & BAL Selection** setting can be used to select sound optimization for a specific seat, e.g. **Rear Left**.

- ▶ Call up the sound menu (▷ page 189).
- ▶ Turn the controller until **VIP & BAL Selection** is in the center.

- ▶ To activate the left-hand rotary menu to switch **VIP & BAL Selection** on and off: slide  the controller.
- ▶ To activate **VIP & BAL Selection**: turn the controller until **On** is active.
- ▶ To activate the right-hand rotary menu: slide  the controller.
- ▶ To set the desired **VIP & BAL Selection**: turn the controller.
The segment, text and image show the selected setting, e.g. for **Rear Left**.
- ▶ To return to the menu: slide  the controller.
- ▶ To return to the basic menu: press the  button briefly.

Setting the sound profile

With the **Sound Profile** setting, you can select between five defined sound settings.

Sound profile for high-end 3D sound system	Description
Pure	Audiophile audio playback without additional effects
Easy Listening	Subtly mellowed acoustics for laid-back listening over long periods
Live	Spectacular sound settings with live-performance characteristics
Surround	Enhanced surround sound for mono and stereo recordings
3D-Sound	Three-dimensional listening experience

 3D sound is not available for cabriolets.



- ▶ Call up the sound menu ( page 189).
- ▶ Turn the controller until **Sound Profile** is in the center.
- ▶ Slide  the controller.
The rotary menu to select the sound profile is activated.
- ▶ To select **Sound Profile**: turn the controller until the desired sound profile is activated.
- ▶ To return to the menu: slide  the controller.
- ▶ To return to the basic menu: press the  button briefly.

Your multimedia system equipment

These operating instructions describe all the standard and optional equipment of your multimedia system, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This also applies to safety-relevant systems and functions.

Read the information on qualified specialist workshops in the vehicle Operator's Manual.

SIRIUS Weather

Introduction

This function is currently not available for Canada.

For the reception of weather forecasts via satellite radio, you will need a SIRIUS XM Satellite Weather subscription.

If the message: **Please call SIRIUS to activate the system at: 888-539-7474 ESN: SIRIUS ID** appears along with the ID number of the SIRIUS device, you will need to have the weather service activated first.

- ▶ To select **Call** or **Cancel**: turn and press the controller.

If a mobile phone is connected to the multimedia system (> page 107), when you select **Call** a call is placed to a member of the SIRIUS service staff. The ID number of the SIRIUS device will be transferred to the telephone display.

- ▶ This will be followed by instructions from the service employee.

The multimedia system can receive weather forecasts for the USA (including Alaska and Hawaii) via satellite radio. The received weather data can be displayed as an information chart (daily forecast, five-day forecast, detailed information) or on the weather map.

The weather data received from the weather station is stored for one hour in the multimedia system. It can therefore be displayed again immediately after restarting the engine (for example after refueling).

Depending on which scale has been selected, the weather map can display the following weather data with symbols:

- rain radar
- storm characteristics
- high and low-pressure areas, weather fronts
- course of tropical cyclones (hurricanes, typhoons)
- storm warnings
- wind direction and speeds

i The rain radar cannot be displayed for Alaska, Hawaii and Puerto Rico.

i Hurricane: term used to describe the tropical cyclones that primarily develop in the Atlantic, North Pacific and South Pacific oceans. The wind speeds are above 74 mph (118 km/h). Five categories are used to classify the strength of a hurricane.

Typhoon: term used to describe a tropical cyclone that develops in the northwestern Pacific. The wind speeds are in the category of a hurricane.

Switching the SIRIUS Weather display on/off

Activating



- ▶ **To display the main function bar:** slide **↑** the controller.
- ▶ To select **☉**, turn and press the controller. The online applications menu appears.
- ▶ To select **SIRIUS Weather**, turn and press the controller. The information chart shows the daily forecast at the current vehicle position.

You see the following information:

- the date and time of the weather message received last
- information on the current weather (temperature, cloud coverage) and a forecast for the next three, six and twelve hours
- the current highest temperature and forecasts
- the current lowest temperature and forecasts
- the probability of rain

Switching to the 5-day forecast:

- ▶ To select **Current**: turn and press the controller.
A menu appears.
- ▶ Select **5-Day**.
The information chart displays the forecast for the next five days in the currently selected location.



Returning to the current-day forecast:

- ▶ To select **5-Day**: turn and press the controller.
A menu appears.
- ▶ Select **Current**.
The information chart shows the forecast for the current day again.

Deactivating

- ▶ Press .

Displaying detailed information



Besides the current temperatures, you can display information such as wind speeds and UV index.

- ▶ To select **Current** or **5-Day** in the current-day or 5-day forecast: turn and press the controller.
A menu appears.
- ▶ Select **Info**.
The information chart shows detailed information for the selected area.

Selecting the area for the weather forecast

Introduction

You can select the following areas:

- the current vehicle position
- the vicinity of the destination
- a winter sports area
- an area within the USA

You can select a location in the information chart (option 1) or in the map (option 2). You also have the option of selecting a location from the memory (▷ page 195). In order to select a location from the memory, you must have previously saved a location.

- i** The multimedia system receives weather data for the weather forecasts from the nearest weather station to the selected location.

Option 1: selecting the area in the information chart

- ▶ To select **Position** in the information chart: turn and press the controller.
- ▶ **To select the current vehicle position:** select **Current Position** in the menu. The multimedia system receives weather data for the current vehicle position from the nearest weather station and automatically displays the data.

Requirement for "Near destination": a route to a destination has been calculated (▷ page 68). The menu item is otherwise grayed out.

- ▶ **To select the vicinity of the destination:** select **Near Destination**: turn and press the controller.
- ▶ **To select a winter sports area:** select **At Ski Area** from the menu: turn the controller and press to confirm.
- ▶ Select a state, e.g. **Colorado**.
- ▶ Select a winter sports area from the menu. The weather data and other information is displayed for the winter sports area that has been selected. The data is supplied by the nearest weather station.



The information chart shows the following information (if available):

- ski slopes/ski lifts
- snowboarding and nighttime opening
- snow conditions (e.g. snow depth)
- temperature

The status of a facility is indicated as follows:

- green check mark - open
- red cross - closed
- question mark - not known



Example: city list with character bar

Entry limitation: searching for a location using the character bar is not possible while driving.

- ▶ **To search for a location:** select **Search Areas**: turn the controller and press to confirm.
- ▶ Select **Other States** or **Current State (ABC)**. Depending on the selection, the list of states or cities will appear with the character bar. You can limit the search using the character bar.
- ▶ To select state/province or city: enter the first few letters by turning and pressing the controller.
- ▶ To switch to the list without the character bar: slide **⬆** the controller or select **OK**.
- ▶ To cancel an entry: highlight **<X>** in the character bar and press the controller. Pressing briefly deletes the last letter entered. Pressing and holding longer deletes the entire entry.
- ▶ To select the state/province or city from the list: turn and press the controller. After selecting a state (or province) the list of locations appears. After selecting a location, the information chart displays the weather forecast for the selected location. The data is supplied by the nearest weather station.

Option 2: selecting the area in the weather map

- ▶ Call up the weather map (> page 195).
- ▶ Move the weather map so that the crosshair is over the desired area (> page 195).
- ▶ Press the controller.
The information chart shows the weather forecast for the selected area. The data is supplied by the nearest weather station.

Memory functions

Storing the area in the weather memory

You can save locations that are called up frequently in ten preset positions (0, 1-9) in the weather memory.

- ▶ **In the weather memory:** select the area for the weather forecast (> page 193).
The selected location appears at the top in the status bar.
- ▶ To select **Position** in the information chart: turn and press the controller.
- ▶ Select **Presets**.
- ▶ Select a preset using the controller.
- ▶ Press and hold the controller until you hear a tone.
The area is entered on the selected preset.

Equipment with telephone keypad

- ▶ **To store rapidly:** in the daily forecast (> page 192) press and hold a number key, e.g. **2** ABC, until the preset position number is shown in the status bar in front of the area name.

i You can also use this function in the five-day forecast (> page 192), and in the detailed information view (> page 193).

Selecting an area from the weather memory

- ▶ **Directly from the weather memory:** select **Position** from the information chart: turn and press the controller.
- ▶ Select **Presets**.
- ▶ Select the memory position which contains the location you require.
The weather data for the selected area is displayed.

Equipment with telephone keypad

- ▶ **Quick select:** if a location is stored in the weather memory, for example when the current forecast display is active, briefly press a number key, e.g. **2** ABC.
The weather data for the selected area is displayed.

Weather map

Calling up the weather map



- ▶ To select **Map** in the information chart: turn and press the controller.
The weather map is shown on a 500-mi (500-km) scale.

Moving the weather map

- ▶ Slide **↑** **⊙** **↓** or **←** **⊙** **→** the controller.
The weather map moves in the corresponding direction under the crosshair.

Changing the scale

- ▶ Turn the controller.
The scale bar appears.
- ▶ Turn until the desired scale is set.

Showing/hiding the menu in the weather map


- ▶ **To show:** press the controller.
- ▶ **To hide:** slide **↑** **⊙** the controller.

Selecting a weather station in the map

- ▶ Move the weather map and crosshair to the desired position (▷ page 195).
- ▶ To show the menu: press the controller.
- ▶ To select **Weather Table**: press the controller.

The multimedia system receives weather data for the selected position from the nearest weather station and displays the data as a current-day forecast.

Switching layers on the map on/off

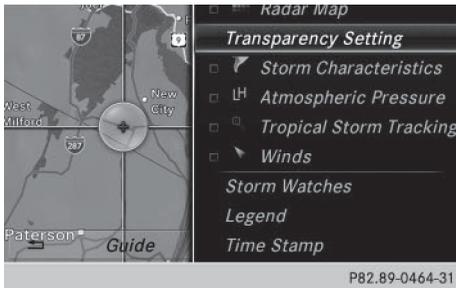

You can switch on different layers, for example to display the rain radar, weather fronts and the course of tropical storms on the map.

- ▶ Display the menu on the weather map (▷ page 195).
- ▶ To select **View**: turn and press the controller.
- ▶ Select a layer.
Switch the display on or off .

Explanation of the layers on the weather map

- **Radar Map**

Displays the rain radar as a colored area in all map scales. For an explanation of the colors, see the legend (▷ page 200).

- **Storm Characteristics**

Displays the characteristics of a storm in all map scales:

- tornadic storm:
 - storm cell with strong winds (super cell), from which a tornado can develop. Tornadoes are also known as twisters.
- cyclone:
 - storm cells from which a tornadic storm can develop
- hailstorm
- the likelihood of a hailstorm

- **Storm watch areas**

Shows areas for which storm advisories have been issued (red areas). These are shown in map scales 50 mi (50 km), 200 mi (200 km) and 500 mi (500 km).

- **Atmospheric Pressure**

Shows the position of high and low-pressure areas (H, L), weather fronts and isobars. It is shown in map scales 200 mi (200 km) and 500 mi (500 km).


- **Tropical Storm Tracking**

Shows the direction and speed of propagation (track) of a tropical storm in all map scales with information on times and intensity.

- **Winds**

Shows the wind direction and wind speed in map scale of 5 mi (5 km).

Sample displays of weather data in the map

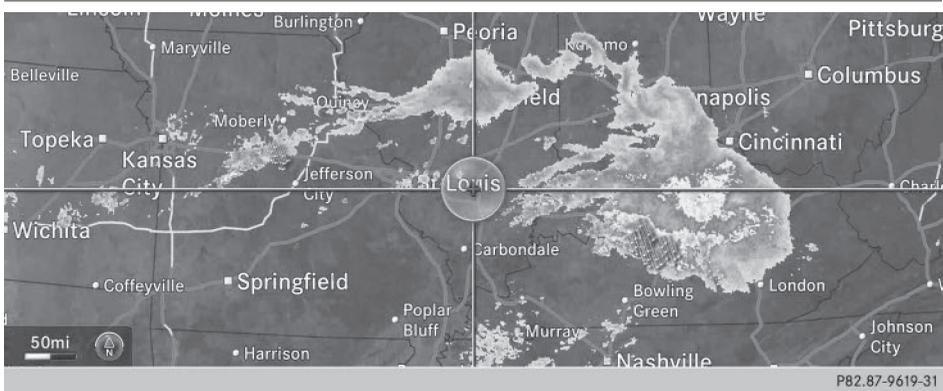


Displaying the rain radar:

- ▶ Activate the **Radar Map** display level (▷ page 196).
The rain radar image is then displayed if weather data is available.
- ❗ You can call up the legend for the precipitation radar (▷ page 200).
The transparency of the radar map display level can be adjusted in 5 stages.

Displaying storm characteristics:

- ▶ Activate the **Storm Characteristics** display level (▷ page 196).
If weather data is available, the weather map will then display the storm characteristics.
You can call up the legend for storms (▷ page 200).
The following information on a storm cell is displayed (if available):
 - characteristics of the storm cell
 - date and time of observation (time stamp)
 - directional movement speed and path

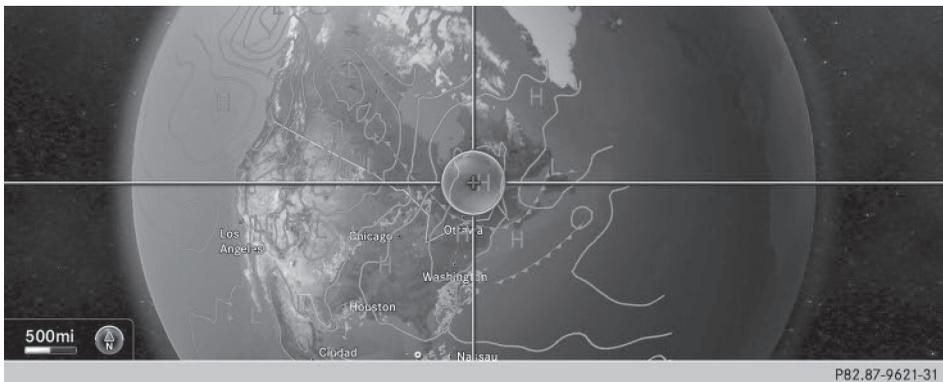


Displaying weather fronts:

- ▶ Activate the **Atmospheric Pressure** display level (▷ page 196).
If weather data is available, the weather map will then display the weather fronts.
The example shows the position of high and low-pressure areas (H, L), weather fronts and isobars.
Isobars are lines that show where the air pressure is the same.

Legend: weather fronts

Weather front	Explanation
Cold front (blue line with blue triangles)	If a cold front moves in, the weather remains changeable and there are often rain showers and thunderstorms. The air temperature decreases.
Warm front (red line with red semi-circles)	A warm front may cause more prolonged steady rain, more cloud cover and a slow rise in temperature.
Stationary front (red and blue line with red semi-circles and blue triangles)	The weather front moves minimally. The weather remains changeable in this area.
Occlusion (purple line with purple semi-circles and triangles)	An occlusion arises when the faster cold front catches up and joins the warm front ahead of it. The weather remains changeable and rainy within an occlusion.

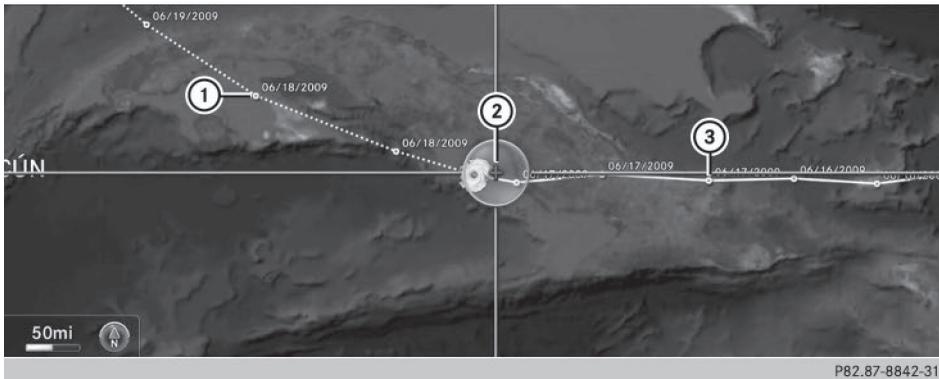

- ① Position on the forecast path
- ② Current position of the cyclone
- ③ Position on the previous path

Displaying storm tracking information:

- Activate the **Tropical Storm Tracking** display level (▷ page 196).
If weather data is available, the weather map will then display storm tracking information. A dotted line shows the previous path and the forecast path of a tropical low-pressure area (cyclone).



You can have more information about cyclones in the storm areas displayed (▷ page 201). The following information is shown (if available):

- name of the tropical storm and category
- time stamp
- directional movement speed and path
- maximum wind speed


Propagation speed: the speed at which the storm cell of a tropical cyclone is advancing. A tropical storm is separated into different categories according to the location at which it develops.

Region of origin	category
Atlantic, North and South Pacific Oceans	Name of tropical low-pressure system (Tropical Low Press. Sys.)
Atlantic, North and South Pacific Oceans	Name of tropical storm (Tropical Storm)
Atlantic, North and South Pacific Oceans	Name of tropical storm (Hurricane Category 3) Displays hurricane categories 1 through 5
Northwestern Pacific Ocean	Name of tropical storm (Tropical Low Press. Sys.)
Northwestern Pacific Ocean	Name of tropical storm (Tropical Cyclone)
Northwestern Pacific Ocean	Name of tropical storm (Typhoon)
Northwestern Pacific Ocean	Name of tropical storm (Super-Typhoon)

You can also see the time stamp for the weather data on map scales of 50 miles and smaller. The weather map shows wind directions and wind speeds.



Legend (precipitation radar and storms)

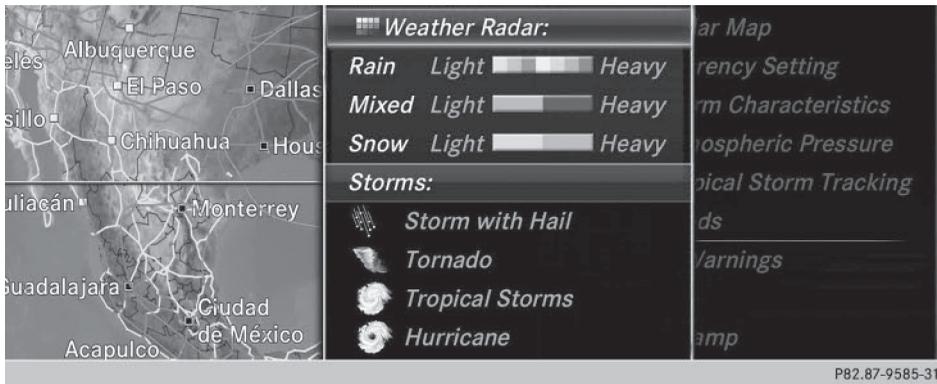

- ▶ Display the menu on the weather map (▷ page 195).
- ▶ To select **View**: turn and press the controller.
- ▶ Select **Legend**.
- ❗ The symbol for a tornadic storm is also valid for a cyclone (mesocyclone).

Precipitation type	Color scale
Rain	11 shades from light (light green) to heavy (red)
Mixed	Light (light violet) to heavy (violet)
Snow	Light (light turquoise) to heavy (turquoise)

Time stamp

The time stamp shows when the weather data was created by the weather station.


A time stamp corresponds to the time at the vehicle's current position. The changeover from summer time to standard time is performed automatically.

- ▶ Display the menu on the weather map (▷ page 195).
- ▶ To select **View**: turn and press the controller.
- ▶ Select **Time Stamp**.

Changing to the information chart

- ▶ Display the menu on the weather map (▷ page 195).
- ▶ To select **Weather Table**: turn and press the controller.

Storm watch areas

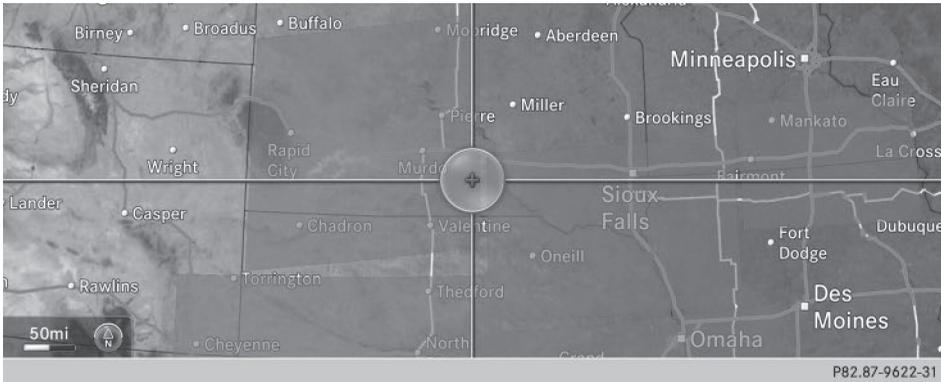

Storm watch areas for which there are storm advisories are displayed as red areas on the weather map.

Activating/deactivating the display of areas in red:

- ▶ To call up the menu from the weather map display: press the controller.
- ▶ To select **View**: turn and press the controller. The list of display levels appears.
- ▶ Select **Storm Watch**.
- ▶ Select **Show Symbols for Storm Areas On Map**. Depending on the previous setting, activate or deactivate the display of areas in red.


Activating/deactivating the automatic display of warning popups:

- ▶ Select **Display Storm Watch Automatically**. Depending on the previous setting, activate or deactivate the automatic display of warning popups.

Setting the radius for the popups:

- ▶ Select **5 Miles (5 km)**, **50 Miles (50 km)** or **200 Miles (200 km)**.

Storm overview

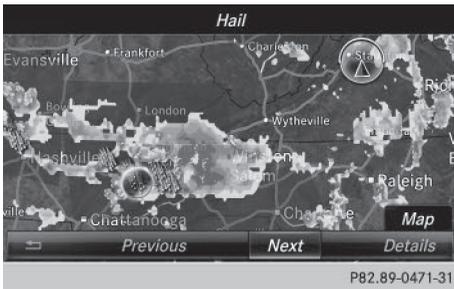

Displaying the Storm Guide:

- ▶ Display the menu on the weather map (▷ page 195).
- ▶ To select **Guide**: turn and press the controller. A menu appears. The current storm is highlighted. There is information about the storm in the status bar.
- ▶ To select **Next**: turn and press the controller. The next storm is marked.
- ▶ Select **Previous**. The previous storm is highlighted.

Showing storm details:

- ▶ Select **Details**. You see detailed information about the selected storm.

