

Digital - in the vehicle

Familiarize yourself with the contents of the Operator's Manual directly via the vehicle's multimedia system (menu item "Vehicle"). Start with the quick guide, dis-cover your vehicle's highlights or broaden your knowledge with useful tips.



Vehicle document wallet

Here you can find comprehensive information about operating your vehicle and about services and guarantees in printed form.



Order no. P205 2613 13 Part no. 205 584 10 30 Edition A-2023





C-Class Coupe Operator's Manual

Mercedes-Benz



Front passenger airbag warning





Airbag warning sticker for USA and Canada

WARNING Risk of injury or death if the codriver airbag is enabled

If the co-driver airbag is enabled, a child on the co-driver seat may be struck by the codriver airbag during an accident.

NEVER use a rearward-facing child restraint system on a seat with an ENABLED FRONT AIRBAG; DEATH or SERIOUS INJURY to the CHILD can occur.

Observe the chapter "Children in the vehicle".

Publication details

Internet

Further information about Mercedes-Benz vehicles and about Mercedes-Benz AG can be found on the following websites:

https://www.mbusa.com (USA only)

https://www.mercedes-benz.ca (Canada only)

Documentation team

[©]Mercedes-Benz AG: Not to be reprinted, translated or otherwise reproduced, in whole or in part, without written permission from Mercedes-Benz AG.

Vehicle manufacturer

Mercedes-Benz AG

Mercedesstraße 120

70372 Stuttgart

Germany

As at 16.08.21

Welcome to the world of Mercedes-Benz

Before you first drive off, read this operator's manual carefully and familiarize yourself with your vehicle. For your own safety and a longer operating lifespan of the vehicle, follow the instructions and warning notices in this operator's manual. Disregarding them may result in damage to the vehicle or personal injury.

Damage to the vehicle resulting from the disregard of the instructions is not covered by the Mercedes-Benz Limited Warranty.

The equipment and product description of your vehicle may vary and depends on the following factors:

- Model
- Order
- National version
- Availability

Your vehicle may therefore differ, in individual cases, from that described and shown in the illustrations.

Mercedes-Benz reserves the right to introduce changes in the following areas:

- Design
- Equipment
- · Technical features

The following documents are integral parts of the vehicle:

- Digital operator's manual
- · Printed operator's manual
- · Service booklet
- · Equipment-dependent supplements
- Supplementary documents

Keep these documents in the vehicle at all times. Ensure that all documents are in the vehicle or passed on in the event of sale or rental.

Mercedes-Benz USA, LLC

Mercedes-Benz Canada, Inc.

A Daimler Company

2055841030



2 Contents

Symbols 5	Diagnostics connection	26 27 28	Side windows	79
At a glance Cockpit 6 Indicator and warning lamps (standard) 10 Indicator and warning lamps (widescreen cockpit) 12 Overhead control panel 14 Door operating unit and seat adjustment 16 Emergencies and breakdowns 18	Notes for persons with electronic medical aids	30 30 30	Seats and stowing	86 86 87 95 97
Digital Operator's Manual		36 38	Wireless charging of the mobile phone	108
General notes21Environmental protection21Mercedes-Benz GenuineParts21Operator's manual22Mercedes me app23	Safely transporting children in the vehicle Notes on pets in the vehicle	51	Light and visibility	
Mercedes me app	Opening and closing	63 67	system	118 120

3

Climate control	124	Voice Control System	211 211	Breakdown assistance Emergency Flat tire Battery (vehicle)	33 33
Driving and parking	128	Essential voice commands		Tow starting or towing away Electrical fuses	
DYNAMIC SELECT switch	144 145 147 155	Multimedia system Overview and operation System settings Fit & Healthy Navigation Telephone Online and Internet functions Media Radio	225 225 234 245 246 271 295 298 311	Wheels and tires Notes on noise or unusual handling characteristics Notes on regularly inspecting wheels and tires Notes on snow chains Tire pressure Loading the vehicle	35 35
Instrument display and on-board computer Notes on the instrument display and on-board computer Overview of instrument display Overview of buttons on the steering wheel Operating the on-board computer Overview of displays on the instrument display Head-up Display		Maintenance and care ASSYST PLUS service interval display	318 321	Tire labeling Definition of terms for tires and loading Changing a wheel Emergency spare wheel	36 37 37
		Engine compartment	322	Technical data	38 38

4 Contents

Index	466
Display messages and warning/indicator lamps	400 400 450
Vehicle identification plate, VIN and engine number overview	390 392 398

In this Operator's Manual, you will find the following symbols:

WARNING Danger due to not observing the warning notices

Warning notices draw your attention to hazards that may endanger your health or life, or the health or life of others.

Observe the warning notices.

ENVIRONMENTAL NOTE Environmental damage due to failure to observe environmental notes

Environmental notes include information on environmentally responsible behavior or environmentally responsible disposal.

Observe environmental notes.

NOTE Damage to property due to failure to observe notes on material damage

Notes on material damage inform you of risks which may lead to your vehicle being damaged.

Observe notes on material damage.

(i) These symbols indicate useful instructions or further information that could be helpful to you.

Instruction

(→ page) Further information on a topic

Display

Display field in the Instrument Display/media display




Highest menu level, which is to be selected in the multimedia system



Relevant submenus, which are to be selected in the multimedia system

Indicates a cause

6 At a glance - Cockpit

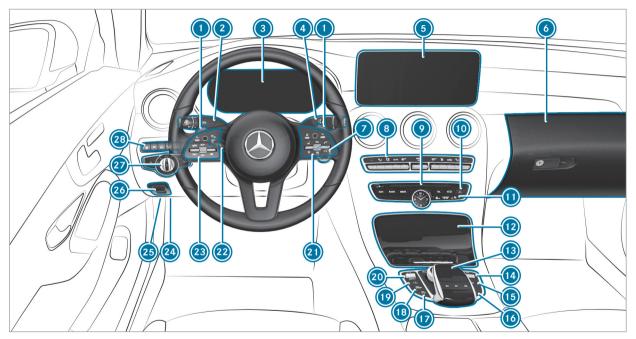


Left-hand-drive vehicles

Steering wheel paddle shifters	\rightarrow	143	© ECO start/stop function	\rightarrow	137
2 Combination switch	\rightarrow	113	Active Parking Assist	\rightarrow	199
Instrument display	\rightarrow	206	Set vehicle level	\rightarrow	188
DIRECT SELECT lever	\rightarrow	140	DYNAMIC SELECT switch	\rightarrow	139
Media display	\rightarrow	225	Control panel for the multimedia system	\rightarrow	207
Glove box	\rightarrow	102	Adjusts the steering wheel electrically	\rightarrow	96
Start/stop button	\rightarrow	129	Switch steering wheel heater on/off	\rightarrow	96
Climate control systems	\rightarrow	124	© Control panel:		
Call up main multimedia system functions	\rightarrow	229	On-board computer	\rightarrow	207
Hazard warning light system	\rightarrow	114	Cruise control	\rightarrow	163
PASSENGER air bag indicator lamps	\rightarrow	47	Active Distance Assist DISTRONIC	\rightarrow	167
Stowage space	\rightarrow	102	② Diagnostics connection	\rightarrow	26
Touchpad	\rightarrow	226	Open hood	\rightarrow	322
Controller for volume and switching sound	\rightarrow	225	Electric parking brake	\rightarrow	151
on/off			Light switch	\rightarrow	112
Switch multimedia system on/off	\rightarrow	225	Control panel for:		
Extend/retract seat belt extender	\rightarrow	41	Active Steering Assist	\rightarrow	172

8 At a glance - Cockpit

Active Lane Keeping Assist	\rightarrow	186
Parking Assist PARKTRONIC	\rightarrow	197
Head-up display	\rightarrow	210




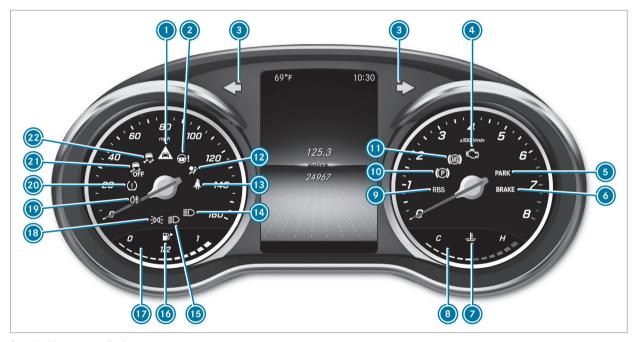

Standard instrument display

A + a ~ la ~ a a	Indiantar ar		100000	(atamalard)	
	moneanor ar	ICI WAITIIIIO	iamns i	i Stannarni	
At a glance -	maioator ar	ia waiiiii	idilipo	(Stariaara)	

Distance warning	\rightarrow	461	© Electric parking brake (yellow)	\rightarrow
❷ Power steering	\rightarrow	453	(I) ABS	\rightarrow
3 🗘 🗘 Turn signal lights	\rightarrow	113	Restraint system	\rightarrow
Check Engine	\rightarrow	454	Seat belt	\rightarrow
Electric parking brake (red)	\rightarrow	458	High beam	\rightarrow
PARK USA only			⑤ Low beam	\rightarrow
(P) Canada only			® Reserve fuel with fuel filler flap location	\rightarrow
Brakes (red)	\rightarrow	458	indicator	
BRAKE USA only			Fuel level	\rightarrow
(D) Canada only			⊕ Standing lights	\rightarrow
Coolant temperature	\rightarrow	454		\rightarrow
Coolant temperature display	\rightarrow	206	Tire pressure monitoring system	\rightarrow
Res Recuperative Brake System, USA only	\rightarrow	458	② □ ESP® OFF	\rightarrow
(D) Brakes (yellow), Canada only	\rightarrow	458	② ESP®	\rightarrow

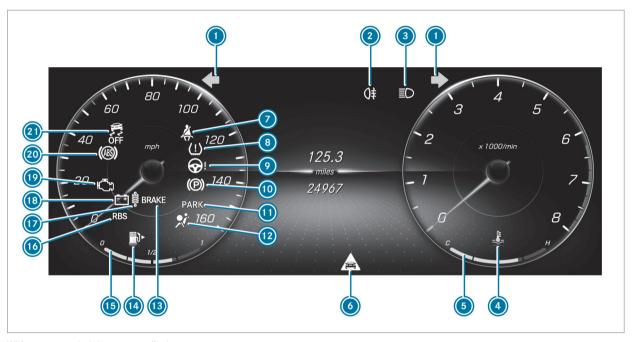


Widescreen cockpit instrument display

	At a glance - Indicator	and warning	lamps (widescreen cockpi	t) 13
--	-------------------------	-------------	--------------------------	--------------

🗘 🗘 Turn signal lights	\rightarrow	113	Restraint :	system →	452
0\$ Rear fog light	\rightarrow	113	Brakes (red)	→	458
High beam	\rightarrow	113	BRAKE USA only		
Low beam	\rightarrow	112	(D) Canada o	nly	
₹ Standing lights	\rightarrow	112		uel with fuel filler flap location $ ightharpoonup$	454
Loolant temperature	\rightarrow	454	indicator		
Coolant temperature display	\rightarrow	206	15 Fuel level	→	206
Distance warning	\rightarrow	461	RBS Recuperat	tive Brake System, USA only	458
Seat belt	\rightarrow	452	(1) Brakes (ye	ellow), Canada only	458
) (!) Tire pressure monitoring system	\rightarrow	464	🕡 📳 Suspensio	on -	461
⊘ : Power steering	\rightarrow	453	18 Electrical	malfunction	454
© Electric parking brake (yellow)	\rightarrow	458	🔟 🛅 Check Eng	gine →	454
Electric parking brake (red)	\rightarrow	458	ABS	-	462
1 5 ()		450	② ♣ ESP® OFF	: -	462
PARK USA only © Canada only			₽ ESP®	→	462

14 At a glance - Overhead control panel

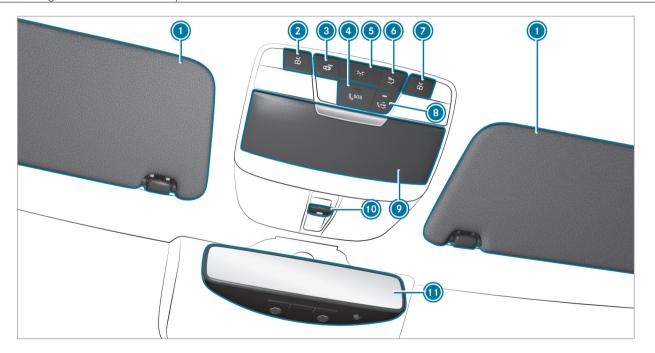


Δt a	a c	lance	_	Overhead	control	nanel
UL C	ع د	gianice		Overneau	COLLLO	parier

Sun visors		
② [新] Switches the left-hand reading lamp on/off	\rightarrow	117
Switches automatic interior lighting control on/off	\rightarrow	117
Sos Sos button	\rightarrow	288
Switches the front interior lighting on/off	\rightarrow	117
Switches the rear interior lighting on/off	\rightarrow	117

② [盃] Switches the right-hand reading lamp on/off	\rightarrow	117
me button	\rightarrow	288
Eyeglasses compartment		
Opens/closes the panorama roof with power tilt/sliding panel	\rightarrow	79
Opens/closes the roller sunblind	\rightarrow	79
Inside rearview mirror	\rightarrow	121


16 At a glance – Door operating unit and seat adjustment

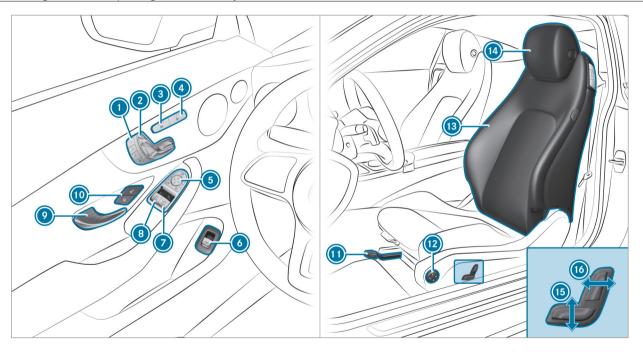

Λ +	1	D			1		4.41.00	
Aι	a giance	– DOOI	operating	unit	anu	seat	adiustment	

Operating the memory function	\rightarrow	99	Opens the door	\rightarrow	67
Adjusts the seats electrically	\rightarrow	89	Locks/unlocks the vehicle	\rightarrow	67
Switches the seat heating on/off	\rightarrow	94	Adjusts the seat fore-and-aft position	\rightarrow	87
Switches the seat ventilation on/off	\rightarrow	94	Adjusts the 4-way lumbar support	\rightarrow	90
Operating the outside mirrors	\rightarrow	120	Seat adjustment using the multimedia system	\rightarrow	92
Opens/closes the trunk lid	\rightarrow	70	Adjusts the head restraints	\rightarrow	89
Opens/closes the right side window	\rightarrow	75	6 Adjusts the seat height	\rightarrow	87
Opens/closes the left side window	\rightarrow	75	Adjusts the seat backrest inclination	\rightarrow	87
Opens/closes the left side window	\rightarrow	75	6 Adjusts the seat backrest inclination	\rightarrow	8

18 At a glance – Emergencies and breakdowns

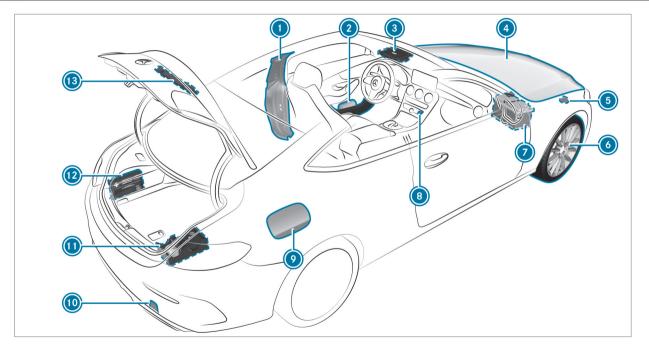

QR code for accessing the rescue card	\rightarrow	30
Safety vests	\rightarrow	336
me button and SOS button	\rightarrow	288
To check and refill operating fluids	\rightarrow	392
To tow-start and tow away	\rightarrow	349
Flat tire	\rightarrow	337
Starting assistance	\rightarrow	347
Hazard warning light system	\rightarrow	114

Fuel filler flap with:		
information label on fuel type	\rightarrow	145
Information label on tire pressure	\rightarrow	360
QR code for accessing the rescue card	\rightarrow	30
To tow-start and tow away	\rightarrow	349
1 TIREFIT kit	\rightarrow	339
Pirst-aid kit (soft sided)	\rightarrow	337
Warning triangle	\rightarrow	336

Calling up the Digital Operator's Manual

Multimedia system:

- → Vehicle → (i) Operator's Manual
- Select a menu item.

In addition, you can also call up the Operator's Manual within a main function (e.g. via Media Info).

The Digital Operator's Manual describes the function and operation of the vehicle and the multimedia system.

For safety reasons, the Digital Operator's Manual is deactivated while driving.



The Digital Operator's Manual contains the following menu items:

- Search: allows you to search for specific keywords.
- · Quick start: provides you with important information so that you can start using your vehicle immediately.
- Tips: provides tips on how to use your vehicle in certain situations.
- Messages: provides you with further information about the messages in the instrument cluster.
- Bookmarks: provides you with a list of all the bookmarks you have stored yourself.



- Picture
- 2 Menu
- Navigation window

Some sections of the Digital Operator's Manual. such as warnings, can be made visible by highlighting and pressing them.

Environmental protection

ENVIRONMENTAL NOTE Environmental damage due to operating conditions and personal driving style

The pollutant emission of the vehicle is directly related to the way you operate the vehicle.

Operate your vehicle in an environmentally responsible manner to help protect the environment. Please observe the following recommendations on operating conditions and personal driving style.

Operating conditions:

- Make sure that the tire pressure is correct.
- Do not carry any unnecessary weight (e.g. roof luggage racks once you no longer need them).
- Adhere to the service intervals. A regularly serviced vehicle will contribute to environmental protection.

Always have maintenance work carried out at a qualified specialist workshop.

Personal driving style:

- Do not depress the accelerator pedal when starting the engine.
- Do not warm up the vehicle while stationary.
- Drive carefully and maintain a suitable distance from the vehicle in front.
- Avoid frequent, sudden acceleration and braking.
- Change gear in good time and use each gear only up to $\frac{2}{3}$ of its maximum engine speed.
- Switch off the vehicle in stationary traffic, e.g. by using the ECO start/stop function.
- Drive in a fuel-efficient manner. Observe the ECO display for an economical driving style.

Environmental issues and recommendations

It is recommended that you re-use or recycle materials instead of just disposing of them.

The relevant environmental guidelines and regulations serve to protect the environment and must be strictly observed.

Mercedes-Benz GenuineParts



ENVIRONMENTAL NOTE Environmental damage due to not using recycled reconditioned components

Mercedes-Benz AG offers recycled reconditioned components and parts with the same quality as new parts. The same entitlement from the Limited Warranty is valid as for new parts.

Use recycled reconditioned components and parts from Mercedes-Benz AG.

22 General notes

NOTE Impairment of the operating efficiency of the restraint systems from installing accessory parts or from repairs or welding

Air bags and Emergency Tensioning Devices, as well as control units and sensors for the restraint systems, may be installed in the following areas of your vehicle:

- doors
- · door pillars
- sill
- seats
- cockpit
- instrument display
- · center console
- lateral roof frame
- Do not install accessory parts such as audio systems in these areas.
- Do not carry out repairs or welding.
- Have accessories retrofitted at a qualified specialist workshop.

You could jeopardize the operating safety of your vehicle if you use parts, tires and wheels as well as accessories relevant to safety which have not been approved by Mercedes-Benz. Safety-relevant systems (e.g. the brake system) may malfunction. Only use Mercedes-Benz GenuineParts or parts of equal quality. Only use tires, wheels and accessory parts that have been specifically approved for your vehicle model.

Mercedes-Benz GenuineParts are subject to strict quality inspections. Each part has been specially developed, manufactured or selected for Mercedes-Benz vehicles and adapted to them. Therefore, only Mercedes-Benz GenuineParts should be used.

More than 300,000 different Mercedes-Benz GenuineParts are available for Mercedes-Benz models.

All authorized Mercedes-Benz Service Centers maintain a supply of Mercedes-Benz GenuineParts for necessary service and repair work. In addition, strategically located parts delivery centers provide for quick and reliable parts service.

Always specify the vehicle identification number (VIN) (→ page 390) when ordering Mercedes-Benz GenuineParts.

Operator's manual

This Operator's Manual and the Digital Operator's Manual in the vehicle describe the following models and the standard and special equipment for your vehicle:

- The models and the standard and special equipment available at the time of this Operator's Manual going to press.
- The models and the standard and special equipment only available in certain countries.
- The models and the standard and special equipment, which will only be available at a later date.

Note that your vehicle may not be installed with all features described. This is also the case for systems relevant to safety. Therefore, the equipment on your vehicle may differ from that in the descriptions and illustrations.

The original purchase agreement for your vehicle contains a list of the equipment in your vehicle at the time of delivery.

Should you have any questions concerning equipment and operation, please consult an authorized Mercedes-Benz Center.

The Operator's Manual, Operating Instructions, further supplementary documents and Service Booklet are important documents and should be kept in the vehicle.

Mercedes me app

Notes about the on-demand feature

You can also activate various functions (ondemand feature) subsequently via Mercedes me after purchasing your vehicle.

Information is available at any authorized Mercedes-Benz Service Center.

Activating on-demand feature using Mercedes me

Requirements

• The vehicle has a wireless connection.

The vehicle is linked to the Mercedes me user account.

Ordering and activating on-demand feature

- Add the desired on-demand feature for the vehicle to the shopping basket in the Mercedes me Store.
- Complete the order. The on-demand feature is activated when operating the vehicle.

Speeding up activation

- Switch the vehicle off and lock it.
- Unlock the vehicle after about two minutes and switch on the vehicle.
 The on-demand feature has been activated.
 For some features, a notification also appears in the vehicle's multimedia system.

If the activation was not successful, repeat the process.

Service and vehicle operation

Vehicle operation outside the USA or Canada

When you are abroad with your vehicle, observe the following points:

- service points or replacement parts may not be available immediately.
- unleaded fuel may not be available for vehicles with a catalytic converter. Leaded fuel may cause damage to the catalytic converter.
- the fuel may have an extremely low octane number. Unsuitable fuel can cause engine damage.

Some Mercedes-Benz models are available in Europe through our European Delivery Program. For more information, please consult an authorized Mercedes-Benz Service Center, or write to one of the following addresses:

in the USA:

Mercedes-Benz USA, LLC European Delivery Department One Mercedes-Benz Drive Sandy Springs, GA 30328

24 General notes

in Canada:

Mercedes-Benz Canada, Inc. European Delivery Department 98 Vanderhoof Avenue Toronto, Ontario M4G 4C9

Maintenance

Your customer advisor confirms the service in the service report.

Roadside Assistance

The Mercedes-Benz Roadside Assistance Program offers technical help in the case of a breakdown. Your calls to the toll-free Roadside Assistance Hotline are answered by our agents 24 hours a day, 365 days a year.

1-800-FOR-MERCedes (1-800-367-6372) (USA) 1-800-387-0100 (Canada)

You can find further information in the Mercedes-Benz Roadside Assistance Program brochure (USA) or the "Roadside Assistance" section in the Service and Warranty booklet (Canada). You will find both in the vehicle document wallet.

Change of address or change of ownership

sary.

In the event of a change of address, please send us the "Notification of address change" in the Service and Guarantee booklet or simply call the Mercedes-Benz Customer Assistance Center (USA) on the hotline number 1-800-FOR-MERCedes (1-800-367-6372) or Customer Service (Canada) on 1-800-387-0100. We can then reach you in a timely fashion, if neces-

If you sell your Mercedes, please leave all literature in the vehicle so that it is available to the next owner. If you have purchased a used vehicle, please send us the "Notice of Purchase of Used Car" in the Service and Guarantee booklet or simply call the Mercedes-Benz Customer Assistance Center (USA) at the hotline number 1-800-FOR-MERCedes (1-800-367-6372) or Cus-

1-800-FOR-MERCedes (1-800-367-6372) or Customer Service (Canada) at 1-800-387-0100.

Possible danger due to substances hazardous to health

In compliance with Proposition 65 ("Prop65"), the following detachable label has been added to each vehicle sold in California:



WARNING



Operating, servicing and maintaining a passenger vehicle, pickup truck, van or off-road motor vehicle can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle in a well-ventilated area and wear gloves or wash your hands frequently when servicing your vehicle. For more information go to www.P65Warnings.ca.gov/passenger-vehicle

Operating safety



WARNING Risk of accident due to malfunctions or system failures

If you do not have the prescribed service/ maintenance work or any required repairs carried out, this could result in malfunctions or system failures.

Always have the prescribed service and maintenance work as well any required repairs carried out at a qualified specialist workshop.

▲ WARNING Risk of accident or injury due to incorrect modifications on electronic component parts

Modification of electronic components, their software or wiring could impair their function and/or the function of other networked component parts or safety-relevant systems.

This can endanger the operating safety of the vehicle.

- Never tamper with the wiring and electronic component parts or their software.
- You should have all work on electrical and electronic components carried out at a qualified specialist workshop.

Observe the "On-board electronics" section in "Technical data".

A

WARNING Risk of fire caused by flammable material on hot exhaust system components

Flammable material such as leaves, grass or twigs may ignite if they come into contact with hot parts of the exhaust system.

- When driving on an unpaved road or offroad, check the vehicle underside regularly.
- In particular, remove trapped plant parts or other flammable material.
- If there is damage, consult a qualified specialist workshop immediately.

NOTE Damage to the vehicle due to driving too fast and due to impacts to the vehicle underbody or suspension components

In the following situations, in particular, there is a risk of damage to the vehicle:

- The vehicle becomes grounded, e.g. on a high curb or an unpaved road
- The vehicle is driven too fast over an obstacle, e.g. a curb, speed bump or pothole
- A heavy object strikes the underbody or suspension components

In situations such as these, damage to the body, underbody, suspension components, wheels or tires may not be visible. Components damaged in this way can unexpectedly fail or, in the case of an accident, may no longer absorb the resulting force as intended.

If the underbody paneling is damaged, flammable materials such as leaves, grass or twigs can collect between the underbody and the underbody paneling. These materials may ignite if they come into contact with hot parts of the exhaust system.

Have the vehicle checked and repaired immediately at a qualified specialist workshop.

or

If driving safety is impaired while continuing your journey, pull over and stop the vehicle immediately, while paying attention to road and traffic conditions, and contact a qualified specialist workshop.

Declaration of conformity for wireless vehicle components



USA: "Radio based devices of this vehicle comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) These devi-

ces may not cause harmful interference, and 2) These devices must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment."

Canada: "This vehicle contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1) These devices may not cause interference. (2) These devices must accept any interference, including interference that may cause undesired operation of the devices." "Les émetteurs/récepteurs dans cette véhicule sont conforme aux CNR d'Innovation. Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: 1) Ces appareils ne doivent pas produire de brouillage; 2) Ces appareils doivent accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

Diagnostics connection

The diagnostics connection is a technical interface in the vehicle. It is used, for example, during repair and maintenance work or for reading out vehicle data in a specialist workshop. Diagnostic devices should therefore only be connected in a qualified specialist workshop.

A

WARNING Risk of accident due to connecting devices to the diagnostics connection

If you connect devices to the diagnostics connection of the vehicle, the function of vehicle systems and operating safety may be impaired.

For safety reasons, we recommend that you use and connect only products approved by an authorized Mercedes-Benz Service Center. **WARNING** Risk of accident due to objects in the driver's footwell

Objects in the driver's footwell may impede pedal travel or block a depressed pedal.

This jeopardizes the operating and road safety of the vehicle.

- Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.
- Always install the floor mats securely and as prescribed in order to ensure that there is always sufficient room for the pedals.
- Do not use loose floor mats and do not place floor mats on top of one another.


NOTE Battery discharging from using devices connected to the diagnostics connection

Using devices at the diagnostics connection drains the battery.

Check the charge level of the battery.

If the charge level is low, charge the battery, e.g. by driving a considerable distance.

Please also note the information about the 12 V battery and short-distance trips in the "Driving and Parking" chapter (\rightarrow page 133).

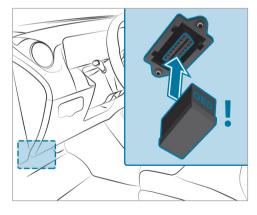

Connecting and using another device with the diagnostics connection can have the following effects:

- · Malfunctions in the vehicle system
- Permanent damage to vehicle components

Please refer to the warranty terms and conditions for this matter.

Moreover, connecting equipment to the diagnostics connection can lead to emissions monitoring information being reset, for example. This may lead to the vehicle failing to meet the requirements of the next emissions inspection during the main inspection.

Qualified specialist workshop

An authorized Mercedes-Benz Service Center is a qualified specialist workshop. It has the necessary special skills, tools and qualifications to correctly carry out the work required on your vehicle. This particularly applies to safety-relevant works.

28 General notes

For the following, always have your vehicle checked at an authorized Mercedes-Benz Service Center:

- · Safety-relevant works
- · Service and maintenance work
- · Repair work
- Modifications as well as installations and conversions
- · Work on electronic components

Mercedes-Benz recommends a Mercedes-Benz Service Center.

Correct use of the vehicle

If you remove any warning stickers, you or others could fail to recognize certain dangers. Leave warning stickers in position.

Observe the following information in particular when driving your vehicle:

- the safety notes in this Operator's Manual, vehicle-specific supplements and further supplementary documents
- · technical data for the vehicle

- traffic rules and -regulations
- laws and safety standards pertaining to motor vehicles

Notes for persons with electronic medical aids

Mercedes-Benz AG cannot, despite carefully developing vehicle systems, completely rule out the interaction of vehicle systems with electronic medical aids such as cardiac pacemakers.

In addition, there are components installed in the vehicle that, regardless of the operating status of the vehicle, can generate magnetic fields on a par with permanent magnets. These fields can be found, for example, in the area around the multimedia and sound system or also in the area of the seats, depending on the vehicle equipment.

For this reason, the following can occur in isolated cases, depending on the aids used:

- Medical aids malfunctioning
- · Adverse health effects

Observe the notes and warnings of the manufacturer of the medical aids; if in doubt, contact the

device manufacturer and/or your doctor. If there is continuing uncertainty concerning the possibility of medical aids malfunctioning, Mercedes-Benz AG recommends using only few electrical vehicle systems and/or maintaining a distance from the components.

Only have repairs and maintenance work in the area of the following components carried out at a qualified specialist workshop:

- · Vehicle components carrying live voltage
- Transmission antenna
- · Multimedia system and sound system

If you have any queries or suggestions, consult a qualified specialist workshop.

Problems with your vehicle

If you should experience a problem with your vehicle, particularly one that you believe may affect its safe operation, we urge you to contact an authorized Mercedes-Benz Center immediately to have the problem diagnosed and rectified. If the problem is not resolved to your satisfaction, please discuss the problem again with an authorized

Mercedes-Benz Center or, if necessary, contact us at one of the following addresses:

In the USA:

Mercedes-Benz USA, LLC Customer Assistance Center One Mercedes-Benz Drive Sandy Springs, GA 30328

In Canada:

Mercedes-Benz Canada, Inc. Customer Relations Department 98 Vanderhoof Avenue Toronto, Ontario M4G 4C9

Reporting safety defects

USA only:

The following text is published as required of manufacturers under Title 49, Code of U.S. Federal Regulations, Part 575 pursuant to the "National Traffic and Motor Vehicle Safety Act of 1966".

If you believe that your vehicle has a defect which could cause a crash or could cause injury or

death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Mercedes-Benz USA, LLC.

If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Mercedes-Benz USA, LLC.

To contact NHTSA, you may call the Vehicle Safety Hotline toll-free at 1-888-327-4236 (TTY: 1-800-424-9153); go to the https://www.safercar.gov/; or write to: Administrator, NHTSA, 400 Seventh Street, SW., Washington, DC 20590,: USA.

You can also obtain other information about motor vehicle safety from: https://www.safercar.gov

Canada only:

The following text is published as required of manufacturers under subsection 18.4 (4) of the Motor Vehicle Safety Regulations.

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform Transport

Canada in addition to notifying Mercedes-Benz Canada Inc.

If Transport Canada received similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, Transport Canada cannot become involved in individual problems between you, your dealer or Mercedes-Benz Canada Inc.

To contact Transport Canada, you may call the Defect Investigations and Recalls Division toll-free in Canada at 1-800-333-0510 or 819-994-3328in the Gatineau-Ottawa area or internationally; you may also go to the following websites for more information:

- English: https://www.tc.gc.ca/recalls
- French: https://www.tc.gc.ca/rappels

Limited Warranty

NOTE Damage to the vehicle arising from violation of these operating instructions.

Damage to the vehicle can arise from violation of these operating instructions.

This damage is not covered either by the Mercedes-Benz implied warranty or by the New- or Used-Vehicle Warranty.

▶ Follow the instructions in these operating instructions on proper operation of your vehicle as well as on possible vehicle damage.

QR code for rescue card

QR codes are attached in the fuel filler flap and on the opposite side on the B-pillar. In the event of an accident, rescue services can use the QR code to quickly find the appropriate rescue card for your vehicle. The current rescue card contains the most important information about your vehicle (e.g. the routing of the electric lines) in compact form.

Further information can be obtained at https://www.mercedes-benz.de/gr-code

Data storage

Data processing in the vehicle

Electronic control units

Electronic control units are installed in your vehicle. Control units process data which, for example, they receive from vehicle sensors, generate themselves or exchange between themselves. Some control units are required for the safe operation of your vehicle, some assist you when driving, such as driver assistance systems, while others enable convenience or infotainment functions.

The following provides you with general information regarding data processing in the vehicle. Additional information regarding exactly which data in your vehicle are collected, saved and transmitted to third parties, and for what purpose, can be found in the information directly related to the functional characteristics in question in their respective operating instructions. This information is also available online and, depending on the vehicle equipment, digitally.

Personal data

Every vehicle is identified by a unique vehicle identification number. Depending on the country, this vehicle identification number can be used by, for example, governmental authorities to determine the identity of the owner. There are other possibilities to use data collected from the vehicle to identify the owner or driver, such as the license plate number.

Therefore, data generated or processed by control units may be attributable to a person or, under certain conditions, become attributable to a person. Depending on which vehicle data are available, it may be possible to make inferences about, for example, your driving behavior, your location, your route or your use patterns.

Legal requirements regarding the disclosure of data

If legally required to do so, manufacturers are, in individual cases, legally obliged to provide governmental entities, upon request and to the extent required, data stored by the manufacturer. For example, this may be the case during the investigation of a criminal offense.

Governmental entities are themselves, in individual cases and within the applicable legal framework, authorized to read out data from the vehicle. In the case of an accident, information that can help with an investigation can, therefore, be taken from the air bag control unit, for example.

Operational data in the vehicle

This is data regarding the operation of the vehicle, which have been processed by control units.

This includes the following data, for example:

- vehicle status information such as the speed, longitudinal acceleration, lateral acceleration, number of wheel revolutions or the fastened seat belts display
- ambient conditions, such as temperature, rain sensor or distance sensor

Generally, the use of these data is temporary; they will not be stored beyond the period of operation and will only be processed within the vehicle itself. Control units often contain data memories for vehicle keys, for example. Their use permits the temporary or permanent documentation of technical information about the vehicle's operat-

ing state, component loads, maintenance requirements and technical events or malfunctions.

Depending on the vehicle equipment, the following data are stored:

- operating status of system components, such as fill levels, tire pressure or battery status
- malfunctions or faults in important system components, such as lights or brakes
- system reactions in special driving situations, such as air bag deployment or the intervention of stability control systems
- information on events leading to vehicle damage

In certain cases, it may be required to store data that would have otherwise been used only temporarily. This may be the case if the vehicle has detected a malfunction, for example.

If you use services, such as repair services and maintenance work, stored operational data as well as the vehicle identification number can be read out and used. They can be read out by service network employees, such as workshops and manufacturers or third parties, such as break-

down services. The same is true in the case of warranty claims and quality assurance measures.

In general, the readout is performed via the legally prescribed port for the diagnostics connection in the vehicle. The operational data that are read out document technical states of the vehicle or of individual components and assist in the diagnosis of malfunctions, compliance with warranty obligations and quality improvement. To that end, these data, in particular information about component loads, technical events, malfunctions and other faults may be transmitted along with the vehicle identification number to the manufacturer. Furthermore, the manufacturer is subject to product liability. For this reason the manufacturer also uses operational data from the vehicle, for example, for recalls. These data can also be used to examine the customer's warranty and guarantee claims.

Malfunction memories in the vehicle can be reset by a service outlet or at your request as part of repair or maintenance work.

Convenience and infotainment functions

You can store convenience settings and individual settings in the vehicle and change or reset them at any time.

Depending on the vehicle equipment, this includes the following settings, for example:

- · seat and steering wheel positions
- · suspension and climate control settings
- · individual settings, such as interior lighting

Depending on the selected equipment, you can import data into vehicle infotainment functions yourself.

Depending on the vehicle equipment, this includes the following data, for example:

- multimedia data, such as music, films or photos for playback in an integrated multimedia system
- address book data for use in connection with an integrated hands-free system or an integrated navigation system
- · entered navigation destinations
- · data about the use of Internet services

These data for convenience and infotainment functions may be saved locally in the vehicle or they may be located on a device which you have connected to the vehicle, such as a smartphone, USB flash drive or MP3 player. If you have entered these data yourself, you can delete them at any time.

This data is transmitted from the vehicle to third parties only at your request. This applies, in particular, when you use online services in accordance with the settings that you have selected.

Smartphone integration (e.g. Android Auto or Apple CarPlay®)

If your vehicle is accordingly equipped, you can connect your smartphone or another mobile end device to the vehicle. You can then control them by means of the control elements integrated in the vehicle. Images and audio from the smartphone can be output via the multimedia system. Certain information is simultaneously transferred to your smartphone. Depending on the type and integration, this includes position data, day/night mode and other general vehicle statuses. For more information please consult the Operator's Manual of the vehicle/infotainment system.

This integration allows the use of selected smartphone apps, such as navigation or music player apps. There is no further interaction between the smartphone and the vehicle; in particular, vehicle data is not directly accessible. The type of additional data processing is determined by the provider of the app being used. Which settings you can make, if any, depends on the specific app and the operating system of your smartphone.

Online services

Wireless network connection

If your vehicle has a wireless network connection, it enables data to be exchanged between your vehicle and additional systems. The wireless network connection is made possible by the vehicle's own transmitter and receiver or by a mobile end device that you have brought into the vehicle, for example, a smartphone. Online functions can be used via the wireless network connection. This includes online services and applications/apps provided to you by the manufacturer or by other providers.

Manufacturer's services

Regarding the manufacturer's online services, the individual functions are described by the manufacturer in a suitable place, for example, in the Operator's Manual or on the manufacturer's website, where the relevant data protection information is also given. Personal data may be used for the provision of online services. Data is exchanged via a secure connection, such as the manufacturer's designated IT systems. Any personal data which is collected, processed and used, other than for the provision of services, is done so exclusively on the basis of legal permission. This is the case, for example, for a legally prescribed emergency call system, a contractual agreement or when consent has been given.

You can have services and functions, some of which are subject to a fee, activated or deactivated. This excludes legally prescribed functions and services, such as an emergency call system.

Third-party services

If you use online services from other providers (third parties), these services are the responsibility of the provider in question and subject to that provider's data protection conditions and terms of

use. As a general rule, the manufacturer has no influence on the content exchanged.

For this reason, when services are provided by third parties, please ask the service provider in question for information about the type, extent and purpose of the collection and use of personal data.

Data protection rights

Depending on your country or the equipment and range of functions of your vehicle as well as the services you use and the services on offer, you are entitled to different data protection rights. Further information on data protection and your data protection rights can either be found on the manufacturer's website or you will receive this information as part of the various services and service offers. There you will also find the contact information for the manufacturer and its data protection officers.

At a workshop, for example, with the support of a specialist and possibly for a fee, you can have data read out which is stored only locally in the vehicle.

Multimedia system / Mercedes me connect

If the vehicle is equipped with the multimedia system or Mercedes me connect, additional data about the vehicle's operation, the use of the vehicle in certain situations and the location of the vehicle may be compiled by the multimedia system or Mercedes me connect.

For additional information, please refer to the chapter "Multimedia system" and/or the Mercedes me connect Terms and Conditions.

Event Data Recorder

USA only:

This vehicle is equipped with an event data recorder (EDR). The main purpose of an EDR is to record, in certain crash or crash-like situations, such as an air bag deployment or hitting a road obstacle, data that will assist in understanding how a vehicle's systems performed. The EDR is designed to record data related to vehicle dynamics and safety systems for a short period of time, typically 30 seconds or less.

34 General notes

The EDR in this vehicle is designed to record such data as:

- How various systems in your vehicle were operating;
- Whether or not the driver and front passenger seat belts were buckled/fastened
- How far (if at all) the driver was depressing the accelerator and/or brake pedal; and.
- · How fast the vehicle was traveling.

This data can help provide a better understanding of the circumstances in which crashes and injuries occur. NOTE: EDR data is recorded by your vehicle only if a non-trivial crash situation occurs; no data is recorded by the EDR under normal driving conditions and no personal data (e.g. name, gender, age and accident location) is recorded. However, other parties, such as law enforcement, could combine EDR data with the type of personally identifying data routinely acquired during a crash investigation.

Access to the vehicle and/or the EDR is needed to read data that is recorded by the EDR, and special equipment is required. In addition to the vehicle manufacturer, other parties that have the spe-

cial equipment, such as law enforcement, can read the information by accessing the vehicle or the EDR.

EDR data may be used in civil and criminal matters as a tool in accident reconstruction, accident claims and vehicle safety. Since the Crash Data Retrieval (CDR) tool that is used to extract data from the EDR is commercially available, Mercedes-Benz USA, LLC ("MBUSA") expressly disclaims any and all liability arising from the extraction of this information by unauthorized Mercedes-Benz personnel.

MBUSA will not share EDR data with others without the consent of the vehicle owner or, if the vehicle is leased, without the consent of the lessee. Exceptions to this representation include responses to subpoenas by law enforcement; by federal, state or local government; in connection with or arising out of litigation involving MBUSA or its subsidiaries and affiliates; or, as required by law.

Warning: the EDR is a component of the Restraint System Module. Tampering with, altering, modifying or removing the EDR component may result in a malfunction of the Restraint System Module and other systems.

State laws or regulations regarding EDRs that conflict with federal regulation are pre-empted. This means that in the event of such conflict, the federal regulation governs. As of December 2016, 17 states have enacted laws relating to EDRs.

Copyright

Free and open source software

Information on licenses for free and open-source software used in your vehicle can be found on the data carrier in your vehicle document wallet and with updates on the following website:

https://www.mercedes-benz.com/opensource

Registered trademarks

- Bluetooth[®] is a registered trademark of Bluetooth SIG, Inc.
- DTS™ is a registered trademark of DTS, Inc.
- Dolby[®] and MLPTM are registered trademarks of DOLBY Laboratories.

- ESP® and PRE-SAFE® are registered trademarks of Daimler AG.
- $\bullet \;\;$ HomeLink $^{\circledR}$ is a registered trademark of Gentex Corporation.
- iPod® and iTunes® are registered trademarks of Apple Inc.
- Burmester® is a registered trademark of Burmester Audiosysteme GmbH.
- Microsoft® and Windows Media® are registered trademarks of Microsoft Corporation.
- SIRIUS $^{\circledR}$ is a registered trademark of Sirius XM Radio Inc.
- HD Radio™ is a registered trademark of iBiquity Digital Corporation.
- Gracenote[®] is a registered trademark of Gracenote, Inc.
- ZAGAT Survey® and related brands are registered trademarks of Zagat Survey, LLC.

Restraint system

Protection provided by the restraint system

The restraint system includes the following components:

- Seat belt system
- Airbags
- · Child restraint system
- Child seat securing systems

The restraint system can help prevent the vehicle occupants from coming into contact with parts of the vehicle interior in the event of an accident. In the event of an accident, the restraint system can also reduce the forces to which the vehicle occupants are subjected.

A seat belt can only provide the best level of protection if it is worn correctly. Depending on the detected accident situation, Emergency Tensioning Devices and/or airbags supplement the protection offered by a correctly worn seat belt. Emergency Tensioning Devices and/or airbags are not deployed in every accident.

In order for the restraint system to provide the intended level of protection, each vehicle occupant must observe the following information:

- · Fasten seat belts correctly.
- Sit in an almost upright seat position with their back against the seat backrest.
- Sit with their feet resting on the floor, if possible.
- Always secure persons under 5 ft (1.50 m) tall in an additional restraint system suitable for Mercedes-Benz vehicles.

However, no system available today can completely eliminate injuries and fatalities in every accident situation. In particular, the seat belt and airbag generally do not protect against objects penetrating the vehicle from the outside. It is also not possible to completely rule out the risk of injury caused by the airbag deploying.

Limitations of the protection provided by the restraint system



WARNING Risk of injury or death due to modifications to the restraint system

Vehicle occupants may no longer be protected as intended if alterations are made to the restraint system.

- Never alter the parts of the restraint system.
- Never tamper with the wiring or any electronic component parts or their software.

If it is necessary to modify the vehicle to accommodate a person with disabilities, contact an authorized Mercedes-Benz Center for details.

USA only: for details, contact our Customer Assistance Center on 1-800-FOR-MERCedes (1-800-367-6372).

Restraint system functionality

When the ignition is switched on, a self-test is performed, during which the prestraint system warning lamp lights up. It goes out no later than a few seconds after the vehicle is started. The components of the restraint system are then functional.

Malfunctioning restraint system

A malfunction has occurred in the restraint system if:

- The prestraint system warning lamp does not light up when the vehicle is switched on
- The prestraint system warning lamp lights up continuously or repeatedly during a journey

WARNING Risk of injury due to malfunctions in the restraint system

Components in the restraint system may be activated unintentionally or not deploy as planned in an accident.

Have the restraint system checked and repaired immediately at a qualified specialist workshop.

Function of the restraint system in an accident

How the restraint system works depends on the severity of the impact detected and the apparent type of accident:

- · Frontal impact
- Rear impact
- Side impact
- Rollover

The activation thresholds for the components of the restraint system are determined based on the evaluation of the sensor values measured at various points in the vehicle. This process is pre-emptive in nature. The triggering/deployment of the components of the restraint system must take place in good time at the start of the collision.

Factors that can be seen and measured only after a collision has occurred cannot play a decisive

role in air bag deployment, nor do they provide an indication of air bag deployment.

The vehicle may be deformed significantly without an air bag being deployed. This is the case if only parts that are relatively easily deformed are affected and the rate of vehicle deceleration is not high. Conversely, an air bag may be deployed even though the vehicle suffers only minor deformation. If very rigid vehicle parts such as longitudinal members are hit, this may result in sufficiently high levels of vehicle deceleration.

Depending on the detected deployment situation, the components of the restraint system can be activated or deployed independently of each other:

- Emergency Tensioning Device: frontal impact, rear impact, side impact, rollover
- Driver's airbag, front passenger airbag: frontal impact
- Knee airbag: frontal impact
- Side airbag: side impact
- Window airbag: side impact, rollover, frontal impact

The front passenger air bag can be deployed in an accident only if the PASSENGER AIR BAG OFF indicator lamp is off. If the front passenger seat is occupied, make sure, both before and during the journey, that the status of the front passenger air bag is correct (\rightarrow page 47).

WARNING Risk of burns from hot air bag components

The air bag parts are hot after an air bag has been deployed.

- Do not touch the air bag parts.
- Have a deployed air bag replaced at a qualified specialist workshop as soon as possible.

Mercedes-Benz recommends that you have the vehicle towed to a qualified specialist workshop after an accident. Take this into account, particularly if a Emergency Tensioning Device is triggered or an air bag deployed.

If the Emergency Tensioning Devices are triggered or an air bag is deployed, you will hear a bang, and a small amount of powder may also be released:

- The bang will not generally affect your hearing.
- In general, the powder released is not hazardous to health but may cause short-term breathing difficulties to persons suffering from asthma or other pulmonary conditions.

Provided it is safe to do so, leave the vehicle immediately or open the window in order to prevent breathing difficulties.

Air bags and pyrotechnic Emergency Tensioning Devices contain perchlorate material, which may require special handling or environmental protection measures. National guidelines regarding waste disposal must be observed. In California, see https://dtsc.ca.gov/. Using the search function, you will find information on perchlorate, for example.

Seat belts

Protection provided by the seat belt

Always fasten your seat belt correctly before starting a journey. A seat belt can provide the best level of protection only if it is worn correctly.

A

WARNING Risk of injury or death due to incorrectly fastened seat belt

If the seat belt is not worn correctly, it cannot perform its intended protective function.

In addition, an incorrectly fastened seat belt can also cause injuries, for example, in the event of an accident or when braking or changing direction suddenly.

Always ensure that all vehicle occupants have their seat belts fastened correctly and are sitting properly.

Always observe the instructions about the correct driver's seat position and adjusting the seat (\to page 86).

In order for the correctly worn seat belt to provide the intended level of protection, each vehicle occupant must observe the following information:

- The seat belt must not be twisted and must fit. tightly and snugly across the body.
- The seat belt must be routed across the center of the shoulder and as low down across. the hips as possible.
- The shoulder section of the seat belt should not touch your neck nor be routed under your arm or behind your back.
- Avoid wearing bulky clothing, e.g. a winter coat.
- Push the lap belt down as far as possible across your hips and pull tight with the shoulder section of the belt. Never route the lap belt across your abdomen.

Pregnant women must also take particular care with this.

- Never route the seat belt across sharp, pointed, abrasive or fragile objects.
- Only one person should use each seat belt at any one time.

· Never secure objects with a seat belt if the seat belt is also being used by one of the vehicle's occupants.

Also ensure that no objects, e.g. a cushion, are ever placed between a person and the seat.

The seat belts on the following seats are equipped with a child seat safety feature:

- Front passenger seat
- Rear seats

Activate or deactivate the child seat safety feature of the seat belt (\rightarrow page 55).

If children are traveling in the vehicle, be sure to observe the instructions and safety notes on "Children in the vehicle" (\rightarrow page 52).

Always observe the instructions for loading the vehicle when securing objects, luggage or loads $(\rightarrow page 99).$

Limitations of the protection provided by the seat belt

WARNING Risk of injury or death due to an incorrect seat position

The seat helt does not offer the intended level of protection if you have not moved the seat backrest to an almost vertical position.

In particular, you could slip beneath the seatbelt and become injured.

- Adjust the seat properly before beginning your journey.
- Always ensure that the seat backrest is in an almost vertical position and that the shoulder belt is routed across the center of your shoulder.

WARNING Risk of injury or death due to an extended seat belt extender while the vehicle is in motion

If the seat belt does not sit correctly on the body, it cannot perform its intended protective function.

 Always ensure that the seat belt extender is retracted while the vehicle is in motion.

If the seat belt extender does not retract automatically, it can be retracted manually. To do so, press the seat belt extender back as far as it will go before starting the vehicle. Pressing the seat belt extender back into place requires force.

▲ WARNING Risk of injury or death when additional restraint systems are not used for persons with a smaller stature

Persons under 5 ft (1.50 m) tall cannot wear the seat belt correctly without a suitable additional restraint system.

 Always secure persons under 5 ft (1.50 m) tall in a suitable restraint system. **WARNING** Risk of injury or death due to damaged or modified seat belts

Seat belts cannot provide protection in the following situations:

- The seat belt is damaged, has been modified, is extremely dirty, bleached or dyed
- The seat belt buckle is damaged or extremely dirty
- Modifications have been made to the Emergency Tensioning Device, seat belt anchorage or seat belt retractor

Seat belts may sustain non-visible damage in an accident, e.g. due to glass splinters.

Modified or damaged seat belts could tear or fail in the event of an accident, for example.

Modified Emergency Tensioning Devices could accidentally trigger or fail to function as intended.

Never modify the seat belt system, for example the seat belt, seat belt buckle, Emergency Tensioning Device, seat belt anchorage and seat belt retractor.

- Make sure that the seat belts are undamaged, not worn and clean.
- Always have the seat belts checked immediately after an accident at a qualified specialist workshop.

Only use seat belts which have been approved for your vehicle by Mercedes-Benz.

A

WARNING Risk of injury or death from deployed pyrotechnic Emergency Tensioning Devices

Pyrotechnic Emergency Tensioning Devices that have been deployed are no longer operational and are unable to perform their intended protective function.

Therefore, have deployed pyrotechnic Emergency Tensioning Devices immediately replaced at a qualified specialist workshop.

Mercedes-Benz recommends that you have the vehicle towed to a qualified specialist workshop after an accident.

NOTE Damage caused by trapping the seat belt

If an unused seat belt is not fully retracted, it may become trapped in the door or in the seat mechanism.

Always ensure that an unused seat belt is fully retracted.

Extending/retracting the seat belt extender

When the door is closed, the seat belt extender extends.

You can also extend the seat-belt extender by using the seat-belt extender button in the center console.

The ________ seat belt extender button may also be located in the switch panel above the light switch in Mercedes-AMG vehicles.

- Switch on the ignition.
- Press the seat belt extender button.
 The seat belt extender extends.

The seat belt extender retracts again in the following cases:


- The seat belt tongue is engaged in the seat belt buckle
- The seat belt tongue is not engaged in the seat belt buckle within 60 seconds

 If you press the ____ seat belt extender button again in this case, the seat belt extender will extend again.
- The respective door is opened
- You fold the seat backrest forwards
- Nobody is sitting in the front passenger seat
 If you press the _____ seat belt extender button again in this case, the seat belt extender
 will no longer extend.

The seat belt extender must always be retracted while the vehicle is in motion.

Fastening seat belts

If the seat belt is pulled quickly or sharply, the seat belt retractor locks. The seat belt strap cannot be pulled out any further.

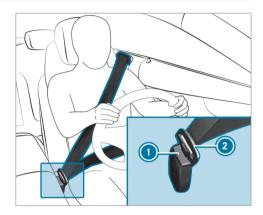

- Always engage seat belt tongue ② of the seat belt into seat belt buckle ① of the corresponding seat.
- A seat belt can only provide the best level of protection if it is worn correctly. Observe the notes on fastening the seat belt (→ page 38).

NOTE Deployment of components of the restraint system when the front passenger seat is unoccupied and a seat belt is buckled

When the front passenger seat is unoccupied and the seat belt tongue of the seat belt is engaged in the seat belt buckle, components of the restraint system may deploy unnecessarily on the front passenger side, e.g. the Emergency Tensioning Device.

- Only buckle the seat belts as intended.
- Observe the notes on storage areas
 (→ page 99).
 Information on installing a child restraint system and on children traveling in the vehicle can be found in the "Children in the vehicle" section (→ page 55).

Seat belt adjustment function

Vehicles with PRE-SAFE®: after a front seat belt has been fastened, the automatic seat belt adjustment may apply a certain amount of tightening

force. Do not hold the seat belt tightly while it is adjusting.

You can activate and deactivate the seat belt adjustment function using the multimedia system (\rightarrow page 42).

Activating/deactivating seat belt adjustment via the multimedia system

Multimedia system:

- → Vehicle **→** 🚅 Vehicle Settings
- ▶ Belt Adjustment
- ► Activate ✓ or deactivate ☐ the function.

Releasing seat belts

Press the release button in the seat belt buckle and guide the seat belt back with the seat belt tongue.

Seat belt warning function for the driver and front passenger

The _______ seat belt warning lamp on the instrument display is a reminder that all vehicle occupants must wear their seat belts correctly.

The seat belt warning lamp will light up for six seconds every time the vehicle is started.

In addition, a warning tone may sound.


When the driver's and front passenger's doors are closed and the driver and front passenger have fastened their seat belts, the seat belt warning will go out.

In the following cases, the seat belt warning will light up during a journey if:

- The vehicle speed exceeds 15 mph (25 km/h) and the driver's or front passenger seat belt is not fastened.
- The driver or front passenger unfastens his or her seat belt while the vehicle is in motion.

Airbags

Overview of airbags

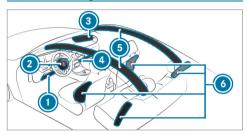

- Driver's knee airbag
- ② Driver's airbag
- Front passenger airbag
- Front passenger knee airbag
- Window curtain airbag
- Side airbag

The installation location of an airbag is identified by the AIRBAG symbol.

When enabled, an airbag can provide additional protection for the respective vehicle occupant.

Potential protection provided by each airbag:

- Knee airbag: thigh, knee and lower leg
- Driver's airbag, front passenger airbag: head and ribcage
- · Window curtain airbag: head
- Side airbag: ribcage, also pelvis for front seat occupants
- I NOTE Mercedes-AMG vehicles
- Observe the notes in the Supplement. You could otherwise fail to recognize dangers.
- **WARNING** Risk of injury or death if the codriver airbag is enabled

If the co-driver airbag is enabled, a child on the co-driver seat may be struck by the codriver airbag during an accident.

NEVER use a rearward-facing child restraint system on a seat with an ENABLED FRONT AIRBAG; DEATH or SERIOUS INJURY to the CHILD can occur.

When installing a child restraint system on the front passenger seat, observe the vehicle-specific information (→ page 60). Also, always observe the notes on rearward-facing or forward-facing child restraint systems on the front passenger seat.

Information on automatic front passenger airbag shutoff

The front passenger airbag can only be deployed in an accident if the PASSENGER AIR BAG OFF indicator lamp is off. If the front passenger seat is occupied, make sure, both before and during the journey, that the status of the front passenger airbag is correct (→ page 47).

NOTE Deployment of components of the restraint system when the front passenger seat is unoccupied

In an accident, the components of the restraint system may deploy unnecessarily on the front passenger side if:

 There are heavy objects on the front passenger seat.

- The seat belt tongue is engaged in the seat belt buckle of the front passenger seat and the front passenger seat is unoccupied.
- Store objects in a suitable place.
- Only one person should use each seat belt at any one time.

Depending on the detected accident situation, the window curtain airbag on the front passenger side may deploy. The airbag is deployed regardless of whether the front passenger seat is occupied.

Protection provided by the airbags

Depending on the accident situation, an airbag may supplement the protection offered by a correctly fastened seat belt.



WARNING Risk of injury or death due to an incorrect seat position

If you deviate from the correct seat position, the airbag cannot perform its intended protective function.

Each vehicle occupant must make sure of the following:

- Fasten seat belts correctly. Pregnant women must take particular care to ensure that the lap belt never lies across the abdomen.
- Adopt the correct seat position and keep as far away as possible from the airbags.
- Observe the following information.
- Always make sure that there are no objects between the airbag and vehicle occupant.

To avoid the risks resulting from the deployment of an airbag, each vehicle occupant must observe the following information in particular:

 Before starting your journey, adjust your seat correctly; the driver's seat and front passenger seat should be moved as far back as possible.

When doing so, always observe the information on the correct driver's seat position (\rightarrow page 86).

- Only hold the steering wheel by the steering wheel rim. This allows the airbag to be fully deployed.
- Always lean against the seat backrest when the vehicle is in motion. Do not lean forwards or against the door or side window. You may otherwise be in the deployment area of the airbags.
- The occupants must always keep their feet on the floor. Do not put your feet on the cockpit, for example. Your feet may otherwise be in the deployment area of the airbag.
- If children are traveling in the vehicle, observe the additional notes (→ page 52).
- Always stow and secure objects correctly.

Objects in the vehicle interior may prevent an airbag from functioning correctly. Each vehicle occupant must always make sure of the following in particular:

- There are no people, animals or objects between the vehicle occupants and an airbag.
- There are no objects between the seat, door and door pillar (B-pillar).

- There are no hard objects, e.g. coat hangers, hanging on the grab handles or coat hooks.
- There are no accessories, such as mobile navigation devices, mobile phones or cup holders, within the deployment area of an airbag, e.g. on the cockpit, on the door, on the side window or on the side trim.

In addition, no connecting cables, tensioning straps or retaining straps must be routed or attached to the vehicle within the deployment area of an airbag. Always comply with the accessory manufacturer's installation instructions and, in particular, the notes on suitable places for installation.

 There are no heavy, sharp-edged or fragile objects in the pockets of your clothing. Store such objects in a suitable place.

Limitations of the protection provided by airbags

A

WARNING Risk of injury due to modifications to the cover of an airbag

If you change the cover of an airbag or attach objects, e.g. even stickers, to it, the airbag may no longer function as intended.

- Never modify the cover of an airbag.
- Do not attach any objects to the cover.

The installation location of an airbag is identified by the AIRBAG symbol (\rightarrow page 43).

Objects in the deployment area of an airbag may prevent the airbag from functioning correctly.




WARNING Risk of injury from objects in the deployment area of an airbag

Objects in the deployment area of an airbag can hinder or prevent the correct deployment of the airbag.

The airbag may then deploy in an uncontrolled manner and may even cause additional injuries to the vehicle occupants by deploying.

This may be the case in particular if the airbag is integrated into the seat.

- Always stow and secure objects correctly.
- Before commencing your journey, make sure that no objects are stowed in the deployment area of an airbag.

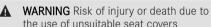

Due to unsuitable seat covers, the airbags cannot protect vehicle occupants as intended.

In addition, the operation of the automatic front passenger airbag shutoff could be restricted.

You should only use seat covers that have been approved for the corresponding seats by Mercedes-Benz.

WARNING Risk of injury due to malfunctioning sensors in the door

The function of the airbags can be impaired due to modifications or incorrect work performed on the doors or door trim, or if the doors are damaged.

- Never modify the doors or parts of the doors.
- Always have work on the doors or door trim carried out at a qualified specialist workshop.

WARNING Risk of injury due to deployed airbag

A deployed airbag no longer offers any protection.

 Have the vehicle towed to a qualified specialist workshop in order to have the deployed airbag replaced.

Have deployed airbags replaced immediately.

Status of the front passenger front airbag

Function of the automatic front passenger air bag deactivation system

The automatic front passenger air bag deactivation system is able to detect whether the front passenger seat is occupied by a person or a child restraint system. The front passenger air bag and front passenger knee air bag will be activated or deactivated accordingly.

A

WARNING Risk of injury or death due to objects under the co-driver seat

Objects trapped under the co-driver seat can interfere with the function of the automatic co-driver airbag shutoff or damage the system.

- Do not store any objects under the codriver seat.
- When the co-driver seat is occupied, make sure that no objects are trapped under the co-driver seat.

When installing a child restraint system on the front passenger seat, observe the vehicle-specific information (\rightarrow page 61). Also, always observe

the notes on rearward-facing or forward-facing child restraint systems on the front passenger seat (\rightarrow page 60).

A person on the front passenger seat must observe the following information:

- Fasten the seat belt correctly (→ page 38).
- Sit in an almost upright seat position with your back against the seat backrest.
- Sit with your feet resting on the floor, if possible.

The front passenger air bag may otherwise be deactivated by mistake, for example, in the following situations:

- The front passenger transfers his or her weight by supporting himself or herself on a vehicle armrest.
- The front passenger sits in such a way that his or her weight is raised off the seat surface.

WARNING Risk of injury or death due to a disabled front passenger airbag

The front passenger airbag is disabled when the PASSENGER AIR BAG OFF indicator lamp is lif.


A person in the front passenger seat could then, for example, come into contact with the vehicle interior, especially if the person is sitting too close to the cockpit.

If the front passenger seat is occupied, always ensure that:

- The classification of the person in the front passenger seat is correct and the front passenger airbag is enabled or disabled in accordance with the person in the front passenger seat.
- The front passenger seat has been moved as far back as possible.
- The person is seated correctly.
- Both before and during the journey, ensure that the status of the front passenger airbag is correct.

If the front passenger seat is occupied, the classification of the person or child restraint system on the front passenger seat will take place after the front passenger air bag deactivation system selftest. The PASSENGER AIR BAG indicator lamps display the status of the front passenger air bag. Always observe the notes on the function of the PASSENGER AIR BAG indicator lamps (\rightarrow page 47).

Function of the PASSENGER AIR BAG indicator lamps

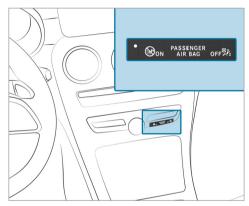

Self-test of automatic front passenger airbag shut-off

When the ignition is switched on, a self-test is performed during which the two PASSENGER AIR BAG ON and OFF indicator lamps light up simultaneously.

The status of the front passenger airbag is displayed via the PASSENGER AIR BAG indicator lamps after the self-test:

- **ON is lit:** the front passenger airbag may deploy during an accident.
 - The indicator lamp goes out after 60 seconds.
- ON and OFF are not lit: the front passenger airbag may deploy during an accident.
- OFF is lit: the front passenger airbag is disabled. It will then not be deployed in the event of an accident.

If the PASSENGER AIR BAG ON indicator lamp is off, only the PASSENGER AIR BAG OFF indicator lamp shows the status of the front passenger airbag. The PASSENGER AIR BAG OFF indicator lamp may be lit continuously or be off.

If the PASSENGER AIR BAG OFF indicator lamp and the prestraint system warning lamp light up simultaneously, the front passenger seat may not be used. Also in this case, do not install a child restraint system on the front passenger seat. Have the automatic front passenger airbag

shutoff checked and repaired immediately at a qualified specialist workshop.

Status display

If the front passenger seat is occupied, ensure, both before and during the journey, that the status of the front passenger airbag is correct for the current situation.

After installing a rearward-facing child restraint system on the front passenger seat: PASSENGER AIR BAG OFF must be lit continuously.

Α

WARNING Risk of injury or fatal injury when using a rearward-facing child restraint system while the co-driver airbag is enabled

If you secure a child in a rearward-facing child restraint system on the co-driver seat and the PASSENGER AIR BAG OFF indicator lamp is off, the co-driver airbag can deploy in the event of an accident.

The child could be struck by the airbag.

- Always ensure that the co-driver airbag is disabled. The PASSENGER AIR BAG OFF indicator lamp must be lit.
- NEVER use a rearward-facing child restraint system on a seat with an ENA-BLED FRONT AIRBAG; DEATH or SERI-OUS INJURY to the CHILD can occur.

When installing a child restraint system on the front passenger seat, observe the vehicle-specific information (\rightarrow page 60).

Depending on the child restraint system and the stature of the child, the PASSENGER AIR BAG OFF indicator lamp may be off. In this case, do not install the rearward-facing child restraint system on the front passenger seat.

Instead, install the rearward-facing child restraint system on a suitable rear seat.

After installing a forward-facing child restraint system on the front passenger seat: depending on the child restraint system and the stature of the child, PASSENGER AIR BAG OFF may be lit continuously or be off. Always observe the following information.

WARNING Risk of injury or death due to incorrect positioning of the forward-facing child restraint system

If you secure a child in a forward-facing child restraint system on the front passenger seat that is positioned too close to the cockpit, in the event of an accident, the child could:

- come into contact with parts of the vehicle's interior if the PASSENGER AIR BAG OFF indicator lamp is lit, for example
- be struck by the airbag if the PASSENGER AIR BAG OFF indicator lamp is off
- Always move the front passenger seat as far back as possible and fully retract the seat cushion length adjustment. While doing so, always make sure that the shoulder belt strap is correctly routed from the seat belt outlet of the vehicle to the shoulder belt guide on the child restraint system. The shoulder belt strap must be routed forwards and downwards from the seat belt outlet. If necessary,

- adjust the front passenger seat accordingly.
- Always comply with the child restraint system manufacturer's installation instructions.

When installing a child restraint system on the front passenger seat, observe the vehicle-specific information (\rightarrow page 60).

If a person is sitting on the front passenger seat: PASSENGER AIR BAG OFF may be lit continuously or be off, depending on the person's stature.

A person on the front passenger seat must always observe the following information:

If the front passenger seat is occupied by an adult or a person with a stature corresponding to that of an adult, the PASSENGER AIR BAG OFF indicator lamp must be off. This indicates that the front passenger airbag is enabled.
 If the PASSENGER AIR BAG OFF indicator lamp is lit continuously, an adult or person with a build corresponding to that of an adult must not use the front passenger seat.
 Instead, they should use a rear seat.

- If the front passenger seat is occupied by a person of smaller stature (e.g. a teenager or small adult), the PASSENGER AIR BAG OFF indicator lamp is either lit continuously or remains off, depending on the classification.
 - If the PASSENGER AIR BAG OFF indicator lamp is off: move the front passenger seat as far back as possible, or the person of smaller stature should use a rear seat.
 - If the PASSENGER AIR BAG OFF indicator lamp is lit continuously: the person of smaller stature should not use the front passenger seat.

★ WARNING Risk of injury or death when the PASSENGER AIR BAG OFF indicator lamp is lit

If the PASSENGER AIR BAG OFF indicator lamp remains lit after the self-test, the front passenger airbag is disabled.

If the front passenger seat is occupied, always ensure that:

- The classification of the person in the front passenger seat is correct and the front passenger airbag is enabled or disabled in accordance with the person in the front passenger seat.
- The person is seated properly with a correctly fastened seat belt.
- The front passenger seat has been moved as far back as possible.

Be sure to also observe the following further related subjects:

 Child restraint system on the front passenger seat (→ page 60)

PRE-SAFE® system

Function of PRE-SAFE® (anticipatory occupant protection)

PRE-SAFE[®] is able to detect certain critical driving situations and implement pre-emptive measures to protect the vehicle occupants.

PRE-SAFE® can implement the following measures independently of each other:

- Tightening the seat belts on the driver's seat and front passenger seat.
- · Closing the side windows.
- Vehicles with sliding sunroof: closing the sliding sunroof.
- Vehicles with memory function: moving the front passenger seat to a more favorable seat position.
- Vehicles with multicontour seat: increasing the air pressure in the seat side bolsters of the seat backrest.
- PRE-SAFE® Sound: provided that the multimedia system is switched on, generating a brief

audible signal to stimulate the innate protective mechanism of a person's hearing.

!

NOTE Damage caused by objects in the footwell or behind the seat

The automatic adjustment of the seat position may result in damage to the seat and/or the object.

Stow objects in a suitable place.

Reverting the PRE-SAFE® system measures

If an accident did not occur, the pre-emptive measures that were taken will be reversed.

You will need to perform certain settings yourself.

If the seat belt pre-tensioning is not reduced, move the seat backrest back slightly. The locking mechanism will release.

Function of PRE-SAFE® PLUS (anticipatory occupant protection plus)

PRE-SAFE® PLUS can detect certain impacts, particularly an imminent rear impact, and take pre-

emptive measures to protect the vehicle occupants. These measures cannot necessarily prevent an imminent impact.

PRE-SAFE® PLUS can implement the following measures independently of each other:

- Tightening the seat belts on the driver's seat and front passenger seat.
- Increasing brake pressure when the vehicle is stationary. Brake application will be canceled automatically when the vehicle pulls away.

If an accident did not occur, the pre-emptive measures that were taken will be reversed.

System limits

The system will not initiate any action in the following situations:

· when backing up

The system will not initiate any braking application in the following situations:

whilst driving

or

when entering or exiting a parking space while using Active Parking Assist

Safely transporting children in the vehicle

To be observed at all times when children are traveling in the vehicle

(i) Also strictly observe the safety notes for the specific situation. That way, you can recognize potential risks and avoid dangers if children are traveling in the vehicle (→ page 52).

Be diligent

Bear in mind that negligence when securing a child in the child restraint system may have serious consequences. Always be diligent in securing a child carefully before every journey.

Never allow a baby or child to travel sitting on the lap of another vehicle occupant.

To improve protection for children younger than 12 years old or under 5 ft (1.50 m) in height, Mercedes-Benz recommends you observe the following information:

- Always secure the child in a child restraint system suitable for this Mercedes-Benz vehicle.
- The child restraint system must be appropriate to the age, weight and size of the child.
- The vehicle seat must be suitable for installing a child restraint system.

Accident statistics show that children secured on the rear seats are generally safer than children secured on the front seats. For this reason, Mercedes-Benz strongly advises that you install a child restraint system on a rear seat.

The generic term child restraint system

The generic term "child restraint system" is used in this Operator's Manual. A child restraint system is, for example:

- · a baby car seat
- · a rearward-facing child seat
- · a forward-facing child seat

 a child booster seat with a backrest and seat belt guide

Mercedes-Benz recommends using a child booster seat with a backrest.

The child restraint system must be appropriate to the age, weight and size of the child.

Observe laws and legal requirements

Always observe the legal requirements when using a child restraint system in the vehicle.

Observe standards for child restraint systems

All child restraint systems must meet the following standards:

- U.S. Federal Motor Vehicle Safety Standards 213 and 225
- Canadian Motor Vehicle Safety Standards 213 and 210.2

Confirmation that the child restraint system complies with the standards can be found on an instruction label on the child restraint system. This confirmation can also be found in the installation instructions that are included with the child restraint system.

Detecting risks, avoiding danger

Securing systems for child restraint systems in the vehicle

Use only the following securing systems for child restraint systems:

- · the ISOFIX securing rings
- · the vehicle's seat belt system
- the Top Tether anchorages

Installing an ISOFIX child restraint system is preferred.

Simply attaching to the securing rings on the vehicle can reduce the risk of installing the child restraint system incorrectly.

When securing a child with the integrated seat belt of the ISOFIX child restraint system, always comply with the permissible gross weight for the child and child restraint system (\rightarrow page 56).

A booster seat may be necessary to achieve proper seat belt positioning for children over 40 lbs (18 kg) in weight or up to a height at which a three-point seat belt can be installed properly without a booster seat.

Mercedes-Benz recommends a suitable child booster seat with a backrest and seat belt guide.

Advantage of a rearward-facing child restraint system

It is preferable to transport a baby or a small child in a suitable rearward-facing child restraint system. In this case, the child sits in the opposite direction to the direction of travel and faces backwards.

Babies and small children have comparatively weak neck muscles in relation to the size and weight of their heads. The risk of injury to the cervical spine during an accident can be reduced in a rearward-facing child restraint system.

Always secure a child restraint system correctly

A

WARNING Risk of injury or death due to incorrect installation of the child restraint system

The child can then not be protected or restrained as intended.

- Be sure to comply with the manufacturer's installation instructions for the child restraint system and its correct use.
- Make sure that the entire base of the child restraint system always rests on the sitting surface of the seat.
- Never place objects (e.g. cushions) under or behind the child restraint system.
- Use child restraint systems only with the original cover designed for them.
- Always replace damaged covers with genuine covers.
- ▲ WARNING Risk of injury or death due to unsecured child restraint systems in the vehicle

If the child restraint system is incorrectly installed or not secured, it can come loose.

The child restraint system could be flung around and hit vehicle occupants.

- Always install child restraint systems correctly, even when not in use.
- Always comply with the child restraint system manufacturer's installation instructions.
- Always observe the child restraint system manufacturer's installation and operating instructions as well as the vehicle-specific information:
 - Installing the ISOFIX child restraint system on the right and left rear seats (→ page 56).
 - Securing the child restraint system with the seat belt on the rear seat (→ page 59).
 - Securing the child restraint system with the seat belt on the front passenger seat (→ page 61). Observe the specific instructions for the rearward-facing and forward-facing child restraint systems (→ page 60).

If the front passenger seat is occupied, ensure, both before and during the jour-

- ney, that the status of the front passenger air bag is correct for the current situation (\rightarrow) page 47).
- Observe the warning labels in the vehicle interior and on the child restraint system.
- · Also secure Top Tether if present.

Do not modify the child restraint system

WARNING Risk of injury due to modifications to the child restraint system

The child restraint system can no longer function properly. This poses an increased risk of injury.

- Never modify a child restraint system.
- Only affix accessories which have been specially approved for this child restraint system by the child restraint system's manufacturer.

Use only child restraint systems that are in proper working condition



WARNING Risk of injury or death caused by the use of damaged child restraint systems

Child restraint systems or their retaining systems that have been subjected to stress in an accident may not be able to perform their intended protective function.

It may be the case that the child cannot be properly restrained.

- Always immediately replace child restraint systems that have been damaged or involved in an accident.
- Have the securing systems for the child restraint systems checked at a qualified specialist workshop before installing a child restraint system again.

Avoid direct sunlight



WARNING Risk of burns when the child seat is exposed to direct sunlight

If the child restraint system is exposed to direct sunlight or heat, parts could heat up excessively.

Children could suffer burns from these parts, particularly the metallic parts of the child restraint system.

- Always make sure that the child restraint system is not exposed to direct sunlight.
- Cover the child restraint system with a blanket, for example.
- If the child restraint system has been exposed to direct sunlight, allow it to cool before securing a child into it.
- Never leave children unattended in the vehicle.

Note when stopping or parking

A

WARNING Risk of accident and injury due to children left unattended in the vehicle

If children are left unsupervised in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion, for example by:

- · releasing the parking brake.
- changing the transmission position.
- starting the vehicle.
- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.

► Keep the vehicle SmartKey out of reach of children

WARNING Risk of fatal injury due to exposure to extreme heat or cold in the vehicle

If persons, particularly children, are subjected to prolonged exposure to intense heat or cold. there is a risk of severe injury or even death.

Never leave persons, particularly children, unattended in the vehicle.

Overview of suitable seats in the vehicle for installing a child restraint system

Left/right rear seat

Preferred securing system:



ISOFIX child seat anchor



Also secure Top Tether if present $(\rightarrow page 58)$.

Alternative securing system:



Vehicle seat belt

Front passenger seat

Securing system:



Vehicle seat belt

Please note:

- If the front passenger seat is occupied, ensure, both before and during the journey. that the status of the front passenger air bag is correct for the current situation. $(\rightarrow page 47)$.
- Notes on the automatic front passenger air bag deactivation system (\rightarrow page 46).

Activating or deactivating the special seat belt retractor of the seat belt

WARNING Risk of injury or death if a seat belt is unfastened while the vehicle is in motion

If the seat belt is released while the vehicle is in motion, the special seat belt retractor is deactivated and the child restraint system is no longer correctly secured. The seat belt is

drawn in slightly by the inertia reel and cannot be immediately closed again.

- Stop the vehicle immediately in accordance with the traffic conditions
- Activate the special seat belt retractor again and correctly secure the child restraint system.

When enabled, the special seat belt retractor ensures that the seat belts of the front passenger seat and rear seats do not slacken once the child restraint system is secured.

The seat belts on the following seats are equipped with a special seat belt retractor:

- Front passenger seat
- Rear seats

Installing a child restraint system

When installing a child restraint system, always observe the manufacturer's installation and operating instructions as well as the information in this Operator's Manual.

- Pull the seat belt smoothly from the seat belt outlet
- Engage the seat belt tongue in the seat belt buckle.

Activating the special seat belt retractor

- Pull the seat belt out fully and let the inertia reel retract it again.
 - When the special seat belt retractor is activated, you will hear a ratcheting sound.
- Push the child restraint system down until the seat belt sits tightly.

Deactivating the special seat belt retractor

- Press the release button of the seat belt buckle.
- Hold the seat belt tongue and guide back to the seat belt outlet.

Installing a LATCH-type (ISOFIX) child restraint system on the left and right rear seats

Installing an ISOFIX child restraint system on the left and right rear seats

WARNING Risk of accident if the rear bench seat, rear seat and seat backrest are not engaged

The rear bench seat, rear seat and seat backrest may fold forwards, even when you are driving.

- As a result, the vehicle occupant will be pushed into the seat belt with increased force. The seat belt will not be able to protect as intended and could cause additional injury.
- Objects or loads in the trunk or cargo compartment will not be restrained by the seat backrest.
- Make sure that the rear bench seat, the rear seat and the seat backrest are engaged before every trip.

If the left and right seat backrests are not engaged and locked in place, this will be shown on the display on the instrument display.

If the center seat backrest is not engaged and locked in place, the red lock verification indicator will be visible.

WARNING Risk of injury or death if the permissible gross mass of the child and child restraint system together is exceeded.

Too much load may be placed on the LATCHtype (ISOFIX) child restraint system and the child may not be restrained correctly in the event of an accident, for example.

- If the child and the child restraint system together weigh more than the permissible gross mass of 73 lb (33 kg), only use a LATCH-type (ISOFIX) child restraint system with which the child is secured with the vehicle seat belt.
- Also secure the child restraint system with the Top Tether belt, if available.

Always comply with the specifications regarding the weight of the child restraint system:

- In the manufacturer's installation and operating instructions for the child restraint system used
- On a label on the child restraint system, if present

Regularly check that the weight of the child and child restraint system still complies with the permissible gross weight.

When installing a child restraint system, observe the following:

- Always ensure that the installation area and the seats are suitable for attaching a child restraint system.
- Always comply with the manufacturer's installation and operating instructions for the child restraint system used.
- Make sure that the child's feet do not touch the front seat. If necessary, move the front seat slightly forwards.

When installing an ISOFIX child restraint system, also observe the following:


- When using a baby car seat in weight group 0/0+ and a rearward-facing child restraint system in Weight group I on a rear seat: adjust the front seat so that the seat does not touch the child restraint system.
- When using a forward-facing child restraint system in Weight group I: remove the head restraint from the respective seat, if possible. In addition, the backrest on the child restraint system must lie as flat as possible against the backrest on the vehicle seat.

After the child restraint system has been removed, replace the head restraint immediately and adjust all head restraints correctly.

✓ If the head restraint of the child seat cannot be fully extended when it is installed in the vehicle, this will result in restrictions on the maximum size setting for child restraint systems in weight group II or III.

Contact with the roof when the head restraint is fully extended and locked in place will not result in any restrictions on use.

- Insure that the child restraint system is not subjected to strain between the roof and the seat cushion and/or installed facing the wrong direction. Where possible, adjust the seat cushion inclination accordingly.
- Ensure that the child restraint system is not subjected to strain by the head restraint. Adjust the head restraints as appropriate.

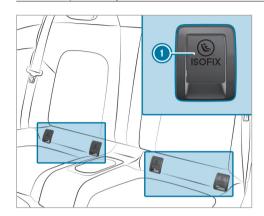

ISOFIX mounting bracket

Before every journey, make sure that the ISOFIX child restraint system is engaged correctly in both mounting brackets in the vehicle.

Attach the ISOFIX child restraint system to both mounting brackets in the vehicle.

Fastening a Top Tether

WARNING Risk of injury or death if the rear seat backrests are not locked after Top Tether belts are installed

The rear seat backrests may fold forwards when you are driving.

As a result, child restraint systems will no longer be able to perform their intended protective function. This may also cause additional injuries.

- Always lock rear seat backrests after installing Top Tether belts.
- Observe the lock verification indicator.


If the left and right seat backrests are not engaged and locked in place, this will be shown on the display on the instrument display.

If the center seat backrest is not engaged and locked in place, the red lock verification indicator will be visible.



If the child restraint system is equipped with a Top Tether belt:

The risk of injury may be reduced by Top Tether. The Top Tether belt enables an additional connection between the child restraint system attached with LATCH-type (ISOFIX) (left and right rear seats) or the seat belt (all rear seats) and the vehicle.

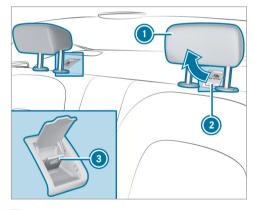

If necessary, slide head restraint 1 upwards $(\rightarrow page 91).$

- Fold up cover ② of Top Tether anchorage ③.
- Install the LATCH-type (ISOFIX) or beltsecured child restraint system with Top Tether. In doing so, comply with the child restraint system manufacturer's installation instructions.



- Guide Top Tether belt (a) under head restraint
 (i) between the two head restraint bars.
- Hook Top Tether hook (s) of Top Tether belt
 (a) into Top Tether anchorage (s) without twisting.

- Tension Top Tether belt (a). In doing so, comply with the child restraint system manufacturer's installation instructions.
- Fold down cover ② of Top Tether anchorage③.
- If necessary, slide head restraint ① downwards (→ page 91). Make sure that you do not interfere with the correct routing of Top Tether belt ②.

Securing the child restraint system with the seat belt

Securing the child restraint system with the seat belt on the rear seat

▲ WARNING Risk of accident if the rear bench seat, rear seat and seat backrest are not engaged

The rear bench seat, rear seat and seat backrest may fold forwards, even when you are driving.

- As a result, the vehicle occupant will be pushed into the seat belt with increased force. The seat belt will not be able to protect as intended and could cause additional injury.
- Objects or loads in the trunk or cargo compartment will not be restrained by the seat backrest.
- Make sure that the rear bench seat, the rear seat and the seat backrest are engaged before every trip.

If the left and right seat backrests are not engaged and locked in place, this will be shown on the instrument display.

If the center seat backrest is not engaged and locked in place, the red lock verification indicator will be visible.

When installing a belt-secured child restraint system, observe the following:

Always comply with the manufacturer's installation and operating instructions for the child restraint system used.

- When using a weight group 0/0+ baby car seat and a weight group 1 rearward-facing child restraint system on a rear seat: adjust the front seat so that the seat does not touch the child restraint system.
- When using a weight group 1 forward-facing child restraint system: remove the head restraint from the respective seat, if possible. After the child restraint system has been removed, replace the head restraint immediately and adjust all head restraints correctly.
- The backrest of the forward-facing child restraint system must, as far as possible, be resting on the seat backrest of the rear seat.
- If the head restraint of the child seat cannot be fully extended when it is installed in the vehicle, this will result in restrictions on the maximum size setting for child restraint systems in weight group 2 or 3.
 - Contact with the roof when the head restraint is fully extended and locked in place will not result in any restrictions on use.
- The child restraint system must not be put under strain between the roof and the seat

- cushion and/or be installed facing the wrong direction. Where possible, adjust the seat cushion inclination accordingly.
- The child restraint system must not be put under strain by the head restraint. Adjust the head restraints as appropriate.
- Make sure that the child's feet do not touch the front seat. If necessary, move the front seat slightly forwards.

The seat belts on the following seats are equipped with a child seat safety feature:

- Front passenger seat
- Rear seats

When enabled, the child seat safety feature ensures that the seat belts of the front passenger seat and rear seats do not slacken once the child restraint system is secured (\rightarrow page 55).

- Install the child restraint system. The entire base of the child restraint system must always rest on the surface of the rear seat.
- Always make sure that the shoulder belt strap is correctly routed from the seat belt outlet of

the vehicle to the shoulder belt guide on the child restraint system.

The shoulder belt strap must be routed forward from the seat belt outlet.

Notes on rearward-facing and forward-facing child restraint systems on the front passenger seat

WARNING Risk of injury or fatal injury when using a rearward-facing child restraint system while the co-driver airbag is enabled

If you secure a child in a rearward-facing child restraint system on the co-driver seat and the PASSENGER AIR BAG OFF indicator lamp is off, the co-driver airbag can deploy in the event of an accident.

The child could be struck by the airbag.

- ► Always ensure that the co-driver airbag is disabled. The PASSENGER AIR BAG OFF indicator lamp must be lit.
- NEVER use a rearward-facing child restraint system on a seat with an ENA-

BLED FRONT AIRBAG; DEATH or SERI-OUS INJURY to the CHILD can occur.

Observe the specific instructions for the rearward-facing and forward-facing child restraint systems (\rightarrow page 61).

Always observe the status of the front passenger air bag on the PASSENGER AIR BAG OFF indicator lamp:

- When using a rearward-facing child restraint system on the front passenger seat, the front passenger air bag must always be deactivated. This is the case only if the PASSENGER AIR BAG OFF indicator lamp is lit continuously (→ page 47).
- If the PASSENGER AIR BAG OFF indicator lamp is off, the front passenger air bag is activated. The front passenger air bag may deploy during an accident.

Securing the child restraint system with the seat belt on the front passenger seat

When installing a belt-secured child restraint system on the front passenger seat, always observe the following:

- ✓ Observe the notes on rearward-facing and forward-facing child restraint systems on the front passenger seat (→ page 60).
- Observe the child restraint system manufacturer's installation and operating instructions.
- When using a forward-facing child restraint system in weight group 1: remove the head restraint from the respective seat, if possible.

 After the child restraint system has been
 - removed, replace the head restraint immediately and adjust all head restraints correctly.
- ▼ The backrest of the forward-facing child restraint system must, as far as possible, be resting on the seat backrest of the front passenger seat.
- If the head restraint of the child seat cannot be fully extended when it is installed in the vehicle, this will result in restrictions on the

maximum size setting for child restraint systems in weight group 2 or 3.

Contact with the roof when the head restraint is fully extended and locked in place will not result in any restrictions on use.

- ✓ The child restraint system must not be put under strain between the roof and the seat cushion and/or be installed facing the wrong direction.
- ✓ The child restraint system must not be put under strain by the head restraint. Adjust the head restraints as appropriate.
- Never place objects (e.g. cushions) under or behind the child restraint system.

The seat belt on the front passenger side is equipped with a child seat safety feature.

When enabled, the child seat safety feature ensures that the seat belt does not slacken once the child seat is secured (\rightarrow page 55).

▲ WARNING Risk of injury or death due to objects between the seat surface and the child restraint system

Objects between the seat surface and the child restraint system could affect the function of the automatic front passenger airbag shutoff.

- Do not place any objects between the seat surface and the child restraint system.
- Always make sure that the child restraint system is correctly installed.
- Set the front passenger seat as far back as possible and move the seat into the highest position if possible.
- Fully retract the seat cushion length adjustment.
- Adjust the seat cushion inclination such that the front edge of the seat cushion is in the highest position and the rear edge of the seat cushion is in the lowest position.

- Set the seat backrest to the most vertical position possible.
- Install the child restraint system. The entire base of the child restraint system must always rest on the seat surface of the front passenger seat.
- Always make sure that the shoulder belt strap is correctly routed from the seat belt outlet of the vehicle to the shoulder belt guide on the child restraint system.

The shoulder belt strap must be routed forwards and downwards from the seat belt outlet.

If necessary, adjust the seat belt outlet and the front passenger seat accordingly.

Notes on pets in the vehicle

▲ WARNING Risk of accident and injury due to animals left unsecured or unattended in the vehicle

If you leave animals in the vehicle unattended or unsecured, they could possibly press buttons or switches.

An animal may:

- Activate vehicle equipment and become trapped, for example
- Switch systems on or off and endanger other road users

Unsecured animals may be thrown around in the vehicle in the event of an accident or sudden steering and braking maneuvers and injure vehicle occupants in the process.

- Never leave animals in the vehicle unattended.
- Always correctly secure animals while driving, e.g. using a suitable animal carrier.

SmartKey

Overview of key functions

WARNING Risk of accident and injury due to children left unattended in the vehicle

If children are left unsupervised in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion, for example by:

- · releasing the parking brake.
- changing the transmission position.
- · starting the vehicle.
- Never leave children unattended in the vehicle.

- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- Keep the vehicle SmartKey out of reach of children.
- I NOTE Damage to the SmartKey caused by magnetic fields
- Keep the SmartKey away from strong magnetic fields.



Vehicle key with panic alarm

- To lock
- Indicator lamp

- Unlocks
- Opens/closes the trunk lid
- Panic alarm
- (i) If indicator lamp ② does not light up after pressing the ② or ⑤ button, the battery is weak or possibly discharged. Replace the battery as soon as possible.

Replace the key battery (\rightarrow page 65).

The key locks and unlocks the following components:

- Doors
- Fuel filler flap
- Trunk lid

If the vehicle is not opened within approximately 40 seconds after unlocking, it locks again. Antitheft protection is activated again.

Do not keep the key together with electronic devices or metal objects. This can affect the key's functionality.

Activating/deactivating the acoustic locking verification signal

Multimedia system:

- ➤ Acoustic Lock
- ▶ Activate or deactivate the function.

Arming/disarming the panic alarm

Requirements:

The vehicle is switched off.



- To activate: press button
 for approximately one second.
 - A visual and audible alarm is triggered.
- To deactivate: briefly press button (1) again.

or

Press the start/stop button. A SmartKev belonging to the vehicle must be detected in the vehicle.

Changing the unlocking settings

Possible unlocking functions of the SmartKey:

- Central unlocking
- Unlocking the driver's door and fuel filler flap
- To switch between settings: press the ਰਿ and 🔒 buttons simultaneously for approximately six seconds until the indicator lamp flashes twice.

Options when the unlocking function for the driver's door and fuel filler flap has been selected:

• To unlock the vehicle centrally: press the ਜ਼ button twice.

 Vehicles with KEYLESS-GO: if you touch the inner surface of the door handle on the driver's door, only the driver's door and the fuel filler flap will be unlocked.

Deactivating the function of the key

Vehicles with KEYLESS-GO: if you deactivate the function of the key, the KEYLESS-GO functions are also deactivated. Access or drive authorization by KEYLESS-GO is then no longer possible with that particular key. Activate the function of the key so that all its functions will again be available.

You can also deactivate the function of the key to reduce the energy consumption of the key if you do not use the vehicle or a key for an extended period of time.


- Deactivate: Press 🔒 and hold the key button.
- With the key pressed, ☐ immediately press the key button twice in quick succession.

The indicator light of the key lights up once briefly and once for a long time.

- To activate: press any button on the key.
- When the vehicle is started with the key in the stowage compartment of the center console, the function of the key is automatically activated (→ page 130).

Removing/inserting the emergency key

Removing the emergency key

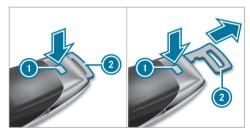

- Press release button ①.
 Emergency key ② will be pushed out slightly.
- Pull out emergency key ② until it engages in the intermediate position.

Press release button (1) again and fully remove emergency key (2).

Inserting the emergency key

- Press release button ①.
- Insert emergency key ② to the intermediate position or fully until it engages.
- i You can use the intermediate position of emergency key 2 to attach the SmartKey to a key ring.

Replacing the SmartKey battery

DANGER Risk of fatal injuries due to swallowing batteries

Batteries contain toxic and corrosive substances. Swallowing batteries may cause severe internal burns to occur within two hours.

There is a risk of fatal injury.

- Keep batteries out of the reach of children.
- If the cap and/or the battery compartment does not close securely, do not use

- the SmartKey any longer and keep out of the reach of children.
- If batteries are swallowed, seek medical attention immediately.





Dispose of batteries in an environmentally responsible manner. Take discharged batteries to a qualified specialist workshop or to a collection point for used batteries.

66 Opening and closing

Requirements

• You require a CR 2032 3 V cell battery.

Mercedes-Benz recommends that you have the battery replaced at a qualified specialist workshop.

Remove the emergency key (→ page 65).



- Press release button ② down fully and slide cover ① in the direction of the arrow.
- Lift up cover in the direction of the arrow and remove it.
- Remove battery compartment (3) and take out the discharged battery.

- Insert the new battery into battery compartment (a). Observe the positive pole marking in the battery compartment and on the battery when doing this.
- Push in battery compartment 3
- Re-attach cover
 and push it closed until it engages.

Problems with the SmartKey, troubleshooting

You can no longer lock or unlock the vehicle Possible causes:

- The SmartKey battery is weak or discharged.
- Check the battery using the indicator lamp (→ page 63).
- Replace the SmartKey battery, if necessary (→ page 65).
- Use the replacement key.
- Use the emergency key to lock or unlock $(\rightarrow page 69)$.
- Have the SmartKey checked at a qualified specialist workshop.

There is interference from a powerful radio signal source

Possible causes if the function of the SmartKey is impaired:


- · high voltage power lines
- mobile phones
- electronic devices (notebooks, tablets)
- shielding due to metallic objects or induction loops for electrical gate systems or automatic barriers
- Make sure that there is sufficient distance between the SmartKey and the potential source of interference.

You have lost a SmartKey.

- Have the SmartKey deactivated at a qualified specialist workshop.
- If necessary, have the mechanical lock replaced as well.


Doors

Unlocking and opening doors from the inside

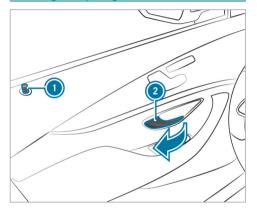

Pull door handle 2. Locking pin 1 pops up when the door is unlocked.

Centrally locking and unlocking the vehicle from the inside

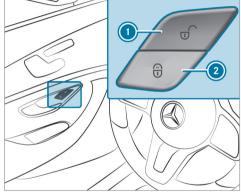

- To unlock: press button 1.
- To lock: press button 2.
- The buttons are also located on the front passenger door.

This does not lock or unlock the fuel filler flap.

The vehicle is not unlocked:

- · if you have locked the vehicle using the Smart-Key
- if you have locked the vehicle using KEYLESS-

Locking/unlocking the vehicle with KEYLESS-GO

Requirements

- The SmartKey is outside the vehicle.
- The distance between the SmartKey and the vehicle does not exceed 3 ft (1 m).
- The driver's door and the door on which the door handle is operated are closed.
- **NOTE** Damage to the vehicle caused by unintentionally opening the trunk lid
 - · When using an automatic car wash
 - When using a high pressure cleaner
- Deactivate the function of the SmartKey in these situations.


or

68 Opening and closing

Make sure that the SmartKey is at a minimum distance of 10 ft (3 m) away from the vehicle.

Observe the notes:

- on washing the vehicle in a car wash (→ page 328)
- on using a high-pressure cleaner
 (→ page 329)

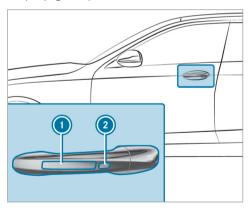

- To unlock the vehicle: touch the inner surface of the door handle.
- To lock the vehicle: touch sensor surface or or o.
- Convenience closing: touch recessed sensor surface until the closing process has been completed.
- (i) Further information on convenience closing (→ page 77).

If you open the trunk lid from outside, the trunk lid is automatically unlocked.

Problems with KEYLESS-GO, troubleshooting

You can no longer lock or unlock the vehicle using KEYLESS-GO

Possible causes:

- The function of the SmartKey has been deactivated.
- The SmartKey battery is weak or discharged.
- Activate the function of the SmartKey (\rightarrow) page 64).

- Check the battery using the indicator lamp (→ page 63).
- Replace the SmartKey battery, if necessary (→ page 65).
- Use the replacement SmartKey.
- Use the emergency key to lock or unlock (→ page 69).
- Have the vehicle and SmartKey checked at a qualified specialist workshop.


There is interference from a powerful radio signal source

Possible causes if the function of KEYLESS-GO is impaired:

- High voltage power lines
- Mobile phones
- Electronic devices (notebooks, tablets)
- Shielding due to metal objects or induction loops for electrical gate systems or automatic barriers
- Make sure that there is sufficient distance between the SmartKey and the potential source of interference.

Activating/deactivating the automatic locking feature

The vehicle is locked automatically when the vehicle is switched on and the wheels are turning faster than walking pace.

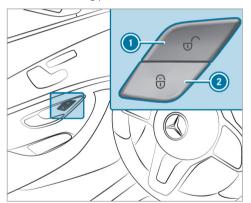


➤ To activate: press and hold button ② for approximately five seconds until an acoustic signal sounds. ➤ To deactivate: press and hold button ⑥ for approximately five seconds until an acoustic signal sounds.

In the following situations, there is a danger of being locked out when the function is activated:

- while the vehicle is being tow-started or pushed
- if the vehicle is being tested on a roller dynamometer


Locking/unlocking the driver's door with the emergency key

i If you wish to lock the vehicle entirely using the emergency key, first press the button for locking from the inside while the driver's door is open. Then proceed to lock the driver's door using the emergency key.

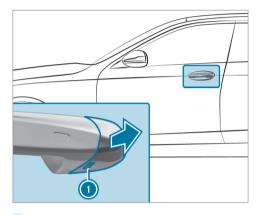

- Remove the emergency key (\rightarrow page 65).
- Insert the emergency key as far as it will go into opening in the cover.
- Pull and hold the door handle.
- Pull the cover on the emergency key as straight as possible away from the vehicle until it releases.
- Release the door handle.

70 Opening and closing

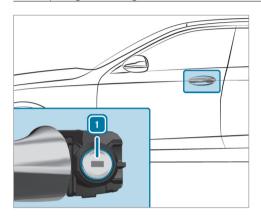

- To unlock: turn the emergency key counterclockwise to position 1.
- To lock: turn the emergency key clockwise to position 1.
- Carefully press the cover onto the lock cylinder until it engages and is seated firmly.

Trunk

Opening the trunk lid

▲ DANGER Risk of exhaust gas poisoning


Combustion engines emit poisonous exhaust gases such as carbon monoxide. Exhaust gases can enter the vehicle interior if the trunk lid is open when the engine is running, especially if the vehicle is in motion.

- Always switch off the engine before opening the trunk lid.
- Never drive with the trunk lid open.
- I NOTE Damage to the trunk lid by obstacles above the vehicle

The trunk lid swings upwards when it is opened.

- Therefore, make sure that there is sufficient clearance above the trunk lid.
- Vehicles with HANDS-FREE ACCESS: make a kicking movement with your foot below the bumper (→ page 73).

Vehicles with trunk lid convenience closing

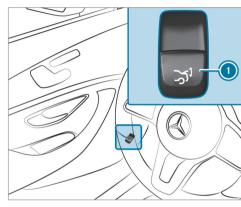

- Pull remote operating switch until the trunk lid opens.
- or
- Press and hold the 🐒 button on the Smart-Key.

- If the trunk lid is stopped in an intermediate position, pull it upwards. Release it as soon as it begins to open.
- With the trunk lid opening height restriction activated, manually pull the stopped trunk lid upwards.

If an obstacle obstructs the trunk lid during the automatic opening process, blockage detection will stop the trunk lid. The automatic blockage detection function is only an aid and is not a substitute for your attentiveness.

Closing the trunk lid

WARNING Risk of injury from unsecured items in the vehicle

If objects, luggage or loads are not secured or not secured sufficiently, they could slip, tip over or be thrown around and thereby hit vehicle occupants.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- Always stow objects in such a way that they cannot be thrown around.
- Before the journey, secure objects, luggage or loads against slipping or tipping over.

Observe the notes on loading the vehicle. Notes on closing the trunk lid: your vehicle is equipped with automatic SmartKey recognition. If a SmartKey belonging to the vehicle is detected in the vehicle, the trunk lid will not be locked and will pop open again.

Note that the trunk lid will not be locked if the following situation occurs:

- You have locked the vehicle and close the trunk lid while a SmartKev belonging to the vehicle is inside the vehicle. and
- · A second SmartKey belonging to the vehicle is not detected outside the vehicle.

Automatic SmartKey recognition is only an aid and is not a substitute for your attentiveness.

- Before locking, ensure that at least one SmartKey belonging to the vehicle is outside the vehicle
- To close the trunk lid: pull the trunk lid downwards using the handle recess and push it closed.

Vehicles with trunk lid convenience closing

WARNING Risk of becoming trapped during automatic closing of the trunk lid


Parts of the body could become trapped. There may be people in the closing area.

- Make sure that nobody is in the vicinity of the closing area during the closing process.
- Use one of the following options to stop the closing process:
 - Press the button on the Smart-Key.
 - Press or pull the remote operating switch on the driver's door.
 - Press the closing or locking button on the trunk lid.


72 Opening and closing

Vehicles with HANDS-FREE ACCESS: it is also possible to stop the closing process by making a kicking movement below the rear bumper.

- To close the trunk lid: pull the trunk lid downwards using the handle recess and push it closed.
- If the trunk lid is stopped in an intermediate position, push it downwards.
 The trunk lid will continue to close.

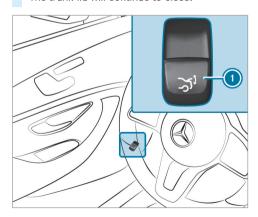

Push remote operating switch until the trunk lid is fully closed.

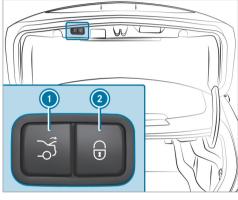

Press closing button ① on the trunk lid.

Vehicles with KEYLESS-GO

- Press locking button ② on the trunk lid. If a SmartKey is detected outside the vehicle, the trunk lid will close and the vehicle will be locked.
- With the trunk lid completely open, press and hold the 51 button on the SmartKey. The SmartKey must be in the vicinity of the vehicle.

Vehicles with HANDS-FREE ACCESS

With the trunk lid completely open, make a kicking movement with your foot below the bumper (→ page 73).

Trunk lid automatic reversing function

The trunk lid is equipped with automatic blockage detection with a reversing function. If an obstacle obstructs the trunk lid during the automatic closing process, it will automatically open again. The automatic reversing function is only an aid and is not a substitute for your attentiveness.

During the closing process, make sure that no body parts are in the closing area.

WARNING Risk of becoming trapped despite reversing function

The reversing function will not react:

- to soft, light and thin objects, e.g. fingers
- towards the end of the closing procedure


In these situations in particular, the reversing function cannot prevent someone being trapped.

Ensure that no body parts are in the closing area.

If someone is trapped:

- press the button on the SmartKey, or
- press or pull the remote operating switch on the driver's door, or
- press the closing or locking button on the trunk lid.

HANDS-FREE ACCESS function

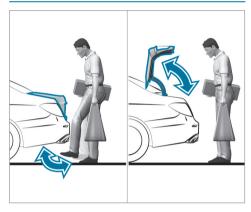

With HANDS-FREE ACCESS you can open, close or interrupt trunk lid movement by performing a kicking movement under the rear bumper.

The kicking movement triggers the opening or closing process alternately.

Observe the notes when opening (\rightarrow page 70) and closing (\rightarrow page 71) the trunk lid.

(i) A warning tone sounds while the trunk lid is opening or closing.

WARNING Risk of burns caused by a hot exhaust system

The vehicle exhaust system can become very hot. If you use HANDS-FREE ACCESS, you could burn yourself by touching the exhaust system.

- Always ensure that you only make a kicking movement within the detection range of the sensors.
- **NOTE** Damage to the vehicle caused by unintentionally opening the trunk lid
- · When using an automatic car wash
- · When using a high pressure cleaner
- Deactivate the function of the SmartKey in these situations.

or


74 Opening and closing

Make sure that the SmartKey is at a minimum distance of 10 ft (3 m) away from the vehicle.

When making the kicking movement, make sure that you are standing firmly on the ground. You could otherwise lose your balance, e.g. on ice.

Observe the following notes:

- The key is behind the vehicle.
- Stand at least 12 in (30 cm) away from the vehicle while performing the kicking movement.
- Do not come into contact with the bumper while making the kicking movement.
- Do not carry out the kicking movement too slowly.
- The kicking movement must be towards the vehicle and back again.

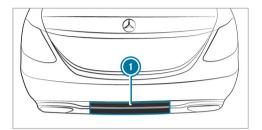

Detection range of the sensors

If several consecutive kicking movements are not successful, wait ten seconds.

System limits

The system may be impaired or may not function in the following cases:

- The sensors are dirty, e.g. due to road salt or snow.
- The kicking movement is made using a prosthetic leg.


The trunk lid could be opened or closed unintentionally, in the following situations:

- A person's arms or legs are moving in the sensor detection range, e.g. when polishing the vehicle or picking up objects.
- Objects are moved or placed behind the vehicle, e.g. the hose of a fuel dispenser, a charging cable or luggage
- Clamping straps, tarp or other coverings are pulled over the bumper.
- A protective mat with a length reaching over the trunk sill down into the detection range of the sensors is used.
- The protective mat is not secured correctly.

Deactivate the function of the key (\rightarrow page 64) or do not carry the key about your person in such situations.

Switching separate trunk locking on or off

If you centrally unlock the vehicle while separate locking is activated, the trunk will remain locked.

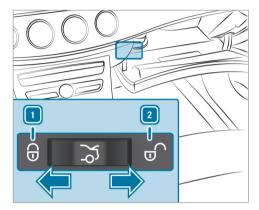


- To switch on: slide the switch to position 1.
- To switch off: slide the switch to position 2.
- If an accident has been detected, the trunk will unlock even if separate locking is switched on.

Unlocking and opening the trunk from inside with the emergency release

Requirements:

• The 12 V vehicle battery is connected and charged.

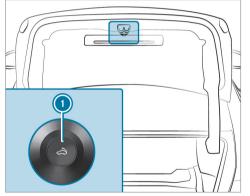

Press the emergency release button 1 briefly.

Activating/deactivating the trunk lid opening height restriction

Multimedia system:

>> Trunk Lid Restriction

This function allows you to avoid bumping the trunk lid on a low garage ceiling, for example.

▶ Activate or deactivate the function.

Side windows

Opening and closing the side windows

WARNING Risk of entrapment when opening a side window

When opening a side window, parts of the body could be drawn in or become trapped between the side window and window frame.

When opening, make sure that nobody is touching the side window.

76 Opening and closing

If someone is trapped, release the button immediately or pull it in order to close the side window again.

WARNING Risk of becoming trapped when closing a side window

When closing a side window, body parts could be trapped in the closing area in the process.

- When closing, make sure that no body parts are in the closing area.
- If someone is trapped, release the button immediately or press the button in order to reopen the side window.
- **WARNING** Risk of becoming trapped when children operate the side windows


Children could become trapped if they operate the side windows, particularly when unattended.

Never leave children unattended in the vehicle.

When leaving the vehicle, always take the SmartKey with you and lock the vehicle.

Requirements

• The power supply or vehicle has been switched on.

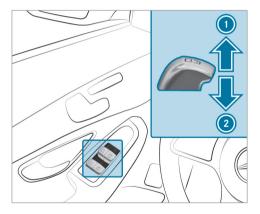

- Close
- Open

The buttons on the driver's door have priority.

- To start automatic operation: press the button beyond the point of resistance or pull and release.
- ➤ **To interrupt automatic operation:** press or pull the ☐ button again.

When the vehicle is switched off, you can continue to operate the side windows.

This function is available for approximately four minutes or until one of the doors is opened.

Automatic side window reversing feature

If an obstacle impedes a side window during the closing process, the side window will open again automatically. The automatic reversing feature is only an aid and is not a substitute for your attentiveness.

During the closing process, make sure that no body parts are in the closing area.

WARNING Risk of becoming trapped despite there being reversing protection on the side window

The reversing function does not react:

- To soft, light and thin objects, e.g. fingers.
- · During resetting.

The reversing function cannot prevent someone from becoming trapped in these situations.

- During the closing process, make sure that no body parts are in the closing area.
- If someone becomes trapped, press the | button to open the side window again.

Convenience opening (ventilating the vehicle before starting a journey)

WARNING Risk of entrapment when opening a side window

When opening a side window, parts of the body could be drawn in or become trapped between the side window and window frame.

- When opening, make sure that nobody is touching the side window.
- Release the button immediately if somebody becomes trapped.

Requirements

- The SmartKey is in the immediate vicinity of the vehicle.
- Press and hold the 🔁 button on the Smart-Kev.

The following functions will be performed:

- The vehicle will be unlocked.
- The side windows will be opened.
- The panoramic sliding roof will be opened.

- The seat ventilation of the driver's seat will. he switched on
- If the roller sunblind of the panoramic sliding sunroof is closed, the roller sunblind will be opened first.
- To interrupt convenience opening: release the ਰ button.
- To continue convenience opening: press and hold the 3 button again.

Convenience closing (closing the vehicle from outside)

WARNING Risk of entrapment due to not paying attention during convenience closing

When the convenience closing feature is operating, parts of the body could become trapped in the closing area of the side window and the sliding sunroof.

► When the convenience closing feature is operating, monitor the entire closing

78 Opening and closing

process and make sure that no body parts are in the closing area.

Requirements

- The SmartKey is in the immediate vicinity of the vehicle.
- Press and hold the 🙃 button on the Smart-Key.

The following functions will be performed:

- · The vehicle will be locked.
- . The side windows will be closed.
- The panoramic sliding sunroof will be closed.
- To interrupt convenience closing: release the button.
- ► To continue convenience closing: press and hold the ⊕ button again.
- (i) Convenience closing also functions with KEY-LESS-GO (→ page 67).

Resolving problems with the side windows

A

WARNING Risk of becoming trapped or fatally injured if reversing protection is not activated

If you close a side window again immediately after it has been blocked, the side window will close with increased or maximum force. The reversing function is then not active and body parts may become trapped.

- Make sure that no parts of the body are in the closing area.
- To stop the closing process, release the button or press the button again to reopen the side window.

One of the side windows cannot be closed and the cause is not obvious.

- Check to see whether any objects are in the window guide.
- Adjust the side windows.

Adjusting the side windows

If a side window is obstructed during closing and reopens again immediately:

Immediately after this, pull and hold the corresponding button again until the side window has closed and hold the button for at least one more second (readjustment).

The side window will be closed without the automatic reversing feature.

If the side window is obstructed again and reopens again immediately:

Immediately after this, pull and hold the corresponding button again until the side window has closed and hold the button for at least one more second (readjustment).
The side window will be closed without the automatic reversing feature.

The side windows cannot be opened or closed using the convenience opening feature.

Possible causes:

The battery in the SmartKey is weak or discharged.

- Check the battery using the indicator lamp $(\rightarrow page 63)$.
- Replace the SmartKey battery, if necessary $(\rightarrow page 65)$.

Sliding sunroof

Opening and closing the sliding sunroof

- (i) The term "sliding sunroof" also refers to the panorama roof with power tilt/sliding panel.
- **WARNING** Risk of becoming trapped when the sliding sunroof is being opened and closed

Body parts may become trapped in the range of movement.

- During opening and closing, make sure that no body parts are in the range of movement
- Release the button immediately if somebody becomes trapped.

or

► Briefly press the button in any direction during automatic operation. The opening or closing process will be stopped.

WARNING Risk of becoming trapped if the sliding sunroof is operated by children

Children operating the sliding sunroof could get caught in the moving parts, particularly if unattended.

- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the key with you and lock the vehicle.
- **WARNING** Risk of becoming trapped when the roller sunblind is being opened and closed

Body parts may become trapped between the roller sunblind and frame or sliding roof.

- When opening or closing, make sure that no body parts are in the roller sunblind's range of movement.
- Release the button immediately if somebody becomes trapped.

or

Briefly press the button in any direction during automatic operation. The opening or closing process will be stopped.

NOTE Malfunction due to snow and ice

Snow and ice may cause the sliding sunroof to malfunction.

- Open the sliding sunroof only if it is free of snow and ice.
- **NOTE** Damage caused by protruding objects

Objects that protrude from the sliding sunroof may damage the seals.


80 Opening and closing

- Do not allow anything to protrude from the sliding sunroof.
- NOTE Damage to the panorama roof with power tilt/sliding panel due to nonapproved roof luggage racks

The panorama roof with power tilt/sliding panel may be damaged by the roof luggage rack if you attempt to open it when using a roof luggage rack not tested and approved for Mercedes-Benz.

When a roof luggage rack is installed, open the panorama roof with power tilt/ sliding panel only if this has been tested and approved for Mercedes-Benz.

The panorama roof with power tilt/sliding panel may be raised to allow ventilation of the vehicle interior.

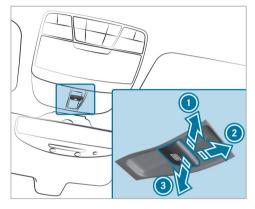

- Raise
- Opening
- 3 Close/lower

Use the button to operate the panorama roof with power tilt/sliding panel and the roller sunblind.

The panorama roof with power tilt/sliding panel can be operated only when the roller sunblind is open.

- Check whether the sliding sunroof can be raised or opened when a roof luggage rack is installed.
- ➤ To start automatic operation: press the button beyond the point of resistance or pull and release it.
- ➤ To interrupt automatic operation: briefly press the button in any direction. The opening/closing process will be stopped.

Vehicles with a panorama roof with power tilt/sliding panel: the automatic raising feature is available only when the sliding sunroof is closed or raised.

Automatic reversing function of the sliding sunroof

If an obstacle obstructs the sliding sunroof during the closing process, the sliding sunroof will open again automatically. The automatic reversing function is only an aid and is not a substitute for your attentiveness. During the closing process, make sure that no body parts are in the closing area.

WARNING Risk of becoming trapped despite the reversing function being active

In particular, the reversing function does not react:

- To soft, light and thin objects, e.g. fingers.
- Towards the end of the closing procedure.
- · During resetting.
- During the closing process, make sure that no body parts are in the closing area.
- Release the button immediately if somebody becomes trapped.

or

 Briefly press the button in any direction during automatic operation.
 The closing process will be stopped.

Automatic reversing function of the roller sunblind If an obstacle obstructs the roller sunblind during the closing process, the roller sunblind will open

again automatically. The automatic reversing function is only an aid and is not a substitute for your attentiveness.

When closing the roller sunblind, make sure that no body parts are in the range of movement.

WARNING Risk of becoming trapped despite reversing function

In particular, the reversing function does not react to soft, light and thin objects, e.g. fingers.

- When closing the roller sunblind, make sure that no body parts are in the range of movement.
- Release the button immediately if somebody becomes trapped.

or

Briefly press the button in any direction during the automatic closing process. The closing process will be stopped.

Automatic functions of the sliding sunroof

i The term "sliding sunroof" also refers to the panoramic sliding sunroof.

Rain closing function when driving Vehicles with a panoramic sliding sunroof: if it starts to rain, the raised sliding sunroof will automatically be lowered while the vehicle is in motion.

Automatic lowering function Vehicles with a panoramic sliding sunroof: if the sliding sunroof is raised at the rear, it will automatically be lowered slightly at higher speeds. At low speeds, it will be raised again automatically.

WARNING Risk of becoming trapped by automatic lowering of the sliding sunroof

At higher speeds, the raised sliding sunroof will automatically be lowered slightly at the rear.

Make sure that nobody reaches into the sliding sunroof's range of movement while the vehicle is in motion.

Opening and closing

- If somebody becomes trapped, briefly push the sliding sunroof button forwards or backwards.
- (i) By pushing or pulling the button, you can interrupt the automatic functions "Rain closing function when driving" and "Automatic lowering".

Rectifying problems with the sliding sunroof

WARNING Risk of becoming trapped or fatal injuries when the sliding sunroof is closed again

If the sliding sunroof is closed again immediately after it has been blocked or reset, it will close with increased force.

- Make sure that no parts of the body are in the closing area.
- Release the button immediately if somebody becomes trapped.

or

Briefly press the button in any direction during the automatic closing process. The closing process will be stopped.

The sliding sunroof cannot be closed and you cannot see the cause.

(i) The term "sliding sunroof" also refers to the panorama roof with power tilt/sliding panel.

If the sliding sunroof is obstructed during closing and reopens again slightly:

Immediately after automatic reversing, pull and hold the button down again to the point of resistance until the sliding sunroof is closed.

The sliding sunroof will be closed with increased force.

If the sliding sunroof is obstructed again and opens again slightly:

Repeat the previous step. The sliding sunroof will be closed again with increased force.

Vehicles with a panorama roof with power tilt/ sliding panel: The sliding sunroof or the roller sunblind is not operating smoothly.

Reset the sliding sunroof and the roller sunblind.

Resetting the sliding sunroof and the roller sunblind

- Pull and hold the button little by little until the sliding sunroof is fully closed.
- Pull and hold the button little by little until the roller sunblind is fully closed.
- Use automatic operation to fully open and then close the sliding sunroof.

Anti-theft protection

Function of the immobilizer

The immobilizer prevents your vehicle from being started without the correct SmartKev.

The immobilizer is automatically activated when the vehicle is switched off, and deactivated when the vehicle is switched on.

When leaving the vehicle, always take the Smart-Key with you and lock the vehicle. Anyone can start the vehicle if a valid SmartKey has been left inside the vehicle.

(i) In the event the engine cannot be started (yet the vehicle's battery is charged), the system is not operational. Contact an authorized Mercedes-Benz Center or call 1-800-FOR-MERCedes (in the USA) or 1-800-387-0100 (in Canada).

ATA (anti-theft alarm system)


Function of the ATA system

If the ATA system is armed, a visual and audible alarm is triggered in the following situations:

- · when a door is opened
- · when the trunk lid is opened
- when the hood is opened
- when interior protection is triggered
 (→ page 84)
- when the tow-away alarm is triggered
 (→ page 84)

The ATA system is armed automatically after approximately ten seconds in the following situations:

- · after the vehicle is locked with the SmartKey
- after the vehicle is locked using KEYLESS-GO

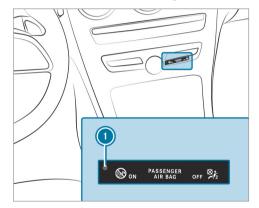

Indicator lamp **(1)** flashes when the ATA system is armed.

The ATA system is deactivated automatically in the following situations:

- after the vehicle is unlocked with the Smart-Key
- after the vehicle is unlocked using KEYLESS-GO
- after the start/stop button is pressed with the SmartKey in the stowage compartment (→ page 130)
- (i) When the Mercedes-Benz emergency call system is active and the alarm stays on for more than 30 seconds, a message is automatically sent to the customer center (→ page 293).
- i In the case of severe battery discharging, the anti-theft alarm system is automatically deactivated to facilitate the next engine start.

Deactivating the ATA

Press the 👵 , 👵 or 🔊 button on the SmartKey.

or

Press the start/stop button with the SmartKey in the stowage compartment (→ page 130)

Deactivating the alarm using KEYLESS-GO

Grasp the outside door handle with the Smart-Key outside the vehicle.

Function of the tow-away alarm

i This function may not be available in all countries.

An audible and visual alarm is triggered if an alteration to your vehicle's angle of inclination is detected while the tow-away alarm is armed.

The tow-away alarm is automatically armed after approximately 60 seconds:

- after the vehicle is locked with the SmartKey
- after the vehicle is locked using KEYLESS-GO

The tow-away alarm is armed only when the following components are closed:

- doors
- · trunk lid

The tow-away alarm is automatically deactivated:

• after the ট্র or ঠ্র্য button on the Smart-Key is pressed

- after the start/stop button is pressed with the SmartKey in the stowage compartment (→ page 130)
- after the vehicle is unlocked using KEYLESS-GO
- when HANDS-FREE ACCESS is in use

Information on collision detection when a vehicle is parked (\rightarrow page 153).

Activating/deactivating tow-away protection

Multimedia system:

- >> Tow-away Protection
- ► Activate ✓ or deactivate ☐ the function.

Tow-away protection is reactivated in the following cases:

- The vehicle is unlocked again.
- A door is opened.
- The vehicle is locked again.

Function of interior protection

i This function may not be available in all countries.

When interior protection is activated, a visual and audible alarm is triggered if movement is detected in the vehicle interior.

Interior protection is activated automatically after approximately ten seconds:

- · after locking the vehicle with the key
- · after locking the vehicle using KEYLESS-GO

Interior protection is activated only when the following components are closed:

- Doors
- Trunk lid

Interior protection is automatically deactivated:

- after pressing the 🕝 or 🐒 button on the key
- after pressing the start/stop button with the key in the stowage compartment (→ page 130)
- after unlocking the vehicle using KEYLESS-GO

• when using HANDS-FREE ACCESS

The following situations can lead to a false alarm:

- when there are moving objects suchas mascots in the vehicle interior
- when a side window is open
- when a panoramic sliding sunroof is open

Activating/deactivating interior protection

Multimedia system:

→ Vehicle ➤ 😝 Vehicle Settings

>> Interior Motion Sensor

▶ Activate or deactivate the function.

Interior protection is reactivated in the following cases:

- The vehicle is unlocked again.
- A door is opened.
- The vehicle is locked again.

Notes on the correct driver's seat position

WARNING Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations in particular:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion
- Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.



Ensure the following when adjusting the steering wheel (1), seat belt (2) and driver's seat (3):

- You are sitting as far away from the driver's airbag as possible, taking the following points into consideration:
- You are sitting in an upright position
- Your thighs are slightly supported by the seat cushion

- Your legs are not fully extended and you can depress the pedals properly
- The back of your head is supported at eye level by the center of the head restraint
- You can hold the steering wheel with your arms slightly bent
- · You can move your legs freely
- You can see all the displays on the instrument cluster clearly
- You have a good overview of the traffic conditions
- Your seat belt sits snugly against your body and passes across the center of your shoulder and across your hips in the pelvic area

Seats

Manual and electrical front seat adjustment (without Seat Comfort Package)

WARNING Risk of becoming trapped if the seats are adjusted by children

Children could become trapped if they adjust the seats, particularly when unattended.

- ▶ When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- Never leave children unattended in the vehicle.

You can adjust the seats when the vehicle is switched off.

WARNING Risk of becoming trapped when adjusting the seat

When you adjust a seat, you or other vehicle occupants could become trapped, e.g. on the seat guide rail.

When adjusting a seat, make sure that no one has any part of their body within the sweep of the seat.

Observe the safety notes on "air bags" and "Children in the vehicle".

WARNING Risk of accident due to the driver's seat not being engaged

The driver's seat may move unexpectedly while driving.

This could cause you to lose control of the vehicle.

Always make sure that the driver's seat is engaged before starting the vehicle.

WARNING Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations in particular:

- . If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- · If you fasten your seat belt while the vehicle is in motion
- Before starting the vehicle: in particular, adjust the driver's seat, head restraint. steering wheel and mirror, and fasten your seat belt.

WARNING Risk of becoming trapped if the seat height is adjusted carelessly

If you adjust the seat height carelessly, you or other vehicle occupants could be trapped and thereby injured.

While moving the seats, make sure that hands or other body parts do not get under the lever assembly of the seat adjustment system.

WARNING Risk of injury due to head restraints not being installed or being adjusted incorrectly

If head restraints have not been installed or have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or when braking.

- Always drive with the head restraints installed.
- Before driving off, make sure for every vehicle occupant that the center of the head restraint supports the back of the head at about eye level.

Do not rotate the head restraints on the front and rear seats. Otherwise, you will not be able to adjust the height and angle of the head restraints correctly.

Adjust the head restraint fore-and-aft position so that it is as close as possible to the back of your head.

WARNING Risk of injury or death due to an incorrect seat position

The seat belt does not offer the intended level of protection if you have not moved the seat backrest to an almost vertical position.

In particular, you could slip beneath the seatbelt and become injured.

- Adjust the seat properly before beginning your journey.
- Always ensure that the seat backrest is in an almost vertical position and that the shoulder belt is routed across the center of your shoulder.

WARNING Risk of injury due to excessive strain on the grab handle

If you apply your full body weight to the grab handle or pull it abruptly, the grab handle may be damaged or become loose from its anchorage.

Use the grab handles only to stabilize the seating position or to assist in getting in and out of the seat.

WARNING Risk of injury or death due to objects under the co-driver seat


Objects trapped under the co-driver seat can interfere with the function of the automatic co-driver airbag shutoff or damage the system.

- Do not store any objects under the codriver seat.
- When the co-driver seat is occupied, make sure that no objects are trapped under the co-driver seat.

NOTE Damage to the seats when moving the seats back


The seats may be damaged by objects when moving the seats back.

When moving the seats back, make sure that there are no objects in the footwell, under or behind the seats.

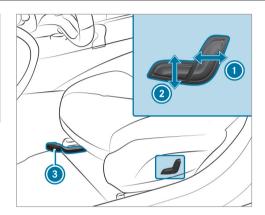

- Seat backrest inclination
- Seat height
- Seat fore-and-aft position
- ➤ To adjust the seat fore-and-aft position: lift lever ③ and slide the seat into the desired position.
- Make sure that the seat is engaged.

Electrical front seat adjustment

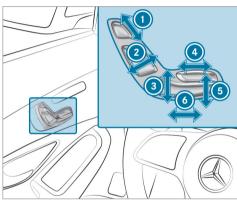


- Head restraint height
- Seat backrest inclination
- Seat height
- Seat cushion length
- Seat cushion inclination
- Seat fore-and-aft position

90 Seats and stowing

Save the settings with the memory function (→ page 99). Use buttons ① to ③ to adjust the contour of the backrest.

Adjusting the 4-way lumbar support

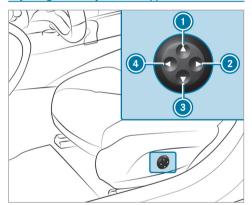

- Higher
- Softer
- 3 Lower
- Firmer

Head restraints

Manual adjustment of front seat head restraints

WARNING Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations in particular:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion
- Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.


WARNING Risk of injury due to head restraints not being installed or being adjusted incorrectly

If head restraints have not been installed or have not been adjusted correctly, there is an increased risk of injury in the head and neck area, e.g. in the event of an accident or when braking.

- Always drive with the head restraints installed.
- ▶ Before driving off, make sure for every vehicle occupant that the center of the head restraint supports the back of the head at about eye level.

Do not rotate the head restraints on the front and rear seats. Otherwise, you will not be able to adjust the height and angle of the head restraints correctly.


Adjust the head restraint fore-and-aft position so that it is as close as possible to the back of your head.

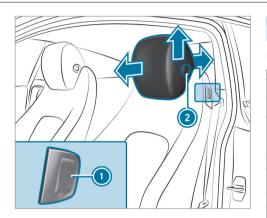

- To raise: pull the head restraint up.
- To lower: press release knob 1 in the direction of the arrow and push the head restraint down.
- To move forwards: pull the head restraint forwards.
- To move backwards: press and hold release knob 2.


Push the head restraint backwards and let go of release knob 2.

Mechanical adjustment of rear head restraints

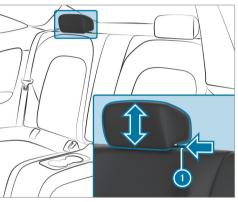

- To raise: pull the head restraint up.
- To lower: press release knob (1) in the direction of the arrow and push the head restraint down.

Installing/removing the rear seat head restraints Removing

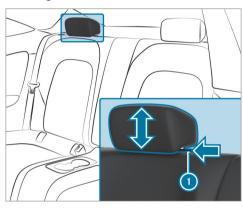

- Release the rear seat backrest and fold it forwards slightly (\rightarrow page 102).
- Pull the head restraint upwards as far as it will g0.
- Push release knob (1) in the direction of the arrow and pull out the head restraint.

92 Seats and stowing

Installing

- Insert the head restraint such that the notches on the bar are on the left when viewed in the direction of travel.
- Push the head restraint down until it engages.
- Fold the rear seat backrest back until it engages.

Configuring the seat settings

Multimedia system:

- → Comfort → Seat Comfort
- Select a seat.

Adjusting the backrest side bolsters

- Select Side Bolsters.
- Adjust the air cushions.

Adjusting the backrest contour in the lumbar region of the seat backrest (lumbar)

- Select Lumbar.
- Adjust the air cushions.

Selecting the massage program for the front seats

Multimedia system:

- → Vehicle → 🗾 Seats
- Select Driver's Seat or Passenger.
- Select Massage.
- Select a massage program.
 The massage program runs for approximately
 9 to 15 minutes, depending on the setting.
- To set the massage intensity: switch High Intensity on ✓ or off □.

Resetting seat settings


Multimedia system:

- → Vehicle → 🗾 Seats → Reset
- Select Yes or No.

Depending on whether the settings for the driver's or front passenger seat are selected, only the selected seat can be reset.

Folding the front seat backrest forwards/back (vehicles with memory function)

If you fold the seat backrest forwards, the seat will move forwards with the EASY-ENTRY function. This allows passengers to get into and out of the rear passenger compartment comfortably.

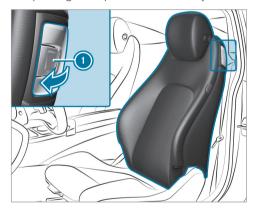

- To fold forward: pull seat release handle 1 and fold the seat backrest forwards as far as it will go.
 - The seat will automatically move to the foremost position.
- To fold back: swing the seat backrest back horizontally.

If the seat backrest is not engaged, this will be shown on the multifunction display on the instrument cluster. A warning tone will also sound.

The seat will automatically move to the stored position.

Folding the front seat backrest forwards/backwards (vehicles without memory function)

Folding forwards

If you fold the seat backrest forwards, the seat will move forwards with the FASY-FNTRY function. This allows passengers to get into and out of the rear passenger compartment comfortably.



- If necessary, release the head restraint and push it down.
- Pull seat release handle (1) and fold the seat backrest forwards until the seat backrest engages.
- Push the seat as far forwards as it will go.

Folding back

- Push the seat back horizontally by the seat backrest until it reaches the seat position that was previously set.
- Fold the seat backrest back until it engages. Do so as smoothly as possible. If the seat backrest is not engaged, this will be shown on the multifunction display on the instrument cluster. A warning tone will also sound.
- After the seat backrest has been folded back. check the position of the head restraint and set it to the correct position.

If the set seat position can no longer be reached. e.g. because of luggage in the rear footwell or because occupants have entered the rear passenger compartment of the vehicle:

Pull seat release handle (1) again and return the seat backrest to an upright position. The seat will lock in the new fore-and-aft position.

Switching the seat heating on/off



WARNING Risk of burns due to repeatedly switching on the seat heating

Repeatedly switching on the seat heating can cause the seat cushion and seat backrest padding to become very hot.

In particular, the health of persons with limited temperature sensitivity or a limited ability to react to high temperatures may be affected or they may even suffer burn-like injuries.

Do not repeatedly switch on the seat heating.

To protect against overheating, the seat heating may be temporarily deactivated after it has been switched on repeatedly.


NOTE Damage to the seats caused by objects or documents when the seat heating is switched on

When the seat heating is switched on, overheating may occur due to objects or documents placed on the seats, e.g. seat cushions or child seats. This could cause damage to the seat surface.

Make sure that no objects or documents are on the seats when the seat heating is switched on.

Requirements:

• The power supply is switched on.

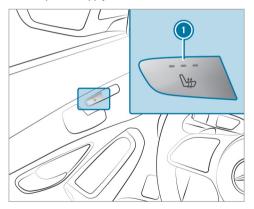


- Press button repeatedly until the desired heating level is set.
 Depending on the heating level, up to three indicator lamps will light up. If all indicator lamps are off, the seat heating is switched off.
- (i) The seat heating will automatically switch down from the three heating levels after 8, 10 and 20 minutes until the seat heating is switched off.

Switching the seat ventilation on/off

Requirements:

· The power supply is switched on.

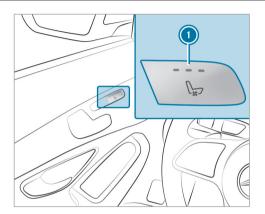

Press button (1) repeatedly until the desired blower setting has been reached. Depending on the blower setting, up to three indicator lamps will light up. If all indicator lamps are off, the seat ventilation is switched off.

Steering wheel

Adjusting the steering wheel mechanically

WARNING Risk of accident due to adjusting the vehicle settings while the vehicle is in motion


You could lose control of the vehicle in the following situations in particular:

- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion
- Before starting the vehicle: in particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten vour seat belt.
- WARNING Risk of entrapment for children when adjusting the steering wheel

Children could injure themselves if they adjust the steering wheel.

- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.

Unlocking

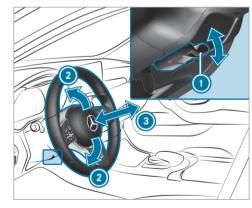

Fold release lever 1 down as far as it will go.

96 Seats and stowing


Adjust height **2** and distance **3** to the steering wheel.

Locking

- Fold release lever 1 up as far as it will go.
- Check and make sure that the steering column is locked by moving the steering wheel.

Adjusts the steering wheel electrically

The steering wheel can be adjusted when the power supply is disconnected.

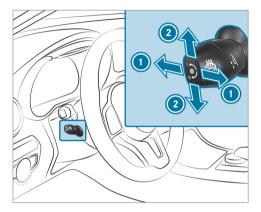


- 1 To adjust the distance to the steering wheel
- Adjusting the height
- Save the settings with the memory function (→ page 99).

Switching the steering wheel heater on/off

Requirements:

• The vehicle is switched on.

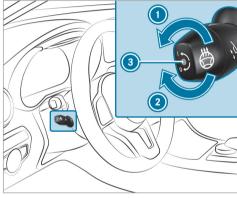

Turn the lever in the direction of arrow o or 2.

If indicator lamp (3) lights up, the steering wheel heater is switched on.

When you switch the vehicle off, the steering wheel heater will switch off.

Easy entry and exit feature Using the easy entry and exit feature

WARNING Risk of accident when pulling away during the adjustment process of the easy entry and exit feature

You could lose control of the vehicle.

Always wait until the adjustment process is complete before driving off.

WARNING Risk of becoming trapped during adjustment of the easy entry and exit feature

You and other vehicle occupants - particularly children - could become trapped.

Ensure that no one has a body part in the sweep of the steering wheel or driver's seat.

If there is a risk of becoming trapped by the steering wheel:

Move the adjustment lever of the steering wheel. The adjustment process will be stopped.

If there is a risk of becoming trapped by the driver's seat:

- Press the seat adjustment switch. The adjustment process will be stopped.
- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the SmartKev with you and lock the vehicle.

Vehicles with memory function: you can stop the adjustment process by pressing one of the memory function position switches.

WARNING Risk of becoming trapped if children activate the easy entry and exit feature-

Children could become trapped if they activate the easy entry- and exit feature, particularly when unattended.

- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the SmartKev with you and lock the vehicle.

If the easy entry and exit feature is active, the steering wheel will move upwards and the driver's seat will move back in the following situations:

- You switch off the vehicle when the driver's door is open.
- You open the driver's door when the vehicle is switched off.
- (i) The steering wheel will then move upwards only if it is not already as high as it will go. The driver's seat can be moved back only if it is not already in the rearmost seat adjustment range.

98 Seats and stowing

The steering wheel and the driver's seat will move back to the last driving position in the following cases:

- You switch the power supply or the vehicle on when the driver's door is closed
- You close the driver's door when the vehicle is switched on.

The last driving position will be saved when:

- You switch off the vehicle.
- **Vehicles with memory function:** you save the seat settings via the memory function.

Vehicles with memory function: press one of the memory function position switches to stop the adjustment process.

Adjusting the easy entry and exit feature

Multimedia system:

► Vehicle ➤ Property Property

Select Steering Wheel & Seat, Steering Wheel Only or Off.

Memory function

Function of the memory function

WARNING Risk of an accident if the memory function is used while driving

If you use the memory function on the driver's side while driving, you could lose control of the vehicle as a result of the adjustments being made.

Only use the memory function on the driver's side when the vehicle is stationary.

WARNING Risk of entrapment when adjusting the seat with the memory function

When the memory function adjusts the seat or steering wheel, you and other vehicle occupants – particularly children – could become trapped.

 During the adjusting process of the memory function, ensure that no body parts are in the sweep of the seat or the steering wheel.

If somebody becomes trapped, immediately release the memory function position button.

The adjustment process is stopped.

WARNING Risk of entrapment if the memory function is activated by children

Children could become trapped if they activate the memory function, particularly when unattended.

- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.

You can use the memory function when the vehicle is switched off.

Seat adjustments for up to three people can be stored and called up using the memory function.


You can save settings for the following systems:

· Seat, backrest and head restraint

- · Steering wheel
- Outside mirrors
- Head-up display

Operating the memory function

Storing

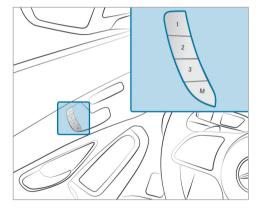

Set the desired position for all systems.

- Briefly press memory button M and then press preset position 1, 2 or 3 within three seconds
 - An acoustic signal sounds. The settings are stored.
- To call up: press and hold preset position button 1, 2 or 3 until all the systems are in the stored position.
- When you release the preset position button. steering wheel, the seat and mirror setting functions stop immediately. The head-up display continues to be adjusted.

Stowage areas

Notes on loading the vehicle

DANGER Risk of exhaust gas poisoning

Combustion engines emit poisonous exhaust gases such as carbon monoxide. Exhaust gases can enter the vehicle interior if the trunk lid is open when the engine is running, especially if the vehicle is in motion.

- Always switch off the engine before opening the trunk lid.
- Never drive with the trunk lid open.

WARNING Risk of injury from unsecured items in the vehicle

If objects, luggage or loads are not secured or not secured sufficiently, they could slip, tip over or be thrown around and thereby hit vehicle occupants.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- Always stow objects in such a way that they cannot be thrown around.
- Before the journey, secure objects, luggage or loads against slipping or tipping over.

WARNING Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open storage spaces and mobile phone brackets cannot always retain all objects they contain.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- Always stow objects in such a way that they cannot be thrown around in such situations.
- Always make sure that objects do not protrude from storage spaces, parcel nets or storage nets.
- Close the lockable storage spaces before starting a journey.
- Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the trunk.

Vehicles with automatic front passenger air bag shutoff: objects trapped under the front passenger seat may interfere with the function of the automatic front passenger air bag shutoff or damage the system. Please observe the notes on the function of the automatic front passenger air bag shutoff (\rightarrow page 46).

WARNING - Risk of accident or injury when using the cup holder while the vehicle is moving

The cup holder cannot secure containers while the vehicle is moving.

If you use a cup holder while the vehicle is moving, the container may be flung around and liquids may be spilled. The vehicle occupants may come into contact with the liquid and if it is hot, they could be scalded. You could be distracted from traffic conditions and you may lose control of the vehicle.

- Only use the cup holder when the vehicle is stationary.
- Only use the cup holder for containers of the right size.

- Close the container, particularly if the liquid is hot.
- NOTE Damage to the handle in the trunk floor

If the handle in the trunk is left protruding, the handle may be damaged.

- Before closing the trunk lid, detach the handle and press it down closed again.
- I NOTE Damage to the stowage compartment under the ashtray due to intense heat

The stowage compartment under the ashtray is not heat resistant and could be damaged if you rest a lit cigarette on it.

Make sure that the ashtray is fully engaged.

WARNING - Risk of fire and injury from hot cigarette lighter

You can burn yourself if you touch the hot heating element or the socket of the cigarette lighter.

In addition, flammable materials may ignite if:

- vou drop the hot cigarette lighter
- a child holds the hot cigarette lighter to objects, for example
- ► Always hold the cigarette lighter by the knob.
- Always make sure that the cigarette lighter is out of reach of children.
- Never leave children unattended in the vehicle.

WARNING Risk of burns from the tailpipe and tailpipe trims

The exhaust tailpipe and tailpipe trims can become very hot. If you come into contact with these parts of the vehicle, you could burn vourself.

- Always be particularly careful around the tailpipe and the tailpipe trims and supervise children especially closely in this area
- Allow vehicle parts to cool down before touching them.

The driving characteristics of your vehicle are dependent on the distribution of the load within the vehicle. You should bear the following in mind when loading the vehicle:

- Never exceed the permissible gross mass or the gross axle weight rating for the vehicle (including occupants). The values are specified on the vehicle identification plate on the vehicle's B-pillar.
- the load must not protrude above the upper edge of the seat backrests.
- · always place the load behind unoccupied seats if possible.
- secure the load using the tie-down eves and distribute the load evenly.

Notes on driving with a roof load

- Evenly distribute the roof load, and place heavy objects at the bottom. Also comply with the notes on loading the vehicle (\rightarrow page 99).
- Drive attentively, and avoid suddenly pulling away, braking and steering as well as rapid cornering.
- When transporting roof loads and when the vehicle is fully loaded or fully occupied, select drive programs **E** and **C**. These are designed to focus on stability (\rightarrow page 138).

Stowage spaces in the vehicle interior

Overview of the front stowage compartments



- Stowage spaces in the doors
- 2 Stowage compartment in the armrest with a multimedia and USB connection
- 3 Stowage compartment in the front center console with USB port
- Glove box

Through-loading feature in the rear bench seat (EASY-PACK Quickfold)

Folding the rear seat backrest forwards

WARNING Risk of accident if the rear bench seat, rear seat and seat backrest are not engaged

The rear bench seat, rear seat and seat backrest may fold forwards, even when you are driving.

- As a result, the vehicle occupant will be pushed into the seat belt with increased force. The seat belt will not be able to protect as intended and could cause additional injury.
- Objects or loads in the trunk or cargo compartment will not be restrained by the seat backrest.
- Make sure that the rear bench seat, the rear seat and the seat backrest are engaged before every trip.


If the left and right seat backrests are not engaged and locked in place, this will be shown on the multifunction display on the instrument cluster. A warning tone will also sound.

If the center seat backrest is not engaged and locked in place, the lock verification indicator will be red.

Requirements:

 To fold the center seat backrest forwards: the center seat backrest has been unlocked.


You can fold the center and outer seat backrests forwards separately.

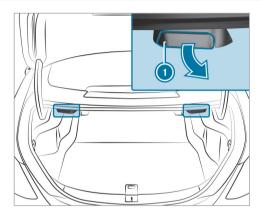

Vehicles without a memory function: Move the driver's or front passenger seat forwards, if necessary.

Vehicles with a memory function: If necessary, when the seat backrest in the rear passenger compartment is folded forward, the corresponding front seat will move forwards slightly to avoid a collision.

- If necessary, fully insert the head restraints into the rear seat backrest
- To fold the left and right seat backrests forward: pull right or left release handle 1.

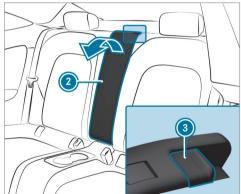

- To fold the center seat backrest forwards: pull release catch (3) of seat backrest (2) forwards.
- Fold seat backrest 2 forwards.

If necessary, reset the driver's or front passenger seat.

Folding back the rear seat backrest

WARNING Risk of becoming trapped when adjusting the seats


When you adjust a seat, you may trap yourself or a vehicle occupant.

- When adjusting a seat, make sure that no one has any body parts in the sweep of the seat.
- **NOTE** Damage caused by trapping the seat belt when folding back the seat backrest

The seat belt could become trapped and thus damaged when the seat backrest is folded back.

- Make sure that the seat belt is not trapped when folding back the seat backrest.
- Move the driver's or front passenger seat forwards, if necessary.

104 Seats and stowing

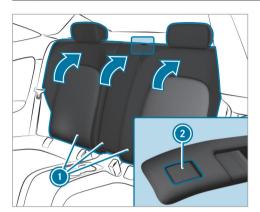

Fold the corresponding seat backrest (1) back until it engages.

Left and right seat backrests: if the seat backrest is not engaged and locked in place, this will be shown on the multifunction display on the instrument cluster.

A warning tone will also sound.


Center seat backrest: if the seat backrest is not engaged and locked in place, the red lock verification indicator (2) will be visible.

Locking the release catch of the center rear seat backrest

Requirements:

• The left and center seat backrests are engaged and joined together.


You can lock the center seat backrest release catch if you want to secure the trunk against unauthorized access. The center seat backrest can then be folded forwards only together with the left seat backrest.

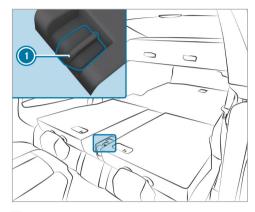

- Fold the center and left seat backrests forwards.

Overview of the tie-down eyes

Observe the notes on loading the vehicle $(\rightarrow page 99)$.

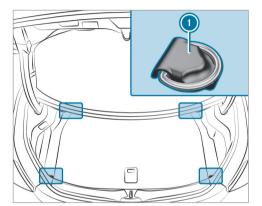

1 Tie-down eyes (vehicles with through-loading feature in the rear bench seat)

Using the bag hooks


WARNING Risk of injury when using bag hooks with heavy objects

The bag hooks cannot restrain heavy objects or items of luggage.

Objects or items of luggage may be flung around and hit vehicle occupants.

- Only hang light objects on the bag hooks.
- Never hang hard, sharp-edged or fragile objects on the bag hooks.

Subject the bag hooks to a maximum load of 6.6 lbs (3 kg) and do not attach any goods to them.

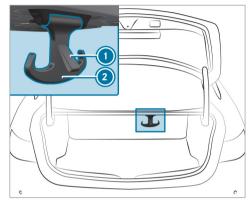

- Pull bag hook 2 down by tab 1.
- (i) Observe the notes on loading the vehicle $(\rightarrow page 99).$

Attaching the parcel net

A WADNING D

WARNING Risk of injury due to objects being stowed incorrectly


If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open storage spaces and mobile phone brackets cannot always retain all objects they contain.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

- Always stow objects in such a way that they cannot be thrown around in such situations.
- Always make sure that objects do not protrude from storage spaces, parcel nets or storage nets.
- Close the lockable storage spaces before starting a journey.

Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the trunk.

Observe the notes on loading the vehicle.

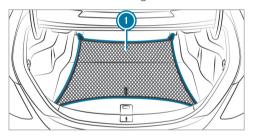

- Vehicles with through-loading feature in the rear bench seat: fold up the tie-down eyes.
- Hook parcel net 1 into the front and rear tiedown eyes.
- Vehicles without a through-loading feature in the rear bench seat: hook the rings into the parcel net hooks ①.

Place the rings into the hooks on the trunk floor.

Attaching a roof luggage rack

A

WARNING Risk of accident due to exceeding the maximum roof load

The vehicle center of gravity and the usual driving characteristics as well as the steering and braking characteristics alter.

If you exceed the maximum roof load, the driving characteristics, as well as steering and braking, will be greatly impaired.

Never exceed the maximum roof load and adjust your driving style.

You will find information on the maximum roof load in the "Technical data" section.

NOTE Damage to the vehicle due to not observing the maximum permitted headroom clearance

If the vehicle height is greater than the maximum permitted headroom clearance, the roof and other parts of the vehicle may be damaged.

- Observe the signposted headroom clearance.
- If the vehicle height is greater than the permitted headroom clearance, do not enter
- Observe the changed vehicle height with add-on roof equipment.
- **NOTE** Vehicle damage from non-approved roof luggage racks

The vehicle could be damaged by roof luggage racks that have not been tested and approved for Mercedes-Benz.

Use only roof luggage racks tested and approved for Mercedes-Benz.


- Depending on the vehicle equipment, ensure that the sliding sunroof can be fully raised when the roof luggage rack is installed
- Depending on the vehicle equipment. ensure that the trunk lid can be fully opened when the roof luggage rack is installed.
- Position the load on the roof luggage rack in such a way that the vehicle will not sustain damage even when it is in motion.
- **NOTE** Damage to the panorama roof with power tilt/sliding panel due to nonapproved roof luggage racks

The panorama roof with power tilt/sliding panel may be damaged by the roof luggage rack if you attempt to open it when using a roof luggage rack not tested and approved for Mercedes-Benz.

When a roof luggage rack is installed, open the panorama roof with power tilt/

sliding panel only if this has been tested and approved for Mercedes-Benz.

The panorama roof with power tilt/sliding panel may be raised to allow ventilation of the vehicle interior.

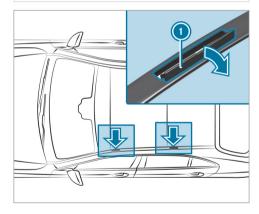

108 Seats and stowing

! NOTE Damage to the covers

The covers may be damaged and scratched when being opened.

- ▶ Do not use metallic or hard objects.
- Carefully fold covers upwards in the direction of the arrow
- Secure the roof luggage rack to the fastening points beneath covers (1).
- Comply with the installation instructions of the roof luggage rack manufacturer.
- Secure the load on the roof luggage rack.


Sockets

Using the 12 V socket

Requirements

 Only devices up to a maximum of 180 W (15 A) are permissible. Depending on the vehicle equipment, the vehicle has the following 12 V sockets:

- In the stowage compartment in the front center console
- In the front passenger footwell
- In the stowage compartment in the center console of the rear passenger compartment

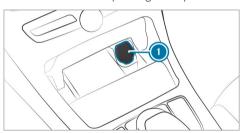

Example: 12 V socket in the stowage compartment in the front center console

- Fold up socket cap 1.
- Insert the plug of the device.

If you have connected a device to the 12 V socket, leave the cover of the stowage compartment open.

Wireless charging of the mobile phone and connection with the exterior antenna

Notes on wirelessly charging a mobile phone

A

WARNING Risk of injury due to objects being stowed incorrectly

If objects in the vehicle interior are stowed incorrectly, they can slide or be thrown around and hit vehicle occupants. In addition, cup holders, open stowage spaces and mobile phone receptacles cannot always retain all objects within.

There is a risk of injury, particularly in the event of sudden braking or a sudden change in direction.

Always stow objects so that they cannot be thrown around in such situations.

- Always make sure that objects do not protrude from stowage spaces, parcel nets or stowage nets.
- Close the lockable stowage spaces before starting a journey.
- Always stow and secure heavy, hard, pointed, sharp-edged, fragile or bulky objects in the trunk/cargo compartment.

Observe the notes on loading the vehicle.

WARNING Risk of fire from placing objects in the mobile phone storage compartment

Placing other objects in the mobile phone storage compartment could constitute a fire hazard.

Apart from a mobile phone, do not place any other objects in the mobile phone storage compartment, especially those made of metal.

NOTE Damage to objects caused by placing them in the mobile phone storage compartment

If objects are placed in the mobile phone storage compartment, these may be damaged by electromagnetic fields.

- ▶ Do not place credit cards, storage media, ski passes or other objects sensitive to electromagnetic fields in the mobile phone storage compartment.
- **NOTE** Damage to the mobile phone stowage compartment caused by liquids

If liquids enter the mobile phone stowage compartment, the compartment may be damaged.

Ensure that no liquids enter the mobile phone stowage compartment.

The following notes on wirelessly charging a mobile phone must be observed:

- Depending on the vehicle equipment, the mobile phone is connected to the vehicle's exterior antenna via the charging module.
- The charging function and wireless connection of the mobile phone to the vehicle's exterior antenna are only available if the ignition is switched on.
- It may not be possible to charge small mobile phones in every part of the mobile phone stowage compartment.
- It may not be possible to charge large mobile phones that do not rest flat in the mobile phone stowage compartment or connect them to the vehicle's exterior antenna.
- The mobile phone may heat up during the charging process. In particular, this may depend on the applications (apps) currently open in the background.
- To ensure more efficient charging and connection with the vehicle's exterior antenna. remove the protective cover from the mobile

110 Seats and stowing

phone. Protective covers that are necessary for wireless charging are an exception.

Charging a mobile phone wirelessly

Requirements

• The mobile phone is suitable for wireless charging.

A list of compatible mobile phones can be found at: https://www.mercedes-benz-mobile.com.



Place the mobile phone as close to the center of mat as possible with the display facing upwards.

When the charging symbol is shown in the multimedia system, the mobile phone is being charged.

Malfunctions during the charging process are shown on the central display.

(i) The mat can be removed by the tab for cleaning, e.g. using clean, lukewarm water.

Installing/removing the floor mats


WARNING Risk of accident due to objects in the driver's footwell

Objects in the driver's footwell may impede pedal travel or block a depressed pedal.

This jeopardizes the operating and road safety of the vehicle.

Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.

- Always install the floor mats securely and as prescribed in order to ensure that there is always sufficient room for the pedals.
- Do not use loose floor mats and do not place floor mats on top of one another.

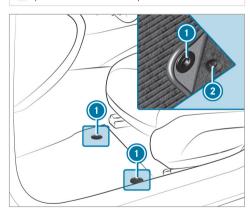

To install: slide the corresponding seat backwards and lay the floor mat in the footwell.

- Press studs 1 onto holders 2.
- Adjust the corresponding seat.
- ► To remove: pull the floor mat off the holders
- Remove the floor mat.

112 Light and visibility


Exterior lighting

Information about lighting systems and your responsibility

The various lighting systems of the vehicle are only aids. The driver of the vehicle is responsible for correct vehicle illumination in accordance with the prevailing light and visibility conditions, legal requirements and traffic situation.

Light switch

Operating the light switch

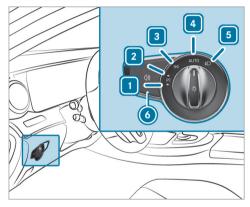

- **1 ►P** Left-hand parking lights
- P ∈ → Right-hand parking lights
- 3 | | Standing lights and license plate lighting
- Automatic driving lights (preferred light switch position)

- 5 D Low beam/high beam

When low beam is activated, the [305] indicator lamp for the standing lights will be deactivated and replaced by the [30] low-beam indicator lamp.

- Always park your vehicle safely using sufficient lighting, in accordance with the relevant legal stipulations.
- ! NOTE Battery discharging by operating the standing lights

Operating the standing lights over a period of hours puts a strain on the battery.

► Where possible, switch on the right P or left P parking light.

If the battery is insufficiently charged, the standing lights or parking lights will be switched off automatically to facilitate the next engine start.

The exterior lighting (except standing and parking lights) will switch off automatically when the driver's door is opened.

• Observe the notes on surround lighting $(\rightarrow page 117)$.

Automatic driving lights function

The standing lights, low beam and daytime running lights are switched on automatically depending on the ignition status and the ambient light.

WARNING Risk of accident when the low beam is switched off in poor visibility

When the light switch is set to AUTO, the low beam may not be switched on automatically if there is fog, snow or other causes of poor visibility such as spray.

In such cases, turn the light switch to

The automatic driving lights are only an aid. You are responsible for vehicle lighting.


Switching the rear fog light on/off

Requirements

- The light switch is in the or or auto position.
- ► Press 0≢ button.

Please observe the country-specific laws on the use of rear fog lights.

Operating the combination switch for the lights

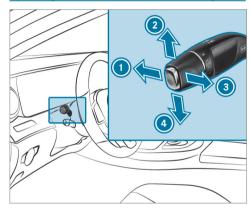

- High beam
- Turn signal light, right
- Headlamp flashing
- Turn signal light, left
- Use the combination switch to select the desired function.

114 Light and visibility

Switching on high beam

- Turn the light switch to the or autoposition.
- Push the combination switch beyond the point of resistance in the direction of arrow ①.

 When the high beam is activated, the indicator lamp for low beam ② will be deactivated and replaced by the indicator lamp for high beam ③.

Switching off high beam

Move the combination switch back to its starting position.

Headlamp flashing

Pull the combination switch in the direction of arrow <a>(3).

Turn signal light

To indicate briefly: push the combination switch briefly to the point of resistance in the direction of arrow ② or ④.


The corresponding turn signal light will flash three times.

To indicate permanently: push the combination switch beyond the point of resistance in the direction of arrow (2) or (4).

Vehicles with Active Lane Change Assist:

- A turn signal indicator activated by the driver may continue to operate for the duration of the lane change.
- If the driver indicated directly beforehand but a lane change was not immediately possible, the turn signal indicator may activate automatically.

Activating/deactivating the hazard warning lights

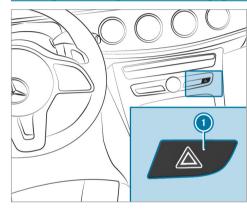


Press button ①.

The hazard warning lights will switch on automatically if:

· the air bag has been deployed.

Cornering light

Cornering light function

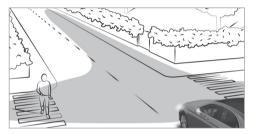

The cornering light improves the illumination of the road over a wide angle in the turning direction, enabling better visibility on tight bends, for example. The cornering light can be activated only when the low beam is switched on.

The function is active in the following cases:


• At speeds below 25 mph (40 km/h) when the turn signal light is switched on or the steering wheel is turned

 At speeds between 25 mph (40 km/h) and 43 mph (70 km/h) and when the steering wheel is turned

Traffic circle and intersection function: the cornering light will be activated on both sides based on an evaluation of the vehicle's current GPS position. It will remain active until after the vehicle has left the traffic circle or the intersection.

Active headlamps

Active headlamps function

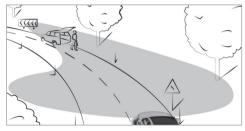

· The headlamps follow the steering movements.

• Relevant areas are better illuminated during a journey.

The functions are active when the low beam is switched on

Depending on the vehicle's equipment, the course of the lane in which you are driving will also be evaluated and the active headlamps function will adjust the light in advance.

Adaptive Highbeam Assist

Adaptive Highbeam Assist function

WARNING Risk of accident despite Adaptive Highbeam Assist

Adaptive Highbeam Assist does not react to:

- Road users without lights, e.g. pedestrians
- Road users with poor lighting, e.g. cyclists
- Road users whose lighting is obstructed, e.g. by a barrier

On very rare occasions, Adaptive Highbeam Assist may fail to recognize other road users

116 Light and visibility

with their own lighting, or may recognize them too late.

In these, or in similar situations, the automatic high beam will not be deactivated or will be activated despite the presence of other road users.


Always observe the road and traffic conditions carefully and switch off the high beam in good time.

Adaptive Highbeam Assist cannot take into account road, weather or traffic conditions.

Detection may be restricted in the following cases:

- In poor visibility, e.g. fog, heavy rain or snow
- If there is dirt on the sensors or the sensors are obscured

Adaptive Highbeam Assist is only an aid. You are responsible for adjusting the vehicle's lighting to the prevailing light, visibility and traffic conditions.

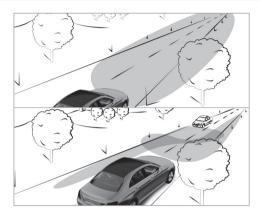

Adaptive Highbeam Assist automatically switches between the following types of light:

- Low beam
- · High beam

At speeds greater than 19 mph (30 km/h):

• If no other road users are detected, the high beam will switch on automatically.

The high beam will switch off automatically in the following cases:

- At speeds below 16 mph (25 km/h)
- If other road users are detected
- · If street lighting is sufficient
- The system's optical sensor is located behind the windshield near the overhead control panel.

Switching Adaptive Highbeam Assist on/off

Switching on

- Turn the light switch to the AUTO position.
- Switch on the high beam using the combination switch.

If Adaptive Highbeam Assist is activated, the indicator lamp will light up on the central display section of the instrument display.

Switching off

Switch off the high beam using the combination switch.

Switching the daytime running lights on/off

Multimedia system:

- → Vehicle → 🖼 Light Settings
- >> Daytime Run. Lights
- ▶ Activate or deactivate the function.

Setting the exterior lighting switch-off delay time

Multimedia system:

- → Vehicle → 🔂 Light Settings
- >> Ext. Light Switch Off
- Set the switch-off delay time.

Setting the surround lighting

Multimedia system:


- → Vehicle → 🙀 Light Settings
- >> Locator Lighting
- ▶ Activate or deactivate the function.

If the surround lighting is switched on, the exterior lighting remains lit for 40 seconds after the vehicle is unlocked. When you start the vehicle, the

surround lighting is deactivated and the automatic driving lights are activated.

Interior lighting

Adjusting the interior lighting

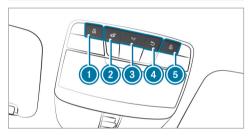

- A Front left reading lamp
- Automatic interior lighting control
- Front interior lighting
- Rear interior lighting
- 新 Front right reading lamp
- To switch on or off: press button 1 6 accordingly.

Adjusting the ambient lighting

Multimedia system:

- → Vehicle → 🔂 Light Settings
- ➤ Ambient Light

Setting the color

- Select Color.
- Set a color.

Adjusting the brightness

- Select Brightness.
- Set a brightness value.

Activating the brightness for zones

- Select Brightness Zones.
- Activate **✓** or deactivate ☐ the function. The Display, Front and Rear zones can be set separately.


118 Light and visibility

Setting the interior lighting switch-off delay time

Multimedia system:

- → Vehicle → 🙀 Light Settings
- >> Int. Light Switch Off
- Set the switch-off delay time.

Windshield wiper and windshield washer system Switching the windshield wiper on/off

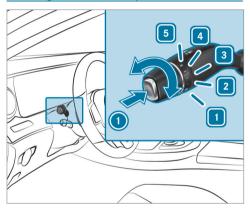

- 1 0 Windshield wiper off
- 2 ••• Intermittent wiping, normal
- 3 Intermittent wiping, frequent
- **4** ☐ Continuous wiping, slow
- 5 Continuous wiping, fast

- Turn the combination switch to the corresponding position 1 5.
- ➤ Single wipe/washing: push the button on the combination switch in the direction of arrow
 - Single wipe
 - Wipes with washer fluid
- (i) Observe the notes on washing the vehicle in a car wash (→ page 328).

Replacing the windshield wiper blades

★ WARNING Risk of becoming trapped if the windshield wipers are switched on while wiper blades are being replaced

If the windshield wipers begin to move while you are changing the wiper blades, you can be trapped by the wiper arm.


Always switch off the windshield wipers and the ignition before changing the wiper blades.

Moving the wiper arms into the replacement position

- Switch the vehicle on and then off again immediately.
- Within around 15 seconds, press and hold the button on the combination switch for approximately three seconds (\rightarrow page 118). The wiper arms will move into the replacement position.


Removing the wiper blades

Fold the wiper arms away from the windshield.

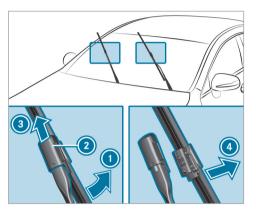

- ► Hold the wiper arm with one hand. With the other hand, turn the wiper blade away from the wiper arm in the direction of arrow (1) as far as it will go.
- Slide catch (2) in the direction of arrow (3) until it engages in the removal position.
- Remove the wiper blade from the wiper arm in the direction of arrow (4).

Installing the wiper blades

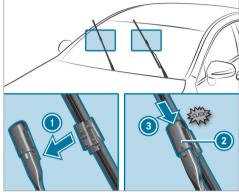


- Insert the new wiper blade into the wiper arm in the direction of arrow 1.
- Slide catch (2) in the direction of arrow (3) until it engages in the locking position.
- Make sure that the wiper blade is seated correctly.
- Fold the wiper arms back onto the windshield.

120 Light and visibility

- Switch on the vehicle.
- Switch off the vehicle.
- (i) Check the condition of the wiper blades regularly and replace them in the event of visible damage or ongoing smearing.

Maintenance display

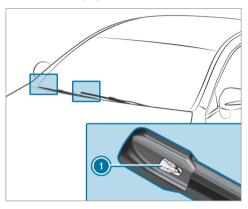

Remove protective film (1) from the maintenance displays on the tips of the newly installed wiper blades.

When the color of the maintenance displays changes from black to yellow, replace the wiper blades.

i The duration until the color changes varies depending on the usage conditions.

Mirrors

Operating the outside mirrors

★ WARNING Risk of accident due to adjusting the vehicle settings while the vehicle is in motion

You could lose control of the vehicle in the following situations in particular:


- If you adjust the driver's seat, the head restraint, the steering wheel or the mirror while the vehicle is in motion
- If you fasten your seat belt while the vehicle is in motion
- Before starting the engine: In particular, adjust the driver's seat, head restraint, steering wheel and mirror, and fasten your seat belt.

WARNING Risk of accident due to misjudgment of distance when using the front-passenger mirror

The outside mirror on the front passenger side reflects objects on a smaller scale. The objects in view are in fact closer than they appear.

Therefore, always look over your shoulder to check the actual distance between you and the road users traveling behind you.

Folding the outside mirrors in/out

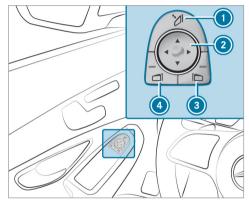

Briefly press button ①.

Resetting the outside mirrors

- (i) If the battery has been disconnected or completely discharged, the outside mirrors must be reset. Only then will the automatic mirror folding function work properly.
- Briefly press button ①.

Adjusting the outside mirrors

- Press button (3) or (4) to select the outside mirror to be adjusted.
- Use button (2) to adjust the position of the mirror glass.

Engaging the outside mirrors

- Vehicles without electrically folding outside mirrors: manually move the outside mirror into the correct position.
- Vehicles with electrically folding outside mirrors: press and hold button 1. You will hear a click and the mirror will audibly click into place. The outside mirror will now be set to the correct position.

Automatic anti-glare mirror function

WARNING Risk of acid burns and poisoning due to the anti-glare mirror electrolyte

Electrolyte may escape if the glass in an automatic anti-glare mirror breaks.

122 Light and visibility

The electrolyte is hazardous to health and causes irritation. It must not come into contact with your skin, eyes, respiratory organs or clothing or be swallowed.

- If you come into contact with electrolyte, observe the following:
 - Immediately rinse the electrolyte from your skin with water and seek medical attention.
 - If electrolyte comes into contact with your eyes, immediately rinse them thoroughly with clean water and seek medical attention.
 - If the electrolyte is swallowed, immediately rinse your mouth out thoroughly. Do not induce vomiting. Seek medical attention immediately.
 - Immediately change out of clothing which has been contaminated with electrolyte.
 - If an allergic reaction occurs, seek medical attention immediately.

The inside rearview mirror and the outside mirror on the driver's side will automatically go into antiglare mode if light from a headlamp hits the sensor on the inside rearview mirror.

System limits

The system will not go into anti-glare mode if:

- The vehicle is switched off.
- Reverse gear is engaged.
- The interior lighting is switched on.

Front-passenger outside mirror parking position function

The parking position makes parking easier.

The front-passenger outside mirror will swivel downwards in the direction of the rear wheel on the front passenger's side when:


- The parking position is stored (\rightarrow page 123).
- The front-passenger mirror is selected.
- Reverse gear is engaged.

The front-passenger outside mirror will move back to its original position when:

- You shift the transmission to another transmission position.
- You are traveling at a speed greater than 9 mph (15 km/h).
- You press the button for the outside mirror on the driver's side.

Saving the parking position for the frontpassenger outside mirror using reverse gear

Saving

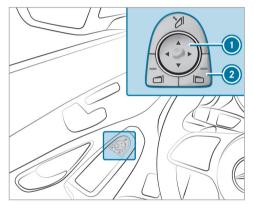

- Select the front-passenger outside mirror using button 2.
- Engage reverse gear.
- Move the front-passenger outside mirror to the desired parking position using button 1.

Calling up

- Select the front-passenger outside mirror using button 2.
- Engage reverse gear. The front-passenger outside mirror will move to the saved parking position.

Activating/deactivating the automatic mirror folding function

Multimedia system:

- → Vehicle → ✓ Vehicle Settings
- >> Autom. Mirror Folding
- ▶ Activate or deactivate the function.

124 Climate control


Overview of climate control systems

Notes on climate control

An interior air filter in combination with the prefilter in the engine compartment must always be used so that the air conditioning system, pollution level monitoring and the air filtration work correctly. Use filters recommended and approved by Mercedes-Benz. Always have maintenance work carried out at a qualified specialist workshop.

Overview of the air conditioning control panel

The indicator lamps on the buttons indicate that the corresponding function is activated.

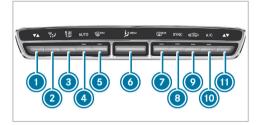

Example: Control panel for dual-zone automatic climate control without stationary heater

- Sets the temperature on the driver's side
- Sets the air distribution
- Sets the airflow or switches off climate control
- Sets climate control to automatic (→ page 125)
- Operate the windshield
- Vehicles without a stationary heater:

 Calls up the air conditioning menu

Vehicles with a stationary heater: Description calls up the air conditioning menu, switches residual heat on/off

- Switches the rear window heater on/off
- Vehicles without a stationary heater: SYNC switches synchronization on/off (→ page 125)

Vehicles with a stationary heater: This switches the stationary heater on/off

- Switches air-recirculation mode on/off (→ page 125)
- Sets the temperature on the front passenger side

Operating the climate control system

Switching climate control on/off

- To switch on: set the airflow to level 1 or higher using the ¶ button.
- ➤ To switch off: set the airflow to level 0 using the ## button.

If climate control is switched off, the windows may fog up more quickly. Switch climate control off only briefly.

Switching the A/C function on/off using the air conditioning control panel

The A/C function heats, cools and dehumidifies the vehicle's interior air.

Press the A/c button.

Switch off the A/C function only briefly; otherwise, the windows may fog up more quickly.

Condensation may drip from the underside of the vehicle when cooling mode is active. This is not indicative of a malfunction.

Setting climate control to automatic mode

In automatic mode, the set temperature is controlled and maintained at a constant level by the air supply.

- Press button AUTO .
- To switch to manual mode: press the some or button. نخ

Activating/deactivating the climate control synchronization function via the air conditioning control panel

Climate control can be set centrally using the synchronization function. The temperature and air distribution settings for the driver's side will be adopted automatically for the front passenger side.

Press the **SYNC** button.

The synchronization function will be deactivated if the settings for one of the other climate control zones are changed.

Defrosting windows

Windows fogged up on inside

- Press the AUTO button.
- If the windows remain fogged up: press the wax button.

Windows fogged up on outside

- Switch on the windshield wiper.
- Press the AUTO button.

Switching air-recirculation mode on /off

Press the button. The interior air will be recirculated.

Air-recirculation mode automatically switches to fresh air mode after a while.

(i) If air-recirculation mode is switched on, the windows may fog up more quickly. Switch on air-recirculation mode only briefly.

Activating/deactivating ionization

Multimedia system:

- → Vehicle → Climate Control
- **▶** Ionization

lonization cleans and refreshes the interior air of the vehicle. Ionization of the interior air is odorless.

▶ Activate or deactivate the function.

126 Climate control

Fragrance system

Setting the fragrance system

Requirements

- Automatic climate control is activated.
- The glove box is closed.

Multimedia system:

→ Vehicle → 📜 Climate Control

>> Air Freshener

The fragrance system distributes a pleasant fragrance throughout the vehicle interior from a flacon located in the glove compartment.

To set the intensity: selectHigh, Medium, Low or Off.

Inserting or removing the flacon of the fragrance system

WARNING Risk of injury from liquid perfume


If children open the flacon, they could drink the liquid perfume or it could come into contact with their eyes.

- Do not leave children unattended in the vehicle.
- Consult a doctor immediately if liquid perfume has been drunk.
- If liquid perfume comes into contact with your eyes or skin, rinse your eyes with clean water.
- If symptoms continue, consult a doctor.

ENVIRONMENTAL NOTE Environmental damage due to improper disposal of full flacons

Full flacons must not be disposed of with household waste.

Full flacons must be taken to a harmful substance collection point.

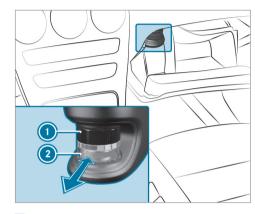

- To insert: slide the flacon into the holder as far as ② it will go.
- ➤ To remove: pull out flacon ②.

If you do not use genuine Mercedes-Benz interior perfumes, observe the manufacturers' safety notices on the perfume packaging.

Dispose of the genuine Mercedes-Benz interior perfume flacon when it is empty and do not refill

Refillable flacon

- Unscrew 1 the cap of the 2 empty flacon.
- Fill the flacon with a maximum of 2 0.5 fl. oz. (15 ml).
- Screw 1 the cap back onto 2 the flacon.

Always refill the empty refillable flacon with the same perfume. Observe the separate information sheet with the flacon.

Air vents

Adjusting the front air vents

WARNING Risk of burns or frostbite due to being too close to the air vents

Very hot or very cold air can flow from the air vents.

- Make sure that all vehicle occupants always maintain a sufficient distance from the air vents.
- If necessary, direct the airflow to another area of the vehicle interior.

To guarantee the flow of fresh air through the air vents into the vehicle interior, note the following:

- Always keep the vents and ventilation grilles in the vehicle interior clear.
- Keep the air inlet free of residue build-up $(\rightarrow page 328)$.



- To open or close: hold the center of air vent 1 and turn it to the left (open) or right (closed) as far as it will go.
- To set the airflow direction: hold the center of air vent
 and move it up or down or to the left or right.

Adjusting the rear passenger compartment air vents



- To open or close: turn controller 2 to the left or right as far as it will go.
- To set the airflow direction: hold the center of air vent (1) and move it up or down or to the left or right.

Driving

Notes on Mercedes-AMG vehicles

Observe the notes on the following topics in the Operating Instructions, otherwise you may fail to recognize dangers.

- (i) The availability of certain functions depends on the equipment and model of the vehicle.
- · Emotion Start
- · Rear axle locking differential
- AMG ceramic high-performance composite brake system
- RACE START
- AMG RIDE CONTROL
- · AMG steering-wheel buttons

Switching on the power supply or the vehicle

WARNING Risk of accident and injury due to children left unattended in the vehicle

If children are left unsupervised in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.


In addition, the children could also set the vehicle in motion, for example by:

- · releasing the parking brake.
- changing the transmission position.
- · starting the vehicle.
- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.

Keep the vehicle SmartKey out of reach of children.

Requirements

- the key is in the vehicle and is detected.
- · the brake pedal is not depressed.

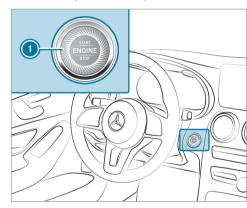

To switch on the power supply: press button once.

You can, for example, switch on the windshield wiper.

The power supply is switched off again if the following conditions are met:

- vou open the driver's door.
- you press button 1 twice more.
- To switch on the vehicle: press button (1) twice.

Indicator and warning lamps light up on the instrument cluster.

The vehicle is switched off again if one of the following conditions is met:

- · you do not start the vehicle within 15 minutes and the transmission is in position **P** or the electric parking brake is applied.
- you press button (1) once.

Starting the vehicle

Starting the vehicle with the start/stop button

DANGER Risk of death caused by exhaust gases

Combustion engines emit poisonous exhaust gases such as carbon monoxide. Inhaling these exhaust gases is hazardous to health and leads to poisoning.

- Never leave the engine or, if present, the auxiliary heating running in an enclosed space without sufficient ventilation.
- WARNING Risk of fire due to flammable material in the engine compartment or the exhaust system

Flammable materials may ignite.

Therefore, check regularly that there are no flammable materials in the engine compartment or on the exhaust system.

Requirements


the key is in the vehicle and is detected.

- Shift the transmission to position $\boxed{\mathbf{P}}$ or $\boxed{\mathbf{N}}$.
- Depress the brake pedal and press button (1) once.
- If the vehicle does not start; switch off nonessential consumers and press button (1) once.
- If the vehicle still does not start and the Place the Key in the Marked Space See Operator's Manual display message appears on the instrument display: start the vehicle with the key in the marked space (emergency operation mode) (\rightarrow page 130).
- You can switch off the vehicle while driving. To do this, press button 1 for about three seconds or press button 1 three times within three seconds. Be sure to observe the safety notes concerning this under "Driving tips" $(\rightarrow page 133).$

Observe any information regarding display messages that may be displayed on the instrument display.

Starting the vehicle with the key in the stowage compartment (emergency operation mode)

If the vehicle does not start and the Place the Key in the Marked Space See Operator's Manual message appears in the instrument display, you can start the vehicle in emergency operation mode.

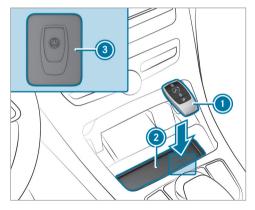

Make sure that marked space ② is empty.

- Remove key ① from the key ring.
- Place key **(1)** in marked space **(2)** on symbol **(3)**.

The vehicle will start after a short time.

If you remove key ① from marked space ②, the vehicle can still be driven. For further engine starts however, key ① must be located in marked space ② on symbol ③ during the entire journey.

Have key ① checked at a qualified specialist workshop.

If the vehicle does not start:

- Place key in marked space and leave it there.
- Depress the brake pedal and start the vehicle using the start/stop button.
- (i) You can switch on the power supply or the vehicle with the start/stop button.

Observe any information regarding display messages that can be displayed on the instrument display.

Starting the vehicle via Remote Online Services

Cooling or heating the vehicle interior before starting the journey

Ensure the following before starting the engine:

- The legal stipulations in the area where your vehicle is parked allow engine starting via smartphone.
- It is safe to start and run the engine where your vehicle is parked.
- The fuel tank is sufficiently full.
- The starter battery is sufficiently charged.

Charging the starter battery before starting the journey

You can receive a message on your smartphone when the state of charge of the starter battery is low. You can then start the vehicle with the smartphone to charge the battery. The vehicle is automatically switched off after ten minutes.

Ensure the following before starting the engine:

 The legal stipulations in the area where your vehicle is parked allow engine starting via smartphone.

- It is safe to start and run the engine where your vehicle is parked.
- . The fuel tank is sufficiently full.

Starting the vehicle (Remote Online)

WARNING Risk of crushing or entrapment due to unintentional starting of the engine

Limbs could be crushed or trapped if the engine is started unintentionally during service or maintenance work

Always secure the engine against unintentional starting before carrying out maintenance or repair work.

Requirements

- Park position P is selected.
- The anti-theft alarm system is not primed.
- The panic alarm is not activated.
- · The hazard warning light system is switched off.
- The hood is closed.
- The doors are closed and locked.

- The windows and sliding sunroof are closed.
- Start the vehicle using the smartphone. After every engine start, the engine runs for ten minutes.

You can carry out a maximum of two consecutive starting attempts. You must start the engine with the key before trying to start the vehicle again with the smartphone.

You can switch off the vehicle at any time as follows:

- Via the Smartphone App
- By pressing the ☐ or ☐ button on the kev
- (i) Further information can be found in the smartphone app.

Securing the vehicle against starting before carrying out maintenance or repair work:

Switch on the hazard warning light system. or

Unlock the doors.

or

Open a side window or the sliding sunroof.

Breaking-in notes

To preserve the engine during the first 1,000 miles (1,500 km):

- Drive at varying road speeds and engine speeds.
- Do not drive at speeds greater than 85 mph (140 km/h).
- Drive the vehicle in drive program C or E.
- Shift to the next highest gear no later than when the needle reaches the last third before the red area in the tachometer.
- Do not shift down manually to brake.
- · Avoid overstraining the vehicle, e.g. driving at full throttle.
- Do not depress the accelerator pedal past the point of resistance (kickdown).
- · Increase the engine speed only gradually and accelerate the vehicle to full speed after 1,000 miles (1,500 km).

132 Driving and parking

This also applies when the engine or parts of the drivetrain have been replaced.

Please also observe the following breaking-in notes:

- In certain driving and driving safety systems, the sensors will adjust automatically while a certain distance is being driven after the vehicle has been delivered or after repairs. Full system effectiveness will not be reached until the end of this teach-in process.
- Brakepads, brake disks and tires that are either new or have been replaced will achieve their optimum braking effect and grip only after several hundred miles of driving. Compensate for the reduced braking effect by applying greater force to the brake pedal.

Notes on optimized acceleration

If all necessary requirements and activation conditions are fulfilled, the best possible acceleration can be achieved from a standstill.

Do not use optimized acceleration on public roads. Individual wheels could spin and you could

lose control of the vehicle. There is an increased risk of skidding and/or accident.

Be sure to observe the safety notes and information on ESP® (\rightarrow page 157).

Pulling away with optimized acceleration

WARNING Risk of skidding and having an accident from wheels spinning

When you use optimized acceleration, individual wheels could spin and you could lose con-

If ESP® is deactivated, there is a risk of skidding and accident.

Make sure that no persons or obstacles are in the close vicinity of your vehicle.

Requirements

trol of the vehicle.

- the vehicle is run in (\rightarrow page 131).
- the vehicle and tires are in good condition.
- you are on a high-grip roadway.
- the engine and transmission are at normal operating temperature.

NOTE Increased wear due to optimized acceleration

When pulling away with optimized acceleration, all components of the drivetrain are subjected to a very high load.

This can lead to increased component wear.

- Do not always pull away with optimized acceleration.
- Engage drive position $\boxed{\mathbf{D}}$ (\rightarrow page 142).
- Move the steering wheel to the straight-ahead position.
- Select the sportiest available drive program \bigcirc or \bigcirc (\rightarrow page 139).
- ▶ Deactivate ESP® (\rightarrow page 159).
- Depress and hold the brake pedal firmly with your left foot.
- With your right foot, fully depress the accelerator pedal.

- After no more than five seconds, take your left foot quickly off the brake, but keep the accelerator pedal depressed.
 - The vehicle will pull away at maximum acceleration.
- Switch on ESP® once the acceleration procedure is complete.

Ending optimized acceleration

- Remove your foot from the accelerator pedal.
- Reactivate FSP®.
- After you pull away with optimized acceleration, components of the drivetrain can become very hot, which means that optimized acceleration values may be reached again only after a few minutes.

Notes on driving

WARNING Risk of accident due to objects in the driver's footwell

Objects in the driver's footwell may impede pedal travel or block a depressed pedal.

This jeopardizes the operating and road safety of the vehicle

- Stow all objects in the vehicle securely so that they cannot get into the driver's footwell.
- Always install the floor mats securely and as prescribed in order to ensure that there is always sufficient room for the pedals.
- Do not use loose floor mats and do not place floor mats on top of one another.

WARNING Risk of accident due to incorrect footwear

Incorrect footwear includes, for example:

- Shoes with platform soles
- Shoes with high heels
- Slippers

There is a risk of an accident.

Always wear suitable footwear so that you can operate the pedals safely.

WARNING Risk of accident if the vehicle is switched off while driving

If you switch off the vehicle while driving, safety functions are restricted or no longer available.

This may affect the power steering system and the brake force boosting, for example,

You will need to use considerably more force to steer and brake, for example.

Do not switch off the vehicle while driving.

DANGER Risk of death caused by exhaust gases

Combustion engines emit poisonous exhaust gases such as carbon monoxide. Inhaling these exhaust gases is hazardous to health and leads to poisoning.

Never leave the engine or, if present, the auxiliary heating running in an enclosed space without sufficient ventilation.

134 Driving and parking

▲ WARNING Risk of skidding and of an accident due to shifting down on slippery road surfaces

If you shift down on slippery road surfaces to increase the engine braking effect, the drive wheels may lose traction.

- Do not shift down on slippery road surfaces to increase the engine braking effect.
- ▲ DANGER Risk of fatal injury due to poisonous exhaust gases

If the tailpipe is blocked or sufficient ventilation is not possible, poisonous exhaust gases such as carbon monoxide may enter the vehicle. This is the case, for example, if the vehicle gets stuck in the snow.

Keep the tailpipe and the area around the vehicle free from snow when the engine or the stationary heater is running. Open a window on the side of the vehicle facing away from the wind to ensure an adequate supply of fresh air.

WARNING Risk of accident and injury due to being under the influence of alcohol and drugs while driving

Drinking and driving and/or taking drugs and driving are very dangerous combinations. Even a small amount of alcohol or drugs can affect your reflexes, perceptions and judgment.

The possibility of a serious or even fatal accident are greatly increased when you drink or take drugs and drive.

- Do not drink or take drugs and drive or allow anyone to drive who has been drinking or taking drugs.
- **WARNING** Risk of accident due to the brake system overheating

If you leave your foot on the brake pedal when driving, the brake system may overheat.

This increases the braking distance and the brake system can even fail.

- Never use the brake pedal as a footrest.
- Do not depress the brake pedal and the accelerator pedal at the same time while driving.
- ! NOTE Engine damage due to excessively high engine speeds

The engine will be damaged if you drive with the engine in the overrevving range.

- Do not drive with the engine in the overrevving range.
- ! NOTE Wearing out the brake linings by continuously depressing the brake pedal
- Do not depress the brake pedal continuously whilst driving.
- To use the braking effect of the engine, shift to a lower gear in good time.

- NOTE Damage to the drivetrain and engine when pulling away
- Do not warm up the engine while the vehicle is stationary. Pull away immediately.
- Avoid high engine speeds and driving at full throttle until the engine has reached its operating temperature.
- **NOTE** Damage to the catalytic converter due to non-combusted fuel

The engine is not running smoothly and is misfiring.

Non-combusted fuel may get into the catalytic converter.

- Only depress the accelerator pedal slightly.
- Have the cause rectified immediately at a qualified specialist workshop.

NOTE Reduced battery life due to frequent short-distance trips

The 12 V battery may not be sufficiently charged when the vehicle is used only for short-distance trips. This reduces the life of the battery.

- Drive longer distances regularly to charge the battery.
- NOTE Damage to the vehicle due to not observing the maximum permitted headroom clearance

If the vehicle height is greater than the maximum permitted headroom clearance, the roof and other parts of the vehicle may be damaged.

- Observe the signposted headroom clearance.
- If the vehicle height is greater than the permitted headroom clearance, do not enter.

Observe the changed vehicle height with add-on roof equipment.

Notes on driving with a roof load, trailer or fully laden vehicle

When you drive with a loaded roof luggage rack or trailer as well as with a fully laden or fully occupied vehicle, the vehicle's driving and steering characteristics will change.

You should bear the following in mind:

- · Do not exceed the permissible roof load and towing capacity. Also observe the technical data in the printed Operator's Manual.
- Evenly distribute the roof load, and place heavy objects at the bottom. Also comply with the notes on loading the vehicle (\rightarrow page 99).
- Drive attentively, and avoid suddenly pulling away, braking and steering as well as rapid cornering.

Notes on driving on salt-treated roads

Braking performance will be limited on salt-treated roads.

136 Driving and parking

Therefore, note the following:

- salt build-up on the brake disks and brakepads may result in braking distances increasing considerably or in braking only on one side
- maintain a much greater safe distance to the vehicle in front

To remove salt build-up:

- brake occasionally while paying attention to the traffic conditions
- carefully depress the brake pedal at the end of the journey and when starting the next journey

Notes on hydroplaning

Hydroplaning can take place once a certain amount of water has accumulated on the road surface

Observe the following notes during heavy precipitation or in conditions in which hydroplaning may occur:

- · reduce speed
- avoid tire ruts
- · avoid sudden steering movements

- · brake carefully
- (i) Also observe the notes on regularly checking wheels and tires (→ page 357).

Notes on driving through water on the road surface

Water which has entered into the vehicle can damage the engine, electrics and transmission.

Water can also enter the air intake of the engine and cause engine damage.

Observe the following if you must drive through water:

- The water, when calm, must reach no higher than the lower edge of the vehicle body.
- Drive at a maximum speed of 6 mph (10 km/h); water may otherwise enter the vehicle interior or engine compartment.
- Vehicles traveling in front, or oncoming vehicles, can create waves that may result in the
 maximum permissible depth of water being
 exceeded.

Braking performance will be reduced after fording. Brake carefully while paying attention to the

traffic conditions until braking power has been fully restored.

ECO start/stop function

ECO start/stop function

(i) Depending on the engine, the ECO start/stop function is not available in all drive programs.

Observe the status display in the instrument display for this.

The engine is switched off automatically in the following situations if all vehicle conditions for an automatic engine stop are met:

You brake the vehicle to a standstill in transmission position D or N.

If the system has detected one of the following situations, the engine will not stop:

- You stop at a stop sign and there is no vehicle in front of you.
- The vehicle that stopped in front of you starts up again.
- You maneuver, turn the steering wheel sharply or engage reverse gear.

(i) If the system detects an intelligent stop inhibitor, for example, a stop sign, the engine will not stop.

If you activate the HOLD function or engage the park position [P], the engine can be switched off in spite of an intelligent stop inhibitor

The engine restarts automatically in the following cases:

- You engage transmission position **D** or **R**.
- You depress the accelerator pedal.
- The vehicle requires an automatic engine start.
- You release the brake pedal.

ECO start/stop function symbols in the instrument display:

- The symbol (green) appears when the vehicle is at a standstill: The engine was switched off by the ECO start/stop function.
- The symbol (yellow) appears when the vehicle is at a standstill: Not all vehicle conditions for an engine stop have been met.


• Neither the symbol (A) nor (B) appears when the vehicle is at a standstill: An intelligent stop inhibitor was detected, e.g. a stop sign.

If the engine was switched off by the ECO start/ stop function and you leave the vehicle, a warning tone sounds and the engine is not restarted. In addition, the following display message appears in the instrument display:

Vehicle Ready to Drive Switch the Ignition Off Before Exiting

If you do not switch off the vehicle, it is automatically switched off after three minutes.

Deactivating or activating the ECO start/stop function

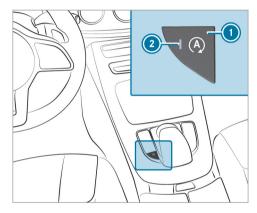

- Press button 1. If indicator lamp 2 lights up, the ECO start/ stop function is activated.
- (i) Depending on the model and the vehicle equipment, the button may also be located at a different position in the center console.

ECO display function

The ECO display summarizes your driving characteristics from the start of the journey to its completion and assists you in achieving the most economical driving style.

You can influence consumption by doing the following:

- · Driving with particular care
- Driving the vehicle in drive program
- Observing the gearshift recommendations



The inner segment will light up and the outer segment will fill up when the following driving style is adopted:

- Moderate acceleration
- ② Gentle deceleration and rolling
- 3 Consistent speed

The inner segment will not light up and the outer segment will empty when the following driving style is adopted:

- Sporty acceleration
- ② Heavy braking
- 3 Fluctuations in speed

The ECO display will show you when you have driven economically:

- The three outer segments are completely filled simultaneously.
- The ECO display lights up.

The additional range achieved as a result of your driving style in comparison with a driver with a very sporty driving style is shown under Bonus fr.

Start. The range displayed does not indicate a fixed reduction in consumption.

DYNAMIC SELECT switch

Function of the DYNAMIC SELECT switch

- ! NOTE Mercedes-AMG vehicles
- Observe the notes in the Supplement. You could otherwise fail to recognize dangers.
- (i) Depending on the engine and equipment, the vehicle has different drive programs.

Use the DYNAMIC SELECT switch to change between the following drive programs.

The drive program selected appears on the Instrument Display.

- Individual
- · Individual settings
- S+ Sport+
- · Particularly sporty driving

- Emphasizes the vehicle's own oversteer and understeer characteristics for a more active driving style
- Suitable only for good road conditions, a dry surface and a clear stretch of road

s Sports

- Continues to offer stability but with a sporty setup
- Allows the sporty driver a more active driving style
- Suitable only for good road conditions, a dry surface and a clear stretch of road

C Comfort

- · Comfortable and economical driving
- Balance between traction and stability
- Recommended for all road conditions

E Eco


- · Particularly economical driving
- Balance between traction and stability
- Recommended for all road conditions

(i) The ESP® settings in drive programs [E] and are designed for stability. Therefore, choose one of these driving programs, especially when transporting roof loads, in trailer operation and when the vehicle is fully loaded or fully occupied.

Depending on the drive program, the following systems will change their characteristics:

- Drive
 - Engine and transmission management
 - Active Distance Assist DISTRONIC
- FSP®
- Vehicles with AIRMATIC or DYNAMIC BODY **CONTROL:** suspension
- · Electric power steering

Selecting the drive program

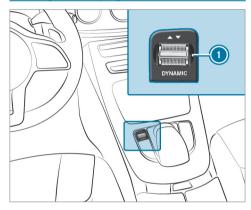

Push DYNAMIC SELECT switch (1) forwards or backwards.

The drive program selected will appear on the Instrument Display.

140 Driving and parking

Configuring drive program I

Multimedia system:

- ► Vehicle ➤ 🙀 DYNAMIC SELECT
 ➤ Individual
- Select the individual setting.

Switching the operation feedback for drive programs on or off

Multimedia system:

- → Vehicle → 🙀 DYNAMIC SELECT
- ➤ Switch Notification for User on

 or off

 when this function is active, a corresponding message is shown in the media display when a drive program is selected with the DYNAMIC SFI FCT switch.

To display vehicle data

Multimedia system:

- → Vehicle → 🚊 DYNAMIC SELECT
- Select Vehicle Data. The vehicle data is displayed.

To display engine data

Multimedia system:

- → Vehicle >> 📻 DYNAMIC SELECT
- Select Engine Data.
- The actual (maximum) values that can be achieved for engine output and engine torque may deviate from the certified values within the country-specific guidelines for permissible tolerances (basis: UN-ECE No. 85 or country-specific guidelines).

Factors that can influence this are, for example:

- Sea level
- Fuel grade
- · Outside temperature
- Operating temperature of the engine
- (i) The values displayed serve only as orientation. The values for engine output and engine torque shown in the media display may deviate from the actual values.

Automatic transmission

DIRECT SELECT lever

Function of the DIRECT SELECT lever

A

WARNING Risk of accident due to incorrect gearshifting

If the engine speed is higher than the idle speed and you engage the transmission position $\boxed{\mathbf{D}}$ or $\boxed{\mathbf{R}}$, the vehicle may accelerate sharply.

If you engage the transmission position
D or R when the vehicle is at a stand-still, always depress the brake pedal firmly and do not accelerate at the same time.

WARNING Risk of accident and injury due to children left unattended in the vehicle


If children are left unsupervised in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- · operate vehicle equipment and become trapped, for example,

In addition, the children could also set the vehicle in motion, for example by:

- · releasing the parking brake.
- changing the transmission position.
- starting the vehicle.
- Never leave children unattended in the vehicle.
- ► When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- Keep the vehicle SmartKey out of reach of children.

Use the DIRECT SELECT lever to switch the transmission position. The current transmission position will be shown on the Instrument Display.

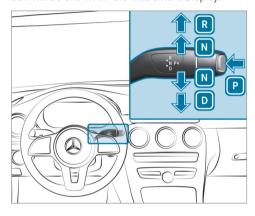

- Park position
- Reverse gear
- N Neutral
- Drive position

Engaging reverse gear R

Depress the brake pedal and push the DIRECT SELECT lever upwards past the first point of resistance.

Engaging neutral N

- Depress the brake pedal and push the DIRECT SELECT lever up or down to the first point of resistance.
- (i) To shift into neutral N with the vehicle switched on, push the selector lever up or down for several seconds to the first point of resistance.

Subsequently releasing the brake pedal will allow you to move the vehicle freely, e.g. to push it or tow it away.

Proceed as follows if you want the automatic transmission to remain in neutral N even if the vehicle is switched off or the driver's door is opened:

- Depress the brake pedal and engage neutral N when the car is stationary.
- Release the brake pedal.
- Switch off the vehicle.

142 Driving and parking

(i) If you then exit the vehicle leaving the key in the vehicle, the automatic transmission remains in neutral $|\mathbf{N}|$.

Engaging park position P

- Observe the notes on parking the vehicle (\rightarrow) page 147).
- Depress the brake pedal until the vehicle comes to a standstill.
- When the vehicle is at a standstill, press button
 P.

 When the transmission position display shows
 P.
 p, the park position is engaged. If the transmission position display does not show
 P.
 secure the vehicle to prevent it from rolling away.
- Depending on the situation, it may take a short time until P is engaged. Therefore, always pay attention to the transmission position display.

Park position $\begin{cal}{c} {\bf P} \end{cal}$ is engaged automatically if one of the following conditions is met:

You switch the stationary vehicle off in transmission position D or R.

- You open the driver's door when the vehicle is at a standstill or when driving at a very low speed in transmission position D or R.
- To maneuver with an open driver's door, open the driver's door while at a standstill and engage transmission position D or R again.

Engaging drive position D

Depress the brake pedal and push the DIRECT SELECT lever down past the first point of resistance.

When the automatic transmission is in transmission position $\boxed{\textbf{D}}$, it will shift gears automatically. This depends, among other things, on the following factors:

- · The drive program selected
- The position of the accelerator pedal
- The driving speed

Problems with the transmission

The transmission has a faulty gear shift

Possible cause:

- the transmission is losing oil.
- Have the transmission checked at a qualified specialist workshop immediately.

The acceleration characteristics worsen, and the transmission no longer shifts.


Possible cause:

- the transmission is in emergency operation mode: it is possible to shift only to one gear and reverse gear.
- Stop the vehicle in accordance with the traffic conditions.
- ▶ Shift the transmission to position **P**.
- Switch off the vehicle.
- Wait at least ten seconds.
- Start the vehicle again.

- Shift the transmission to position \mathbf{D} or \mathbf{R} . If **D** is selected, the transmission will shift only to one gear: if **R** is selected, the transmission will shift to reverse gear.
- Have the transmission checked at a qualified specialist workshop immediately.

Manual gearshifting

- **NOTE** Mercedes-AMG vehicles
- Observe the notes in the Supplement. You could otherwise fail to recognize dangers.

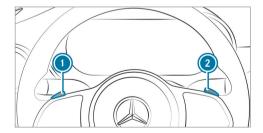

When the automatic transmission is shifted to position **D**, you can manually shift it with the steering wheel paddle shifter. If permitted, the automatic transmission will shift to a higher or lower gear depending on the steering wheel paddle shifter being pulled.

You have two options for manually shifting the automatic transmission:

- Temporary setting
- Permanent setting

The gears will shift automatically when manual shifting is deactivated.

Temporary setting:

To activate: pull steering wheel paddle shifter or ②.

Manual shifting will be activated for a short time. The transmission position display will show **M** and the current gear.

How long manual shifting stays activated depends on various factors.


Manual shifting can be deactivated automatically in the following cases:

- When the drive program is changed
- When the vehicle is restarted
- When transmission position **D** is engaged again
- When the driving style prompts it
- To shift up: pull steering wheel paddle shifter
- To shift down: pull steering wheel paddle shifter 1.
- To deactivate: pull and hold steering wheel paddle shifter 2.

The transmission position display will show D

Gearshift recommendation

The gearshift recommendation assists you in adopting an economical driving style.

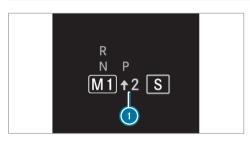

If gearshift recommendation appears next to the transmission position display, shift to the recommended gear.

Using kickdown

Maximum acceleration: depress the accelerator pedal beyond the point of resistance.

To protect against engine overrev, the automatic transmission will shift up to the next gear when maximum engine speed has been reached.

Glide mode function

- ! NOTE Mercedes-AMG vehicles
- Observe the notes in the Supplement. You could otherwise fail to recognize dangers.

With an anticipatory driving style, Glide mode helps you to reduce fuel consumption.

Glide mode is characterized by the following:

- The combustion engine is disconnected from the drivetrain and continues to run in neutral.
- The transmission position display $\boxed{\textbf{D}}$ is shown in green.

Glide mode is activated if the following conditions are met:

- Drive program 🔳 is selected.
- The speed is within a suitable range.
- The road's course is suitable, e.g. no steep uphill or downhill inclines or tight bends.
- You do not depress the accelerator or brake pedal (except for light brake applications).

i Glide mode can also be activated if you have selected the "Eco" setting for the drive in the drive program .

Glide mode is deactivated again if one of the conditions is no longer met.

Glide mode can also be prevented by the following parameters:

- Incline
- · Downhill gradient
- Temperature
- Height
- Speed
- · Operating status of the engine
- · Traffic situation
- (i) Glide mode can be ended by pressing a steering wheel paddle shifter (→ page 143).

Function of the 4MATIC

4MATIC ensures that all four wheels are driven. Together with ${\rm ESP}^{\rm @}$ and 4ETS, 4MATIC improves

the traction of your vehicle whenever a driven wheel spins due to insufficient traction.

If you fail to adapt your driving style, 4MATIC can neither reduce the risk of an accident nor override the laws of physics. 4MATIC cannot take account of road, weather and traffic conditions, 4MATIC is only an aid. You are responsible especially for maintaining a safe distance from the vehicle in front, for vehicle speed, for braking in good time and for staving in lane.

i) In wintry road conditions, the maximum effect of 4MATIC can be achieved only if you use winter tires (M+S tires), with snow chains if necessary.

Refueling

Refueling the vehicle

WARNING Risk of fire or explosion from fuel

Fuels are highly flammable.

- Fire, open flames, smoking and creating sparks must be avoided.
- Before refueling, switch off the vehicle and, if installed, the stationary heater. and leave them switched off during refueling.

WARNING Risk of injury from fuels

Fuels are poisonous and hazardous to your health.

- Do not swallow fuel or let it come into contact with skin, eyes or clothing.
- Do not inhale fuel vapor.
- Keep children away from fuel.
- Keep doors and windows closed during the refueling process.

If you or other people come into contact with fuel, observe the following:

- Immediately rinse fuel off your skin with soap and water.
- ▶ If fuel comes into contact with your eyes. immediately rinse them thoroughly with

- clean water. Seek medical attention immediately.
- If you swallow fuel, seek medical attention immediately. Do not induce vomiting.
- Change immediately out of clothing that has come into contact with fuel

WARNING Risk of fire and explosion due to electrostatic charge

Electrostatic charge can ignite fuel vapor.

- Before you open the fuel filler cap or take hold of the pump nozzle, touch the metallic vehicle body.
- To avoid creating another electrostatic charge, do not get into the vehicle again during the refueling process.
- NOTE Damage caused by the wrong fuel

Vehicles with a gasoline engine:

Even small amounts of the wrong fuel could result in damage to the fuel system, the engine and the emission control system.

Only refuel with low-sulfur spark-ignition engine fuel.

This fuel may contain up to 10% ethanol. Your vehicle is suitable for use with E10 fuel.

Never refuel with one of the following fuels:

- Diesel
- Gasoline with more than 10% ethanol by volume, e.g. E15, E85, E100
- Gasoline with more than 3% methanol by volume, e.g. M15, M30, M85, M100
- Gasoline with additives containing metal

If you have accidentally refueled with the wrong fuel:

- Do not switch on the vehicle.
- Consult a qualified specialist workshop.

NOTE Do not use diesel to refuel vehicles with a gasoline engine

If you have accidentally refueled with the wrong fuel:

- Do not switch on the vehicle. Otherwise fuel can enter the engine.
 - Even small amounts of the wrong fuel could result in damage to the fuel system and the engine. The repair costs are high.
- Consult a qualified specialist workshop.

 Have the fuel tank and fuel lines drained
 - Have the fuel tank and fuel lines drained completely.
- ! NOTE Damage to the fuel system caused by overfilled fuel tanks
- Only fill the fuel tank until the pump nozzle switches off.


- NOTE Fuel may spray out when you remove the fuel pump nozzle
- Only fill the fuel tank until the pump nozzle switches off.

Requirements

• The vehicle is unlocked.

Observe the notes on operating fluids and fuel.

Only refuel with fuel that has at least the octane number specified in the information label in the fuel filler flap. Otherwise, engine output can be reduced and fuel consumption increased.

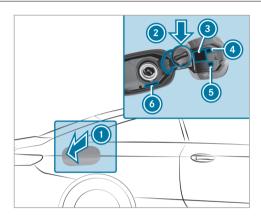

- Fuel filler flap
- Bracket for fuel filler cap
- Tire pressure table
- QR code for rescue card
- Stationary heater indication
- Fuel type
- Press on the back area of fuel filler flap 1.

- Turn the fuel filler cap counter-clockwise and remove it
- Insert fuel filler cap from above into bracket
- Completely insert the pump nozzle into the tank filler neck, hook in place and refuel.
- Only fill the fuel tank until the pump nozzle switches off.
- Replace the cap on the filler neck and turn clockwise until it engages audibly.
- Close fuel filler flap ①.

Parking

Parking the vehicle

WARNING Risk of accident and injury caused by an insufficiently secured vehicle rolling away

If the vehicle is not securely parked sufficiently, it can roll away in an uncontrolled way even at a slight downhill gradient.

- On uphill or downhill gradients, turn the front wheels so that the vehicle rolls towards the curb if it starts moving.
- Apply the parking brake.
- Switch the transmission to position **P**.
- WARNING Risk of fire caused by hot exhaust system parts

Flammable materials such as leaves, grass or twigs may ignite.

- Park the vehicle so that no flammable material can come into contact with hot vehicle components.
- In particular, do not park on dry grassland or harvested grain fields.

WARNING Risk of accident and injury due to children left unattended in the vehicle

If children are left unsupervised in the vehicle, they could, in particular:

- open doors, thereby endangering other persons or road users.
- get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.


In addition, the children could also set the vehicle in motion, for example by:

- · releasing the parking brake.
- changing the transmission position.
- · starting the vehicle.
- Never leave children unattended in the vehicle.
- When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- Keep the vehicle SmartKey out of reach of children.

- NOTE Damage to the vehicle due to it rolling away
- Always secure the vehicle against rolling away.
- ! NOTE Damage due to the vehicle lowering

Vehicles with AIRMATIC or level control: The vehicle can lower because of temperature differences or longer non-operational times. This can cause damage to parts of the body.

When stopping the vehicle and when driving off, make sure that there are no obstacles such as curbs under or in the immediate vicinity of the body.

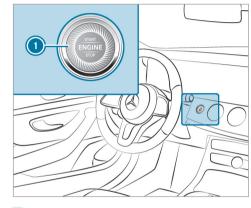

- Bring the vehicle to a standstill by pressing the brake pedal.
- On gradients, turn the front wheels so that the vehicle will roll towards the curb if it starts moving.
- Apply the electric parking brake.

- Engage transmission position P in a stationary vehicle with the brake pedal depressed $(\rightarrow page 142)$.
- Switch off the vehicle by pressing button 1.
- Release the service brake slowly.
- Get out of the vehicle and lock it.
- When you park the vehicle, you can still operate the side windows and the panoramic sliding sunroof for approximately four minutes if the driver's door is closed

Garage door opener

Programming buttons for the garage door opener

DANGER Risk of death caused by exhaust gases

Combustion engines emit poisonous exhaust gases such as carbon monoxide. Inhaling these exhaust gases is hazardous to health and leads to poisoning.

Never leave the engine or, if present, the auxiliary heating running in an enclosed space without sufficient ventilation.

WARNING Risk of injury by becoming trapped when opening and closing a garage door

When you operate or program a garage door with an integrated garage door opener, persons can become trapped or struck by the garage door if they stand within its range of movement.

Always make sure that nobody is within the range of the garage door's movement.


Only operate the following doors using the garage door opener:

- · Doors with a safety stop and reversing function
- Doors that conform to the current U.S. safety standards

Before programming the garage door opener, park the vehicle outside the garage. Make sure that the vehicle is switched on but not started

Requirements

- The vehicle has been parked outside the garage or outside the range of movement of the door.
- The vehicle is switched on.
- The vehicle has not been started.
- (i) The garage door opener function is always available when the vehicle is switched on

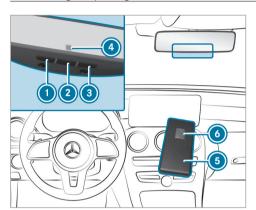

 Check that the transmitter frequency of the remote control has a frequency range of 280 to 868 MHz.

Radio equipment approval number:

- NZLMUAHL5 (USA)
- 4112A-MUAHL5 (Canada)

- Press and hold button ①, ② or ③ that you wish to program. Indicator lamp ⑥ will flash yellow.
- i It can take up to 20 seconds before the indicator lamp flashes yellow.
- Release the button previously pressed.
 Indicator lamp 4 will continue to flash yellow.
- Point remote control (3) from a distance of 0.4 in (1 cm) to 3 in (8 cm) towards button (1), (2) or (3).
- Press and hold button 6 of remote control 3 until one of the following signals appears:
 - Indicator lamp (a) lights up green continuously. Programming is complete.
 - Indicator lamp flashes green. Programming was successful. Additionally, the rolling code must be synchronized with the door system.
- If indicator lamp **(a)** does not light up or flash green: repeat the procedure.
- Release all of the buttons.

i The remote control for the door drive is not included in the scope of delivery of the garage door opener.

Synchronizing the rolling code

Requirements

- The door system uses a rolling code.
- The vehicle must be within range of the garage door or door drive.
- The vehicle as well as persons and objects are located outside the range of movement of the door.
- Press the programming button on the door drive unit.
 Initiate the next step within approximately 30 seconds.
- Press previously programmed button ①, ②
 or ③ repeatedly until the door closes.
 When the door closes, programming is completed.
- i Please also read the operating instructions for the door drive.

Troubleshooting when programming the remote control

- Check that the transmitter frequency of remote control (5) is supported.
- Replace the batteries in remote control (5).
- Hold remote control (5) at various angles from a distance of 0.4 in (1 cm) to 3 in (8 cm) front of the inside rearview mirror. You should test every setting position for at least 25 seconds before trying another position.
- Hold remote control (5) at the same angles at various distances in front of the inside rearview mirror. You should test every setting position for at least 25 seconds before trying another position.
- On remote controls that transmit only for a limited period, press button 6 on remote control (5) again before transmission ends.
- Angle the antenna line of the garage door opener unit towards the remote control.
- (i) It is possible that older garage doors cannot be operated using the remote control in the inside rearview mirror even after you have successfully performed the measures descri-

bed above. If this is the case, contact the Homel ink® Hotline

- Support and additional information on programming:
 - Via the toll free Homel ink® Hotline on 1-800-355-3515
 - On the Internet at the https:// www.homelink.com/mercedes

Opening or closing a garage door

Requirements

- The corresponding button is programmed to operate the door.
- Press and hold button (1), (2) or (3) until the door opens or closes.
- If indicator lamp 4 flashes yellow after approximately 20 seconds: press and hold the button previously pressed again until the door opens or closes.

Clearing the garage door opener memory

Press and hold buttons ① and ③. Indicator lamp (4) will light up vellow. If indicator lamp 4 flashes green; release buttons (1) and (3). The entire memory has been deleted.

Electric parking brake

Function of the electric parking brake (applying automatically)

WARNING Risk of accident and injury due to children left unattended in the vehicle

If children are left unsupervised in the vehicle, they could, in particular:

- · open doors, thereby endangering other persons or road users.
- · get out and be struck by oncoming traffic.
- operate vehicle equipment and become trapped, for example.

In addition, the children could also set the vehicle in motion, for example by:

- · releasing the parking brake.
- changing the transmission position.

- · starting the vehicle.
- Never leave children unattended in the vehicle.
- ► When leaving the vehicle, always take the SmartKey with you and lock the vehicle.
- Keep the vehicle SmartKey out of reach of children.

The electric parking brake is applied if the transmission is in position P and one of the following conditions is fulfilled:

- . The vehicle is switched off.
- The seat belt tongue is not inserted in the seat belt buckle of the driver's seat and the driver's door is opened.
- (i) To prevent application: pull the handle of the electric parking brake (→ page 153).

In the following situations, the electric parking brake is also applied:

• The HOLD function is keeping the vehicle stationary.

- Active Parking Assist is keeping the vehicle stationary.
- Active Distance Assist DISTRONIC is bringing the vehicle to a standstill.
- In addition, one of the following conditions must be fulfilled:
 - The vehicle is switched off
 - The seat belt tongue is not inserted in the seat belt buckle of the driver's seat and the driver's door is opened.
 - There is a system malfunction.
 - The power supply is insufficient.
 - The vehicle is stationary for a lengthy period.

When the electric parking brake is applied, the red PARK (USA) or (©) (Canada) indicator lamp lights up in the instrument cluster.

(i) The electric parking brake is not automatically applied if the vehicle is switched off by the ECO start/stop function.

Function of the electric parking brake (releasing automatically)

The electric parking brake is released when the following conditions are fulfilled:

- The driver's door is closed.
- The vehicle has been started.
- The transmission is in position or and you depress the accelerator pedal or you shift from transmission position or or when on level ground.
- If the transmission is in position \mathbb{R} , the trunk lid must be closed.
- The seat belt tongue is inserted into the seat belt buckle of the driver's seat.


If the seat belt tongue is not inserted into the seat belt buckle of the driver's seat, one of the following conditions must be fulfilled:

- You shift from transmission position P.
 or
- You have previously driven at speeds greater than 2 mph (3 km/h).

When the electric parking brake is released, the red PARK (USA) or (Canada) indicator lamp in the instrument cluster goes out.

Applying/releasing the electric parking brake manually

Applying

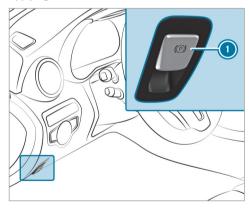

- Push handle ①. The red PARK (USA) or (P) (Canada) indicator lamp lights up in the instrument cluster.
- The electric parking brake is only securely applied if the red PARK (USA) or (P) (Canada) indicator lamp is lit continuously.

Releasing

- Switch on the vehicle.
- Pull handle

 . The red PARK (USA) or (Canada) indicator lamp in the instrument cluster goes out.

Emergency braking

Press and hold handle

As long as the vehicle is driving, the Please Release Parking Brake message is displayed and the red PARK (USA) or (P) (Canada) indicator lamp flashes.

When the vehicle has been braked to a standstill, the electric parking brake is applied. The red PARK (USA) or (Canada) indicator lamp lights up in the instrument cluster.

Information on collision detection when a vehicle is parked

If a collision is detected when the tow-away alarm is armed on a locked vehicle, you will receive a notification in the multimedia system when you switch the vehicle on.

You will receive information about the following points:

- The area of the vehicle that may have been damaged.
- The force of the impact.

The following situation can lead to inadvertent activation:

- The parked vehicle is moved, for example, in a two-story garage.
- (i) Deactivate the tow-away alarm in order to prevent inadvertent activation. If you deactivate the tow-away alarm, collision detection will also be deactivated.

i If the battery is severely discharged, the function for detecting a collision with a parked vehicle will automatically be deactivated to facilitate the next engine start.

System limits

Detection may be restricted in the following situations:

- The vehicle is damaged without an impact, for example, if an outside mirror is torn off or the paint is damaged by a key
- An impact occurs at low speed
- · The electric parking brake is not applied
- i You are responsible for your vehicle. Therefore, always make sure that your vehicle is free of damage and is roadworthy.

Notes on parking the vehicle for an extended period

If you leave the vehicle parked for longer than six weeks, it may suffer damage through disuse.

The 12 V battery may also be impaired or damaged by heavy discharging.

(i) Further information can be obtained at a qualified specialist workshop.

Standby mode (extension of the starter battery's period out of use)

Standby mode function

tion.

(i) This function is not available for all models. If standby mode is activated, energy loss will be minimized during extended periods of non-opera-

Standby mode is characterized by the following:

- The starter battery is preserved.
- The maximum non-operational time appears in the media display.
- The connection to online services is interrupted.
- The ATA (anti-theft alarm system) is not available.
- The interior protection and tow-away alarm functions are not available.
- The function for detecting collisions on a parked vehicle is not available.

If the following conditions are fulfilled, standby mode can be activated or deactivated using the multimedia system:

- · The vehicle is switched on.
- The vehicle has not been started.

Exceeding the vehicle's displayed non-operational time may cause inconvenience; i.e. it cannot be guaranteed that the starter battery will reliably start the vehicle.

Charge the starter battery in the following situations:

- The vehicle's non-operational time must be extended.
- The Battery Charge Insufficient for Standby Mode message appears in the media display.
- i Standby mode is automatically deactivated when the vehicle is switched on.

Activating/deactivating standby mode Multimedia system:

→ Vehicle ➤ 😝 Vehicle Settings

- >> Standby Mode
- (i) This function is not available for all models.

- Activate **✓** or deactivate ☐ the function. When you activate the function, a prompt will appear.
- Select Yes. Standby mode will be activated.


Driving and driving safety systems Driving systems and your responsibility

Your vehicle is equipped with driving systems that assist you in driving, parking and maneuvering the vehicle. The driving systems are only aids. They are not a substitute for you paying attention to vour surroundings and do not relieve you of your responsibility pertaining to road traffic law. The driver is always responsible for maintaining a safe distance, for vehicle speed, for braking in good time and for staying in lane. Pay attention to the traffic conditions at all times and intervene when necessary. Be aware of the limitations regarding the safe use of these systems.

Driving systems can neither reduce the risk of accident if you fail to adapt your driving style nor override the laws of physics. They cannot always take into account road, weather or traffic conditions.

Information on vehicle sensors and cameras

Some driving and driving safety systems use cameras as well as radar or ultrasonic sensors to monitor the area in front of, behind or next to the vehicle.

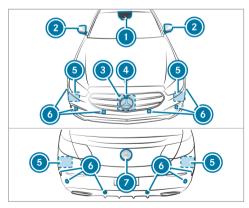

- Multifunction camera
- Cameras in the outside mirrors
- Front radar
- Front camera
- Corner radars
- Ultrasonic sensors
- Rear-view camera
- WARNING Risk of accident due to restricted detection performance of vehicle sensors and cameras

If the area around vehicle sensors or cameras is covered, damaged or dirty, certain driving and safety systems cannot function correctly. There is a risk of an accident.

- Keep the area around vehicle sensors or cameras clear of any obstructions and clean.
- Have damage to the bumper, radiator grille or stone chipping in the area of the front and rear windows repaired at a qualified specialist workshop.

In particular, keep the areas around the sensors and cameras free of dirt, ice or slush (\rightarrow page 332). The sensors and cameras must not be covered and the detection ranges around them must be kept free. Do not attach any additional license plate brackets, advertisements, stickers or foils – including those protecting against stone chippings – in the detection range of the sensors and cameras. Make sure that there are no overhanging loads protruding into the detection range.

If the bumper or radiator grille is damaged or after an impact, have the function of the sensors checked at a qualified specialist workshop. Have damage or stone chipping in the area of the cameras on the front and rear windows repaired at a qualified specialist workshop.

Overview of driving systems and driving safety systems

- ABS (Anti-lock Braking System) (→ page 157)
- BAS (**B**rake **A**ssist **S**ystem) (→ page 157)
- ESP[®] (Electronic Stability Program)
 (→ page 157)

- ESP[®] Crosswind Assist (→ page 158)
- EBD (Electronic Brakeforce Distribution)
 (→ page 159)
- STEER CONTROL (→ page 159)
- HOLD function (→ page 159)
- Hill Start Assist (→ page 160)
- ATTENTION ASSIST (→ page 161)
- Cruise control (→ page 162)
- Traffic Sign Assist (→ page 180)
- DYNAMIC BODY CONTROL (→ page 187)
- AIRMATIC (→ page 187)

Driving Assistance package

The following functions are part of the Driving Assistance Package. Certain functions are only available in some countries. Some functions are also available without the Driving Assistance Package, albeit with restricted functionality.

- Active Distance Assist DISTRONIC
 (→ page 164)
- Active Speed Limit Assist (country-dependent)
 (→ page 168)

- Route-based speed adaptation (countrydependent) (→ page 169)
- Active Brake Assist (→ page 175)
- Active Steering Assist (country-dependent)
 (→ page 170)
- Active Emergency Stop Assist (countrydependent) (→ page 173)
- Active Lane Change Assist (country-dependent) (→ page 174)
- Blind Spot Assist and Active Blind Spot Assist with exit warning (→ page 181)
- Active Lane Keeping Assist (→ page 184)

Parking Package

- Reversing camera (→ page 189)
- 360° Camera (→ page 191)
- Parking Assist PARKTRONIC (→ page 194)
- Active Parking Assist (→ page 198)

Functions of ABS

The Anti-lock Brake System (ABS) regulates the brake pressure in critical driving situations:

- During braking (e.g. at maximum full-stop braking or if there is insufficient tire traction). the wheels are prevented from locking.
- Vehicle steerability while braking is ensured.

If ABS intervenes when braking, you will feel a pulsing in the brake pedal. The pulsating brake pedal can be an indication of hazardous road conditions and can serve as a reminder to take extra care while driving.

System limits

- ABS is active from speeds of approx. 3 mph (5 km/h).
- · ABS may be impaired or may not function if a malfunction has occurred and the vellow ABS warning lamp lights up continuously after the vehicle is started.

Function of BAS

WARNING Risk of an accident caused by a malfunction in BAS (Brake Assist System)

If BAS is malfunctioning, the braking distance in an emergency braking situation is increased.

Depress the brake pedal with full force in emergency braking situations. ABS prevents the wheels from locking.

The Brake Assist System (BAS) supports your emergency braking situation with additional brake force.

If you depress the brake pedal quickly, BAS is activated:

- BAS automatically boosts the brake pressure.
- BAS can shorten the braking distance.
- ABS prevents the wheels from locking.

The brakes will function as usual once you release the brake pedal. BAS is deactivated.

Function of ESP®

WARNING Risk of skidding if ESP® is deactivated

If you deactivate ESP®, ESP® cannot carry out vehicle stabilization.

► ESP® should only be deactivated in the following situations.

NOTE Mercedes-AMG vehicles

Observe the notes in the Supplement. You could otherwise fail to recognize dangers.

The Electronic Stability Program (ESP®) can monitor and improve driving stability and traction in the following situations within physical limits:

- When pulling away on wet or slippery roads.
- When braking.

If the vehicle deviates from the direction desired by the driver, ESP^{\otimes} can stabilize the vehicle by intervening in the following ways:

- · One or more wheels are braked.
- The engine output is adapted according to the situation.

- Driving stability will no longer be improved.
- The driven wheels could spin.
- ETS/4ETS traction control is still active.
- (i) When ESP® is deactivated, you will still be assisted by ESP® when braking.

When the swarning lamp flashes, one or several wheels has reached its grip limit:

- Adapt your driving style to suit the current road and weather conditions.
- Do not deactivate ESP® under any circumstances.
- Only depress the accelerator pedal as far as is necessary when pulling away.

Deactivate $\mathsf{ESP}^{\texttt{@}}$ in the following situations to improve traction:

- · When using snow chains.
- In deep snow.
- On sand or gravel.
- i Spinning the wheels results in a cutting action, which enhances traction.

If the $ESP^@$ warning lamp $\fill \fill \fill$

- Indicator and warning lamps (→ page 450)
- Display messages (→ page 400)

ETS/4ETS (Electronic Traction System)

ETS/4ETS traction control is part of ESP® and makes it possible to pull away and accelerate on a slippery road.

ETS/4ETS can improve the vehicle's traction by intervening in the following ways:

• The driven wheels are braked individually if they spin.

• More drive torque is transferred to the wheel or wheels with traction.

Influence of drive programs on ESP®

The drive programs enable ESP^{\circledast} to adapt to different weather and road conditions as well as the driver's preferred driving style. Depending on the selected drive program, the appropriate ESP^{\circledast} mode will be activated. You can select the drive programs using the DYNAMIC SELECT switch (\rightarrow page 139).

Function of ESP® Crosswind Assist

ESP® Crosswind Assist detects sudden gusts of side wind and helps the driver to keep the vehicle in the lane:

- ESP® Crosswind Assist is active at vehicle speeds between approx. 47 mph (75 km/h) and 125 mph (200 km/h) when driving straight ahead or cornering slightly.
- The vehicle is stabilized by means of individual brake application on one side.

Activating/deactivating ESP® (Electronic Stability Program)

Multimedia system:

→ Vehicle → (Assistance → ESP

Mercedes-AMG vehicles: observe the notes in the Supplement. You could otherwise fail to recognize dangers.

▶ Activate or deactivate the function.

ESP® is deactivated if the ESP® OFF warning lamp lights up continuously on the instrument cluster.

Observe the information on warning lamps and display messages that may be shown on the instrument cluster.

Function of EBD

Electronic Brakeforce Distribution (EBD) is characterized by the following:

· Monitoring and regulating the brake pressure on the rear wheels.

 Improved driving stability when braking, especially on bends.

Function of STEER CONTROL

STEER CONTROL assists you by transmitting a noticeable steering force to the steering wheel in the direction required for vehicle stabilization.

This steering recommendation is given in the following situations:

- · both right wheels or both left wheels are on a wet or slippery road surface when you brake
- · the vehicle starts to skid

System limits

STEER CONTROL may be impaired or may not function in the following situations:

- FSP® is deactivated
- ESP® is malfunctioning.
- . The steering is malfunctioning.

If ESP® is malfunctioning, you will be assisted further by the electric power steering.

HOLD function

HOLD function

The HOLD function holds the vehicle at a standstill without requiring you to depress the brake pedal, e.g. while waiting in traffic.

The HOLD function is only an aid. The responsibility for the vehicle safely standing still remains with the driver.

System limits

The HOLD function is only intended to provide assistance when driving and is not a sufficient means of safeguarding the vehicle against rolling away when stationary.

• The incline must not be greater than 30%.

Activating/deactivating the HOLD function

WARNING Risk of an accident due to the HOLD function being active when you

leave the vehicle

If the vehicle is only braked with the HOLD function it could, in the following situations, roll away:

- If there is a malfunction in the system or in the power supply.
- If the HOLD function is deactivated by depressing the accelerator pedal or brake pedal, e.g. by a vehicle occupant.
- Always secure the vehicle against rolling away before you leave it.

Requirements

- The vehicle is stationary.
- The driver's door is closed or the seat belt on the driver's side is fastened.
- The vehicle has been started or has been automatically switched off by the ECO start/ stop function.

- The electric parking brake is released.
- Active Distance Assist DISTRONIC is deactivated.
- The transmission is in position $\boxed{\mathbf{D}}$, $\boxed{\mathbf{R}}$ or $\boxed{\mathbf{N}}$.

Activating the HOLD function

- Depress the brake pedal, and after a short time quickly depress further until the HOLD display appears in the Instrument Display.
- Release the brake pedal.

Deactivating the HOLD function

- Depress the accelerator pedal to pull away.
- Depress the brake pedal until the Hold display disappears from the Instrument Display.

The HOLD function is deactivated in the following situations:

- Active Distance Assist DISTRONIC is activated.
- The transmission is shifted to position **P**.
- The vehicle is secured with the electric parking brake.

In the following situations, the vehicle is held by transmission position $\boxed{\textbf{P}}$ and/or by the electric parking brake:

- The seat belt is unfastened and the driver's door is opened.
- · The vehicle is switched off.
- · There is a system malfunction.
- The power supply is insufficient.

Function of Hill Start Assist

Hill Start Assist holds the vehicle for a short time when pulling away on a hill under the following conditions:

- The transmission is in position **D** or **R**.
- The electric parking brake is released.

This gives you enough time to move your foot from the brake pedal to the accelerator pedal and depress it before the vehicle begins to roll away.

After a short time, Hill Start Assist no longer holds the vehicle.

Swiftly move your foot from the brake pedal to the accelerator pedal. Do not leave the vehicle when it is being held by Hill Start Assist.

ATTENTION ASSIST

Function of ATTENTION ASSIST

ATTENTION ASSIST assists you on long, monotonous journeys, e.g. on freeways and trunk roads. If ATTENTION ASSIST detects indicators of fatigue or increasing lapses in concentration on the part of the driver, it suggests taking a break.

ATTENTION ASSIST is only an aid. It cannot always detect fatigue or lapses in concentration in time. The system is not a substitute for a well-rested and attentive driver. On long journeys, take regular breaks in good time that allow for adequate recuperation.

You can choose between two settings:

- Standard: normal system sensitivity.
- **Sensitive:** higher system sensitivity. The driver is warned earlier and the attention level detected by ATTENTION ASSIST is adapted accordingly.

If drowsiness or increasing lapses in concentration are detected, the ATTENTION ASSIST: Take a Break! warning appears in the Instrument Display. You can acknowledge the message and take a break where necessary. If you do not take a break and ATTENTION ASSIST continues to detect increasing lapses in concentration, you will be warned again after a minimum of 15 minutes.



You can have the following status information for ATTENTION ASSIST displayed in the assistance menu of the on-board computer:

- The length of the journey since the last break.
- The attention level determined by ATTENTION ASSIST.

If ATTENTION ASSIST is unable to calculate the attention level and cannot issue a warning, the System Suspended message appears.

If a warning is output in the Instrument Display. the multimedia system offers to search for a rest area. You can select a rest area and start navigation to this rest area. This function can be activated and deactivated in the multimedia system.

If ATTENTION ASSIST is deactivated, the symbol appears in the assistance graphic in the Instrument Display. After the vehicle is started, ATTENTION ASSIST is automatically activated. The last selected sensitivity level remains stored.

System limits

ATTENTION ASSIST is active in the 37 mph (60 km/h) to 124 mph (200 km/h) speed range.

Particularly in the following situations, ATTENTION ASSIST functions only in a restricted manner and warnings may be delayed or not output at all:

- If you have been driving for less than approximately 30 minutes.
- If the road condition is poor (uneven road surface or potholes).
- If there is a strong side wind.
- If you adopt a sporty driving style (high cornering speeds or high rates of acceleration).
- If Active Steering Assist is activated and active (→ page 170).
- If the time has been set incorrectly.
- If you change lanes and vary your speed frequently in active driving situations.

The ATTENTION ASSIST drowsiness or alertness assessment is reset and restarted when continuing the journey in the following situations:

- If you switch off the vehicle.
- If you unfasten your seat belt and open the driver's door (e.g. to change drivers or take a break).

Setting ATTENTION ASSIST

Multimedia system:

→ Vehicle → (Assistance

>> ATTENTION ASSIST

Setting options

▶ Select Standard, Sensitive or Off.

Suggesting a rest area

- Select Suggest Rest Area.
- Activate

 or deactivate the function

 lf ATTENTION ASSIST detects fatigue or increasing lack of attention, it suggests a rest area in the vicinity.
- Select a suggested rest area: you are guided to the selected rest area.

Speed control cruise control

Function of cruise control

Cruise control holds the speed at the value selected by the driver.

If you accelerate to overtake, for example, the stored speed is not deleted. If you remove your

foot from the accelerator pedal after overtaking, cruise control will resume speed regulation at the stored speed.

You can set any speed from 15 mph (20 km/h) up to the maximum design speed.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognize dangers (\rightarrow page 155).

Mercedes-AMG vehicles: cruise control is available up to a maximum speed of 155 mph (250 km/h).

Displays on the instrument display

- (gray): cruise control is selected but not yet activated.
- (green): cruise control is active.

A stored speed appears alongside the 📆 display.

(i) The segments from the current stored speed to the end of the segment display light up on the speedometer.

System limits

Cruise control may be unable to maintain the stored speed on uphill gradients. The stored speed is resumed when the gradient evens out.

Change into a lower gear in good time on long and steep downhill gradients. Take particular note of this when driving a laden vehicle. By doing so, you will make use of the engine's braking effect. This relieves the load on the brake system and prevents the brakes from overheating and wearing too quickly.

Do not use cruise control in the following situations:

- In traffic situations that require frequent changes of speed, e.g. in heavy traffic, on winding roads
- On slippery roads. Accelerating can cause the driven wheels to lose traction and the vehicle could then skid.
- · When visibility is poor

Operating cruise control


WARNING Risk of accident due to stored speed

If you call up the stored speed and this is lower than your current speed, the vehicle decelerates.

Take into account the traffic situation before calling up the stored speed.

Requirements

- ESP® is activated, but must not intervene.
- The vehicle speed is at least 15 mph (20 km/h).
- The transmission is in position **D**.

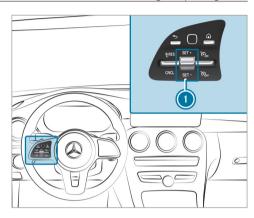

Operating cruise control

Press the rocker switches on the steering wheel control panel up or down to the desired position.

Activating cruise control

Select with the right rocker switch.

Activating cruise control

Press rocker switch SET/+ up or SET/- down.

The current speed is stored and maintained by the vehicle.

0

Select RESIP with the left rocker switch. The last stored speed is called up and maintained by the vehicle.

If the last stored speed has previously been deleted, the current vehicle speed is stored.

(i) When you switch off the vehicle, the last speed stored is deleted.

Increasing or decreasing the stored speed

1 mph (1 km/h): press rocker switch 1 up SET/+ or down SET/- to the pressure point.

0

5 mph (10 km/h): press rocker switch (1) up SET/+ or down SET/- beyond the pressure point.

0

Accelerate the vehicle to the desired speed and press rocker switch 1 up SET/+.

Adopting a detected speed

- Activate cruise control.
- If a traffic sign has been detected and is displayed in the instrument cluster: select RESIP with the left rocker switch.

The maximum permissible speed shown by the traffic sign is stored and the vehicle maintains or does not exceed this speed.

Deactivating cruise control

Select CNCL with the left rocker switch.

Deactivating cruise control

- Select with the right rocker switch.
- (i) If you brake, deactivate ESP® or if ESP® intervenes, cruise control is deactivated.

Active Distance Assist DISTRONIC

Function of Active Distance Assist DISTRONIC

DISTRONIC Active Distance Assist maintains the set speed while the vehicle is being driven freely. If vehicles are detected ahead, the set distance is maintained, if necessary until the vehicle comes

to a standstill. The vehicle accelerates or brakes depending on the distance to the vehicle in front and the set speed. The speed and distance to the vehicle in front are set and saved using the steering wheel.

Available speed range:

- Vehicles without Driving Assistance Package:
 15 mph (20 km/h) 120 mph (200 km/h)
- Vehicles with Driving Assistance Package: 15 mph (20 km/h) - 130 mph (210 km/h)

Other features of Active Distance Assist DISTRONIC:

- Adjusts the driving style depending on the selected drive program (fuel-saving, comfortable or dynamic)
- Initiates acceleration to the stored speed if the turn signal indicator is switched on to change to the overtaking lane
- · Vehicles with Driving Assistance Package:
 - Reacts to stationary vehicles detected in urban speed ranges (except bicycles and motorcycles)

Takes one-sided overtaking restrictions into account on freeways or on multi-lane roads with separate roads (countrydependent)

Vehicles with Driving Assistance Package and Parking Package: if the vehicle has been braked to a standstill on multi-lane, separate roads by Active Distance Assist DISTRONIC, it can automatically follow the vehicle in front when it drives off again within 30 seconds. If a critical situation is detected when you are driving off, a visual and acoustic warning is output indicating that the driver must now take control of the vehicle. The vehicle is not accelerated any further.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognize dangers (\rightarrow page 155).

Active Distance Assist DISTRONIC displays in the Instrument Display



Assistance graphic

- Route-based speed adaptation: type of route event (\rightarrow page 169)
- Vehicle in front
- Distance indicator
- Set specified distance
- 6 Active Lane Change Assist lane change display

Permanent status display of Active Distance Assist DISTRONIC

- (white): Active Distance Assist DISTRONIC selected, specified distance set
- (white vehicle, green speedometer): Active Distance Assist DISTRONIC active. specified distance set and vehicle detected
- (green): Active Distance Assist DISTRONIC active, specified distance set and vehicle detected
- Route-based speed adaptation active $(\rightarrow page 169)$.

The stored speed is shown along with the permanent status display and highlighted on the speedometer. When Active Distance Assist DISTRONIC is passive, the speed is graved out.

(i) On freeways or high-speed major roads, the green remarks vehicle symbol is displayed cyclically when the vehicle is ready to pull away.

i) If you depress the accelerator pedal beyond the setting of the Active Distance Assist DISTRONIC, the system is switched to passive mode. The SS Suspended message appears in the instrument display.

Display on the speedometer

The stored speed is highlighted on the speedometer. If the speed of the vehicle in front or the speed adjustment for the route event ahead is less than the stored speed, the segments in the speedometer light up. The Instrument Display shows the deactivation of Active Distance Assist DISTRONIC and alterations to the speed due to manual or automatic adoption of the maximum permissible speed.

System limits

The system may be impaired or may not function in the following situations, for example:

- In snow, rain, fog, heavy spray, if there is glare, in direct sunlight or in greatly varying ambient light.
- The windshield in the area of the camera is dirty, fogged up, damaged or covered.

- If the radar sensors are dirty or covered.
- In parking garages or on roads with steep uphill or downhill gradients.
- If there are narrow vehicles in front, such as bicycles or motorcycles.

In addition, on slippery roads, braking or accelerating can cause one or several wheels to lose traction and the vehicle could then skid.

Do not use Active Distance Assist DISTRONIC in these situations.

 WARNING Risk of accident from acceleration or braking by Active Distance Assist DISTRONIC

Active Distance Assist DISTRONIC may accelerate or brake in the following cases, for example:

- If the vehicle pulls away using Active Distance Assist DISTRONIC.
- If the stored speed is called up and is considerably faster or slower than the currently driven speed.

- If Active Distance Assist DISTRONIC no longer detects a vehicle in front or does not react to relevant objects.
- Always carefully observe the traffic conditions and be ready to brake at all times.
- Take into account the traffic situation before calling up the stored speed.

★ WARNING Risk of accident due to insufficient deceleration by Active Distance Assist DISTRONIC

Active Distance Assist DISTRONIC brakes your vehicle with up to 50% of the possible deceleration. If this deceleration is not sufficient, Active Distance Assist DISTRONIC alerts you with a visual and acoustic warning.

- Adjust your speed and maintain a suitable distance from the vehicle in front.
- Brake the vehicle yourself and/or take evasive action.

WARNING Risk of accident if detection function of Active Distance Assist DISTRONIC is impaired

Active Distance Assist DISTRONIC does not react or has a limited reaction:

- · when driving on a different lane or when changing lanes
- to pedestrians, animals, bicycles or stationary vehicles, or unexpected obstacles
- to complex traffic conditions
- · to oncoming vehicles and crossing traffic

As a result, Active Distance Assist DISTRONIC may neither give warnings nor intervene in such situations.


Always observe the traffic conditions carefully and react accordingly.

Operating Active Distance Assist DISTRONIC

Requirements

- The electric parking brake is released.
- ESP® is activated, but must not intervene.

- The transmission is in position **D**.
- The driver's door is closed
- · Check of the radar sensor system has been successfully completed.
- Parking Assist PARKTRONIC is not being used to park the vehicle or to exit from a parking space.

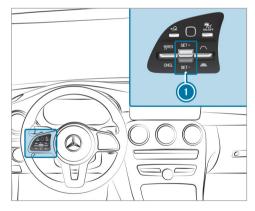

To operate Active Distance Assist DISTRONIC: press the rocker switches on the steering wheel control unit up or down to the desired position.

Activating/deactivating Active Distance Assist DISTRONIC

Press button

Activating Active Distance Assist DISTRONIC

To activate without a stored speed: press rocker switch 1 up SET/+ or down SET/-, or select RESI® with the left rocker switch.

or

- To activate with a stored speed: select RESI® with the left rocker switch.
- Remove your foot from the accelerator pedal. The current speed is stored and maintained by the vehicle.

Adopting a detected speed limit

Activate Active Distance Assist DISTRONIC.

If a traffic sign has been detected and is displayed in the instrument cluster: select RESI® with the left rocker switch.

The maximum permissible speed on the traffic sign is adopted as the stored speed. The vehicle adapts its speed to that of the vehicle in front, but only up to the stored speed.

Pulling away with Active Distance Assist DISTRONIC

- Activate Active Distance Assist DISTRONIC and remove your foot from the brake pedal.
- Select RESI® with the left rocker switch.

or

Depress the accelerator pedal briefly and firmly.

The functions of Active Distance Assist DISTRONIC continue to be carried out.

Deactivating Active Distance Assist DISTRONIC

★ WARNING Risk of an accident due to Active Distance Assist DISTRONIC being active when you leave the driver's seat

If you leave the driver's seat while the vehicle is being braked by Active Distance Assist DISTRONIC only, the vehicle can roll away.

- Always deactivate Active Distance Assist DISTRONIC and secure the vehicle to prevent it from rolling away before you leave the driver's seat.
- Select **CNCL** with the left rocker switch.
- i If you brake, deactivate ESP® or if ESP® intervenes, Active Distance Assist DISTRONIC is deactivated.

Increasing or decreasing the speed

1 mph (1 km/h): press rocker switch 1 up SET/+ or down SET/- to the pressure point.

or

5 mph (10 km/h): press rocker switch up SET/+ or down SET/- beyond the pressure point.)r

Accelerate the vehicle to the desired speed and press rocker switch 1 up SET/+1.

Changing the specified distance to the vehicle in front

- To reduce the specified distance: press the right rocker switch up ().
- To increase the specified distance: press the right rocker switch down ().

Function of Active Speed Limit Assist

If a change in the speed limit of 12 mph (20 km/h) or more is detected and automatic adoption of speed limits is activated, the new speed limit is automatically adopted as the stored speed (\rightarrow page 181).

The driven speed is adjusted when the vehicle is level with the traffic sign at the latest. In the case of signs indicating entry into an urban area, the speed is adapted according to the speed permitted within the urban area. The speed limit display in the Instrument Display is always updated when the vehicle is level with the traffic sign.

If there is no speed restriction on an unlimited stretch of road (e.g. on a freeway), the recommended speed is automatically adopted as the stored speed. The system uses the speed stored on an unlimited stretch of road as the recommended speed. If you do not alter the stored speed on an unlimited stretch of road, the recommended speed is 80 mph (130 km/h).

If Active Distance Assist DISTRONIC has been put into passive mode by pressing the accelerator pedal, only speed limits that are higher than the set speed are adopted.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognize dangers (\rightarrow page 155).

System limits

The system limits of Traffic Sign Assist apply to the detection of traffic signs (\rightarrow page 180).

Speed limits below 12 mph (20 km/h) are not automatically adopted by the system as the stored speed. Temporary speed restrictions (e.g. for a certain time or due to weather conditions) cannot be properly detected by the system. The maximum permissible speed applying to a vehicle with a trailer is not detected by the system.

Adjust the speed in these situations.

WARNING Risk of accident due to Active Speed Limit Assist adapting the vehicle's speed

The speed adopted by Active Speed Limit Assist may be too high or incorrect in some individual cases, such as:

- at speed limits below 12 mph (20 km/h)
- in wet conditions or in fog
- · when towing a trailer
- Ensure that the driven speed complies with traffic regulations.
- Adjust the driving speed to suit current traffic and weather conditions.

Function of route-based speed adaptation

When Active Distance Assist DISTRONIC is activated, the vehicle speed will be adapted accordingly to the route events ahead. Depending on the drive program selected, the vehicle negotiates a route

event ahead in an economical, comfortable or dynamic manner. When the route event has been passed, the vehicle accelerates again to the stored speed. The set distance to the vehicle in front, vehicles detected ahead and speed restrictions ahead are taken into account

You can activate and deactivate route-based speed adaptation in the multimedia system $(\rightarrow page 170)$.

The following route events are taken into account:

- Bends
- T-intersections, traffic circles and toll stations
- · Turns and exits
- Traffic jams ahead (only with Live Traffic Information (\rightarrow page 263))
- (i) When the toll station is reached. Active Distance Assist DISTRONIC adopts the speed as the stored speed.

Also, the speed is reduced if the turn signal indicator to change lanes is switched on and one of the following situations is detected:

Turning at intersections

- · Driving on slowing-down lanes
- Driving on lanes adjacent to slowing-down lanes

The driver is responsible for choosing the right speed and observing other road users. This applies in particular to intersections, traffic circles and traffic lights because route-based speed adaptation does not brake the vehicle to a standstill.

When route guidance is active, the first speed adjustment is carried out automatically. If the turn signal indicator is switched on, the selected route is confirmed and further speed adjustment is activated.

Speed adaptation is canceled in the following cases:

- If the turn signal indicator is switched off before the route event.
- If the driver depresses the accelerator or brake pedal during the process.

System limits

Route-based speed adaptation does not take right of way regulations into account. The driver is

responsible for complying with road traffic regulations and driving at a suitable speed.

The speed adaptation made by the system may not always be suitable, particularly in the following situations:

- The course of the road is not clearly visible
- Road narrowing
- Varying maximum permissible speeds in individual lanes, forexample at toll stations
- · Wet road surfaces, snow or ice

In these situations, the driver must intervene accordingly.

A

WARNING Risk of accident in spite of route-based speed adaptation

Route-based speed adaptation can malfunction or be temporarily unavailable in the following situations:

- If the driver does not follow the calculated route
- If map data is not up-to-date or available

- In the event of roadworks
- In bad weather or road conditions
- If the accelerator pedal is depressed
- In the event of electronically displayed speed limitations
- Adapt the speed to the traffic situation.

Setting route-based speed adjustment

Requirements:

Active Distance Assist DISTRONIC is activated.

Multimedia system:

- → Vehicle → (Assistance
- >> Speed Adjustment
- ▶ Activate or deactivate the function.

Active Steering Assist

Function of Active Steering Assist

Active Steering Assist is available only up to a speed of 130 mph (210 km/h). The system helps you to stay in the center of the lane by means of

moderate steering interventions. Depending on the speed driven, Active Steering Assist uses the vehicles ahead and lane markings as a reference.

(i) Depending on the country, and in the lower speed range, Active Steering Assist can use the surrounding traffic as a reference. If necessary. Active Steering Assist can also provide assistance when the vehicle is driven away from the center of the lane, forexample, to form a rescue lane.

If the detection of lane markings and vehicles ahead is impaired, Active Steering Assist switches to passive mode. The system provides no support in this case.

Status display of Active Steering Assist in the Instrument Display

- (gray): activated and passive
- (green): activated and active
- (red): system limits detected
- (white, red hands): "hands on the steering wheel" prompt
- (i) During the transition from active to passive status, the symbol is shown as enlarged

and flashing. Once the system is passive, the symbol is shown as gray in the Instrument Display.

(i) Depending on the selected vehicle settings, Active Steering Assist may be unavailable.

Steering and touch detection

The driver is required to keep their hands on the steering wheel at all times and be able to intervene at any time to correct the course of the vehicle and keep it in lane. The driver must expect a change from active to passive mode or vice versa at any time.



If the system detects that the driver has not steered the vehicle for a considerable period of time or has removed their hands from the steering wheel, display 1 appears. If the driver still does not steer the vehicle, a warning tone sounds in addition to the visual warning message.

If the driver does not react to the warning for a considerable period, the system can initiate an emergency stop (\rightarrow page 173).

The warning is not issued or is stopped when the driver gives confirmation to the system:

- . The driver steers the vehicle.
- **Depending on the country:** the driver presses a steering wheel button or operates Touch Control

If Active Steering Assist detects that a system limit has been reached, a visual warning is issued and a warning tone sounds.

Observe the notes on driving systems and your responsibility: you may otherwise fail to recognize dangers (\rightarrow page 155).

System limits

Active Steering Assist has a limited steering torque for lateral guidance. In some cases, the steer-

ing intervention is not sufficient to keep the vehicle in the lane or to drive through exits.

The system may be impaired or may not function in the following instances:

- There is poor visibility, e.g. due to snow, rain, fog, heavy spray, greatly varying ambient light or strong shadows on the road.
- There is glare, e.g. from oncoming traffic, direct sunlight or reflections.
- · Insufficient road illumination.
- The windshield is dirty, fogged up, damaged or covered in the vicinity of the camera, e.g. by a sticker.
- No, or several, unclear lane markings are present for one lane, or the markings change quickly, forexample, in a construction area or intersections.
- The lane markings are worn away, dark or covered up, e.g. by dirt or snow.
- If the distance to the vehicle in front is too short and thus the lane markings cannot be detected.
- The road is narrow and winding.

• There are obstacles on the lane or projecting out into the lane, such as object markers.

The system does not provide assistance in the following conditions:

- · On tight bends and when turning.
- When crossing intersections.
- · At traffic circles or toll stations.
- When the tire pressure is too low.

WARNING Risk of accident if Active Steering Assist unexpectedly stops functioning

If the system limits of Active Steering Assist are reached there is no guarantee that the system will remain active or will keep the vehicle in lane.

- Always keep your hands on the steering wheel and observe the traffic carefully.
- Always steer the vehicle paying attention to traffic conditions.

WARNING Risk of accident if Active Steering Assist unexpectedly intervenes


The detection of lane markings and objects may malfunction and cause unexpected steering interventions.

Steer according to traffic conditions.

Activating Active Steering Assist

Requirements:

- ESP® must be activated, but not intervening.
- Active Distance Assist DISTRONIC is activated.

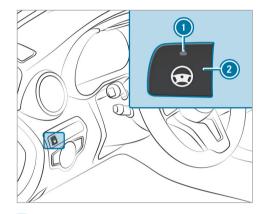

If indicator lamp (1) is off: press button (2).

Function of Active Emergency Stop Assist



If the system detects that the driver has not steered the vehicle for a considerable period of time or has removed their hands from the steering wheel, display 1 appears in the Instrument Display. If the driver still does not steer the vehicle or gives no confirmation to the system, a warning tone sounds in addition to the visual warning message.

If the driver still does not respond to the warning, the Beginning Emergency Stop message appears in the Instrument Display. If the driver still does not respond, Active Distance Assist DISTRONIC

reduces the speed. The vehicle is decelerated in stages to a standstill.

Depending on the country, and at speeds below 40 mph (60 km/h), the hazard warning lights switch on automatically.

When the vehicle is stationary, the following actions are performed:

- The vehicle is secured with the electric parking brake.
- Active Distance Assist DISTRONIC is ended.
- · The vehicle is unlocked.
- If possible, an emergency call is placed to the Mercedes-Benz emergency call center.

The driver can cancel the deceleration at any time by performing one of the following actions:

- Steering
- · Braking or accelerating
- Deactivating Active Distance Assist DISTRONIC

Active Lane Change Assist

Function of Active Lane Change Assist

Active Lane Change Assist supports the driver during lane changes by applying steering torque if the driver activates a turn signal indicator.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognize dangers (\rightarrow page 155).

Assistance during lane changes is provided if all the following conditions are met:

- · You are driving on a freeway or road with multiple lanes in the direction of travel.
- The neighboring lane is separated by a broken lane marking.
- · No vehicle is detected in the adjacent lane.
- The vehicle speed is between 50 mph (80 km/h) and 110 mph (180 km/h).
- · Active Lane Change Assist is switched on in the multimedia system.
- · Active Steering Assist is activated and active.

If no vehicle is detected in the adjacent lane and a lane change is permitted, the lane change begins

after the driver has activated the turn signal indicator. This is shown to the driver with a green arrow next to the steering wheel symbol. Themessage, for example, also appears, If Active Lane Change Assist has been activated with the turn signal indicator but a lane change is not immediately possible, a gray arrow appears next to the steering wheel symbol, which remains green.

When lane change assistance starts, the turn signal indicator is automatically activated along with the display in the Instrument Display.

If the assistance graphic is shown during lane changes, an additional arrow appears in it pointing towards the adjacent lane (\rightarrow page 164).

If a lane change is not possible, the arrow is faded out after a few seconds and a new lane change must be initiated. An immediate lane change is possible only on freeway sections without speed limits.

If the system is impaired. Active Lane Change Assist may be canceled. If it is canceled, the message appears in the Instrument Display.

In addition, a warning tone may sound, depending on the situation.

WARNING Risk of accident when changing lane to an occupied adjacent lane

Lane Change Assist cannot always clearly detect if the adjacent lane is free.

The lane change might be initiated although the adjacent lane is not free.

- ▶ Before changing lanes, make sure that the neighboring lane is free and there is no danger to other road users.
- Monitor the lane change.

WARNING Risk of accident if Lane Change Assist unexpectedly stops functioning

If the system limitations for Lane Change Assist have been reached, there is no guarantee that the system will remain active.

Lane Change Assist cannot then assist you by applying steering torque.

Always monitor the lane change and keep your hands on the steering wheel. Observe the traffic conditions and steer and/or brake if necessary.

System limits

The system limitations of Active Steering Assist apply to Active Lane Change Assist $(\rightarrow page 170)$.

The system may also be impaired or may not function in the following situations:

- The sensors in the rear bumper are dirty, damaged or covered by a sticker or ice and snow, forexample.
- The exterior lighting shows a defect.
- (i) The Active Lane Change Assist sensors adjust automatically while a certain distance is being driven after the vehicle has been delivered. Active Lane Change Assist is unavailable or available only partially during this teach-in process; no arrow appears next to the Active Steering Assist symbol when the turn signal indicator is activated.

Activating/deactivating Active Lane Change Assist

Multimedia system:

→ Vehicle → (Assistance

- Select Lane Change Assist.
- ▶ Activate or deactivate the function.

Active Brake Assist

Function of Active Brake Assist

Active Brake Assist consists of the following functions:

- Distance warning function
- Autonomous braking function
- Situation-dependent braking assistance
- Vehicles with Driving Assistance Package: Evasive Steering Assist and turning maneuver function

Active Brake Assist can help you to minimize the risk of a collision with vehicles, cyclists or pedestrians or to reduce the effects of such a collision.

If Active Brake Assist has detected a risk of collision, a warning tone will sound and the distance warning lamp | will light up on the instrument cluster

If you do not react to the warning, autonomous braking can be initiated in critical situations.

In especially critical situations, Active Brake Assist can initiate autonomous braking directly. In this case, the warning lamp and warning tone will occur simultaneously with the braking application.

If you apply the brake yourself in a critical situation or apply the brake during autonomous braking, situation-dependent braking assistance will occur. The brake pressure will increase up to maximum full-stop braking if necessary.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognize dangers (\rightarrow page 155).



If autonomous braking or situation-dependent braking assistance has occurred, display will appear on the instrument display and then automatically go out after a short time.

★ WARNING Risk of an accident caused by limited detection performance of Active Brake Assist

Active Brake Assist cannot always clearly identify objects and complex traffic situations.

In such cases, Active Brake Assist might:

- Give a warning or brake without reason
- · Not give a warning or not brake

Active Brake Assist is only an aid. The driver is responsible for maintaining a sufficiently safe distance to the vehicle in front, vehicle speed and for braking in good time.

- Always pay careful attention to the traffic situation; do not rely on Active Brake Assist alone
- Be prepared to brake or swerve if necessary.

If Active Brake Assist is deactivated or the functions are restricted, e.g. due to activation of another driving system, the restricted display message will appear on the driver's display.

If the system is unavailable due to dirty or damaged sensors or due to a malfunction, or if the functions are restricted, the symmetric warning lamp will appear on the driver's display.

Also observe the system limits of Active Brake Assist.

The individual subfunctions are available in various speed ranges:

The distance warning function can issue a warning in the following situations:

From approximately 4 mph (7 km/h), if your vehicle is critically close to a vehicle, cyclist or pedestrian, you will hear an intermittent warning tone and the distance warning lamp will light up on the instrument cluster.

Brake immediately or take evasive action, provided it is safe to do so and the traffic situation allows this.

Distance warning function (vehicles without Driving Assistance Package)

The distance warning function can aid you in the following situations with an intermittent warning tone and a warning lamp:

- at speeds up to approximately 155 mph (250 km/h) when approaching vehicles ahead
- at speeds up to approximately 50 mph (80 km/h) when approaching stationary vehicles, moving pedestrians, and cyclists ahead

 at speeds up to approximately 37 mph (60 km/h) when approaching crossing cyclists

Distance warning function (vehicles with Driving Assistance Package)

The distance warning function can aid you in the following situations with an intermittent warning tone and a warning lamp:

- at speeds up to approximately 155 mph (250 km/h) when approaching vehicles ahead
- at speeds up to approximately 62 mph (100 km/h) when approaching stationary vehicles
- at speeds up to approximately 50 mph (80 km/h) when approaching moving pedestrians and cyclists ahead
- at speeds up to approximately 43 mph (70 km/h) when approaching stationary pedestrians, crossing vehicles and stationary and crossing cyclists

Autonomous braking function (vehicles without Driving Assistance Package)

From a speed of approximately 4 mph (7 km/h). the autonomous braking function may intervene in the following situations:

- at speeds up to approximately 124 mph (200 km/h) when approaching vehicles ahead
- at speeds up to approximately 50 mph (80 km/h) when approaching cyclists ahead
- at speeds up to approximately 37 mph (60 km/h) when approaching moving pedestrians and crossing cyclists
- at speeds up to approximately 31 mph (50 km/h) when approaching stationary vehi-

Autonomous braking function (vehicles with Driving Assistance Package)

From a speed of approximately 4 mph (7 km/h), the autonomous braking function may intervene in the following situations:

 at speeds up to approximately 155 mph (250 km/h) when approaching vehicles ahead

- at speeds up to approximately 62 mph (100 km/h) when approaching stationary vehicles
- at speeds up to approximately 50 mph (80 km/h) when approaching cyclists ahead
- at speeds up to approximately 43 mph (70 km/h) when approaching stationary and moving pedestrians, crossing vehicles and stationary and crossing cyclists

Situation-dependent braking assistance (vehicles without Driving Assistance Package)

The situation-dependent braking assistance can intervene from a speed of approximately 4 mph (7 km/h) in the following situations:

- at speeds up to approximately 155 mph (250 km/h) when approaching vehicles ahead
- at speeds up to approximately 50 mph (80 km/h) when approaching stationary vehicles and cyclists ahead
- at speeds up to approximately 37 mph (60 km/h) when approaching moving pedestrians and crossing cyclists

Situation-dependent braking assistance (vehicles with Driving Assistance Package)

The situation-dependent braking assistance can intervene from a speed of approximately 4 mph (7 km/h) in the following situations:

- at speeds up to approximately 155 mph (250 km/h) when approaching vehicles ahead
- at speeds up to approximately 62 mph (100 km/h) when approaching stationary vehicles
- at speeds up to approximately 50 mph (80 km/h) when approaching cyclists ahead
- at speeds up to approximately 37 mph (60 km/h) when approaching stationary and moving pedestrians, crossing vehicles, and stationary and crossing cyclists

Canceling a brake application of Active Brake Assist

You can cancel a brake application of Active Brake Assist at any time by:

- sharply depressing the accelerator pedal or with kickdown
- · releasing the brake pedal

Active Brake Assist may cancel the brake application when one of the following conditions is fulfilled:

- You maneuver to avoid the obstacle.
- · There is no longer a risk of collision.
- An obstacle is no longer detected in front of your vehicle.

Evasive Steering Assist (only vehicles with Driving Assistance Package)

Evasive Steering Assist has the following characteristics:

- The ability to detect stationary or moving pedestrians.
- Assistance through power-assisted steering if a swerving maneuver is detected.
- Activation due to an abrupt steering movement in the event of a swerving maneuver.
- Assistance during swerving and straightening of the vehicle.
- Reaction from a speed of approximately 12 mph (20 km/h) up to a speed of approximately 43 mph (70 km/h).

You can cancel the assistance at any time by actively steering.

Turning maneuver function (only vehicles with Driving Assistance Package)

If the system detects a risk of a collision with an oncoming vehicle when turning across an oncoming lane, autonomous braking can be initiated at speeds below 9 mph (15 km/h) before you have left the lane in which you are driving.

A

WARNING Risk of accident despite Evasive Steering Assist

Evasive Steering Assist cannot always recognize objects or complex traffic situations clearly.

Moreover, the steering support provided by Evasive Steering Assist is not sufficient to avoid a collision.

- Always pay careful attention to the traffic situation; do not rely on Evasive Steering Assist alone.
- ▶ Be prepared to brake or swerve if necessary.

- ► End the support by actively steering in non-critical situations
- Drive at an appropriate speed if there are pedestrians close to the path of your vehicle.

System limits

Full system performance is not vet available for a few seconds after switching on the vehicle or after driving off.

The system may be impaired or may not function, particularly in the following situations:

- In snow, rain, fog, heavy spray, direct sunlight or variable light conditions or if there is glare.
- If the sensors are dirty, fogged up, damaged or covered
- If the sensors are impaired due to interference from other radar sources, e.g. strong radar reflections in parking garages.
- If a loss of tire pressure or a defective tire has been detected and displayed.
- In complex traffic situations where objects cannot always be clearly identified.

- If pedestrians or vehicles move quickly into the sensor detection range.
- If pedestrians are hidden by other objects.
- If the typical outline of a pedestrian cannot be distinguished from the background.
- If a pedestrian is not detected as such, e.g. due to special clothing or other objects.
- If the driver's seat belt is not fastened.
- On bends with a tight radius.
- (i) The Active Brake Assist sensors adjust automatically while a certain distance is being driven after the vehicle has been delivered. Active Brake Assist is unavailable or only partially available during the teach-in process.

Setting Active Brake Assist

Multimedia system:

→ Vehicle → (Assistance ▶ Active Brake Assist

The settings can be adjusted when the ignition is switched on.

Select Early, Medium or Late.

(i) Your selection will be retained when the vehicle is next started.

Deactivating Active Brake Assist

- (i) It is recommended that you always leave Active Brake Assist activated.
- Select Off

The distance warning function and the autonomous braking function will be deactivated.

Vehicles without Driving Assistance Package: when the vehicle is next started, the medium setting will automatically be selected.

Vehicles with Driving Assistance Package: Evasive Steering Assist will not be available. When the ignition is next started, the medium setting will be selected automatically and Evasive Steering Assist will be available.

If Active Brake Assist is deactivated, the হিলে symbol appears in the status bar of the multifunction display.

Traffic Sign Assist

Function of Traffic Sign Assist

Traffic Sign Assist detects traffic signs with the multifunction camera (→ page 155). It assists you by displaying detected speed limits and overtaking restrictions in the Instrument Display.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognize dangers (\rightarrow page 155).

Since Traffic Sign Assist also uses the data stored in the navigation system, it can update the display in the following situations without detecting traffic signs.


The camera also detects traffic signs with a restriction indicated by an additional sign (e.g. when wet). These are displayed only if a restriction applies or if the system cannot clearly determine whether the restriction applies.

Warning when the maximum permissible speed is exceeded

The system can warn you if you unintentionally exceed the maximum permissible speed. To do this, you can specify in the multimedia system by how much the maximum permissible speed can

be exceeded before a warning is issued. You can specify whether the warning is to be just a visual warning or an acoustic one as well.

Display in the Instrument Display

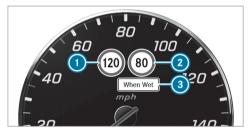

Instrument display in the widescreen cockpit

- Maximum permissible speed
- Maximum permissible speed when a restriction applies
- 3 Additional sign with restriction
- Vehicles with a standard Instrument Display: a
 + symbol next to a traffic sign in the Instrument Display indicates that additional traffic signs have been detected. These can also be

displayed in the media display and optionally in the head-up display.

If Traffic Sign Assist cannot determine the maximum permissible speed (e.g. due to missing signs), the following display appears in the Instrument Display:



This is displayed continuously if the vehicle is in a country where Traffic Sign Assist is not supported. Traffic Sign Assist is not available in all countries.

(i) Also observe the information on display messages in Traffic Sign Assist (→ page 400).

System limits

The system may be impaired or may not function particularly in the following situations:

- If there is poor visibility, e.g. due to insufficient illumination of the road, highly variable shade conditions, rain, snow, fog or heavy spray.
- If there is glare, e.g. from oncoming traffic, direct sunlight or reflections.

- If there is dirt on the windshield in the vicinity of the multifunction camera or if the camera is fogged up, damaged or obscured.
- If the traffic signs are hard to detect, e.g. due to dirt, snow or insufficient lighting, or because they are covered.
- If the information in the navigation system's digital map is incorrect or out of date.
- If signs are ambiguous, e.g. road signs in roadworks or in adjacent lanes.
- If you turn sharply when passing traffic signs outside the camera's field of vision

Setting Traffic Sign Assist

Requirements:

 For automatic adoption of speed limits: Active Distance Assist DISTRONIC is activated.

Multimedia system:

→ Vehicle → (Assistance >> Traffic Sign Assist

Activating or deactivating automatic adoption of speed limits

- Select Limit Adoption.
- Activate **✓** or deactivate ☐ the function. The speed limits detected by Traffic Sign Assist are automatically adopted by Active Distance Assist DISTRÓNIC.

Displaying detected traffic signs in the media display

- Select Display in COMAND.
- Activate **▼** or deactivate □ the function.
- If one of the following systems is activated, the detected speed can be manually adopted as the speed limit:
 - Active Distance Assist DISTRONIC
 - Cruise control

Further information (\rightarrow page 167).

Adjusting the type of warning

Select Visual & Audible, Visual or None.

Adjusting the warning threshold

This value determines the speed at which a warning is issued when exceeded.

- Select Warning Threshold.
- Set the desired speed.

Blind Spot Assist and Active Blind Spot Assist with exit warning

Function of Blind Spot Assist and Active Blind Spot Assist with exit warning

Blind Spot Assist and Active Blind Spot Assist use two lateral, rear-facing radar sensors to monitor the area up to 130 ft (40 m) behind and 10 ft (3 m) next to your vehicle.

If a vehicle is detected at speeds above approximately 8 mph (12 km/h) and this vehicle subsequently enters the monitoring range directly next to your vehicle, the warning lamp in the outside mirror will light up red.

Permanent status display on the instrument cluster:

- (gray): system is activated but not operational
- (green): system is activated and operational

If a vehicle is detected close to your vehicle and you switch on the turn signal indicator in the corresponding direction, a double warning tone will sound and the red warning lamp in the outside mirror will flash. If the turn signal indicator remains switched on, all other detected vehicles will be indicated only by the flashing of the red warning lamp.

If you overtake a vehicle quickly, no warning is given.

WARNING Risk of accident despite Active Blind Spot Assist

Active Blind Spot Assist does not react to the following:

- if you overtake a vehicle too closely so that it is in the blind spot area
- if vehicles traveling at a much faster speed approach and then overtake

Active Blind Spot Assist may not give warnings or intervene in such situations.

Always pay careful attention to the traffic situation and maintain a safe distance at the side of the vehicle.

Observe the notes on driving systems and your responsibility; you may otherwise fail to recognize dangers (\rightarrow page 155).

Exit warning

The exit warning is an additional function of Blind Spot Assist and can warn vehicle occupants about approaching vehicles when leaving a stationary vehicle.

WARNING Risk of accident despite exit warning

The exit warning neither reacts to stationary objects nor to persons or road users approaching you at a greatly differing speed.

The exit warning cannot warn drivers in these situations.

Always pay particular attention to the traffic situation when opening the doors and make sure there is sufficient clearance.

If there is a vehicle in the monitoring range, this will be indicated in the outside mirror. If a vehicle occupant opens the door on the side with the warning, a warning tone will sound and the warning lamp in the outside mirror will start to flash.

This additional function is only available when Blind Spot Assist is active. When the exit warning is activated, it can warn vehicle occupants for up to three minutes after the vehicle is switched off. The exit warning is no longer available once the warning lamp in the outside mirror flashes three times.

The exit warning is only an aid and is not a substitute for the attention of vehicle occupants. The responsibility when opening the doors and leaving the vehicle remains with the vehicle occupants.

System limits

Blind Spot Assist and Active Blind Spot Assist may be limited in the following situations, in particular:

- if there is dirt on the sensors or the sensors are obscured
- in poor visibility, e.g. due to fog, heavy rain or snow
- if there are narrow vehicles, e.g. bicycles or motorbikes
- if the road has very wide or narrow lanes
- · if vehicles are not driving in the middle of their lane

Warnings may be issued in error when you drive close to crash barriers or similar solid boundaries. Always make sure that there is sufficient lateral distance for other road users or obstacles.

Warnings may be interrupted when driving alongside long vehicles, for example trucks, for a prolonged period of time.

Blind Spot Assist is not operational when reverse gear is engaged.

The exit warning may be limited in the following situations:

- when the sensors are covered by adjacent vehicles in narrow parking spaces
- when people approach the vehicle
- in the event of stationary or slowly moving objects

Function of brake application (Active Blind Spot Assist)

If Active Blind Spot Assist detects a risk of a side impact in the monitoring range, a course-correcting brake application will be carried out. This is designed to help you avoid a collision.

The course-correcting brake application is available in the speed range between approximately 20 mph (30 km/h) and 125 mph (200 km/h).

A WARNING Risk of accident despite brake application of Active Blind Spot Assist

A course-correcting brake application cannot always prevent a collision.

- Always steer, brake or accelerate yourself, especially if Active Blind Spot Assist warns you or makes a course-correcting brake application.
- Always maintain a safe distance at the sides.



If a course-correcting brake application occurs, the red warning lamp will flash in the outside mirror and a warning tone will sound. In addition, dis-

play **1** indicating the danger of a side collision will appear on the instrument display.

In rare cases, the system may make an inappropriate brake application. This brake application may be interrupted at any time by steering slightly in the opposite direction or accelerating.

System limits

Also note the system limitations of Active Blind Spot Assist; you may otherwise fail to recognize dangers (\rightarrow page 181).

Either a course-correcting brake application appropriate to the driving situation, or none at all, will occur in the following situations:

- Vehicles or obstacles, e.g. crash barriers, are located on both sides of your vehicle.
- An oncoming vehicle passes with little lateral clearance.
- You have adopted a sporty driving style with high cornering speeds.
- You brake or accelerate significantly.
- A driving safety system intervenes, e.g. ESP[®] or Active Brake Assist.

- ESP[®] is deactivated.
- A loss of tire pressure or a defective tire is detected.

Activating/deactivating Blind Spot Assist or Active Blind Spot Assist

Multimedia system:

- → Vehicle → (Assistance
- ▶ Blind Spot Assist
- ▶ Activate or deactivate the function.

Active Lane Keeping Assist

Function of Active Lane Keeping Assist

Active Lane Keeping Assist monitors the area in front of your vehicle by means of a multifunction camera (\rightarrow page 155). It serves to protect you against unintentionally leaving your lane. You will be warned by vibration pulses in the steering wheel and guided back into your lane by a course-correcting brake application.

Active Lane Keeping Assist is available in the speed range between 37 mph (60 km/h) and 124 mph (200 km/h).

Active Lane Keeping Assist can neither reduce the risk of an accident if you fail to adapt your driving style nor override the laws of physics. It cannot take into account road, weather or traffic conditions. Active Lane Keeping Assist is only an aid. You are responsible for maintaining a safe distance, for vehicle speed, for braking in good time and for staying in lane.



If a lane-correcting brake application occurs, display ${\color{occurs}}$ will appear on the instrument display.

The system does not apply the brake on the corresponding side if you activate the turn signal indicator.

Vehicles with Driving Assistance Package: if the system detects an obstacle, such as another vehicle in the adjacent lane, it will apply the brake regardless of the turn signal indicator.

You will be warned by vibrations in the steering wheel in the following circumstances:

- Active Lane Keeping Assist detects a lane marking.
- A front wheel drives over this lane marking.

Conditions for a course-correcting brake application (vehicles without Driving Assistance Package) Lane markings were detected on both sides of the lane. The front wheel drives over a continuous lane marking.

(i) A brake application may be interrupted at any time by steering slightly in the opposite direction.

Conditions for a course-correcting brake application (vehicles with Driving Assistance Package)

- · A continuous lane marking was detected and driven over with the front wheel
- A lane marking and an oncoming vehicle, an overtaking vehicle or vehicles driving parallel

to your vehicle were detected in the adjacent lane. The front wheel drives over the lane marking.

(i) A brake application may be interrupted at any time by steering slightly in the opposite direction.

System limits

No lane-correcting brake application will occur in the following situations:

- · You clearly and actively steer, brake or accelerate.
- If a driving safety system intervenes, such as ESP®, Active Brake Assist or Active Blind Spot Assist
- You have adopted a sporty driving style with high cornering speeds or high rates of acceleration.
- When FSP® is deactivated
- If a loss of tire pressure or a defective tire is detected and displayed.

If you deactivate the Active Lane Keeping Assist warning and the lane markings were not clearly

detected, it is possible that no lane-correcting brake application will take place (\rightarrow page 187).

The system may be impaired or may not function particularly in the following situations:

- If there is poor visibility, e.g. due to insufficient illumination of the road, highly variable shade conditions, rain, snow, fog or heavy spray.
- If there is glare, e.g. from oncoming traffic, the sun or reflections.
- If there is dirt on the windshield in the vicinity of the multifunction camera or if the camera is fogged up, damaged or obscured.
- If there are no lane markings or several unclear lane markings are present for one lane, e.g. around roadworks.
- If the lane markings are worn, dark or covered.
- If the distance to the vehicle in front is too. short and thus the lane markings cannot be detected.
- If the lane markings change quickly, e.g. lanes branch off, cross one another or merge.
- If the road is very narrow and winding.

 Vehicles with Driving Assistance Package: if the radar sensors in the rear bumper are dirty or covered in snow and an obstacle is detected in your lane, no lane-correcting brake application takes place.

Activating/deactivating Active Lane Keeping Assist

WARNING Risk of accident despite Active Lane Keeping Assist warning

A lane-correcting brake application cannot always bring the vehicle back into the original lane.

Always steer, brake or accelerate yourself, especially if Active Lane Keeping Assist warns you or makes a lane-correcting brake application.

WARNING Risk of accident despite intervention of Active Lane Keeping Assist

Active Lane Keeping Assist does not detect traffic conditions or road users. The system may make an inappropriate brake application.

The brake application can be interrupted at any time, for example, by steering slightly in the opposite direction.

Always make sure that there is sufficient distance to the side for other traffic or obstacles.


WARNING Risk of accident despite Lane Keeping Assist

Lane Keeping Assist cannot always clearly detect lane markings.

In such cases, Lane Keeping Assist can:

- · give an unnecessary warning
- · not give a warning
- Always pay particular attention to the traffic situation and keep within the lane, especially if Active Lane Keeping Assist alerts you.

Be sure to observe the system limitations of Active Lane Keeping Assist.

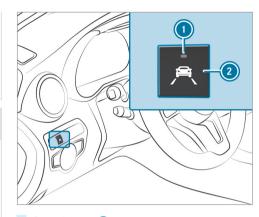

Press button ②.

If indicator lamp ① lights up, Active Lane
Keeping Assist is activated, the lane markings
are shown as light in the assistance graphic.
When Active Lane Keeping Assist is active, the
lane markings are shown in green in the assistance graphic.

Setting Active Lane Keeping Assist

Multimedia system:

→ Vehicle >> (Assistance

>> Act. Lane Keep. Assist

Activating/deactivating the warning

Activate **▼** or deactivate **□** Lane Depart. Warning.

You do not receive any warning when leaving a lane if the lane keeping warning system is deactivated.

DYNAMIC BODY CONTROL function

DYNAMIC BODY CONTROL continuously adjusts the characteristics of the suspension dampers to the current operating and driving conditions.

The damping is set individually for each wheel and is affected by the following factors:

- · the road surface conditions
- vehicle load
- the drive program selected
- the driving style

The drive program can be adjusted using the DYNAMIC SELECT switch.

AIRMATIC

Function of AIRMATIC

AIRMATIC is an air suspension system with variable damping for improved driving comfort. The allround level control system ensures the best possible suspension and constant ground clearance. even with a laden vehicle. When driving at speed. the vehicle is lowered automatically to improve driving safety and to reduce fuel consumption. You also have the option of manually adjusting the vehicle level

AIRMATIC includes the following components and functions:

- Air suspension with automatic level control
- Speed-dependent lowering to reduce fuel consumption
- Manually selectable high level setting for greater ground clearance
- ADS PLUS (Adaptive Damping System with constant damping force adjustment)

DYNAMIC SELECT switch and level button.

Available suspension settings

c (Comfort)

- The suspension setting is comfortable.
- The vehicle is set to the normal level.
- When driving at speeds above 77 mph (125 km/h), the vehicle is lowered.
- · When driving at speeds below 50 mph (80 km/h), the vehicle is raised again.

(Economy)

- The suspension setting is comfortable.
- The vehicle is set to the low level.
- The vehicle is not lowered any further if you are traveling at higher speeds.

s (Sport)

- The suspension setting is firmer.
- The vehicle is set to the low level.
- The vehicle is not lowered any further if you are traveling at higher speeds.

S* (Sport Plus)

- The suspension setting is even firmer.
- . The vehicle is set to the low level.
- The vehicle is not lowered any further if you are traveling at higher speeds.
- Operation with a trailer or bicycle rack: if transport equipment, such as a trailer or a bicycle rack, is attached to the trailer hitch and the electrical connection has been correctly established, the vehicle remains at normal level irrespective of speed or the drive program selected.

Setting the vehicle level

A

WARNING Risk of accident because vehicle level is too high

Driving characteristics may be impaired.

The vehicle can drift outwards, for example, when steering or cornering.

Choose a vehicle level which is suited to the driving style and the road surface conditions.

A

WARNING Risk of entrapment from vehicle lowering

When lowering the vehicle, people could become trapped if their limbs are between the vehicle body and the tires or underneath the vehicle.

Make sure no one is underneath the vehicle or in the immediate vicinity of the wheel arches when the vehicle is being lowered.

A

WARNING Risk of becoming trapped due to the vehicle lowering

Vehicles with AIRMATIC or level control: when you unload luggage or leave the vehicle, the vehicle first rises slightly and then returns to the set level shortly afterwards.

You or anyone else in the vicinity of the wheel arches or the underbody could thus become trapped.

The vehicle can also be lowered after being locked.

When leaving the vehicle, make sure that nobody is in the vicinity of the wheel arches or the underbody.

I NOTE Damage due to vehicle lowering


Parts of the body could be damaged when the vehicle is lowered.

Make sure that there are no obstacles such as curbs underneath or in the immediate vicinity of the body when the vehicle is being lowered.

Requirements

- The vehicle has been started.
- The vehicle must not be moving faster than 37 mph (60 km/h).

Raising the vehicle

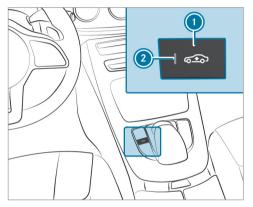

Press button 1. Indicator lamp 2 lights up. The vehicle is set to the high level.

Your selection is saved.

The vehicle is lowered again in the following situations:

- When driving faster than 50 mph (80 km/h).
- When driving between 37 mph (60 km/h) and 50 mph (80 km/h) for approximately three minutes.
- After selecting a drive program using the DYNAMIC SELECT switch.

The vehicle is adjusted to the height of the active drive program.

Lowering the vehicle

Press button ① Indicator lamp 2 goes out. The vehicle is adjusted to the height of the active drive program.

Rear view camera

Function of the rear view camera

When you engage reverse gear, the image from the rear view camera is shown in the media display. Dynamic guide lines show the path the vehicle will take with the current steering angle. This

helps you to orient yourself and avoid obstacles when backing up.

The rear view camera is only an aid. It is not a substitute for your attention to the surroundings. Responsibility for safe maneuvering and parking always lies with you. Make sure that no persons. animals, objects etc. are in the maneuvering area while you are maneuvering and parking.

The guide lines in the media display show the distances to your vehicle. The distances displayed only apply to road level.


You can select from the following views:

- Normal view
- · Wide-angle view

The area behind the vehicle is displayed as a mirror image, as in the inside rear view mirror.

Vehicles without Parking Assist PARKTRONIC

The following camera views are available in the multimedia system:

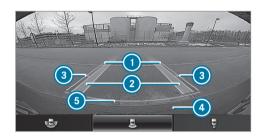

Normal view


- Yellow guide line, vehicle width (driven surface) depending on the current steering angle (dynamic)
- Yellow lanes marking the course the tires will take with the current steering angle (dynamic)
- 3 Yellow guide line at a distance of approximately 3.3 ft (1.0 m) from the rear area
- Bumper
- (a) Red guide line at a distance of approximately 1.0 in (0.3 m) from the rear area



Wide-angle view

Vehicles with Parking Assist PARKTRONIC

The following camera views are available in the multimedia system:

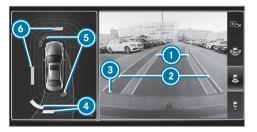

Normal view

- Yellow lanes marking the course the tires will take with the current steering angle (dynamic)
- Yellow guide line, vehicle width (driven surface) depending on the current steering angle (dynamic)
- Red guide line at a distance of approximately1.0 in (0.3 m) from the rear area
- Yellow warning indicator of Parking Assist PARKTRONIC: obstacles at a distance between approximately 2.0 ft (0.6 m) and 3.3 ft (1.0 m)

- 6 Red warning display of Parking Assist PARKTRONIC: obstacles are very close (approximately 1.0 ft (0.3 m) or less)
- Orange warning display of Parking Assist PARKTRONIC: obstacles are a medium distance away (between approximately 1.0 ft (0.3 m) and 2.0 ft (0.6 m))



Wide-angle view

System failure

If the rear view camera is not operational, the symbol appears in the media display.

System limits

The rear view camera will not function or will function only partially in the following situations:

- The trunk lid is open.
- There is heavy rain, snow or fog.
- The ambient light is poor, e.g. at night.
- Cameras or the vehicle components in which the cameras are installed - are damaged, dirty or covered. Observe the information on vehicle sensors and cameras $(\rightarrow page 155)$.
- Do not use the rear view camera in these situations. You could otherwise injure others or collide with objects when parking the vehicle.

For technical reasons, the standard height of the vehicle may be altered if the vehicle is carrying a heavy load and can result in inaccuracies in the guide lines and in the display of the generated images.

(i) The media display contrast may be impaired due to incident sunlight or other light sources. In this case, pay particular attention.

(i) Have the media display repaired or replaced if, for example, pixel errors considerably restrict its use

360° camera

Function of the 360° Camera

The 360° Camera is a system that consists of four cameras. The cameras cover the immediate vehicle surroundings. The system assists you when you are parking or at exits with reduced visibility, for example.

The views from the 360° Camera are always available when the car is being driven forward up to a speed of approximately 10 mph (16 km/h) and when you are backing up.

The 360° Camera is only an aid. It is not a substitute for your attention to the surroundings. Responsibility for safe maneuvering and parking always lies with you. Make sure that no persons, animals, objects etc. are in the maneuvering area while you are maneuvering and parking.

The system evaluates images from the following cameras:

- · Rear view camera
- Front camera
- Two side cameras in the outside mirrors

Views of the 360° Camera

You can select from different views:



- Wide-angle view, front
- Top view with image from the front camera
- Top view with images from the side cameras in the outside mirrors
- Wide-angle view, rear

- Top view with image from the rear view camera
- Top view with trailer view (vehicles with a trailer hitch)

Top view




- Lane indicating the route that the vehicle will take at the current steering wheel angle
- Yellow warning display of Parking Assist PARKTRONIC: obstacles at a distance of approximately 3.3 ft (1.0 m) or less
- 3 Your vehicle from above

As the distance to the object lessens, the color of warning display ② changes. From a distance of

approximately 2.0 ft (0.6 m), the warning display is shown in orange. From a distance of approximately 1.0 ft (0.3 m), the warning display is shown in red.

When Parking Assist PARKTRONIC is operational and no object is detected, the segments of the warning display are shown in gray.

Guide lines

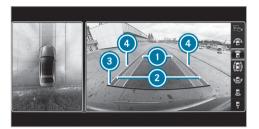


- Yellow lane marking the course the tires will take at the current steering wheel angle (dvnamic)
- 2 Yellow guide line, vehicle width (driven surface) depending on the current steering wheel angle (dynamic)
- 3 Red guide line at a distance of approximately 1.0 in (0.3 m) from the rear area
- 4 Mark at a distance of approx. 3.3 ft (1.0 m)
- (i) When Active Parking Assist is active, the lane markings are displayed in green.

The guide lines show the distances to your vehicle. The distances apply only at road level.

Side view of the mirror cameras

The sides of the vehicle can be seen in this view.

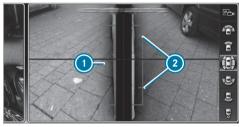

- Guide line of external vehicle dimensions with outside mirrors folded out
- Marker of the wheel contact points

System limits

If the rear view camera is not operational, the following symbol appears in the media display.



System limits

The 360° Camera will not function or will function only partially in the following situations:

- The doors are open.
- . The side mirrors are folded in.
- The trunk lid is open.
- There is heavy rain, snow or fog.
- The ambient light is poor, e.g. at night.
- Cameras or the vehicle components in which the cameras are installed - are damaged, dirty or covered. Observe the information on vehicle sensors and cameras $(\rightarrow page 155)$.

Do not use the 360° Camera under such circumstances. You could otherwise injure others or collide with objects when parking or maneuvering the vehicle.

On vehicles with height-adjustable suspension or if the vehicle is carrying a heavy load, leaving the standard height can result in inaccuracies in the guide lines and in the display of the generated images, depending on technical conditions.

- (i) The contrast of the media display may be impaired by abrupt, direct sunlight or by other light sources (e.g. when you drive out of a garage). In this case, pay particular attention.
- (i) Have the media display repaired or replaced if, for example, pixel errors considerably restrict its use.

See the notes on cleaning the 360° Camera (\rightarrow page 332).

Selecting a view for the 360° Camera

Requirements

- The Auto. Rear View Cam. function is selected in the multimedia system.
- Engage reverse gear.
- In the multimedia system, select the desired view.

Opening the rear view camera cover Multimedia system:

- → Vehicle → (Assistance
- >> Camera & Parking
- Select Open Camera Cover.
- (i) The camera cover closes automatically after some time or after an ignition cycle.

Setting the camera as a favorite

You can call up the camera view directly in the multimedia system by setting it as a favorite.

- Press the button on the control element.
 The main functions are displayed.
- Navigate downwards twice.
 The Favorites menu appears.
- Select New Favorite.
- Select Vehicle.
- Select Camera.

Parking Assist PARKTRONIC

Function of Parking Assist PARKTRONIC

Parking Assist PARKTRONIC is an electronic parking assistance system with ultrasound. It monitors the area around your vehicle using multiple sensors on the front and rear bumper. Parking Assist PARKTRONIC shows you the distance between your vehicle and a detected obstacle visually and audibly.

Parking Assist PARKTRONIC is only an aid. It is not a substitute for your attention to the surroundings. Responsibility for safe maneuvering and parking remains with you. Make sure that there are no persons, animals or objects in the maneuvering area while you are maneuvering or moving into / out of parking spaces.

In the standard setting, an intermittent warning tone sounds from a distance of approximately 1.0 ft (0.3 m) to an obstacle in front and approximately 3.3 ft (1.0 m) to an obstacle behind. A continuous warning tone sounds from a distance of approximately 0.7 ft (0.2 m). Using the Warn Early setting in the multimedia system, the warning tones for front and side impact protection can

be set to sound at a greater distance of approximately 3.3 ft (1.0 m) in front and 2.0 ft (0.6 m) on the sides (\rightarrow page 198).

(i) The Warn Early setting is always active in the rear passenger compartment of the vehicle.

Parking Assist PARKTRONIC display in the multimedia system



Vehicles without 360° Camera



Vehicles with 360° Camera

If you have not selected the Camera & Parking menu and an obstacle is detected in the path of the vehicle, a pop-up window for Parking Assist PARKTRONIC (1) appears in the multimedia system at speeds below 6 mph (10 km/h).

The color of the individual segments of the warning display is based on the distance to the detected obstacle:

 Yellow segments: obstacles at a distance between approx. 2.0 ft (0.6 m) and 3.3 ft (1.0 m)

- Orange segments: obstacles at a distance between approx. 1.0 ft (0.3 m) and 2.0 ft (0.6 m)
- Red segments: obstacles at a very short distance of approx. 1.0 ft (0.3 m) or less


System limits

Parking Assist PARKTRONIC may sometimes not take into account the following obstacles:

- Obstacles below the detection range, e.g. persons, animals or objects.
- · Obstacles above the detection range, e.g. overhanging loads, overhangs or loading ramps of trucks.

The sensors must be free of dirt, ice and slush. Otherwise, they may not function correctly. Clean the sensors regularly, taking care not to scratch or damage them(\rightarrow page 155).

Problems with Parking Assist PARKTRONIC

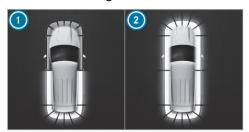

Example: vehicles with 360° Camera

When rear segments ① or all-round segments ② light up red and the PS symbol appears in the Instrument Display, Parking Assist PARKTRONIC may have been deactivated due to signal interference. Start the vehicle again and check if Parking Assist PARKTRONIC is working at a different location.

If a warning tone also sounds for approximately two seconds every time the vehicle is started, it may be due to one of the following causes:

- The sensors are dirty: clean the sensors and observe the notes on care of vehicle parts (→ page 332).
- Parking Assist PARKTRONIC has been deactivated due to a malfunction: restart the vehicle. If the problem persists, consult a qualified specialist workshop.

Function of the passive side impact protection

Passive side impact protection is an additional Parking Assist PARKTRONIC function which warns the driver about obstacles at the side of the vehicle. A warning is issued when obstacles are detected between the front and rear detection range. In order for an object on the side to be detected, the sensors in the front and rear bumper must first detect the object while you are driving past it.

During the parking procedure or maneuvering, objects are detected as the vehicle drives past. If you steer in the direction of a detected obstacle and there is a risk of a lateral collision, a warning

is issued and the segments light up in color on the display.

The segment color changes depending on the distance to the detected obstacle:

- **Yellow:** approximately 1.0 2.0 ft (30 60 cm)
- Red: less than approximately 1.0 ft (30 cm)

In order for lateral, front or rear segments to be displayed, the vehicle must first travel a distance of at least half a vehicle's length. Once the vehicle has travelled the length of the vehicle, all of the lateral front and rear segments can be displayed.



Parking Assist PARKTRONIC display: vehicles without a surround view camera

- Operational front and rear
- Operational front, rear and sides
- Obstacle detected at the front right (yellow) and rear (red)



Parking Assist PARKTRONIC display: vehicles with a surround view camera

- Operational front and rear
- Operational front, rear and sides
- Obstacles detected at the front right (red)

Saved obstacles on the sides are deleted in the following situations, for example:

- · You park the vehicle and switch it off.
- You open the doors.

After the engine is restarted, obstacles on the sides must be detected again before a new warning can be issued.

System limits

The system limits for Parking Assist PARKTRONIC apply to passive side impact protection.

The following objects are not detected, for example:

- Pedestrians who approach the vehicle from the side
- Objects placed next to the vehicle

Activating/deactivating Parking Assist PARKTRONIC

NOTE Risk of an accident from objects at close range

Parking Assist PARKTRONIC may not detect certain objects at close range.

- ▶ When parking or maneuvering the vehicle, pay particular attention to any objects which are above or below the sensors, e.g. flower pots or drawbars. The vehicle or other objects could otherwise be damaged.
- Press the putton in the center console.

If the indicator lamp in the pi button is not lit, Parking Assist PARKTRONIC is active. If the indicator lamp is lit or the pi symbol appears in the Instrument Display, Parking Assist PARKTRONIC is not active.

(i) Parking Assist PARKTRONIC is automatically activated when the vehicle is started.

Setting the warning tones of Parking Assist PARKTRONIC

Multimedia system:

- → Vehicle → (Assistance
- ➤ Camera & Parking ➤ Set Warning Tones

Adjusting the volume of the warning tones

- Select Warning Tone Volume.
- Set a value.

Adjusting the pitch of the warning tones

Select Warning Tone Pitch.
Set a value.

Specifying the starting point for the warning tones You can specify whether the Parking Assist

You can specify whether the Parking Assist PARKTRONIC warning tones should commence when the vehicle is further away from an obstacle.

- Select Warn Early.
- ▶ Activate or deactivate the function.

Activating/deactivating audio fadeout

You can specify whether the volume of a media source in the multimedia system is to be reduced when Parking Assist PARKTRONIC gives an audible warning.

- Select Audio Fadeout During Warning Tones.
- ▶ Activate or deactivate the function.

Active Parking Assist

Function of Active Parking Assist

Active Parking Assist is an electronic parking assistance system that uses ultrasound supported by the rear view camera or 360° camera. When you are driving forwards up to approximately 22 mph (35 km/h), the system automatically measures parking spaces on both sides of the vehicle.

As soon as all requirements are met for searching for parking spaces, the display appears on the instrument display.

When Active Parking Assist has detected parking spaces, the (IP) display appears on the instrument display. The arrows show on which side of the road detected parking spaces are located. They are then shown on the media display.

The parking space can be selected as desired. Depending on the location of the parking space, the parking direction (forwards or reverse) can also be selected as desired.

When Active Parking Assist is activated, the turn signal indicators are activated based on the calculated path of your vehicle.

When you are entering or exiting a parking space, the procedure is assisted by acceleration, braking, steering and gear changes.

Active Parking Assist is only an aid. It is not a substitute for your attention to the surroundings. The responsibility for safe maneuvering and parking remains with you. Make sure that no persons, animals or objects are in the vehicle's path.

Active Parking Assist will be canceled in the following situations:

- Parking Assist PARKTRONIC is deactivated.
- You begin steering.
- You apply the parking brake.
- You engage transmission position **P**.
- ESP® intervenes
- You open the doors or the trunk lid while the vehicle is in motion

System limits

If the exterior lighting is malfunctioning, Active Parking Assist is not available.

Objects located above or below the detection range of the sensors, e.g. overhanging loads. overhangs or loading ramps of goods vehicles, or the borders of parking spaces, are not detected during measurement of the parking space. These are then not taken into account in the calculation of the parking procedure either. In some circumstances, Active Parking Assist may therefore guide you into the parking space incorrectly.

WARNING Risk of accident due to objects located above or below the detection range of Active Parking Assist

If there are objects above or below the detection range, the following situations may arise:

- · Active Parking Assist may steer too early.
- The vehicle may not stop in front of these objects.

There is a danger of collision!

In these situations, do not use Active Parking Assist.

Extreme weather conditions, such as snow or heavy rain, may lead to a parking space being measured inaccurately. Parking spaces that are partially occupied by trailer drawbars might not be identified as such or may be measured incorrectly. Only use Active Parking Assist on level, high-grip ground.

Do not use Active Parking Assist in the following situations:


• In extreme weather conditions, e.g. ice, packed snow or in heavy rain.

- When transporting a load that protrudes beyond the vehicle.
- · On steep uphill or downhill gradients of more than approximately 15%.
- When snow chains are mounted.
- Directly after a tire change or when spare tires are mounted
- If the tire pressure is too low or too high.
- If the suspension is out of alignment, e.g. after bottoming out on a curb.

Active Parking Assist may also display parking spaces that are not suitable for parking, such as:

- Parking spaces where parking is prohibited.
- Parking spaces on unsuitable surfaces.

Parking with Active Parking Assist

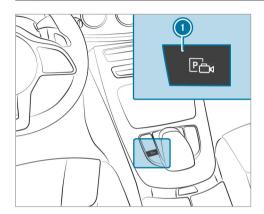

Press button ①.



The media display shows the view of Active Parking Assist. Area ② displays detected parking spaces ④ and vehicle path ③.

- (i) Vehicle path (3) shown on the media display may differ from the actual vehicle path.
- If a parking space is displayed: stop the vehicle.
- Select desired parking space 4 and confirm.
- If necessary, select the parking direction (forwards or reverse), and confirm.
 Vehicle path (3) is shown, depending on selected parking space (4) and the parking direction.

 The turn signal indicator is switched on automatically when the parking procedure begins.

You are responsible for selecting the turn signal indicator in accordance with the traffic conditions. If necessary, select the turn signal indicator accordingly.

WARNING Risk of accident due to vehicle swinging out while parking or pulling out of a parking space

While parking or exiting a parking space, the vehicle swings out and can drive onto areas of the oncoming lane.

This could cause you to collide with objects or other road users.

- Pay attention to objects and other road users.
- Where necessary, stop the vehicle or cancel the parking procedure with Active Parking Assist.
- If, for example, the Please Engage Reverse Gear message appears in the media display:

select the corresponding transmission position.

The vehicle drives into the selected parking space.

(i) During the parking procedure with Active Parking Assist, the lane markings are displayed in green in the camera image.

On completion of the parking procedure, the Parking Assist Finished, Take Control of Vehicle display message appears. Further maneuvering may still be necessary.


- After completion of the parking procedure, safeguard the vehicle against rolling away. When required by legal requirements or local conditions: turn the wheels towards the curb.
- You can stop the vehicle and change the transmission position during the parking procedure. The system then calculates a new vehicle path. If no new vehicle path is available, the system can change the transmission position again or cancel the parking procedure.

Exiting a parking space with Active Parking Assist

Requirements: • The vehicle has been parked with Active Parking Assist.

Please note that you are responsible for the vehicle and surroundings during the entire parking procedure.

Start the vehicle.

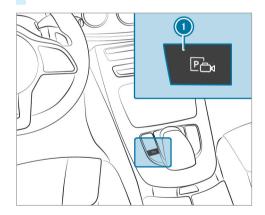

Press button 1. The media display shows the view of Active Parking Assist.



- If the vehicle has been parked perpendicular to the direction of travel: in area 2, select direction of travel 3 Left or Right.
- (i) The vehicle path shown on the media display may differ from the actual vehicle path.
- Confirm direction of exit 3 to drive out of the parking space.
- i) The turn signal indicator is switched on automatically when the exiting procedure begins.

You are responsible for selecting the turn signal indicator in accordance with the traffic conditions. If necessary, select the turn signal indicator accordingly.



WARNING Risk of accident due to vehicle swinging out while parking or pulling out of a parking space

While parking or exiting a parking space, the vehicle swings out and can drive onto areas of the oncoming lane.

This could cause you to collide with objects or other road users.

- Pay attention to objects and other road users.
- Where necessary, stop the vehicle or cancel the parking procedure with Active Parking Assist.
- If, for example, the Please Engage Forward Gear message appears in the media display:

select the corresponding transmission position

The vehicle moves out of the parking space. The turn signal indicator is switched off automatically.

After the parking space has been exited, a warning tone and the Arking Assist Finished, Take Control of Vehicle message prompt you to take control of the vehicle.

The vehicle is not automatically braked and can roll away. You have to accelerate, brake, steer and change gear yourself again.

Maneuvering assistance

Function of Drive Away Assist

Drive Away Assist can reduce the severity of an impact when the vehicle is pulling away. If an obstacle is detected in the direction of travel, the vehicle's speed is briefly reduced to approx.

1 mph (2 km/h). If a critical situation is detected, the LIM symbol appears in the media display.

Drive Away Assist can be deactivated or activated in the Maneuvering Assistance menu (→ page 203).

(i) You can cancel an intervention by Drive Away Assist at any time by deactivating Parking Assist PARKTRONIC (→ page 197).



WARNING Risk of accident caused by limited detection performance of Drive Away Assist

Drive Away Assist cannot always clearly identify objects and traffic situations.

- Always pay careful attention to the traffic situation; do not rely on Drive Away Assist alone.
- Be prepared to brake or swerve as necessary, provided the traffic situation permits and that it is safe to take evasive action.

Drive Away Assist is only an aid. It is not a substitute for your attention to the surroundings. Responsibility for safe maneuvering and parking remains with you. Make sure that no persons, ani-

mals or objects etc. are in the maneuvering range.

A risk of collision may occur in the following situations, forexample:

- If the accelerator and brake pedals are confused.
- If an incorrect transmission position is engaged.

Drive Away Assist is active under the following conditions:

- · If Parking Assist PARKTRONIC is activated.
- If you shift the transmission position to R or **D** when the vehicle is stationary.
- If the detected obstacle is less than approx. 3.3 ft (1.0 m) away.
- · If the maneuvering assistance function is activated in the multimedia system.

System limits

The performance of Drive Away Assist is limited on inclines.

(i) Also observe the system limits of Parking Assist PARKTRONIC (\rightarrow page 194).

Function of Cross Traffic Alert

(i) Cross Traffic Alert is available only for vehicles with Blind Spot Assist or Active Blind Spot Assist

Cross Traffic Alert can warn drivers of any crossing traffic when you are reversing out of a parking space or performing other maneuvers. The radar sensors in the bumper also monitor the area adjacent to the vehicle. If a critical situation is detected, the symbol appears in the media display and the vehicle can be braked automatically. If the radar sensors are obstructed by vehicles or other objects, detection is not possible.

Cross Traffic Alert is active under the following conditions:

- if the vehicle is backing up at walking pace.
- maneuvering assistance is activated $(\rightarrow page 203)$.
- (i) Also observe the instructions on Blind Spot Assist and Active Blind Spot Assist $(\rightarrow page 181)$.

System limits

Cross Traffic Alert is not available on inclines.

Activating or deactivating maneuvering assistance Multimedia system:

- → Vehicle → (Assistance
- >> Camera & Parking >> Maneuvering Assist.
- ▶ Activate or deactivate the function.
- (i) Maneuvering assistance must be active for the function of Drive Away Assist (→ page 202) and Cross Traffic Alert $(\rightarrow page 203).$

Vehicle towing instructions

The vehicle is not suitable for use of tow bar systems used for flat towing or dinghy towing, for example. Attaching and using tow bar systems can result in damage to the vehicle. When you are towing a vehicle with tow bar systems, safe driving characteristics cannot be guaranteed for the towing vehicle or the towed vehicle. The vehicletrailer combination may swerve from side to side.

Observe the following information:

Permitted towing methods (→ page 349)

• Notes on towing with both axles on the ground $(\rightarrow$ page 350)

Notes on the instrument display and on-board computer

WARNING Risk of accident if the instrument display fails

If the instrument display has failed or is malfunctioning, function restrictions in systems relevant to safety cannot be detected.

The operating safety of your vehicle may be impaired.

- Drive on carefully.
- Have the vehicle checked immediately at a qualified specialist workshop.
- WARNING Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.
- **NOTE** Mercedes-AMG vehicles
- Observe the notes in the Supplement. You could otherwise fail to recognize dangers.

You must observe the legal requirements for the country in which you are currently driving when operating the on-board computer.

The on-board computer shows only display messages and warnings from specific systems on the instrument display. You must therefore ensure that your vehicle is always safe to operate.

If the operating safety of your vehicle is impaired, park the vehicle immediately and in accordance with the traffic conditions. Contact a qualified specialist workshop.

Overview of instrument display




- Speedometer
 The segments on the speedometer indicate the statuses of the following systems: cruise control/limiter/Active Distance Assist DISTRONIC
- Outside temperature
- Time

- Area for additional values (example: tachometer): tachometer/navigation/ECO display/consumption/G-meter/date
- © Coolant temperature display During normal operation, the coolant temperature display is permitted to rise to 248°F (120°C).
- Selected drive program

- Selected transmission position
- © Center display area of the instrument display (example: standard display for a trip): assistance/telephone/navigation/trip/media/ radio/styles and displays/service/possible settings for head-up display
- Fuel level and fuel filler flap location indicator

Overview of buttons on the steering wheel

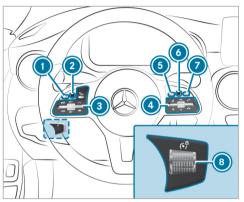

- Back/Home button (press and hold), on-board computer
- 2 Touch Control, on-board computer
- 3 Control panel for cruise control or Active Distance Assist DISTRONIC
- Control panel for the multimedia system WE Voice Control System (→ page 211)

- Main menu, multimedia system
- Touch Control, MBUX multimedia system
- Back button, MBUX multimedia system
- Brightness control to adjust the lighting in the Instrument Display and in the control elements of the vehicle interior

Operating the on-board computer

Observe the legal requirements for the country in which you are currently driving when operating the on-board computer.



The on-board computer is operated using the lefthand Touch Control and the left-hand back/home hutton

When the on-board computer is being operated, different acoustic signals will sound as operating feedback, e.g. when the end of a list is reached.

The following menus are available:

- Service
- DriveAssist
- Trip
- Navigation
- Radio
- Media
- Phone
- Head-up Disp.
- · Vehicles with an instrument display in the widescreen cockpit: Designs
- (i) You can find information about the possible settings and selections on the menus in the Digital Operator's Manual.

208 Instrument display and on-board computer

The menus can be called up from the menu bar on the instrument display.

- To call up the menu bar: press the left-hand back button until the menu bar is displayed.
- To scroll in the menu bar: swipe to the left or right on the left-hand Touch Control.
- To call up a menu, submenu or possible settings on the menu, or confirm a selection or setting: press the left-hand Touch Control.
- To scroll through displays or lists on the menu, or select display content, a function, an entry or a display: swipe upwards or downwards on the left-hand Touch Control.
- To change between displays: swipe upwards or downwards on the left-hand Touch Control.
- To exit a submenu: press the left-hand back button.


Displaying full-screen menus

You can display the following menus full-screen on the instrument display:

- DriveAssist
- Trip
- On the corresponding menu, use the left-hand Touch Control to scroll to the end of the list.
- Press the left-hand Touch Control.
 The selected menu will be displayed full-screen.

Overview of displays on the instrument display

Displays on the instrument display:

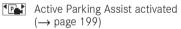

Parking Assist PARKTRONIC deactivated (→ page 197)

 \bigcirc Cruise control (\rightarrow page 162)

Active Distance Assist DISTRONIC (→ page 164)

ই‡ Active Brake Assist (→ page 179)

Active Steering Assist (→ page 170)

✓ Active Lane Keeping Assist (→ page 184)

Active Lane Change Assist (→ page 174)

 \bigcirc ECO start/stop function (\rightarrow page 136)

HOLD HOLD function (\rightarrow page 159)

■ Adaptive Highbeam Assist (→ page 115)

Vehicles with Traffic Sign Assist: Detected instructions and traffic signs (→ page 180)

Head-up Display

Function of the head-up display

NOTE Mercedes-AMG vehicles


Observe the notes in the Supplement.
 You could otherwise fail to recognize dangers.

The head-up display projects the following into the driver's field of vision:

• Information from the navigation system

- Information from the driver assistance systems
- Some warning messages

Display content

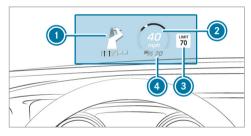

- Navigation instructions
- Current speed
- Detected instructions and traffic signs
- Set speed in the driver assistance system (e.g. cruise control)

When you receive a call, the Incoming Call message will appear on the head-up display.

In audio mode, the station name or track will be shown temporarily when the audio source is being actively operated.

System limits

The visibility is influenced by the following conditions:

- Seat position
- · Image position setting
- Ambient light
- · Wet road surfaces
- Objects on the display cover
- · Polarization in sunglasses
- (i) In extreme sunlight, sections of the display may appear washed out. You can correct this by switching the head-up display off and on again.

Adjusting the head-up display settings on the onboard computer

On-board computer:

→ Head-up Disp.



- Setting currently selected
- Digital speedometer
- Traffic Sign Assist
- Navigation displays


The following can be adjusted for the head-up display:

- Position
- Brightness

210 Instrument display and on-board computer

- Display Content
- To select a setting: swipe upwards or downwards on the left-hand Touch Control.
- ▶ Press the left-hand Touch Control.
- To adjust a value: swipe upwards or downwards on the left-hand Touch Control.
- ► Press the left-hand Touch Control.

Switching the Head-up Display on/off

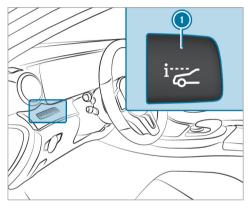

Press button ①.

Notes on operating safety


For your own safety, always observe the following points when operating mobile communications equipment and especially your voice control system:

- Observe the legal requirements for the country in which you are driving.
- If you use the voice control system in an emergency your voice can change and your telephone call, e.g. an emergency call, can thereby be unnecessarily delayed.
- Familiarize yourself with the voice control system functions before starting the journey.

Operation

Overview of operation of the Voice Control System on the multifunction steering wheel

The Voice Control System is operational approximately thirty seconds after the ignition is switched on.

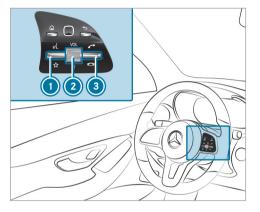

- 1 Press the rocker switch up: 🙀 starts the Voice Control System
- 2 Press the control: \(\) switches the sound off or on (ends the Voice Control System) Turn the control up/down: increases/decreases the volume

3 Press the rocker switch up: makes/ accepts a call Press the rocker switch down: rejects/ ends a call (ends the Voice Control System)

Conducting a dialog with the Voice Control System

- To start or continue a dialog: on the multifunction steering wheel, press the rocker switch up.
 - You can say a voice command after an acoustic signal.
- To correct an entry: say the Correction voice command.
- To select an entry from the selection list: say the line number or the contents.
- To browse the selection list: say the Next or Back voice command.
- To interrupt the dialog: say the Pause voice command.
- To cancel the dialog: say the Cancel voice command.

212 Voice Control System

Operable functions

You can use the Voice Control System to operate the following equipment depending on the features:

- Telephone
- · Text messages
- Navigation
- Address book
- Radio
- Audio (memory card, Media Interface, USB and Bluetooth[®] audio)
- Vehicle

Overview of types of voice command

A distinction is made between the following voice commands:

 Global voice commands can be said at any time and regardless of the current application, e.g. the voice commands Navigate to, Call or Text message to. • Application-specific voice commands are only available for the active application.

Once the Voice Control System is started an autocue is shown. Apart from the available voice commands for the application currently active, this also cites example voice commands for other applications which are not active. In this way, you will be familiar more quickly with the available voice commands. The list can be scrolled or it can be operated by speech or the controller/touchpad.

Information on the language setting

You can change the language of the Voice Control System via the system language settings. If the set system language is not supported by the Voice Control System, English will be selected.

The Voice Control System is available in English, French, Portuguese and Spanish.

Using the Voice Control System effectively

Features of audible help functions

You receive information and help for the following topics:

- Optimum operation: say the brief instruction voice command.
- Current application: on the multifunction steering wheel, press the wt rocker switch up and say the Help voice command.
- Continued dialog: say the Help voice command during a voice dialog.
- Specific function: say voice commands for the desired function, e.g. Help telephone.

Notes on how to improve speech quality

If the Voice Control System does not understand you:

- Only operate the Voice Control System from the driver's seat.
- Say the voice commands coherently and clearly, but do not exaggerate the words.

 Avoid loud noises that cause interference while making a voice command entry, e.g. the blower.

A voice tag in the address book is not recognized:

• Only create sensible address book entries in the system/mobile phone, e.g. enter surname and first name in the correct field.

• Do not use any abbreviations, unnecessary spaces or special characters.

If a station list entry is not recognized:

• Say the "Read out station list" voice command.

can be used regardless of the application that is currently active.

Essential voice commands

Overview of switch voice commands

Switch voice commands can be used to open certain applications. The voice command selection

Switch voice commands

Voice command	Function
Navigation	To switch to navigation mode
Мар	To switch to map display
Address book	To switch to address book
Telephone	To switch to telephone mode
Text message	To switch to text messages

214 Voice Control System

Voice command	Function
Radio	To switch to radio mode
Media	To switch to media mode
USB	To switch to USB
Memory card	To switch to memory card
Internet application <name></name>	To start a Mercedes-Benz online application. The application must be called up once using the multimedia system prior to use.
Mercedes-Benz Apps	To switch to Mercedes-Benz Apps
Connect	To switch to Internet mode
Vehicle menu	To switch to vehicle settings
System settings menu	To switch to system settings

Overview of navigation voice commands

Using navigation voice commands, you can enter POIs or conventional addresses and make important navigation settings directly.

Navigation voice commands

Voice command	Function
Navigate to <address contact="" poi=""></address>	Universal search for all types of destinations. A search is conducted in the address book contacts, the navigation database and on the Internet (POIs). The order of the details, e.g. city, street or house number, can be changed.
Address in <country></country>	Destination entry in a desired country, e.g. address in France
Home	Starts navigation to home address
Work	Starts navigation to your workspace
POI <poi></poi>	Destination entry for a POI, e.g. the POI Brandenburg Gate. A search is performed in the navigation database and on the Internet.
POI online search <poi></poi>	Conducts a POI search on the Internet only
Navigate to contact <name></name>	Destination entry to a contact in the address book

216 Voice Control System

Voice command	Function
Enter country Enter city Enter district Enter street Enter intersection Enter house number Enter ZIP code	Enters a country/city/district/street/intersection/house number/ZIP code
Nearest restaurant Nearest parking lot Nearest rest area with restrooms Nearest gas station	Searches for nearby restaurants, parking spaces, rest areas with restrooms and gas stations
Restaurant along the route Parking along the route Rest area with restrooms along the route Gas stations along the route	Searches for restaurants, parking spaces, rest areas with restrooms and gas stations along the route

218 Voice Control System

Overview of telephone voice commands

You can use the telephone voice commands to make phone calls or search through the address book.

Telephone voice commands

Voice command	Function
Call <name></name>	Makes a phone call. All address book names are available.
Search for contact <name></name>	Searches for and displays a contact. All address book names are available.
outgoing calls	Displays the last call
Redial number	Selects the last phone number dialed

Overview of radio voice commands

Radio voice commands can also be used when the radio application is running in the background.

Voice command Function Station < Name> To call up receivable or saved stations <Frequency> To enter a frequency directly Next station To switch to the next available station Previous station To switch to the previous station Save station To save a station in the station list Show station list To display the names of all receivable stations To listen to the names of all receivable stations Read out station list Traffic information on To switch the traffic information service on/off Traffic information off Radio info on To switch information about the current station on/off Radio info off

Overview of media player voice commands

Media player voice commands can also be used when the media player runs in the background.

220 Voice Control System

Media player voice commands

Voice command	Function
Play <tracks> Play <albums> Play <artists> Play<composers> Play <genres> Play <play < td=""><td>The names of all available tracks, albums, artists, composers, genres or playlists are accepted during the search.</td></play <></genres></composers></artists></albums></tracks>	The names of all available tracks, albums, artists, composers, genres or playlists are accepted during the search.
Media search <track/> Media search <albums> Media search <artists> Media search <composers> Media search <genres> Media search <playlists></playlists></genres></composers></artists></albums>	The names of all available tracks, albums, artists, composers, genres or playlists are accepted during the search.

Voice command	Function
Show all albums Show all artists Show all composers Show all genres Show all tracks Show all playlists	Available albums, artists, composers, genres, tracks or playlists are searched for.
Next track	To select the next track
Previous track	To select the previous track
Random playback on Random track list off	To switch the random track list on/off

Overview of message voice commands

Text messages can be created, edited and listened to using the message voice commands.

222 Voice Control System

Message voice commands

Voice command	Function
Text message to <name></name>	To create a message. All address book names are available.
Reply	To reply to a message
Forward text message	To forward a message

Overview of vehicle voice commands

You can use the vehicle voice commands to directly call up the corresponding menus for the vehicle settings.

Vehicle voice commands

Voice command	Function
Ambient light menu	To display ambient light settings
Ambient light "blue"	To switch ambient light to blue
Display and styles menu	To show display settings
Assistance menu	To display assistance settings

224 Voice Control System

Voice command	Function
Consumption menu	To display consumption
Vehicle data	To display vehicle data

Overview and operation


Overview of the multimedia system

WARNING Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

Observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

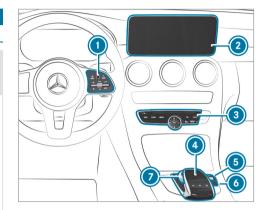

- Touch Control Multimedia system button group on the steering wheel (\rightarrow page 207)
- Media display
- 3 Main function button group (\rightarrow page 229)
- Touchpad
- Controller
 - Adjusts the volume (→ page 231)

- Switches the sound on / off (→ page 230) For Mercedes-AMG vehicles with AMG Performance exhaust system:
- Turn: to adjust the volume
- · Press: to switch the multimedia system on/off
- (') button
- Switches multimedia system on/off For Mercedes-AMG vehicles with AMG Performance exhaust system:
- Sets the volume of the AMG Performance exhaust system
- Controller

Notes on the media display

! NOTE Scratches on the display

The display has a highly sensitive, high-gloss surface. There is a risk of it becoming scratched.


- Avoid touching the display.
- Observe the notes on cleaning.

Observe the notes on caring for the interior $(\rightarrow page 333)$.

Automatic temperature-controlled switch-off feature: if the temperature is too high, the brightness is initially reduced automatically. The display may then switch off completely for a while.

i If you are wearing polarized sunglasses, it may be difficult to read the display.


Central control elements overview

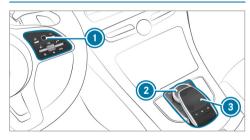

- Touch Control
- 2 Controller
- Touchpad

Touch Control

Operating Touch Control

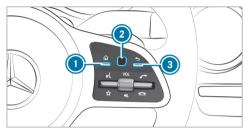

Operate the multimedia system with Touch Control and associated buttons and

Calling up the main functions

Press button ①.

10

Press button (3) repeatedly until the main functions are shown.

Calling up favorites

- Press button ①.
- Swipe down on Touch Control 2.

Opening and closing a list

- ► To open: press Touch Control ②.
- ► To close: press button ③.

or

Swipe right on Touch Control 2.

Selecting a menu item

- Swipe up, down, left or right on Touch Control
- Press Touch Control ②.


Moving the digital map

Swipe in any direction.

Setting the sensitivity for Touch Control Multimedia system:

- → System → [5] Input
- >> Touch Control Sensitivity
- Select Fast, Medium or Slow.

Operating the controller

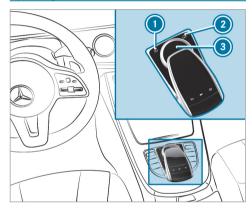

- **➡** Button Press briefly: to return to the previous display Press and hold: to call up main functions
- **button** Calling up the main functions

Calls up favorites: when the main functions are displayed, slide controller (3) down.

3 Controller

Controller operating options:

- Turn ((()) counter-clockwise or clockwise.
- Slide ←(○)→ left or right.
- Slide **†**⊙**↓** up or down.
- Slide diagonally.
- Press (5) briefly or press and hold.

Touchpad

Switching the touchpad on or off

Multimedia system:


¬→ System → 🖔 Input

▶ Activate or deactivate the Touchpad.

Operating the touchpad

Requirements:

• The touchpad is switched on (\rightarrow page 227).

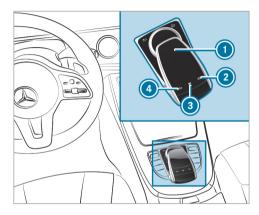

- Touchpad
- 向 button Calls up main functions and favorites
- **▶** button Calls up the control menu of the last active audio source

button
 Pressing briefly: returns to the previous display

You can navigate in menus and lists via touch-sensitive surface by using a single-finger swipe.

- ▶ To open or close lists: swipe left or right.
- To select a menu item: swipe up, down, left or right and press touchpad (1).
- To move the digital map: swipe in any direction.

Using the following functions with a two-finger swipe:

- ➤ To call up main functions and favorites: swipe down with two fingers. The swipe must start in the upper area of the touchpad.
- ► To zoom in and out of the map: move two fingers together or apart.
- To call up the control menu of the last active audio source: swipe up with two fingers. The swipe must start in the lower area of the touchpad.

Setting the sensitivity for the touchpad Multimedia system:

- ¬→ System → 🦒 Input
- Select Touchpad Sensitivity.
- Select Fast, Medium or Slow.
- To set the pressure sensitivity: switch Touchpad Tap on ✓ or off □.

If the function is switched on $\mathbf{\nabla}$, a tap on the touchpad is enough to select a menu item.

Switching the read-aloud function for handwriting recognition on or off

Multimedia system:

- ¬→ System → Audio
- >> System Feedback
- ➤ Switch Read Out Handwriting Recognition on
 ✓ or off
 ☐.

Activating or deactivating haptic operating feedback on the touchpad

Multimedia system:

¬→ System >> 🖔 Input

The function supports you when making entries on the touchpad and when selecting menus.

Activate

or deactivate

Haptic Operating Feedback.


When the function is activated, a tactile feedback in the form of a vibration is effected when the touchpad is operated.

Selecting a station and track using the touchpad

- ▶ Press the ▶ button on the touchpad.
- or
- Swipe up with two fingers. The swipe must start in the lower area of the touchpad. The control menu appears for the audio source that was last selected.
- Use one finger to swipe up or down.
 Radio: the previous or the next station is set.
 Media source: the previous or the next music track is selected.
- ➤ To hide the control menu: swipe down with two fingers. The swipe must start in the upper area of the touchpad.

Main functions

Calling up the main functions

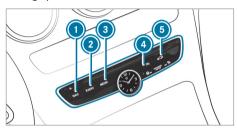

- NAVI button Calls up navigation
- RADIO button Calls up the radio
- MEDIA button Calls up media
- TEL button Calls up the telephone
- button Sets vehicle functions

- Alternatively: press the button on the Touch Control, controller or the touchpad. The main functions are displayed.
- Select the main function.

Favorites

Overview of favorites

Favorites offer you quick access to frequently used applications. It is possible to create 20 favorites in total.

The following functions are available:

- Add pre-defined favorites from the following categories (\rightarrow page 229):
 - Navigation
 - **Entertainment**
 - Phone
 - Connect
 - Vehicle
 - System Settings
- Add your own favorites (→ page 229)
- Rename favorites (→ page 230).

- Move favorites (→ page 230).
- Delete favorites (→ page 230).
- Reset all favorites (→ page 230)

Calling up favorites

- ▶ Press the button. The main functions are displayed.
- Navigate downwards once. Navigating means:
 - · Swiping on the Touch Control or the touchpad
 - · Sliding the controller

Leaving the favorites menu

Press the 向 button.

Adding favorites

Adding predefined favorites

- ▶ Press the button. The main functions are displayed.
- Navigate downwards twice. The Favorites menu appears.

- Select New Favorite. The categories are displayed.
- Select a category.The favorites are displayed.
- Select a favorite.
- Store the favorite at the desired position. If a favorite has already been added at this position, it will be overwritten.

Example: adding your own favorites

- Select Vehicle.
- Select Full Screen: Consumption.
- Press and hold the button until the favorites are displayed.
- Store the favorite at the desired position.

If No function available for saving. is shown, the selected function cannot be added.

Renaming favorites

- Press the button.
 The main functions are displayed.
- Navigate downwards once.
- Select a favorite.

- Navigate downwards once.
 The Favorites menu appears.
- Select Rename.
- Enter the characters.
- To confirm the entry: select ok.

Moving favorites


- Press the button.
 The main functions are displayed.
- Navigate downwards once.
- Select a favorite.
- Navigate downwards once.
 The Favorites menu appears.
- Select Move.
- Move the favorite to the desired position.
 If a favorite has already been added at this position, it will be overwritten.

Deleting favorites


- Press the button.
 The main functions are displayed.
- Navigate downwards once.
- Select a favorite.

- Navigate downwards once.
 The Favorites menu appears.
- To delete: select Delete.
- Select Yes.
- To restore all favorites: select Reset All.
 A prompt appears.
- Select Yes.
 The favorites are reset to the factory settings.

Switching the sound on/off

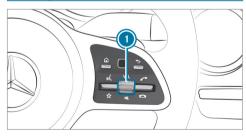

On the multifunction steering wheel

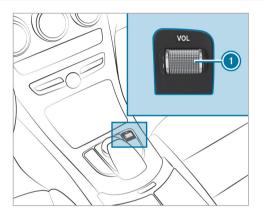

On the multimedia system

To mute: press volume control ①. The symbol appears in the status line of the display.

You will also hear traffic announcements and navigation announcements even when the sound is muted.


To switch on: change the media source or turn volume control 1.

Adjusting the volume

Adjusting with the volume control



On the multifunction steering wheel

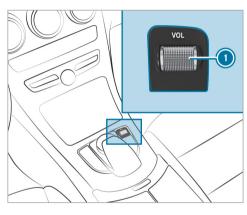

On the multimedia system

Turn volume control (1). The volume of the current radio or media source is set. The volume of other audio sources can be adjusted separately.

Adjust this in the following situations:

- · During a traffic announcement
- · During a navigation announcement

The volume of the navigation announcement changes in accordance with the volume of the current media source

- · During a telephone call
- When entering or exiting a parking space while using Active Parking Assist

Setting in the menu

- Select System in the multimedia system.
- Select Audio.
- Select a volume setting.
- Set the volume.

Entering characters

Using the character input function

WARNING Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

Observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

Use the character input function in the following situations, for example:

- · Renaming a favorite.
- · Entering a POI or address.
- Making a phone call.

The following functions are available:

- · Selecting a character in the character bar.
- Writing a character on the touchpad.

Character input can be started with a control element and resumed with another.

On the Touch Control and controller: select the characters in the character bar.

Depending on the target entry, the following characters are available:

- · The full set of characters is shown.
- Only those characters which are useful for the current input string are shown.
- Other characters are grayed out.
- On the touchpad: select the characters in the character bar.

or

 Write the characters on the touch-sensitive surface of the touchpad.
 Handwriting recognition supports you by means of character suggestions and a readaloud function.

Examples of character entry:

- · Renaming a favorite.
- Entering a POI or an address using free or step-by-step search.
- Entering a web address.

Entering characters using the controller Example: renaming favorites



- Call up the "Renaming favorites" function $(\rightarrow page 230)$.
- To enter a character: turn ((()), slide (()) and press the controller. The character is entered in the input line.

Use the following entry functions:

To delete a character: press the controller. To delete an entry: press and hold the controller until the entire entry is deleted.

- To switch to special characters and symhols
- To switch to upper-case or lower-case letters
- To switch the language.
- To switch to character entry on the touchnad.
- (i) The available editing functions depend on the editing task, the language set and the character level.
- To confirm the entry: select ok.

Example: entering a destination (navigation)

▶ Enter the POI or address (\rightarrow page 247).

Entering characters on the touchpad

Requirements:

- The touchpad is switched on (\rightarrow page 227).
- The entered or selected character should be read out: the handwriting recognition readaloud function is switched on (\rightarrow page 228).

Example: renaming favorites



- Call up the "Renaming favorites" function $(\rightarrow page 230)$.
- To enter a character: use your finger to write characters on the touchpad. The character is entered in the input line. If different interpretations are possible, charac-
- To select a character suggestion: swipe up or down on the touchpad.
- Resume character input.

ter suggestions are displayed.

To enter a space: swipe right when the cursor is located in the input line.

- ► To delete a character: swipe left when the cursor is located in the input line.
- To confirm the entry: press the touchpad.
- To finish character entry: swipe upwards.

or

Press the 🛨 button.

Example: entering a destination (navigation)

► Enter the POI or address (\rightarrow page 247).

System settings

Display

Configuring display settings

Multimedia system:

¬→ System → □ Display and Designs

Styles

- Select Designs.
- Select Sport, Classic or Progressive.

Adapting the ambient lighting for the style

➤ Select Adjust Amb. Lighting.
Activate ✓ or deactivate ☐ the function.

This function adjusts the ambient lighting for the selected display style.

Setting the display brightness

- Select Display Brightness.
- Select a brightness value.

Switching the display off/on

- To switch off: select Display Off.
- To switch on: press a button, for example TEL

Display design

- Select Day/Night Design.
- Select Automatic, Day Design or Night Design.

Additional display area

Depending on the vehicle, various items of additional information can be shown. The additional display area comprises the left-hand or right-hand third of the display.

Select Additional Disp. Area.

The following display content can be selected:

- Dynamic
- Navigation Map
- Consumption
- Time and Date

Time and date

Setting the time and date automatically

Multimedia system:

- → System → Time and Date
- Deactivate ☐ Manual Time Adjustment. The time and date are set automatically for the selected time zone and summer time option.
- (i) The correct time is required for the following functions:
 - Route guidance with time-dependent traffic guidance.
 - · Calculation of expected time of arrival.

Setting the time zone

Multimedia system:

→ System → Time and Date >> Time 7one:

The list of countries is displayed.

- Select a country . Depending on the country, time zones are displayed.
- Select a time zone. The time zone set is displayed after Time Zone:

Setting summer time

The Automatic Daylight Saving Time and Daylight Saving Time options cannot be selected in all countries.

Multimedia system:

→ System → Time and Date

Automatically

Switch Automatic Daylight Saving Time on

Manually

- Deactivate ☐ Automatic Daylight Saving Time
- Select Daylight Saving Time.
- Select On or Off.

Setting the time and date format

Multimedia system:

→ System → Time and Date

- >> Set Format
- Set the date and time format ●.

Setting the time manually

Requirements:

• The Manual Time Adjustment function is switched on.

Multimedia system:

→ System → Time and Date

- >> Set Time
- Set the hours.
- Navigate to the right to set the minutes.
- Set the minutes.

Confirm changes when exiting the menu.

The date is set automatically via GPS.

Connectivity

Switching transmission of the vehicle position on/off

Multimedia system:

- → System → Connectivity
- Select Transmit Vehicle Pos..
- ▶ Activate or deactivate the function.

Bluetooth®

Information about Bluetooth®

Bluetooth® technology is a standard for shortrange wireless data transfer up to approximately 32.8 ft (10 m).

You can use Bluetooth® to connect your mobile phone to the multimedia system and use the following functions, for example:

· Hands-free system with access to the following options:

- contacts (→ page 279)
- call lists (→ page 281)
- text message (→ page 281)
- Internet connection (→ page 295)
- Listening to music via Bluetooth[®] audio
- Transferring business cards (vCards) into the vehicle

Bluetooth® is a registered trademark of Bluetooth Special Interest Group (SIG) Inc.

i Internet connection via Bluetooth® is not available in all countries.

Activating/deactivating Bluetooth®

Requirements:

Deactivate Bluetooth[®]: Apple CarPlay[®] is not active.

Multimedia system:

- ¬→ System → ☐ Connectivity
- ► Activate **✓** or deactivate ☐ Bluetooth[®].

If Android Auto is active, a prompt appears asking whether Bluetooth® should be deactivated.

 Select Yes.
 Android Auto is closed and Bluetooth[®] is deactivated.

Wi-Fi

Wi-Fi connection overview

You can use Wi-Fi to establish a connection with a Wi-Fi network and to access the Internet or other network devices.

The following connection options are available:

- Wi-Fi connection
 The Wi-Fi connection to a Wi-Fi-capable device, e.g. the customer's mobile phone or a tablet PC is established.
- Multimedia system as a Wi-Fi hotspot
 Using this function, a tablet PC or notebook
 can be connected, for example.

To establish a connection, you can use the following methods:

• WPS PIN

The connection to a secure Wi-Fi network is made via a PIN.

WPS PBC

The connection to a secure Wi-Fi network is made by pressing a button (push button).

· Security key

The connection to a secure Wi-Fi network is made via a security key.

Setting up Wi-Fi

Requirements:

 The device to be connected supports one of the three means of connection described (→ page 236).

Multimedia system:

→ System → Connectivity

Activating/deactivating Wi-Fi

Switch Wi-Fi on

or off

lf Wi-Fi is deactivated

or communication via

wi-Fi to all devices is interrupted. This also
means that a connection to the HERMES communication module cannot be established.

Then functions such as dynamic route guidance with Live Traffic Information are not available

Connecting the multimedia system with a device via Wi-Fi

This function is not available if a HERMES communication module is installed

The type of connection established must be selected on the multimedia system and on the device to be connected

- (i) The connection procedure may differ depending on the device. Follow the instructions that are shown in the display. Further information (see the manufacturer's operating instructions).
- Select Internet Settings.
- Select Search for Wi-Fi Networks.

Using a security key

- Select a Wi-Fi network in the list.
- Have the security key displayed on the device to be connected (see the manufacturer's operating instructions).

- Enter this security key on the multimedia system.
- Confirm the entry with **ok**.
- All devices support a security key as a means of connection.

Using a WPS PIN

- Highlight a Wi-Fi network in the list.
- Select Connect via WPS PIN Input. The multimedia system generates an eightdigit PIN.
- Enter this PIN on the device to be connected.
- Confirm the entry.

Using a button

- (i) This function is only available in a Wi-Fi frequency of 2.4 GHz.
- Highlight a Wi-Fi network in the list.
- Select Connect via WPS PBC.
- Select "Connect via WPS PBC" in the options on the device to be connected.
- Press the WPS button on the device to be connected.

Select Continue in the multimedia system.

Device has already been connected:

- To automatically connect: highlight a Wi-Fi network in the list.
- Activate Connect Automatically.
- To connect: highlight a Wi-Fi network in the list.
- Select Connect. The connection is established again. These functions are possible when the device has already been connected to the Wi-Fi network.

Setting up a Wi-Fi hotspot

Requirements:

• For connection by pressing a button: this function is only available in a Wi-Fi frequency of 2.4 GHz.

Multimedia system:

¬→ System → 🛜 Connectivity

Configuring the multimedia system as a Wi-Fi hot-spot

The type of connection established depends on the device to be connected. The function must be supported by the multimedia system and by the device to be connected. The type of connection established must be selected on the multimedia system and on the device to be connected.

- Select Set Up Hotspot.
- ► Highlight Connect Device to Vehicle Hotspot.

Generating a WPS PIN

- Select Connect via WPS PIN Generation.
- Enter the PIN shown in the media display on the device to be connected and confirm.

Connecting using a WPS PIN

- Select Connect via WPS PIN Input.
- Select Enter WPS PIN.

- Enter the PIN that is shown on the external device's display on the multimedia system.
- Select Continue.

Connecting using a button

- Select Connect via WPS PBC.
- Press the WPS button on the device to be connected or select Connect.
- Select Continue in the multimedia system.

Connecting using a security key

- Select Connect Device to Vehicle Hotspot. A security key is displayed.
- Select the vehicle from the device to be connected. The vehicle is displayed with the SSID MB Hotspot XXXXX.
- Enter the security key which is shown in the media display on the device to be connected.
- Confirm the entry.

Connecting using NFC

Select Connection via NFC.

- Activate NFC on the mobile device (see the manufacturer's operating instructions).
- Bring the mobile device into the NFC area of the vehicle (→ page 276).
- Select Done. The mobile device is now connected to the multimedia system hotspot via NFC.

Generating a new security key:

- Select Set Up Hotspot.
- Select Generate Security Key. A connection will be established with the newly created security key.
- To save a security key: select Save.
 When a new security key is saved, all existing
 Wi-Fi connections are then disconnected. If
 the Wi-Fi connections are being re-established, the new security key must be entered.

Managing COMAND Touch devices

Requirements:

• The COMAND Touch app is installed on the external device (e.g. tablet or smartphone).

 Wi-Fi is activated (→ page 236) and the multimedia system is configured as a Wi-Fi hotspot $(\rightarrow page 237)$.

Multimedia system:

→ System → COMAND Touch

Connecting and authorizing a new device

- Select Authorize a New Device.
- Select Connect New Device.
- Enter the security key in the external device. The Please start COMAND Touch on your device and follow the instructions. message appears.
- Select Continue.
- The connection request from the device Accept.
- Enter the PIN shown on the external device. The device is authorized.

Authorising a connected device

- Select Authorize a New Device.
 - The devices already connected are displayed.

- Select Continue Using Connected Devices. The Please start COMAND Touch on your device and follow the instructions, message appears.
- Select Continue.
- The connection request from the device Accept.
- Enter the PIN shown on the external device The device is authorized.

De-authorizing the device

- Select an authorized device from the list. A prompt will appear asking whether you would like to de-authorize the selected device.
- Select Yes. The device is de-authorized.

Activating/deactivating child safety lock

Multimedia system:

System ➤ Parental Control

Locking or unlocking an external device

Select an external device.

Select Lock.

The device connected via the COMAND Touch app is locked $\mathbf{\nabla}$ or unlocked $\mathbf{\Box}$.

System language

Notes on the system language

This function allows you to determine the language for the menu displays and the navigation announcements. The selected language affects the characters available for entry. The navigation announcements are not available in all languages. If a language is not available, the navigation announcements will be in English.

Setting the system language

Multimedia system:

¬→ System → Language

- Set the language.
- (i) If you are using Arabic map data, the text information can also be shown in Arabic on the navigation map. To do so, select العربية as the language from the language list. Navigation announcements are then also made in Arabic.

Setting the distance unit

Multimedia system:

- ¬→ System → Imm Units
- Select km or mi.
- In the multifunction display of the Instrument Display, switch the Additional Speedometer display on <. ■</p>

Data import and export

Data import/export function

The following functions are possible:

- Transferring data from one system or vehicle to another system or vehicle.
- Creating a backup copy of your personal data and loading it again.
- Protecting your personal data against unwanted export with PIN protection.
- (i) Note that the NTFS filing system is not supported. The FAT32 filing system is recommended.

Importing/exporting data

- ! NOTE Loss of data due to premature removal
- Do not remove the data storage medium when data is being exported.

Mercedes-Benz is not liable for any loss of data.

Requirements:

- The vehicle is stationary.
- The ignition is switched on or the vehicle has been started.
- The SD card is inserted (→ page 300) or the USB device is connected (→ page 302).

Multimedia system:

- ¬→ System >> System Backup
- Select Import Data or Export Data.

Importing

Select a data storage medium.
 A prompt appears asking whether you really wish to overwrite the current data. If data orig-

inates from another vehicle, this is recognized during data reading.

The multimedia system is restarted once the data has been imported.

(i) Current vehicle settings can be edited after the import.

Exporting

If PIN protection is activated, your PIN is requested.

- ► Enter the four-digit PIN.
- Select a data storage medium. The data is exported. The data export may take several minutes.

Activating/deactivating PIN protection

Requirements:

To unlock the PIN:

- · There is an Internet connection.
- A Mercedes me account exists at https:// me.secure.mercedes-benz.com.

 The Personalization service is active. $(\rightarrow page 242).$

Multimedia system:

¬→ System → PIN Protection

Setting the PIN

- Select Set PIN.
- Enter a four-digit PIN.
- Enter the four-digit PIN again. If both PINs match, PIN protection is active.

Changing the PIN

- Select Change Settings.
- Enter the current PIN.
- Select Change PIN.
- Set a new PIN.

Activating PIN protection for data export

- Select Change Settings. Confirm with the PIN
- Select Protect Data Export. Activate **✓** or deactivate □ the function.

Unblocking the PIN

If the PIN has been entered incorrectly three times, the PIN will be blocked. You can have a single-use password sent to you via the Mercedes me connect online portal to reset the PIN protection.

- Select Unblock PIN.
- Enter the single-use password. PIN protection is reset, and you can set a new PIN.
- The availability of this function is country dependent and may not be available in your country.

Alternatively, you can have PIN protection reset at an authorized Mercedes-Benz Center.

User profile

Setting a user profile

Multimedia system:

→ System → Personalization

Displaying a user profile when starting

If this function is active, a prompt appears when starting the system asking which user profile to use.

- Select Display Profile Selection after Start.
- ▶ Activate or deactivate the function.

Selecting a user profile

- Select Guest Profile or individual profile ●.
- (i) Some settings from the user profile are only loaded when the vehicle is stationary or when the ignition is switched on.

Automatic synchronization

Each time the ignition is switched off or on, the individual user profiles are synchronized on the multimedia system and on the server. This ensures that the latest user profiles are available.

Select Automatic Synchronization.

- ▶ Activate or deactivate the function.
- (i) For more information about importing/exporting user profiles (→ page 242).

Creating a user profile

Multimedia system:

- → System → Personalization
- >> Create Profile
- Enter a name.
- ► Select OK .

The following information is saved in the user profile, for example:

- · System settings
- Navigation and traffic information

The settings differ depending on the vehicle equipment.

Importing/exporting a user profile

Requirements:

- There is an Internet connection .
- A Mercedes me account exists at https:// me.secure.mercedes-benz.com.

- The Personalization service is active.
- The function is available in your country.

Multimedia system:

→ System → Personalization
→ Manual Export/Import

Importing a user profile

- Select Import Profiles from Server. The The profile data import overwrites all existing profile data. Do you want to continue? message appears.
- Select Yes.
 User profiles are imported.

Exporting a user profile

- Select Export Profiles to the Server. User profiles are exported.
- Only individual profiles can be imported or exported. The individual profiles are always collectively imported or exported.
- Certain settings, such as address book entries or previous destinations from the navigation system, are not exported.

Setting user profile options

Multimedia system:

- ¬→ System → Personalization
- Highlight a profile.
- ▶ Select options.

The following options are available:

- Rename
- Delete
- Reset
- i The guest profile cannot be deleted or renamed.

Software updates

Information on software updates

The multimedia system displays a corresponding message when a software update is available.

The availability of this function is dependent on the country.

Depending on the source, you can perform various updates:

Source of the update	Update type
Updates via mobile phone	Navigation map, system updates, Digital Operator's Manual
Updates via an external storage medium, e.g. a USB flash drive	Navigation maps

(i) Software updates via mobile phone require an active Internet connection for the vehicle. This is not available in all countries. For further information on connecting to the Internet, see $(\rightarrow page 295).$

Advantages of software updates

Software updates ensure your vehicle's technology is up-to-date.

In order to constantly improve the quality of our services you will receive future software updates for your multimedia system, the Mercedes me connect services and your vehicle's communication module. These will be sent to you via the

mobile phone connection in your vehicle and, as an option, installed automatically. You can monitor the status of your software updates on the Mercedes me Portal and find information about potential innovations.

Your advantages at a glance:

- Conveniently receive software updates via the mobile phone network
- · Improves the quality and availability of Mercedes me connect services
- · Keeps your multimedia system and communication module up-to-date

Further information about software updates can be found at https://me.secure.mercedesbenz.com

Carrying out software updates

Requirements:

- There is an Internet connection $(\rightarrow page 295).$
- For automatic software updates: your vehicle has a permanently installed communication module.

Multimedia system:

¬→ System >> Software Update

Automatic software updates

▶ Activate Automatic Online Update. The software updates will be downloaded and installed automatically.

The current status of the software update is displayed.

Manual software updates

- Switch off ☐ Automatic Online Update.
- Select a software update from the list and start the update.

Activating a software update

Restart the system.

Function of important system updates

Important system updates may be necessary for the security of your multimedia system's data. Please install these updates, otherwise the security of your multimedia system cannot be ensured.

(i) If automatic online updates are activated, the system updates will be downloaded automatically (→ page 243).

As soon as a system update is available for download, a corresponding message appears on the media display.

You have the following selection options:

Download

The system update will be downloaded in the background.

Details

Information about the pending system update is displayed.

Later

The system update can be downloaded manually at a later time (\rightarrow page 243).

You will be informed when the download is complete and the system update is ready for installation.

i Park the vehicle safely in a suitable location before starting the installation.

Requirements for installation:

- The ignition is switched on.
- The engine is not running.
- Notes and warnings have been read and accepted.
- · The parking brake is applied.

If all requirements are met, the system update is installed. The multimedia system cannot be operated during installation and vehicle functions are restricted.

If errors should occur during the installation, the multimedia system automatically attempts to restore the previous version. If restoration of the previous version is not possible, a symbol appears on the multimedia system display. Consult a qualified specialist workshop to resolve the problem.

Reset function



WARNING Risk of accidents due to failure of multimedia display functions

While the multimedia system is being reset, its functions such as the rear view camera are not available.

Only reset the multimedia system when the vehicle is stationary.

Multimedia system:

¬→ System → Reset

Personal data is deleted, for example:

- Station presets
- · Connected mobile phones
- Select Yes.

If PIN protection is activated, a prompt appears asking if you also wish to restore this to the factory settings during a reset.

Select Yes.

Enter the current PIN. The PIN is reset

- Select No. The current PIN stays the same after resetting.
- (i) If you have forgotten your PIN, an authorized Mercedes-Benz Center can deactivate the PIN protection for you.

A prompt appears again asking whether you really wish to reset.

Select Yes. The multimedia system is reset to the factory settings.

Fit & Healthy **ENERGIZING COMFORT**

Overview of the ENERGIZING COMFORT program

Program overview

• Refresh: Can make targeted changes to the interior climate to refresh vehicle occupants. The air is purified by the cooling air flow and

- ionization.. The vehicle interior is illuminated with cool colors and the seat is ventilated.
- Warmth: Can increase the comfort level of the vehicle occupants. The vehicle's panel, seat and steering wheel heating provide cosy warmth. The air is purified using ionization and a pleasant fragrance is released. The vehicle interior is illuminated with warm lighting.
- Vitality: Can counteract diminishing attentiveness in monotonous driving situations. Fastpaced music and a vitalizing relaxation provide invigorating stimulation for the vehicle occupants. The air is purified using ionization and a pleasant fragrance is released. The vehicle interior is illuminated with a stimulating hue and the seat is ventilated.
- lov: Can promote a positive mood in the vehicle occupants as well as mental and physical regeneration. Moderately fast music is played and a massage program is activated. The air is purified using ionization and a pleasant fragrance is released. The vehicle interior is illuminated with friendly lighting.

- Well being: Can aid the physical and mental relaxation of vehicle occupants. A back relaxation combined with local warmth provide relaxation. The air is purified using ionization and a pleasant fragrance is released. The audio player plays selections of calming music and the vehicle interior is illuminated with pleasant lighting.
- **Training:** Can counteract the onset of muscle tension. limbs falling asleep or stress with targeted relaxation or stimulation exercises. The exercises are demonstrated in short videos. The air is purified using ionization and a pleasant fragrance is released. The vehicle interior is illuminated with lighting appropriate to the exercise.
- i Please note that the programs available and the associated functions depend on your vehicle equipment. Depending on your equipment, fewer functions may be available.

Starting the ENERGIZING Comfort program

Requirements

• The ignition is switched on.

(i) ENERGIZING Comfort is available approximately five minutes after starting the multimedia system.

Multimedia system:

→ Vehicle → ENERGIZING Comfort

Selecting a seat

- Select Seat Selection.
- Select the desired seat or All Seats ▼.

Starting a program

Select Refresh, Warmth, Vitality, Enjoyment or Well-being .

The selected program will run for ten minutes.

Configuring a program

- Call up further options for the desired program.
- Switch the functions included in the program on

 or off

 .

Starting training

Select Training.

 Select Muscle Relaxation, Muscle Stimulation or Balance.

The selected training video starts and is displayed in the media display.

- Select Full Screen: Video. The training video is displayed in full screen.
- (i) For more information on pausing or skipping through videos, see (→ page 303).


If, during an active program, a function requirement is no longer met, a corresponding message appears. The active program is canceled.

Navigation

Switching navigation on

Multimedia system:

¬→ Navigation

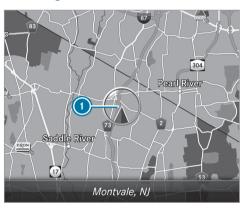

► Alternatively: press the NAVI button.

The map appears and shows current vehicle position .

(i) If a climate control setting is changed, a climate bar appears briefly.

Showing or hiding the navigation menu

Requirements

• The map displays the current vehicle position.

Multimedia system:

¬→ Navigation



To show: swipe left on the touchpad or the Touch Control

or

- Slide the controller to the left
- To hide: swipe right on the touchpad or the Touch Control.

or

- Slide the controller to the right.
- To show or hide lower menu levels, swipe or slide to the left or right as many times as necessary.

Destination entry

Entering a POI or address

WARNING Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

Observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

Requirements


- For the online search: Mercedes me connect is available.
- You have a user account for the Mercedes me Portal.
- The service is available.
- The service has been activated at an authorized Mercedes-Benz Center.

Further information is available at: https:// www.mercedes.me

Multimedia system:

¬→ Navigation

- Show the navigation menu.

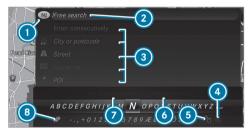

The state or province in which the vehicle is located is set \bigcirc .

There are two available methods of destination entry:

- Free search ②
- Search step-by-step

Method 1: free search

Enter the POI or address in ②. The entries can be made in any order.

During destination entry, suggestions are made by the multimedia system. A selection of destinations appears in a list.

Enter these address elements, for example:

- · City, street, house number
- Street, city
- Zip code
- POI name
- POI category, e.g. Gas Station
- · City, POI name
- To switch to handwriting recognition: select
- Write the character on the touchpad.
- To switch to character selection: press the button.

or

Press the touchpad.

To delete an entry: select (x) (4) (if available).

Use the following options:

- Press briefly: deletes the last character entered or the last suggestion adopted.
- Press and hold: deletes the entire entry.
- To set the language: select 🙌 🔞.
- Select the language.
- This function is useful for countries in which several character sets are supported. An example is Russia, which uses Cyrillic and Latin characters.
- ➤ To call up the online search function: select Online Search ⑥.

Once an Internet connection is established, a list appears. It shows online destinations related to the previous entry.

The online destination is supplied by an Internet provider.

Select the online destination.

or

- Enter the online destination or a 3 word address in the input line.
- (i) Enter a 3 word address (\rightarrow page 252). Online search is not available in all countries.
- To call up the list: press the ____ button.

or

- If the top line of the character bar is highlighted, navigate upwards.
- Select the destination in the list.
- To adopt a destination: select Select Destination.

If there are several listings for a destination, a list appears.

Select the destination. The destination address is shown.

Method 2: search step-by-step

Press the 🛨 button.

or

If the top line of the character bar is highlighted, navigate upwards.

The character bar is hidden. City or ZIP is highlighted. Additional entry fields are available, e.g. for POI.

- Select City or ZIP. The character bar appears.
- Enter the city or the zip code. During destination entry, suggestions are made by the multimedia system. A selection of destinations appears in a list.

The address entries can be made in any order, for example:

- City or ZIP. Street. House No. Enter an intersecting street, if available.
- Street. City or ZIP
- POI, e.g. Gas Station, City or ZIP
- During destination entry, use the following functions:
 - · Switch to handwriting recognition.
 - Switch to character selection.
 - Delete an entry.

An entry, e.g. POI, can be deleted with (x) in a step-by-step search. Navigate to the left to do so.

- · Call up the online search function (if available).
- · Call up a list.

The functions are described in the free search

- To change the state/province: select the state or the province.
- Enter the state or the province. You only need to enter the first character.
- Select the state or the province in the list.
- To change the country: select the country.
- Enter the country. You only need to enter the first character.
- Select the country on the list.
- To adopt a destination: select Select Destination.

If there are several listings for a destination, a distance-orientated list appears.

Select the destination. The destination address is shown.

Selecting previous destinations

Multimedia system:

- **¬→** Navigation
- ▶ Previous and Other Destinations
- Select Previous Destinations.
- Select the destination. The destination address is shown.

or

- If favorites have been saved already (→ page 262), select From My Favorites.
- Select the favorite.
 The destination address is shown.

Selecting a POI

Multimedia system:

- **¬→** Navigation
- ▶ Previous and Other Destinations
- >> POIs
- Select the category.

or

Select All Categories and the category. If route guidance is not active: the search begins in the vicinity of the current vehicle position. The list is sorted by distance in ascending order.

The POIs show the following information:

- Name of POI.
- · Linear distance to the POI
- The direction of the linear distance to the POI (arrow) is displayed when searching for the vehicle's current position.
- Select the POL
- Route guidance is active: select the search position prior to choosing a POI (see example).
- If intermediate destinations are set, these can also be selected as the search position after selecting Near Destination.

Filtering displays for POIs

- Enter the search term in Search:.
 The results list shows relevant POIs.
- Select ok.
 The first POI in the list is highlighted.

Select the POI.

Example: setting the search position for the parking category during active route guidance

Select In the Vicinity, Near Destination or Along the Route.

The list shows the located POIs or opens an overview of the route destination after selecting Near Destination.

- Select the POI.
- Select Near Destination: select the intermediate destination or the destination.

Starting an automatic gas station search

Requirements:

• The automatic gas station search is activated \checkmark (\rightarrow page 256).

Driving situation

Route guidance is active. The fuel level in the fuel tank reaches the reserve fuel level.

The Reserve Fuel Do you want to start a search for surrounding gas stations? message is shown.

Select Yes.

The automatic gas station search begins. The available gas stations along the route or in the vicinity of the vehicle's current position are displayed.

- Select the gas station. The address of the gas station is displayed.
- If route guidance is not active, select Start Route Guidance.

The selected gas station is set as the destination. Route guidance begins.

or

If route guidance is active, select Start New Route Guidance or Set as Next Way Point. Start New Route Guidance: the selected gas station is set as a new destination. The previous destinations and intermediate destinations are deleted. Route guidance to the gas station begins.

Set as Next Way Point: the selected gas station is set as the next intermediate destination. Route guidance begins.

If there are already four intermediate destinations: select Yes in the prompt.

The selected gas station is entered into position 1 of the intermediate destinations menu. Intermediate destination 4 is deleted. Route guidance begins.

Entering an intermediate destination

Requirements

A destination is entered.

Multimedia system:

- → Navigation → Way Points and Info
- Select Search for Way Point.
- Enter the intermediate destination as a POI or address (\rightarrow page 247).
- Select the intermediate destination.
- Select Set as Destination.

or

- Select an intermediate destination using Enter Destination during route guidance.
- Select Set as Next Way Point after entering the destination.

Editing intermediate destinations

Requirements

 The destination and at least one intermediate destination have been entered.

Multimedia system:

→ Navigation → Way Points and Info

- To call up the map: highlight the destination or the intermediate destination.
- Select Map.
- Move the map (\rightarrow page 267).
- Select destination on the map (\rightarrow page 253).
- To change the order of destinations: highlight the destination or the intermediate destination.
- Select Move.
- Move the intermediate destination to the desired position.
- Press the Touch Control, the controller or the touchpad.
- To delete a destination: highlight the destination or the intermediate destination.

► Select □ Delete.

Calculating a route with intermediate destinations

Requirements:

 The destination and at least one intermediate destination have been entered.

Multimedia system:

→ Navigation → Way Points and Info

Select Start New Route Guidance. The route is calculated with the set intermediate destinations.

Selecting a contact for destination entry

Requirements:

- A mobile phone is connected to the multimedia system (→ page 274).
- The "Navigate to contact" online service is available and activated.

Multimedia system:

¬→ Navigation

- ▶ Previous and Other Destinations
- Contacts
- Select the contact.
 The contact details are displayed.
- Select the address.
 The Please Wait... message appears. The search is carried out online.
- Select the destination.

Filtering displays for contacts

- Enter a name or telephone number, for example, into the search field.
- Select ok.
 The first contact in the list is highlighted.
- Select the contact.
- Select the address.

Entering geo-coordinates

Multimedia system:

- ¬→ Navigation
- ▶ Previous and Other Destinations
- ➤ Geo-coordinates
- Enter geo-coordinates as latitude and longitude coordinates in degrees, minutes and seconds.
- The map shows the position.

 Confirm the entry.
- To calculate a route: select Start Route Guidance.
- If a route has already been created, select Start New Route Guidance or Set as Way Point.

Entering the destination as a 3 word address

Requirements:

- Searching for a destination using 3 word addresses is possible in the online search (→ page 247).
- There is an Internet connection.

(i) Searching for a destination using 3 word addresses is not possible in all countries.

Multimedia system:

- Select Online Search.
- Enter the destination address as a 3 word address. Separate each of the words with a full stop.

The search results are displayed.

- Select the destination in the list. The destination address is shown. The route can be calculated.
- (i) 3 word addresses from what3words are an alternative addressing system for multilingual georeferencing of global locations with a resolution of three meters. Using this grid, locations on the Farth's surface are included which do not have a building address such as a street and house number, for example.

The Empire State Building has this language dependent 3 word address:

• English: parade.help.bleat

• French: commun.verbe.bisquer

Spanish: suertes.diga.pesca

3 word addresses are unique, easy to remember and suffice for most routine applications.

You can convert addresses to 3 word addresses and back again:

- At the website https://what3words.com
- In the what3words apps

Selecting a destination on the map Multimedia system:

- ¬→ Navigation → Options
- Select Map Menu.

or

- If the map is displayed in full screen mode. press the central control element. The map menu appears.
- Select "move map" in map menu (2) $(\rightarrow page 265)$.
- Swipe in any direction on the Touch Control or touchpad.

Slide the controller in any direction. The map moves in the corresponding direction under the crosshair. The more you move your finger away from the starting position on the touchpad, the faster the map moves.

Press the Touch Control, the controller or the touchpad. If several destinations are located around the

crosshair, a list shows the available POIs and roads.

If a destination is located exactly on the crosshair, the destination address is displayed.

- Select the destination in the list. The destination address is shown.
- Setting the map orientation to 2D or 3D

- Highlight Map Orientation: 2D/3D.
- Press the Touch Control, the touchpad or the controller.

The map will be displayed in the selected map orientation.

or

Showing traffic messages in the vicinity of the map

- Select Traffic Messages for the Vicinity. The map appears.
- Swipe left or right on the touchpad.

or

- Slide the controller to the left or right. The previous or next traffic incident is highlighted on the map. Information on the traffic incident is displayed.
- i Traffic reports are not available in all countries.

Showing POIs in the vicinity of the map

- Select POIs in the Vicinity.
- Swipe left or right on the touchpad.

C

- Slide the controller to the left or right. The previous or next POI is highlighted on the map. The name or the address is shown.
- To filter the display by POI category: swipe down on the Touch Control or the touchpad.

- Slide the controller down.
- Select the POI category.
- (i) User Defined allows personal POI symbols to be selected (→ page 267).

Route

Calculating a route

Requirements:

- The destination has been entered.
- The destination address is shown.
- If route guidance is not active, select Start Route Guidance.

The route to the destination is calculated. The map shows the route. Route guidance then begins.

or

 If route guidance is active, select Start New Route Guidance or Set as Next Way Point.
 Start New Route Guidance: the selected destination address is set as a new destination.
 The previous destinations and intermediate destinations are deleted. Route guidance to the new destination begins.

Set as Next Way Point: the selected destination address is set as the next intermediate destination. Route guidance begins.

Taking alternative routes into consideration

Select an alternative route (\rightarrow page 256).

Other menu functions

- To save the destination: select Store in "Previous Destinations".
- To display on the map: select 🗐 Map.
- To call a telephone number: select Call (if available).
- To call up an Internet address: select www (if available).

Selecting a route type

Multimedia system:

- ¬→ Navigation → ¬↓ Route and Position
- Select Route Settings.

or

Select the route type.

If route guidance is active, the new route is calculated with the new route type.

If route guidance is not active, the next route is calculated with the new route type.

You can choose from the following route types:

Eco Route

An economical route is calculated. The journey time may be somewhat longer than for auicker routes.

The symbol for the current vehicle position is displayed in green.

Fast Route

A route with a quick journey time is calculated.

Short Route

A route with a short driving distance is calculated.

Automatic Traffic Iam Avoidance can be switched on **✓** or off ☐ for these route types. If Automatic Traffic Jam Avoidance is switched on,

Ask in the Event of Traffic Iam Avoidance can be selected.

The Automatic Traffic Iam Avoidance and Ask in the Event of Traffic Jam Avoidance settings are not available in every country.

The settings enable the following:

Automatic Traffic Iam Avoidance

The route is calculated with the currently set route type.

Traffic reports via Live Traffic Information are taken into account

Live Traffic Information is not available in all countries.

Ask in the Event of Traffic Iam Avoidance

A prompt appears when a new route is detected with a shorter journey time based on traffic reports. You can continue to use the current route or use the dynamic route instead.

Selecting route options

Multimedia system:

→ Navigation → 🔼 Route and Position >> Avoid Options

Avoiding areas

Select Areas (→ page 268).

Avoiding highways, ferries, motorail trains, tunnels, unpaved roads

Using toll roads

- Select Use Toll Roads.
- Select Cash or Electronic Billing or Off. The route takes into account roads that require the payment of a usage fee (toll). If Off is selected, toll roads are not taken into account.

The selected route options cannot always be implemented. Therefore, a route may include a ferry, for instance, even though the avoid Ferries option is enabled. A message appears and you will hear a corresponding message.

Using carpool lanes

- Select Number of Occupants in the Vehicle.
- Select number.

When using carpool lanes, observe the applicable legal requirements as well as any conditions pertaining to when and where such lanes may be used. Carpool lanes may only be used if certain conditions are met.

These route options are not available in every country.

Selecting notifications for the route

Multimedia system:

- → Navigation → Options
- ➤ Announcements
- Switch an announcement on

 ✓ or off

 ...

You can choose from the following announcements:

- Announce Traffic Warnings
 This function is not available in all countries.
- · Announce Street Names

The multimedia system announces the names of the roads that will follow the upcoming change of direction.

This function is not available in all countries and languages.

Displaying destination information

Requirements:

· A destination is entered.

Multimedia system:

- **¬→** Navigation
- Select Way Points and Info.

The following information is displayed:

- Intermediate destinations and destination
 The route can also include up to four intermediate destinations.
- · Name, address
- · Remaining driving distance
- · Time of arrival

Selecting an alternative route

Multimedia system:

¬→ Navigation → ¬↓ Route and Position

Select Alternative Route.

The routes are displayed in accordance with the setting made in the route settings.

The currently selected route is shown with a dark blue line.

Select the alternative route.

Switching the automatic gas station search on or off

Multimedia system:

- ¬→ Navigation → Options
- Switch Reserve Fuel on

 or off

 Switched on

 :when the fuel reserve level is reached, a prompt appears asking whether you want to start searching for gas stations.

Using automatic gas station search

Requirements:

The automatic gas station search is activated $\mathbf{\nabla}$ (\rightarrow page 256).

The prompt Reserve Fuel Do you want to start a search for surrounding gas stations? appears.

Select Yes

The automatic gas station search begins. The available gas stations along the route or in the vicinity are displayed.

- Select the gas station.
- When there is no route, the gas station is set as the destination.

When there is a route, the gas station is set as the next intermediate destination.

Starting the automatic service station search

Requirements

 ATTENTION ASSIST and the Suggest Rest Area function are activated (\rightarrow page 162).

Driving situation

The ATTENTION ASSIST Do you want to search for a rest area? message is shown.

Select Yes.

The service station search starts. The available service stations along the route or in the

vicinity of the vehicle's current position are displayed.

- Select the service station.
- The service station address is displayed.
- If route guidance is not active, select Start Route Guidance.

The selected service station is set as a destination. Route guidance begins.

If route guidance is active, select Start New Route Guidance or Set as Next Way Point. Start New Route Guidance: The selected service station is set as a new destination. The previous destination and all intermediate destinations are deleted. Route guidance to the service station begins.

Set as Next Way Point: The selected service station is set as the next intermediate destination. Route guidance begins.

Route guidance

Notes on route guidance



WARNING Risk of distraction from operating integrated communication equipment while the vehicle is in motion

If you operate communication equipment integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

Route guidance begins once a route has been calculated.

The road and traffic rules and regulations always have priority over multimedia system driving instructions

The following driving instructions can be used:

- Navigation announcements
- · Route guidance displays
- Lane recommendations

If you do not follow the driving instructions or if you leave the calculated route, a new route is calculated automatically.

Driving instructions may differ from the actual road and traffic conditions if:

- The route is diverted
- The direction of a one-way street has been changed

For this reason, you must always observe road and traffic rules and regulations during your journey as well as the prevailing traffic conditions.

The route may differ from the ideal route due to the following:

Roadworks

· Incomplete digital map data

Notes on GPS reception

The correct function of the navigation system depends amongst other things on GPS reception. In certain situations GPS reception can be impaired, defective or even not possible, e.g. in tunnels or in parking garages.

Changing direction overview



There are three phases when changing direction:

Preparation phase

If there is enough time between the changes of direction, the multimedia system prepares you for the upcoming change of direction. A navigation announcement is issued, e.g. "Prepare to turn right".

The map appears in full-screen mode.

· Announcement phase

The multimedia system announces the upcoming change of direction, e.g. by announcing "Turn right in 300 ft (100 m)".

The display is split into two parts. The map is displayed on the left; on the right, there is a detailed image of the intersection or a 3D image of the upcoming change of direction.

· Change-of-direction phase

The multimedia system announces the imminent change of direction, e.g. by announcing "Now turn right".

The display is split into two parts.

The vehicle has successfully changed direction when the light-color bar on the right drops

down to 0 feet (0 m) and the current vehicle position symbol has reached the highlighted change-of-direction point.

When the change of direction is complete, the map appears in full-screen mode.

(i) Changes of direction are also shown in the Instrument Display.

Lane recommendations overview

This display appears for multi-lane roads.

If the digital map contains the relevant data, the multimedia system can display lane recommendations for the next two changes of direction.



- Recommended lane
- Possible lane
- Lanes not recommended

The following lanes are displayed:

 Recommended lane ① In this lane, you will be able to complete both the next change of direction and the one after that.

- Possible lane ② In this lane, you will only be able to complete the next change of direction.
- Lane not recommended (3) In this lane, you will not be able to complete the next change of direction without changing lane.

During the change of direction, new lanes may be added.

(i) Lane recommendations can also be displayed in the Instrument Display and in the Head-up Display.

Overview of destination reached

Once the destination is reached, you will see the checkered flag. Route guidance will now be complete.

When an intermediate destination has been reached, you will see the intermediate destination flag with the number of your intermediate destination. After this, route guidance will continue.

Switching navigation announcements on or off

Requirements:

- Route guidance is active.
- To switch off: press the volume control on the multifunction steering wheel during a navigation announcement (→ page 230).

0

Press the volume control on the center console during a navigation announcement (→ page 230).

The Voice Guidance has been deactivated. message appears.

01

- \triangleright Show the navigation menu (\rightarrow page 247).
- Select You've Guidance.
 The symbol changes to You've.
- To activate: select Voice Guidance .
 The current navigation announcement is played.

- In the following situations, navigation announcements are switched on automatically:
 - · A new route guidance is started.
 - The route is recalculated.
- (i) You can add and call up this function as a favorite under Voice Guidance On/Off.

Switching navigation announcements on or off during a phone call

- Select System.
- ► Select Audio.
- Select Navigation and Traffic Announcements.
- Switch Voice Guidance During Call on

 off

 or

Adjusting the volume of navigation announcements

Requirements:

- · Route guidance is active.
- On the multifunction steering wheel or on the multimedia system: turn the volume control on

the multifunction steering wheel during a navigation announcement.

or

- Turn the volume control on the center console during a navigation announcement (→ page 231).
- (i) In the following situations, the volume is raised to the maximum volume or lowered to the minimum volume:
 - A new route guidance is started.
 - The route is recalculated.
- i The minimum volume can be individually set at an authorized Mercedes-Benz Center.
- ▶ Via system settings: select System.
- Select Audio.
- Select Navigation and Traffic Announcements.
- Select Voice Guidance Volume.
- Set the volume.
- To switch audio fadeout on/off during navigation announcements: select System.

- Select Audio.
- Select Navigation and Traffic Announcements.
- Switch Audio Fadeout During Voice Guidance on $\mathbf{\nabla}$ or off \square .

Repeating navigation announcements

Requirements

- A route has already been created.
- · Route guidance is active.

Multimedia system:

¬→ Navigation

- Select **Many** Voice Guidance.
- Select Voice Guidance. The current navigation announcement is repeated.
- (i) You can add and call up this function as a favorite under Repeat Voice Guidance.

Canceling route guidance

Requirements:

· A route has already been created.

· Route guidance is active.

Multimedia system:

- ¬→ Navigation
- ► Select X Cancel Route Guidance.

Overview of route guidance to an off-road destination

An off-road destination is within the digital map. The map contains no roads that lead to the destination.

You can enter geo-coordinates or a three word address for off-road destinations on the map. Route guidance guides you for as long as possible with navigation announcements and displays on roads that are known to the multimedia system.

Shortly before you reach the last known position on the map, you will hear the "Please follow the direction arrow" announcement. The display shows a direction arrow and the linear distance to the destination.

Overview of route guidance from an off-road location to a destination

Off-road position: the current vehicle position is located within the digital map on roads that are not available.

When route guidance begins the following displays appear:

- The Road Not Mapped message is shown.
- A direction arrow showing the linear direction to the POI.

When the vehicle is back on a road known to the multimedia system, route guidance continues as normal.

Overview of off-road status during route guidance

Due to roadworks, for example, there may be differences between the data on the digital map and the actual course of the road. In such cases, the multimedia system will temporarily be unable to locate the vehicle's current position on the digital map. The vehicle is off-road.

If the vehicle is displayed as being offroad, the following displays appear:

The Road Not Mapped message

A direction arrow showing the linear direction to the POI

When the vehicle is back on a road known to the multimedia system, route guidance continues as normal.

Destination

Saving the current vehicle position Multimedia system:

→ Navigation

- If the map is displayed in full screen mode, press the central control element. The map menu appears.
- Select on the map menu (→ page 265). The current vehicle position is saved to the "Previous destinations" memory.

Storing a map position

Multimedia system:

¬→ Navigation

The map is in full-screen mode.

- Press the Touch Control, the controller or the touchpad.
- Select "move map" in map menu ②
 (→ page 265).
- Select a position on the map. If multiple entries are available for a map position, a list appears.
- Highlight an entry.
- Select Store in "Previous Destinations" .

The map position is saved to the "Previous destinations" memory.

Managing the previous destinations Multimedia system:

Multimedia system

- **→** Navigation
- ▶ Previous and Other Destinations
- >> Previous Destinations
- Highlight one of the previous destinations.
- To save as a favorite: select Save My Favorite.

 The favorites are displayed.

- Move the favorite to the desired position. If a favorite has already been added at this position, it will be overwritten.
- To save as "Home" address: select Save as "Home" .
- To save as "Work" address: select Save as "Work".
- To delete a single or all destinations: select
 Delete or Delete All.
 A prompt appears.
- Select Yes.
- To display destination information: select Details.

Using external destinations

External destinations can be received from the following sources:

- Mercedes-Benz Apps
- Door-to-door navigation with Companion app (USA)
- Received destinations are saved in the previous destinations.

A prompt appears on the media display.

- A destination has been received without picture information: select Yes.
- If route guidance is not active, select Start Route Guidance.

The route to the destination is calculated. The map shows the route. Route guidance then begins.

or

- If route guidance is active, select Start New Route Guidance or Set as Next Way Point. Start New Route Guidance: the received destination address is set as a new destination. The previous destinations and intermediate destinations are deleted. Route guidance to the new destination begins.
 - Set as Next Way Point: the received destination address is set as the next intermediate destination. Route guidance begins.
- A destination has been received with picture information: select Start Route Guidance. Route guidance starts.

Route guidance with current traffic reports

Traffic information overview

Traffic reports are received using Live Traffic Information and are used for route guidance.

This service is unavailable in some countries.

There may be differences between the traffic reports received and the actual road and traffic conditions.

Important information on Live Traffic Information:

- Current traffic reports are received via the Internet connection.
- The traffic situation is updated at short, regular intervals
- The subscription information shows the status $(\rightarrow page 263).$

Information on the vehicle's position is regularly sent to Mercedes-Benz AG. The data is immediately rendered anonymous by Mercedes-Benz AG and forwarded to the traffic data provider. Using this data, traffic reports relevant to the vehicle's position are sent to the vehicle. The vehicle acts as a sensor for the flow of traffic and helps to improve the quality of the traffic reports.

If you do not wish to transmit your vehicle position, you can have this service deactivated at an authorized Mercedes-Benz Center

Displaying subscription information

Requirements:

• The vehicle is equipped with Live Traffic Information.

Multimedia system:

→ Navigation → Options

The subscription expiration date is automatically displayed:

- one month before the expiration date.
- one week before the expiration date.
- on the expiration date.
- To display manually: select Live Traffic Subscription Info.

Depending on the status, one of the following messages appears:

- the period of validity for the subscription is displayed.
- the subscription has expired.

- (i) The subscription can be extended:
 - At an authorized Mercedes-Benz Center
 - Via an MB Info call to the Mercedes-Benz Customer Assistance Center

Displaying the traffic map

Requirements

- For Live Traffic Information: the vehicle is equipped with a communication module featuring an activated, integrated SIM card.
- When the vehicle is started, the communication module automatically establishes an Internet connection. Traffic information is made available shortly afterwards.

Multimedia system:

→ Navigation → Options → Map Menu

- Alternatively: if the map is displayed in full screen mode, press the Touch Control, the controller or the touchpad. The map menu appears.
- Activate Activate

The traffic map shows the following information, for example:

- Traffic incidents, for example:
 - Roadworks
 - Road blocks
 - Warning messages

The symbols for traffic incidents are displayed in color (on the route) or gray (off the route).

- Traffic flow information:
 - Traffic jam (red line)
 - Slow-moving traffic (orange line)
 - Heavy traffic (yellow line)
 - Free-flowing traffic (green line)
- Display for traffic delays on the route lasting at least one minute
- Warning message symbols:
 - Symbol 🕦
 - Additional road safety notes when approaching a traffic incident, e.g. the end of a traffic jam

If the vehicle approaches a danger area on the route, a warning message is displayed on the map. A warning message may also be issued (\rightarrow page 265).

Displaying traffic incidents

Multimedia system:

- → Navigation → Options
- >> Map Content
- Activate Traffic Incidents ✓. Roadworks, road blocks, local area reports (e.g. fog) and warning messages are displayed.

Activating free flow and traffic display

- Activate Free Flowing Traffic and Traffic Delays ▼.
- i The traffic delay is displayed for the current route. Traffic delays lasting one minute or longer are taken into consideration.

Displaying details

- ▶ Displaying the traffic map (\rightarrow page 264).
- ▶ Moving the map (\rightarrow page 267).

When a traffic report symbol is under the crosshair, press on the central control element

The traffic report details are displayed.

- Press on the central control element.
- Select Information on Traffic Reports. The map shows the traffic report symbols in the vicinity.

Traffic report information is displayed in the status line:

- Traffic report symbol
- Reason for the traffic report, e.g. traffic congestion
- Warning message (highlighted in red)
- To select a traffic report symbol: select Next or Previous.
- Press on the central control element. The traffic report details are displayed.

Issuing hazard warnings

Multimedia system:

- → Navigation → Options
- ➤ Announcements
- Activate Announce Traffic Warnings. Warning messages are issued and tailbacks which pose a risk are announced.

Map and compass

Map and compass overview



- Saves the current vehicle position
- Moves the map
- Selects the map orientation and map view
- Selects the function depending on the equipment:
 - Sends a hazard warning via Car-to-X.

- Filters the display of POIs in the vicinity according to POI category
- Switches the display of personal POI symbols on the map on or off
- Switches one of the following displays on or off depending on the equipment:
 - Weather information
 - Satellite map
 - · Traffic incidents
- Switches the traffic map display on or off

The map and satellite images are shown in globe projection. This allows for a realistic map display in all map scales. The map uses elevation modeling.

Depending on the map data, important buildings in many cities are depicted realistically on the map in small map scales (e.g. 1/32 mi (20 m), 1/16 mi (50 m)). Other buildings are shown as models.

 You can set the unit of measurement of the map scale (→ page 240).

If available, online information is displayed, e.g. parking garage occupancy.

- i Requirements:
 - · Mercedes me connect is available.
 - You have a user account for the Mercedes me Portal
 - The service has been activated at an authorized Mercedes-Benz Center.

Further information can be found at: https://www.mercedes.me

i The online information is not available in all countries.

If Display in COMAND is activated in Traffic Sign Assist (\rightarrow page 181), speed limits and overtaking restrictions are displayed on the map.

(i) Company logos displayed on the map are trademarks of the respective companies and used solely for the purpose of indicating the locations of these companies. The use of such logos on the map does not indicate approval of, support of or advertising by these companies for the navigation system itself.

Setting the map scale

Requirements

or

or

· The map is shown.

Multimedia system:

- **¬→** Navigation
- To zoom in: swipe down on the Touch Control.
- Turn the controller counter-clockwise.
- Move two fingers apart on the touchpad.
 - To zoom out: swipe up on the Touch Control.
- Turn the controller clockwise.
- Move two fingers together on the touchpad.

Moving the map

Multimedia system:

→ Navigation → Options

Map Menu

Alternatively, if the map is displayed in full screen mode, press the central control element.

The map menu appears.

- Select "Move map" in map menu 2 $(\rightarrow page 265).$
- Swipe in any direction on the Touch Control or touchpad.

Slide the controller in any direction. The map moves in the corresponding direction under the crosshair. The further you move vour finger away from the starting position on the touchpad, the faster the map moves.

Selecting the map orientation

Multimedia system:

¬→ Navigation → 👸 Options

- Map Menu
- Alternatively, if the map is displayed in full screen mode, press the central control element.

The map menu appears.

- In map menu 3 . select N. 2D or $3D(\rightarrow page 265)$.
 - N: the 2D map view is displayed so that north is always at the top.
 - 2D: the 2D map view is aligned to the direction of travel.
 - 3D: the 3D map view is aligned to the direction of travel.

Selecting POI symbols

Multimedia system:

→ Navigation → 🙀 Options

>> Map Content

POIs include gas stations and hotels which can be displayed as symbols on the map, for example. Not all POIs are available everywhere.

Select POI Symbols.

The • dot indicates the current setting.

Standard displays symbols of predefined categories on the map.

User Defined allows you to personally select the symbols for the available categories.

None switches the display off.

- Select a setting.
- User Defined: select categories. The POI symbols of the selected categories are displayed $\mathbf{\nabla}$ or not displayed $\mathbf{\Box}$.

Selecting the display of text information in the map

Multimedia system:

→ Navigation → Options

>> Text Information

Select text information. Current Street shows the street you are currently driving on at the bottom of the display.

When the map is moved, the following information appears under the crosshair:

Street name

- POI name
- Area name

Geo-coordinates displays the following information:

- Longitude and latitude
- Flevation

The elevation shown may deviate from the actual elevation.

Number of satellites from which a signal can be received

When the map is moved, this information does not appear.

Climate Control displays the current climate control settings.

None switches the display off.

Displaying the next intersecting street

Requirements:

Route guidance is not active.

Multimedia system:

- → Navigation → 🙀 Options
- Activate Next Intersecting Street.
 The name of the next intersecting street will be displayed at the upper edge of the display.

Displaying the map version Multimedia system:

- ¬→ Navigation → Options
- Select Map Version.
- Select Details.
- (i) Information about new versions of the digital map can be obtained from an authorized Mercedes-Benz Center.

Overview of avoiding an area

You can define areas along a route that you would like to avoid.

The route can include an area that is to be avoided in the following situations:

- The destination is located in an area that is to be avoided
- Highways are located within the area that is to be avoided.

Highways are always taken into account for the route.

There is no practical alternative route.

Avoiding a new area

Multimedia system:

- **¬→** Navigation **→ ¬** Route and Position
- ➤ Avoid Options ➤ Areas
- Select Avoid New Area.
- To search for an area via the map: select Using Map.
- Move the map.

or

- To search for an area using an address: select Address Entry.
- Enter the address.
- Select Select Destination. The map appears.
- ➤ To display an area: press the Touch Control, the touchpad or the controller.

 A red rectangle appears. This designates the area that should be avoided.

To change the size of the area: swipe up or down on the Touch Control or the touchpad.

Or

- Slide the controller up or down. The map scale is enlarged or reduced and changes the size of the area.
- ➤ To set the area: press the Touch Control, the touchpad or the controller.

 The area is entered into the list.

Changing an area

Multimedia system:

- → Navigation → 🔼 Route and Position
- ➤ Avoid Options ➤ Areas
- Highlight an area in the list.
- ▶ Select Edit.

Moving the area on the map

Swipe in any direction on the Touch Control or touchpad.

or

Slide the controller in any direction.

Changing the size of the area

- **To start:** press the Touch Control, the touchpad or the controller.
- To change: swipe up or down on the Touch Control or the touchpad.

or

- Slide the controller up or down.
- To stop: press the Touch Control, the touchpad or the controller.

Taking the area for the route into account

Avoid an area in the list. If route guidance is active, a new route is calculated.

If there is no route yet, the setting is carried over to the next route guidance.

Deleting one or all areas

Multimedia system:

- → Navigation → A Route and Position
- ➤ Avoid Options ➤ Areas
- Highlight an area in the list.
- Select Delete or Delete All.

Confirm the prompt with Yes.

One or all areas are deleted.

Map data update overview

Updating at the authorized Mercedes-Benz Center

The digital maps generated by the map software become outdated in the same way as conventional road maps. Optimal route guidance can only be provided by the navigation system in conjunction with up-to-date map data. Information about new versions of the digital map can be obtained from an authorized Mercedes-Benz Center.

You can have updates to the digital map implemented there.

(i) Additional costs can be incurred in this process.

Online map update

The online map update service from Mercedes me connect can be used to update map data.

i The online map update service is not available in all countries.

The following options are available for the update:

• The automatic map update updates map data for one region.

For automatic map updates Automatic Online Update must be activated in the system settings (\rightarrow page 243).

• The manual map update updates map data for several or all regions.

Further information on the online map update is available at an authorized Mercedes-Benz Center or at https://www.mercedes.me.

Overview of map data

Your vehicle is supplied with map data at the factory. Depending on the country, map data for your region is either pre-installed or the map data is supplied on a data storage medium.

If the map data on your vehicle has been installed at the factory and you wish to reinstall it, you do not need to enter the activation code.

For map data that you have purchased in the form of a data storage medium, you must enter the accompanying activation code. (i) If you save the map data on a data storage medium with the online map update service, no entry is required. The activation code is stored on the data storage medium during the downloading process.

Observe the following when entering the activation code:

- The activation code can be used for one vehicle
- The activation code is not transferable
- · The activation code has six digits

In the event of the following problems, please contact an authorized Mercedes-Benz Center:

- The multimedia system does not accept the activation code
- · You have lost the activation code

Displaying the compass

Multimedia system:

¬→ Navigation → ¬↓ Route and Position

Select Compass.

The compass display shows the following information:

- the current direction of travel with bearing (360° format) and compass direction
- longitude and latitude coordinates in degrees, minutes and seconds
- · height (rounded)
- number of GPS satellites from which a signal can be received

Setting the map scale automatically

Multimedia system:

→ Navigation → Options

The map scale is set automatically depending on your driving speed.

For journeys in cities with detailed city models, a map view from the driver's perspective is used.

Switch Auto Zoom on

✓ or off

...

(i) The automatically selected map scale can be changed manually for a short time. The setting is reset automatically after a few seconds.

Displaying the satellite map

Multimedia system:

- → Navigation → Options
- >> Map Content
- Switch Satellite Map on **✓** or off □.

or

- If satellite map display (6) is available in the map menu, switch it on **✓** or off □ $(\rightarrow page 265)$. Switched on **▼**: satellite maps are displayed in map scales of 2 mi (2 km) or less. Switched off □: no satellite maps are displayed.
- (i) Satellite maps for these map scales are not available in all countries.

Displaying weather information

Requirements

Mercedes me connect is available.

- You have a user account for the Mercedes me. Portal
- The service is available.
- The service has been activated at an authorized Mercedes-Benz Center.

Further information is available at: https:// www.mercedes.me

Multimedia system:

- → Navigation → Options
- >> Map Content
- Activate Weather Information .

or

- If weather information display (6) is available in the map menu, activate (\rightarrow) page 265) it. Current weather information is displayed on the navigation map, e.g. temperature or cloud cover.
- Weather information is not available in all countries.

Telephone

Telephony

Notes on telephony

WARNING Risk of distraction from operating integrated communication equipment while the vehicle is in motion

If you operate communication equipment integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paving attention to road and traffic conditions and operate the equipment with the vehicle stationary.

▲ WARNING Risk of accident from operating mobile communication equipment while the vehicle is in motion

Mobile communication devices distract the driver from the traffic situation. This can also cause the driver to lose control of the vehicle.

- As a driver, only operate mobile communication devices when the vehicle is stationary.
- As a vehicle occupant, use mobile communication devices only in the designated area, e.g. in the rear passenger compartment.

You must observe the legal requirements for the country in which you are currently driving when operating mobile communication equipment in the vehicle.

Further information can be obtained from an authorized Mercedes-Benz Center or at: https://www.mercedes-benz-mobile.com/

Telephone menu overview



- Bluetooth® device name of the currently connected mobile phone
- 2 Signal strength of the mobile phone network for the currently connected and selected mobile phone
- Battery status of the currently connected and selected mobile phone
- (telephone ready) or (call active)

- \bigcirc Contacts (\rightarrow page 279)
- Recent Calls (→ page 281)
- Text Message
 - One mobile phone connected: Active Call. Two mobile phones connected: changes view between telephone 1 and 2 or Active Call
- \bigcirc Devices (\rightarrow page 274)

Options

Symbols 1 to 4 are not shown until after a mobile phone has been connected to the multimedia system. The symbols depend on your mobile phone and your mobile phone network provider.

Bluetooth® profile overview

Bluetooth® profile of the mobile phone	Function
PBAP (P hone B ook A ccess P rofile)	Contacts are automatically displayed in the multimedia system
MAP (M essage A ccess P rofile)	Message functions can be used

Telephony operating modes overview

Depending on your equipment, the following telephony operating modes are available:

- A mobile phone is connected to the multimedia system via Bluetooth[®] (→ page 274).
- Two mobile phones are connected with the multimedia system via Bluetooth[®] (two phone mode) (→ page 275).

Information on telephony

The following situations can lead to the call being disconnected while the vehicle is in motion:

- There is insufficient network coverage in the area
- You move from one GSM or UMTS transmitter/receiver area (cell) into another and no communication channels are free
- The SIM card used is not compatible with the network available
- A mobile phone with "Twincard" is logged into the network with the second SIM card at the same time

The multimedia system supports calls in HD Voice® for improved speech quality. A requirement for this is that the mobile phone and the mobile phone network provider of the person you are calling support HD Voice® .

Depending on the quality of the connection, the voice quality may fluctuate.

Connecting a mobile phone (Bluetooth® telephony)

Requirements:

- Bluetooth[®] is activated on the mobile phone (see the manufacturer's operating instructions).
- Bluetooth[®] is activated on the multimedia system (→ page 236).

Multimedia system:

→ Phone → * Devices

Searching for a mobile phone

- Select Connect New Device.
- Select Start Search on System. The available mobile phones are displayed. If a new mobile phone is found, it is indicated by the symbol.

Connecting a mobile phone (authorization using Secure Simple Pairing)

 Select the mobile phone.
 A code is displayed in the multimedia system and on the mobile phone. If the codes match: confirm the code on the mobile phone.

Connecting a mobile phone (authorization by entering a passkey)

- Select the mobile phone.
- Choose a one to sixteen-digit number combination as a passkey.
- On the multimedia system: enter the passkey and select OK.
- On the mobile phone: enter the passkey again and confirm
- (i) Up to 15 mobile phones can be authorized on the multimedia system. Authorized mobile phones are reconnected automatically.

Connecting a second mobile phone (two phone mode)

Requirements:

· At least one mobile phone is already connected to the multimedia system via Bluetooth®.

Multimedia system:

- → Phone → * Devices
- Select Connect New Device
- Select Start Search on System. The available mobile phones are displayed.
- Select the mobile phone.
- Answer the How would you like to connect the new device? prompt.
- To replace the currently connected mobile phone: select Phone 1.

The currently connected mobile phone is replaced by the new mobile phone.

To connect the second mobile phone: select Phone 2.

The new mobile phone is connected as Phone 2. If two mobile phones have already been connected, the second telephone is replaced by the new mobile phone.

To use the mobile phone as an audio source: select Audio Source (\rightarrow page 308).

- (i) A mobile phone can be operated both as an audio source as well as telephone in parallel.
- (i) The type of connection for the connected mobile phone, for example as Phone 1, Phone 2 or as Audio Source, can be redefined at any time. (\rightarrow page 275).

Functions of the mobile phone in two phone mode

Functions overview

Mobile phone in the foreground	Mobile phone in the background
Full range of functions	Incoming calls

Interchanging mobile phones (two phone mode)

Requirements:

• The mobile phones are authorized $(\rightarrow page 274)$.


Multimedia system:

¬→ Phone → 🛪 Devices

In the device overview, select a mobile phone which has already been authorized and set as Phone 1 or Phone 2.

or

After interchanging the mobile phones, the mobile phone in the foreground is replaced by the mobile phone in the background.

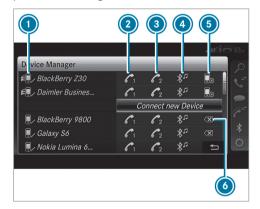

- Bluetooth® device name of the currently connected mobile phone
- Connects a mobile phone as Phone 1
- 3 Connects a mobile phone as Phone 2
- Onnects a mobile phone as Audio Source

- ⑤ Disconnects a mobile phone (→ page 276)
- O De-authorizes a mobile phone (→ page 276)
- (i) If a new mobile phone is connected and defined as Phone 1, for example, this overwrites the previously connected mobile phone in the foreground of the system.

Disconnecting a mobile phone Multimedia system:

- → Phone → * Devices
- Select the symbol in the line of the mobile phone.

The disconnection of the mobile phone takes place without a confirmation prompt. The mobile phone remains authorized in the system.

De-authorizing a mobile phone

Multimedia system:

- → Phone → ★ Devices
- Select the symbol in the line of the mobile phone.

Answer the confirmation prompt with Yes. The mobile phone is de-authorized and deleted from the system.

Information on Near Field Communication (NFC)

NFC enables short-range wireless data transfer or (re)connection of a mobile phone with the multimedia system.

The following functions are available without having authorized a mobile phone:

- Transferring a URL to be viewed in the multimedia system (see the manufacturer's operating instructions).
- Setting up the vehicle's Wi-Fi access data via the system settings (→ page 237).

Further information can be found at: https://www.mercedes-benz-mobile.com/

Using a mobile phone with Near-Field Communication (NFC)

Requirements:

 NFC is activated on the mobile phone (see the manufacturer's operating instructions) • The mobile phone's screen is switched on and unlocked (see the manufacturer's operating instructions)

Connecting a mobile phone



- Open storage compartment cover 1.
- Hold the NFC interface of the mobile phone (see manufacturer's operating instructions) on mat 2 or place the mobile phone on mat 2 with the display facing upwards.

The mobile phone is connected to the multimedia system.

Follow the additional prompts on the media display to connect the mobile phone.

Replacing a mobile phone

► Hold the NFC interface of the mobile phone (see manufacturer's operating instructions) on mat 2 or place the mobile phone on mat 2 with the display facing upwards.

Further information can be found at: https:// www.mercedes-benz-mobile.com/

Setting the reception and transmission volume

Requirements:

• The mobile phone is authorized $(\rightarrow page 274)$.

Multimedia system:

→ Phone → Options → Phone

This function ensures optimal language quality.

- Select Reception Volume or Transmission Volume.
- Set the volume.

Further information on the recommended reception and transmission volume: https:// www.mercedes-benz-mobile.com/

Adjusting the call and ringtone volume Multimedia system:

¬→ System → Audio → Phone

- Select Call Volume or Ringtone Volume.
- Set the volume.

Starting or stopping mobile phone voice recognition

Requirements:

• The mobile phone is connected to the multimedia system (\rightarrow page 274).

Starting mobile phone voice recognition

Press and hold the 3 button on the multifunction steering wheel for more than one second.

You can use mobile phone voice recognition.

Stopping mobile phone voice recognition

Press the 🛕 or 🕿 button on the multifunction steering wheel.

Calls

Telephone operation

Multimedia system:



Making a call

- Select Numerical Keypad.
- Enter the number.
- Select .
- The call is made.

Accepting a call

Select Accept.

Rejecting a call

Select Reject.

Ending a call

Select _____.

Activating functions during a call

To show all functions, navigate down.

The following functions are available during a call:

End Call

- Make Additional Call
- Keyboard (show to send DTMF tones)
- Switch Mute Mic on **✓** or off □.
- Private Mode (an active call in hands-free mode is transferred over to the telephone)

Conducting calls with several participants

Requirements:

- There is an active call (\rightarrow page 278).
- · Another call is being made.

Switching between calls

Select call ●. The selected call is active. The other call is on hold.

Activating or ending a call on hold

Select Continue Call or End Call.

Conducting a conference call

 Select Create Conference Call in the telephone menu.

The new participant is included in the conference call.

Ending an active call

- Select <a>.
- (i) On some mobile phones, the call on hold is activated as soon as the active call is ended.

Accepting/rejecting a waiting call

Requirements:

• There is an active call (\rightarrow page 278).

If you receive a call while already in a call, a message is displayed. An acoustic signal also sounds.

Select Accept.

The incoming call is active.

If only one mobile phone is connected with the multimedia system, the previous call will be put on hold.

If during a call you accept a call with the other mobile phone when in two phone mode then the existing call is ended.

- Select Reject.
- This function and behavior depends on your mobile phone network provider and the mobile phone (see the manufacturer's operating instructions).

Contacts

Information about the contacts menu

The contacts menu contains all contacts from existing data sources, e.g. mobile phone or memory card. You can store up to 6,000 contacts.

Depending on the data source, you have the following number of contacts:

- Permanently saved contacts: 3.000 entries
- Contacts loaded from the mobile phone: 3,000 entries

From the contacts menu, you can perform the following actions:

- Using the telephone:
 - Calling a contact (\rightarrow page 280)
 - Calling a new number (\rightarrow page 278)
- Navigation (→ page 252)
- Compose messages (→ page 282)

If a mobile phone is connected to the multimedia system (\rightarrow page 274) and automatic calling up $(\rightarrow page 279)$ is activated, the mobile phone's contacts are displayed in the address book.

Downloading mobile phone contacts Multimedia system:

→ Phone → Options → Contacts

Automatically

Switch Synchronize Contacts Automatically on 🗹.

Manually

- ▶ Deactivate ☐ Synchronize Contacts Automatically.
- Select Synchronize Contacts.

Calling up contacts

Multimedia system:

→ Phone → Contacts

Depending on the character set, the following options can be used to search for contacts:

- · searching by initials
- · searching by name
- · searching by phone number

- Enter characters into the search field. A selection of possible contacts appears. Entering more characters into the search field narrows down the number of possible selections.
- Select the contact.

A contact can contain the following details:

- phone numbers
- · navigation addresses
- geo-coordinates
- Internet address

Editing the format of a contact's name

Multimedia system:

→ Phone → Options → Contacts

▶ Name Format

The following options are available:

- · Last Name, First Name
- Last Name First Name
- First Name Last Name
- Select an option.

Overview of importing contacts

Contacts from various sources

Source	Requirements
Memory card	The SD card is inserted.
USB device	The USB device is inserted in the USB port.
Bluetooth® connection	Bluetooth® is activated in the multimedia system and on the respective device (see the manufacturer's operating instructions).
Mobile phone	The mobile phone is connected to the multimedia system.

(i) Note that the imported contacts remain in the vehicle and can be accessed at any time regardless of the connected mobile phones.

(i) If the sending of vCards via Bluetooth® is supported, vCards can be received on mobile phones or netbooks, for example.

Importing contacts into the contacts menu Multimedia system:

- → Phone → Options → Contacts
- Select Import.
- Select an option.

Saving a mobile phone contact

Multimedia system:

- → Phone → Contacts
- Select the mobile phone contact .
- ► Select ■.
- Select Save to Vehicle. The contact saved in the multimedia system is identified by the symbol.

Calling a contact

Multimedia system:

- → Phone → Contacts
- Enter characters into the search field.

- Select the contact.
- Select the telephone number.
 The number is dialed.

Selecting further options in the contacts menu Multimedia system:

- → Phone → Contacts
- Select a contact.
- ➤ Select 🔳 .

Depending on the stored data, the following options are available:

- Call
- Send Text Message
- Show Website (if an Internet address has been stored)
- Navigate (if an address has been stored)
- Save My Favorite
- Send DTMF Tones (for a number with DTMF tones)
- Select an option.

Deleting a contact

Multimedia system:

→ Phone → Contacts

You can delete contacts stored in the vehicle.

- Search for the contact.
- Select the contact.
- ➤ Select 🔳.
- Select Delete Contact.
- Select Yes.

Call list

Call list overview

Depending on whether your mobile phone supports the PBAP Bluetooth® profile or not, this can have different effects on the presentation and functions of the call list.

If the PBAP Bluetooth® profile is supported, the effects are as follows:

• The call lists from the mobile phone are displayed in the multimedia system. When connecting the mobile phone, you may have to confirm the connection for the PBAP Bluetooth® profile.

If the PBAP Bluetooth[®] profile is not supported, the effects are as follows:

- The multimedia system generates its own call lists.
- The call list is not synchronized with the call lists in the mobile phone.

Making a call from the call list Multimedia system:

→ Phone → Recent Calls

Select a number.
The call is made.

Text messages

Overview of text message functions

If the connected mobile phone supports the MAP Bluetooth® profile, the text message functions can be used on the multimedia system.

You can obtain further information about settings and supported functions of Bluetooth $^{\circledR}\!\!$ -capable

mobile phones at an authorized Mercedes-Benz Center or at: https://www.mercedes-benz-mobile.com/

Some mobile phones require further settings after being connected to the multimedia system (see manufacturer's operating instructions).

New messages are identified by the symbol in the media display and an audible signal.

Depending on the mobile phone, the multimedia system only displays new incoming text messages or the 100 newest text messages.

Configuring the text messages displayed

Multimedia system:

→ Phone → 🐧 Options → Text Message → Message Display

➤ Select 🔳.

A menu with the following options is shown:

- All Messages
- New and Unread Messages
- New Messages

- Off (The text messages are not displayed automatically.)
- Select an option.
- (i) The setting may not be active until the mobile phone is reconnected.

Reading text messages

Multimedia system:

→ Phone → Text Message

Reading a text message

Select a text message. The message text is displayed.

Using the read-aloud function

- Select a text message.
- Select Read Aloud. The text message is read aloud.

Composing and sending a text message Multimedia system:

→ Phone → Text Message

Select Write New Text Message.

Adding a recipient

- Select Press to Add Recipient.
- Select the contact.

Dictating text

- Select Press to Dictate.
- To start the dictation function: press on the central control element.
 The app for the dictation function is loaded.

If there was no prior Internet connection, a connection is now established.

- Say the message.
 The dictation ends automatically after you have finished speaking.
 - After the voice message has been processed, it is shown as text.
- ➤ To replace a message: select Replace message.

The text that has been dictated and shown on the display is reset and can be dictated again.

Editing text

Select the word.

To call up the correction menu: press on the central control element.

The following options are available:

- Adjusting the capitalization of words (if supported by the character set)
- · Expanding the choice of words
- Deleting the selection
- Recording a new dictation
- ► To leave the menu: select Done.

Sending text messages

Select Send Text Message.

Replying to a text message Multimedia system:

- → Phone → Text Message
- Open the text message.
- ➤ Select 🔳.
- Select Reply.

Calling a text message sender Multimedia system:

→ Phone → Text Message

- Open the text message.
- Select .
- Select Call Sender.

Deleting text messages

Multimedia system:

- → Phone → Text Message
- Select .
- To delete a text message: select Delete.
- Outbox

or

Select Drafts.

Mercedes-Benz link

Overview of Mercedes-Benz Link

WARNING Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

Using Mercedes-Benz Link, various functions and selected mobile phone apps can be transferred to the media display.

The Mercedes-Benz Link control box supplementary equipment is required for this. You can obtain this at an authorized Mercedes-Benz Center.

- (i) The Mercedes-Benz Link control box uses the Android operating system.
- (i) The service provider is responsible for the apps as well as the services and content connected to it

Connecting Mercedes-Benz Link with the multimedia system

- Connect the Mercedes-Benz Link control box with the USB port of the multimedia connection unit using a suitable connecting cable.
- (i) A suitable connecting cable is available separately at an authorized Mercedes-Benz Center.

Using Mercedes-Benz Link

Requirements:

• The Mercedes-Benz Link control box is connected with the multimedia system using the USB port.

Multimedia system:

→ Connect → Mercedes-Benz Link

Select MB Link.

The mobile phone functions and apps are available and shown on the media display.

You can find more information in the Mercedes-Benz Link control box operating instructions.

Ending Mercedes-Benz Link

Multimedia system:

→ Connect → Mercedes-Benz Link

Select Disconnect.
 The connection is ended.

with electricity.

The mobile phone continues to be supplied

or

- Disconnect the connecting cable between the Mercedes-Benz Link control box and the multimedia system.
- (i) Mercedes-Benz recommends disconnecting the connecting cable only when the vehicle is stationary.

Apple CarPlay®

Overview of Apple CarPlay®

A

WARNING Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

Observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

iPhone[®] functions can be used via the multimedia system using Apple CarPlay[®]. They are operated using the central control element or the Siri[®]

voice control system. You can activate the voice control system by pressing and holding the 30 button on the multifunction steering wheel.

Only one mobile phone at a time can be connected via Apple ${\sf CarPlay}^{\it B}$ to the multimedia system.

The availability of Apple CarPlay® may vary according to the country.

The service provider is responsible for this application and the services and content connected to it

Apple CarPlay[®] is a registered trademark of Apple Inc.

Information on Apple CarPlay®

While using Apple CarPlay[®] various functions of the multimedia system, e.g. telephony or the media sources Bluetooth[®] audio and iPod[®], are unavailable.

Only one route guidance can be active at a time. If route guidance is active on the multimedia system, it is closed when route guidance is started on the mobile phone.

Connecting an iPhone® via Apple CarPlay®

Requirements:

- Apple® operating system version iOS 8.3 or above is installed on the iPhone®.
- An Internet connection is required for the full range of functions for Apple CarPlay®.
- The iPhone® is connected to the multimedia system via the USB port using a suitable cable (\rightarrow page 302).

Multimedia system:

→ Connect ➤ Apple CarPlay

Setting automatic or manual start

A message appears when connected for the first time.

- Automatic start: select Automatically. Start Automatically is activated
 - Apple CarPlay® will now start immediately after the iPhone® is connected to the multimedia system using a USB cable.
- Manual start: select Manually.
- Select the iPhone® in the device list.

Accepting/rejecting the data protection regulations

A message with the data protection regulations appears.

Select Accept & Start.

or

Select Decline & End.

Exiting Apple CarPlay®

- Press the button on the multifunction steering wheel, for example,
- If Apple CarPlay® was not displayed in the foreground before disconnecting, the application starts in the background when reconnected. You can call up Apple CarPlay® in the main menu.

Calling up Apple CarPlay® sound settings Multimedia system:

- → Connect → Apple CarPlay → Sound
- \triangleright Select the sound menu (\rightarrow page 318).

Ending Apple CarPlay®

Multimedia system:

- → Connect → Apple CarPlay
- Select Disconnect The connection is ended

The mobile phone continues to be supplied with electricity.

Disconnect the connecting cable between the mobile phone and multimedia system. Mercedes-Benz recommends disconnecting the connecting cable only when the vehicle is stationary.

Android Auto

Android Auto overview

WARNING Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle

when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

- Only operate this equipment when the traffic situation permits.
- If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

Observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

Mobile phone functions can be used with Android Auto using the Android operating system on the multimedia system. It is operated using the central control element or voice control system. You can activate the voice control system by pressing and holding the 3 button on the multifunction steering wheel.

Only one mobile phone at a time can be connected via Android Auto with the multimedia system. The availability of Android Auto and Android Auto apps may vary according to the country.

The service provider is responsible for this application and the services and content connected to it.

Information on Android Auto

While using Android Auto, various functions of the multimedia system, for example the media source Bluetooth® audio, are not available.

Only one route guidance can be active at a time. If route guidance is active on the multimedia system, it is closed when route guidance is started on the mobile phone.

Connecting a mobile phone via Android Auto

Requirements:

- The first activation of Android Auto on the multimedia system must be carried out when the vehicle is stationary for safety reasons.
- The mobile phone supports Android Auto from Android 5.0.
- The Android Auto app is installed on the mobile phone.

- In order to use the telephone functions, the mobile phone must be connected to the multimedia system via Bluetooth[®] (→ page 274).
 If there was no prior Internet connection, this is established with the use of the mobile phone with Android Auto.
- An Internet connection is required for the full range of functions for Android Auto.

Multimedia system:

- → Connect → Android Auto
- Select the mobile phone from the device list.

Accepting/rejecting the data protection regulations

A message with the data protection regulations appears.

- Select Accept & Start.
- or
- Select Decline & End.

Activating automatic start

▶ Select Start Automatically <a>ろ.

Starting manually

Select the mobile phone from the device list.

Exiting Android Auto

- ▶ Press the button on the multifunction steering wheel, for example.
- (i) If Android Auto was not displayed in the foreground before disconnecting, the application starts in the background when reconnected. You can call up Android Auto in the main menu.

Calling up the Android Auto sound settings Multimedia system:

- → Connect → Android Auto → Sound
- Select the tone menu (→ page 318).

Ending Android Auto

Multimedia system:

- ¬→ Connect → Android Auto
- Select Disconnect.
 - The connection is ended.

The mobile phone continues to be supplied with electricity.

Disconnect the connecting cable between the mobile phone and multimedia system. Mercedes-Benz recommends disconnecting the connecting cable only when the vehicle is stationary.

Transferred vehicle data with Android Auto and Apple CarPlay®

Overview of transferred vehicle data

When using Android Auto or Apple CarPlay®, certain vehicle data is transferred to the mobile phone. This enables you to get the best out of selected mobile phone services. Vehicle data is not directly accessible.

The following system information is transmitted:

- Software release of the multimedia system
- System ID (anonymised)

The transfer of this data is used to optimize communication between the vehicle and the mobile phone.

To do this, and to assign several vehicles to the mobile phone, a vehicle identifier is randomly generated.

This has no connection to the vehicle identification number (VIN) and is deleted when the multimedia system is reset (\rightarrow page 244).

The following driving status data is transmitted:

- · Transmission position engaged
- Distinction between parked, standstill, rolling and driving
- Day/night mode of the instrument display

The transfer of this data is used to alter how content is displayed to correspond to the driving situation.

The following position data is transmitted:

- Coordinates
- Speed
- Compass direction
- Acceleration direction


This data is only transferred while the navigation system is active in order to improve it (e.g. so it can continue functioning when in a tunnel).

Mercedes me calls

Making a call via the overhead control panel

Requirements:

- You have access to a GSM network.
- The contract partner's GSM network coverage is available in the respective region.
- The ignition is switched on so that vehicle data can be transferred automatically.

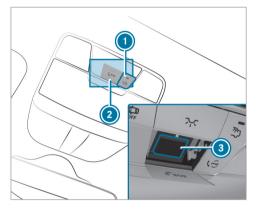

- me button for service or information calls
- SOS button cover
- SOS button

Making a Mercedes me call

Press button ①.

Making an emergency call

- To open the cover of SOS button ②, press it briefly.
- Press and hold SOS button (3) for at least one second.

If a Mercedes me call is active, an emergency call can still be triggered. This has priority over all other active calls.

Information about the Mercedes me call using the me button

A call to the Mercedes-Benz Customer Center has been initiated via the me button in the overhead control panel or the multimedia system.

Using the voice control system, you can select one of the following services:

- Accident and breakdown management (→ page 292)
- Mercedes-Benz Customer Center for general information about the vehicle

You can find information on the following topics:

- · Activation of Mercedes me connect
- · Operating the vehicle

- Nearest authorized Mercedes-Benz Center
- · Other products and services from Mercedes-Benz.

Data is transferred during the connection to the Mercedes-Benz Customer Center (\rightarrow page 290).

Calling the Mercedes-Benz Customer Center using the multimedia system

Requirements:

- You have access to a GSM network.
- The contract partner's GSM network coverage is available in the respective region.
- . The ignition is switched on so that vehicle data can be transferred automatically.

Multimedia system:

→ Phone → Contacts

Call Mercedes me connect. The call is made.

> After confirmation, the multimedia system sends the required vehicle data. The data transfer is shown in the media display.

Then, you can select a service and be connected to a specialist at the Mercedes-Benz Customer Center

Calling the Mercedes-Benz Customer Center after automatic accident or breakdown detection

Requirements:

- The vehicle has detected an accident or breakdown situation.
- The vehicle is stationary.
- The hazard warning lights are switched on.
- (i) This function is not available in all countries. In limited situations the vehicle can detect accident or breakdown situations.

In the event an accident or breakdown is detected, the emergency guide shows safety notes in the multimedia system display.

After quitting the emergency guide display on the multimedia system, a prompt appears asking whether you wish to get support from the Mercedes-Benz Customer Center.

- Select Call.
 - After your agreement, or if the Mercedes me connect service "Accident and Breakdown Management" is active, the vehicle data is transferred automatically $(\rightarrow page 292).$
 - A Mercedes-Benz Customer Center employee takes your call and organizes the breakdown and accident assistance.

You may be charged for these services.

- Depending on the severity of the accident, an automatic emergency call can be initiated. This has priority over all other active calls.
- In addition, if the Mercedes me connect service "Telediagnostics" is active, a similar prompt can appear after a delay in the event of a breakdown. If you are already in contact with the Mercedes-Benz Customer Center or have already received support, this prompt can be ignored or declined.
- (i) If you answer the prompt for support from the Mercedes-Benz Customer Center with Later. the message will be hidden and appear again later.

The prompt triggered by the Mercedes me connect service "Telediagnostics", can either be confirmed or declined. After being declined, this will not be shown again.

Arranging a service appointment via a Mercedes me call

If you have activated the maintenance management service, relevant vehicle data is transferred automatically to the Mercedes-Benz Customer Center. You will then receive individual recommendations regarding the maintenance of your vehicle.

Regardless of whether you have consented to the maintenance management service, the multimedia system reminds you after a certain amount of time that a service is due. A prompt appears asking if you would like to make an appointment.

To arrange a service appointment: select Call.

After your agreement the vehicle data is sent and a Mercedes-Benz Customer Center employee deals with your appointment. The information is then sent to your desired service outlet.

This will contact you to confirm the appointment and if necessary consult about the details.

 If you select Later after the service message appears, the message is hidden and reappears at a later time.

Transferred data during a Mercedes me call

If you initiate a service call using Mercedes me, data is transferred to enable targeted advice and an efficient service.

The following requirements must be fulfilled for the transfer of the data:

- The ignition is switched on.
- The required data transfer technology is supported by the mobile phone network provider.
- The quality of the mobile connection is sufficient.

Multi-stage transfer depends on the following factors:

- Reason for the initiation of the call
- The available mobile phone transmission technology.

- · The activated Mercedes me connect services.
- The service selected in the voice control system.

Data transfer if Mercedes me connect services are not activated

If no Mercedes me connect services are activated, the following data is transferred:

- · Vehicle identification number
- Time of the call
- · Reason for the initiation of the call
- Confirmation of the data protection prompt
- · Country indicator of the vehicle
- Set language for the multimedia system
- Telephone number of the communication platform installed in the vehicle

If a call is made for a service appointment via the service reminder, the following data is also transmitted:

· Current mileage and maintenance data

If a call is made after automatic accident or breakdown detection using the multimedia system, the following data is also transmitted:

- · Current mileage and maintenance data
- Current vehicle location

If Accident and Breakdown Management is called via the voice control system and no service has been activated, the following data can also be called up from the vehicle by the Mercedes-Benz Customer Center:

· Current vehicle location

Data transfer if Mercedes me connect services are activated

Only if the respective service is activated will additional incident-specific data be transmitted in the second stage to enable an optimal service.

An overview of the data transmitted can be found in the respective terms of use for Mercedes me connect services. These can be obtained in the Mercedes me Portal: https:// me.secure.mercedes-benz.com

Data processing

The data transmitted within the scope of the call is deleted from the processing system after the call is finished, in so far as this data is not being used for other activated Mercedes me connect. services

The incident-specific data is processed and stored in the Mercedes-Benz Customer Center and, if required to process the incident, forwarded to the service partner authorized by the Mercedes-Benz Customer Center Please take note of the data protection information on the Mercedes me Internet page https://www.mercedes.me or in the recorded message immediately after calling the Mercedes-Benz Customer Center.

(i) The recorded message is not available in every country.

Mercedes me connect

Information on Mercedes me connect

Mercedes me connect provides the following services:

- · Accident and breakdown management (me button)
- Mercedes-Benz emergency call system (automatic emergency call and SOS button)

The Mercedes-Benz Customer Center and the Mercedes-Benz emergency call center are available for you around the clock.

The me button and the SOS button can be found on the vehicle's overhead control panel $(\rightarrow page 288)$.

You can also call the Mercedes-Benz Customer Center using the multimedia system $(\rightarrow page 289)$.

Please note that Mercedes me connect is a Mercedes-Benz service. In emergencies, first call the national emergency services using the standard national emergency service telephone numbers. In emergencies, you can also use the

Mercedes-Benz emergency call system $(\rightarrow page 293)$.

Observe the conditions of use for Mercedes me connect and other services. These can be obtained in the Mercedes me Portal: https://me.secure.mercedes-benz.com

Information on Mercedes me connect Accident and Breakdown Management

The Accident and Breakdown Management can include the following functions:

- Supplement to the Mercedes-Benz emergency call system (→ page 293)
 - If necessary, the contact person at the Mercedes-Benz emergency call center forwards the call to Mercedes me connect Accident and Breakdown Management. Forwarding the call is however not possible in all countries.
- Breakdown assistance by a technician on location and/or the towing away of the vehicle to the nearest authorized Mercedes-Benz Center

You may be charged for these services.

More information about Mercedes me connect services can be obtained in the Mercedes me Portal: https://me.secure.mercedes-benz.com

Data transferred during Mercedes me connect call services

The data transferred during a Mercedes me connect call depends on:

- . The reason for initiation of the call
- The service that is selected in the voice control system
- The activated Mercedes me connect services

Which data is transferred for the services can be taken from the currently valid terms of use. These can be obtained in the Mercedes me portal: https://me.secure.mercedes-benz.com

Mercedes-Benz emergency call system

Information on the Mercedes-Benz emergency call system

Your vehicle is equipped with the Mercedes-Benz emergency call system ("eCall"). This feature can help save lives in the event of an accident. eCall

in no way replaces assistance provided from dialing 911.

The Mercedes-Benz emergency call system is available for at least ten years starting from the manufacturing date.

Mercedes-Benz eCall only functions in areas where mobile phone coverage is available from the wireless service providers. Insufficient network coverage from the wireless service providers may result in an emergency call not being transmitted.

eCall is a standard feature in your Mercedes-Benz vehicle. In order to function as intended, the system relies on the transmission of data detailed in the Transmitted Data section that follows (\rightarrow page 294).

To disable eCall, a customer must visit an authorized Mercedes-Benz Service department to deactivate the vehicle's communication module.

Deactivation of this module prevents the activation of any and all Mercedes me connect services. After the deactivation of eCall, automatic emergency call and manual emergency call will not be available.

The ignition must be switched on before an automatic emergency call can be made.

- (i) eCall is activated at the factory.
- (i) eCall can be deactivated by an authorized Mercedes-Benz dealer. Please note that in the event ownership of the vehicle is transferred to another owner in its deactivated state, eCall will remain deactivated unless the new owner visits an authorized Mercedes-Benz dealership to reactivate the system.

Overview of the Mercedes-Benz emergency call system

eCall can help to reduce the time between an accident and the arrival of emergency services at the site of the accident. It helps locate an accident site in places that are difficult to access. However, even if a vehicle is equipped with eCall, this does not mean the system is ON. As such, eCall does not replace dialing 911 in the event of an accident.

An emergency call can be made automatically $(\rightarrow page 293)$ or manually $(\rightarrow page 294)$.

Only make emergency calls if you or others are in need of rescue. Do not make an emergency call in the event of a breakdown or a similar situation

Displays in the media display:

SOS READY: eCall available

SOS NOT READY: the ignition is not on or eCall is not available.

During an active emergency call, (\$\sos\) appears in the display.

You can find more information on the regional availability of the Mercedes-Benz Emergency Call System at: https://www.mercedes-benzmobile.com/extra/ecall/

(i) If there is a malfunction in the emergency call system (e.g. a malfunction with the speaker, microphone, air bag, SOS button), a corresponding message appears on the instrument cluster display.

Triggering an automatic emergency call

Requirements

- The ignition is switched on.
- The starter battery is sufficiently charged.

If restraint systems such as airbags or Emergency Tensioning Devices have been activated after an accident, the Mercedes-Benz emergency call system may automatically initiate an emergency call.

The emergency call has been made:

- A voice connection is made to the Mercedes-Benz emergency call center.
- A message with accident data is transmitted to the Mercedes-Benz emergency call center. The Mercedes-Benz emergency call center can transmit the vehicle position data to one of the emergency call centers.

The SOS button in the overhead control panel flashes until the emergency call is finished.

It is not possible to immediately end an automatic emergency call.

If no connection can be made to the emergency services either, a corresponding message appears in the media display.

Dial the local emergency number on your mobile phone.

If an emergency call has been initiated:

- Remain in the vehicle if the road and traffic conditions permit you to do so until a voice connection is established with the emergency call center operator.
- Based on the call, the operator decides whether it is necessary to call rescue teams and/or the police to the accident site.
- If no vehicle occupant answers, an ambulance is sent to the vehicle immediately.

Triggering a manual emergency call

Press and hold the SOS button in the overhead control panel for at least one second.

The emergency call has been made:

- A voice connection is made to the Mercedes-Benz emergency call center.
- A message with accident data is transmitted to the Mercedes-Benz emergency call center.
 The Mercedes-Benz emergency call center can transmit the vehicle position data to one of the emergency call centers.

- Remain in the vehicle if the road and traffic conditions permit you to do so until a voice connection is established with the emergency call center operator.
- Based on the call, the operator decides whether it is necessary to call rescue teams and/or the police to the accident site.

If no connection can be made to the emergency services either, a corresponding message appears in the media display.

Dial the local emergency number on your mobile phone.

Ending an unintentional emergency call

On the multifunction steering wheel: select

Depress the button for several seconds.

Data transfer of the Mercedes-Benz emergency call system

In the event of an automatic or manual emergency call the following data is transmitted, for example:

- · Vehicle's GPS position data
- GPS position data on the route (a few hundred meters before the incident)

- · Direction of travel
- Vehicle identification number
- · Vehicle drive type
- Number of people determined to be in the vehicle
- Whether Mercedes me connect is available or not
- Whether the emergency call was initiated manually or automatically
- · Time of the accident
- Language setting on the multimedia system

Data transmitted is vehicle information. For any questions about the collection, use and sharing of the eCall system data, please contact MBUSA's Customer Assistance Center at 800-FOR-MERC.

For Canada, please contact MBC's Customer Assistance Center at 1-800-387-0100.

Customer requests for covered information should be submitted via the same channels.

For accident clarification purposes, the following measures can be taken up to an hour after the emergency call has been initiated:

- The current vehicle position can be determined
- A voice connection to the vehicle occupants can be established

Online and Internet functions Internet connection

Information on connecting to the Internet

WARNING Risk of distraction from information systems and communications equipment

If you operate information systems and communication devices integrated in the vehicle when driving, you could be distracted from the traffic situation. This could also cause you to lose control of the vehicle.

Only operate this equipment when the traffic situation permits.

If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

You must observe the legal requirements for the country in which you are currently driving when operating the multimedia system.

WARNING Risk of accident from operating mobile communication equipment while the vehicle is in motion

Mobile communication devices distract the driver from the traffic situation. This can also cause the driver to lose control of the vehicle.

- As a driver, only operate mobile communication devices when the vehicle is stationary.
- As a vehicle occupant, use mobile communication devices only in the designated area, e.g. in the rear passenger compartment.

You must observe the legal requirements for the country in which you are currently driving when operating mobile communication equipment in the vehicle.

The Internet functions can only be used to a limited degree whilst driving.

Function of the communication module

On vehicles with a built-in communication module. the Internet connection is established via an integrated SIM card.

To use Internet access via the communication module the following conditions must be met:

- The vehicle is equipped with a permanently installed communication module.
- Mercedes me connect is active and ready for operation.
- Mercedes me connect is activated for Internet access.

For most Mercedes me connect services, data volume is available when purchasing the services.

Additional data volume is required to use some functions, e.g. Internet radio or Wi-Fi hotspot.

If the data volume limit is reached, the availability of Mercedes me connect services is limited. The data volume can be purchased **directly from a mobile phone network provider** via the Mercedes me Portal.

(i) Visit an authorized Mercedes-Benz Center to find out whether it is possible to purchase data volume in your country directly from a mobile phone network provider.

Connection status

Connection status overview



- Display of the communication module reception field strength
- ② Display of existing connection

Displaying the connection status Multimedia system:

- → System → Connectivity
- Select Internet Status.

- (i) In the case of a connection via the communication module the following status information is shown:
 - Type of network
 - Status online/offline

Mercedes-Benz Apps

Calling up Mercedes-Benz Apps

Requirements:

- The registration for the use of Mercedes-Benz Apps has been completed.
- The general terms and conditions have been confirmed.

Multimedia system:

- → Connect → Mercedes-Benz Apps
- Select an app.
- (i) The available features are country-dependent. License fees may be applicable.

Using Mercedes-Benz Apps with voice control

Requirements:

- The registration for the use of Mercedes-Benz Apps has been completed.
- The general terms and conditions have been confirmed.

The symbol indicates that a Mercedes-Benz app can be used via voice control.

- Select a Mercedes-Benz app. The app menu is displayed.
- To use voice control: select Language.
- Say the question or command.
- (i) Voice control is not available in all countries and languages.

TuneIn Radio

Calling up Tuneln Radio

Requirements:

- The Internet Radio service is activated.
- The data volume is available.

Depending on the country, data volume may need to be purchased.


· A fast Internet connection for data transmission free of interference

The services are country-dependent. For more information, consult an authorized Mercedes-Benz Center

Multimedia system:

- Radio >> 🕴 Radio Source
- Select TuneIn Radio. The TuneIn Radio display appears. The last station set starts playing.
- The connection quality depends on the local mobile phone reception.

Overview of TuneIn Radio

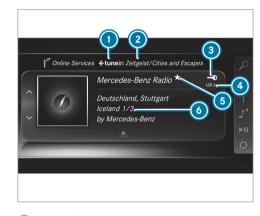

- Internet Radio provider
- Selected category
- Display (if connected to private user account)
- Data transfer rate
- Current station is stored as a favorite
- Additional information on the current station

Selecting and connecting TuneIn Radio stations Multimedia system:

Radio → Radio Source
Tuneln Radio → P Search

- Select a category.
- Select a station.

The connection is established automatically.

or

- Select Enter Address or POI.
- Enter a station name using the entry field.
- (i) A relatively large volume of data can be transmitted when using TuneIn Radio.

Saving/deleting a TuneIn Radio station as a favorite

Multimedia system:

¬→ Radio → 🛊 Radio Source

- >> TuneIn Radio
- Select a station.
- Press and hold the central control element until an audible signal sounds.

The symbol appears by the station name.

► Select ★ Favorites .

The list of saved favorite stations appears.

or

 Create an account for the online provider (TuneIn Radio) and then log in on the multimedia system.

Your favorites are imported to the multimedia system.

Deleting favorites

- Select ★ Favorites .
- Select a station.
- Press and hold the central control element until an audible signal sounds.

The *\infty symbol by the station name disappears.

Setting the TuneIn Radio options

Multimedia system:

¬→ Radio → 🕴 Radio Source

>> TuneIn Radio >> (Options

The following options are available:

• Select Stream: select the stream quality

- Login to TuneIn Account: log in to your TuneIn user account
- Log Out of Account: log out of your TuneIn user account
- Select an option.

Media

Audio mode

Information on the audio mode

A

WARNING Risk of distraction when handling data storage media

If you handle a data storage medium while driving, your attention is diverted from the traffic conditions. This could also cause you to lose control of the vehicle.

Only handle a data storage medium when the vehicle is stationary.

Permissible file systems:

- FAT32
- exFAT

NTFS

Permissible data storage media:

- · SD card
- · USB storage device
- iPod®/iPhone®
- MTP devices
- Bluetooth[®] audio device
- (i) Observe the following notes:
 - The multimedia system supports a total of up to 50,000 files.
 - Data storage media up to 2 TB are supported (32-bit address space).

Supported formats:

- MP3
- WMA
- AAC
- WAV
- FLAC
- ALAC

- (i) Observe the following notes:
 - Due to the large variety of available music files regarding encoders, sampling rates and data transfer rates, playback cannot always be guaranteed.
 - Due to the wide range of USB devices available on the market, playback cannot be guaranteed for all USB devices.
 - Copy-protected music files or DRM encrypted files cannot be played back.
 - MP3 players must support Media Transfer Protocol (MTP).



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.



Gracenote, the Gracenote logo and logotype, "Powered by Gracenote", MusicID and Playlist Plus are either registered trademarks or trademarks of Gracenote, Inc. in the United States and/or other countries.

Made for Final Phone | iPod

"Made for iPod", and "Made for iPhone," mean that an electronic accessory has been designed to connect specifically to iPod®, or iPhone®, respectively, and has been certified by the developer to meet Apple performance standards. Apple® is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod, or iPhone may affect wireless performance.

For the USA: iPhone®, iPod®, iPod classic®, iPod nano®, and iPod touch® are trademarks of Apple Inc., registered in the U.S. and other countries. Lightning® is a trademark of Apple Inc.

For Canada: iPhone[®], iPod[®], iPod classic[®], iPod nano[®], and iPod touch[®] are trademarks of Apple Inc., registered in the U.S. and other countries. Lightning[®] is a trademark of Apple Inc.

Notes on copyright

Audio files that you create or reproduce yourself for playback are generally subject to copyright protection. In many countries, reproductions, even for private use, are not permitted without the prior consent of the copyright holder. Make sure

that you know about the applicable copyright regulations and that you comply with these.

Activating media mode

Multimedia system:

→ Media **>>** Media Sources

Select a media source.
Playable music files are played back.

Inserting/removing an SD card

▲ DANGER Risk of fatal injury from swallowing SD cards

SD cards are small parts.

They could be swallowed and lead to choking.

- Keep SD cards out of the reach of children.
- Seek medical attention immediately if an SD card has been swallowed
- I NOTE Damage due to high temperatures

High temperatures may damage the SD card.

Remove the SD card after use and take it out of the vehicle.

Multimedia system:

→ Media → Media Sources Mem. Card

Inserting


The multimedia connection unit is located in the stowage compartment under the armrest.

Insert the SD memory card into the SD card slot until it engages. The side with the contacts must face downwards. Playable music files are played back.

Removing

- Press the SD card.
- Remove the SD card.

Overview of the audio mode

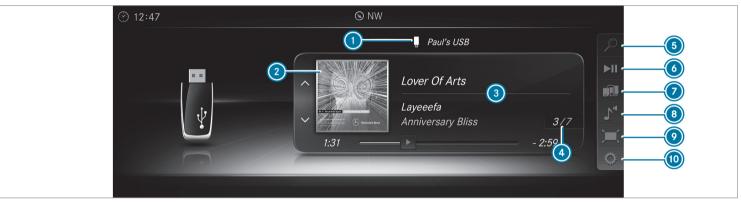

- Active data storage medium
- Album cover
- 3 Track, artist, album
- Track number and number of tracks in the track list
- Search
- O Playback Control

- Media Sources
- Sound
- Full Screen (for video playback)
- Options

Connecting USB devices

! NOTE Damage caused by high temperatures

High temperatures can damage USB devices.

Remove the USB device after use and take it out of the vehicle.

The multimedia connection unit is located in the stowage compartment under the armrest and has two USB ports.

Depending on the vehicle's equipment, additional USB ports are located in the center console stowage compartment and in the rear passenger compartment.

- Connect the USB device to the USB port. Playable music files are played back only if the corresponding media menu is activated.
- (i) Use the USB port identified by [to use Apple CarPlay® and Android Auto.
- (i) Depending on the vehicle equipment there is an additional USB port in the rear passenger compartment. Ports that are labeled with a battery symbol can only be used to charge USB devices.

Selecting a track in the media playback Multimedia system:

¬→ Media

Selecting a track by skipping to a track

To skip backwards or forwards to a track: navigate up or down.

Selecting a track using the current track list

- Select .
- Select Current Track List.
- Select a track.

Selecting playback options

Multimedia system:

→ Media → Options

Plaving back similar tracks

Select Play Similar Tracks. A track list with similar tracks is created and played back.

Playback mode

- Select Random Mode Current Playlist. The current track list is played in random order.
- Select Random Mode Current Medium. All tracks on the active data storage medium are played in random order.
- Select Normal Track Sequence. The current track list is played in the order it appears on the data storage medium.

Controlling media playback

Multimedia system:

→ Media → Playback Control

A bar with playback controls is shown.

- To pause playback: select and confirm \[\] with the central control element. The symbol is displayed.
- To resume playback: select and confirm again with the central control element. The symbol is displayed.

To fast forward/rewind

Move II on the timeline.

To hide the playback controls

Press the button.

Video mode

Switching to video mode

Multimedia system:

→ Media → Media Sources

Select a data storage medium.

 Search for and select video files or playlists with video files.
 Playable video files are played back.

The multimedia system supports the following formats:

- MPEG
- AVI, DivX, MKV
- MP4, M4V
- WMV
- (i) If the vehicle is traveling faster than 3 mph (5 km/h) the video image is hidden from the driver. If available, the channel and program information is continuously displayed.

 Due to the large variety of available video files regarding encoders, sampling rates and data transfer rates, playback cannot be guaranteed.

Videos up to FullHD (1920x1080) are supported.

Copy-protected video files or DRM (Digital Rights Management) encrypted files cannot be played back.

Overview of video mode



- Active data storage medium
- Album cover
- Track, artist, album
- Track number and number of tracks in the track list
- Search
- Playback Control

- Media Sources
- Sound
- Full Screen (for video playback)
- Options

Activating/deactivating full-screen mode Multimedia system:

- → Media → Media Sources
- Select a data storage medium. Playable video files are played back.
- To activate full-screen mode: select [Full Screen.

To deactivate full-screen mode: press the touchpad.

Changing video settings

Multimedia system:

→ Media → Options
→ Picture Format

The following picture formats are available:

- Automatic
- 16:9
- 4:3
- Zoom
- Select a picture format.

Adjusting the brightness manually

If the Automatic picture format is switched off, you can adjust the brightness yourself.

- Select Brightness.
- Adjust the brightness.

Media search

Starting the media search

Multimedia system:

→ Media → 🔎 Search

Depending on the connected media sources and files, the following categories are listed:

- Current Track List
- Keyword Search
- Playlists
- Artists
- Albums
- Tracks
- Folders
- · Music Genres
- Year
- Composers
- Videos
- Podcasts (Apple[®] devices)
- Audiobooks (Apple[®] devices)
- Select a category.

 The categories are available as soon as the entire media content has been read in and analyzed.

Media Interface

Information about the Media Interface

Media Interface is a universal interface for the connection of mobile audio equipment. The multimedia system has two USB ports. The USB ports are located in the stowage compartment under the armrest.

Supported devices

The Media Interface allows you to connect the following data storage media:

- iPod[®]
- iPhone[®]
- · MP3 player
- · USB devices


For details and a list of supported devices, visit our website at https://www.mercedes-benz.com/connect. Follow the instructions in the "Media Interface" section.

Switching to Media Interface

Multimedia system:

- → Media → Media Sources
- Connect a data storage medium to the USB port (\rightarrow page 302).
- Select a media device. Playable music files are played back.

Overview of Media Interface

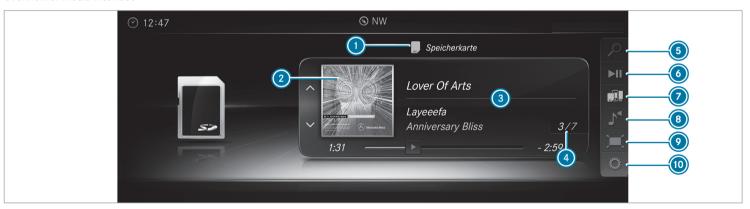

- Active data storage medium
- 2 Album cover
- 3 Artist, track and album
- Track number and number of tracks in the track list
- Search
- O Playback Control
- Media Sources
- Sound
- Full Screen (video playback only)
- Options

Bluetooth® audio

Information about Bluetooth® audio

Before using your Bluetooth® audio device with the multimedia system for the first time, you will need to authorize it (\rightarrow page 309).

Bluetooth® audio overview



- Active data storage medium
- Album cover
- Track, artist, album
- Track number and number of tracks in the track list
- Search
- Playback Control

- Media Sources
- Sound
- Full Screen (video playback only)
- Options

Searching for and authorizing a Bluetooth® audio device

Requirements:

- Bluetooth® is activated on the multimedia system and audio equipment (\rightarrow page 236).
- The audio equipment supports the Bluetooth® audio profiles A2DP and AVRCP.

The audio equipment is "visible" for other devices.

Multimedia system:

→ Media → Media Sources

▶ ■ Bluetooth Audio

Authorizing a new Bluetooth® audio device

- ► Select 🗐.
- Select Add New Bluetooth Audio Device.
- Select Start Search on System.
 Detected audio equipment is displayed in the device list.
- Select a Bluetooth® audio device. Authorization starts. A code is displayed on the multimedia system and on the mobile phone.
- If the codes are identical, confirm on the audio equipment.
 The surfice equipment is connected and all the codes.

The audio equipment is connected and playback starts.

Selecting previously authorized Bluetooth $^{\footnotesize @}$ audio equipment

- ▶ Select □□.
- Select a Bluetooth® audio device.

Establishing a connection from the Bluetooth® audio equipment

The Bluetooth® device name of the multimedia system is MB BLUETOOTH XXXXX.

- Select Search from Device.
- Start the authorization on the audio equipment (see manufacturer's operating instructions).

A code is displayed on the multimedia system and on the audio device.

Confirm on both devices if the codes are identical.

The audio equipment is connected and playback starts.

With some audio equipment, playback must be initially started on the device itself so that the multimedia system can play the audio files.

(i) Device-specific information on authorizing and connecting Bluetooth®-capable mobile phones can be obtained at https:// www.mercedes-benz-mobile.com/ or at an authorized Mercedes-Benz Center.

Activating Bluetooth® audio

Multimedia system:

→ Media → Media Sources

Select Bluetooth Audio. The multimedia system activates the connected Bluetooth® audio equipment.

Selecting the media player on the Bluetooth® audio device

Multimedia system:

→ Media >> 🔎

- Select the Bluetooth Audio Players category. If multiple media players are present on the Bluetooth® audio equipment a list appears.
- Select a media player. Playback starts.
- (i) The function is not supported by every mobile phone.

Searching for a music track on the Bluetooth® audio device

Multimedia system:

- → Media → Media Sources
- **▶** Bluetooth Audio
- Select D.
- Select a category. A track list appears.
- Select a track.
- (i) The function is only available when the mobile phone and the media player selected on the mobile phone support this function.

Switching Bluetooth® audio equipment via NFC

Requirements:

- Observe the notes on using NFC $(\rightarrow page 276)$.
- The Bluetooth® audio overview is displayed $(\rightarrow page 309)$.

Lightly press the NFC area on the mobile phone (see the manufacturer's operating instructions).

If the mobile phone has already been authorized on the multimedia system as Bluetooth® audio equipment, it is now connected.

If the mobile phone is authorized on the multimedia system as Bluetooth® audio equipment for the first time, it is connected after confirming the instructions on the mobile phone (see the manufacturer's operating instructions).

Disconnecting Bluetooth® audio equipment Multimedia system:

- → Phone → Media Sources
- Select the symbol in the line of the mobile phone. The disconnection of the mobile phone takes

place without a confirmation prompt. The mobile phone remains authorized in the system.

Radio

Switching on the radio

Multimedia system:

- ¬→ Radio
- Alternatively: press the RADIO button. The radio display appears. You will hear the last station played on the last frequency band selected.

Radio overview



- Active frequency band
- Station name or set frequency
- 3 Artist, title, album and radio text
- Station list
- O Presets
- Radio Source
- Sound



Multimedia system:

¬→ Radio → Options → HD Radio



- (i) HD Radio Technology manufactured under license from iBiquity Digital Corporation. U.S. and Foreign Patents. HD Radio™ and the HD, HD Radio and "Arc" logos are proprietary trademarks of iBiquity Digital Corp.

Setting the waveband

Multimedia system:

Radio >> F Radio Source

HD Radio FM HD Radio AM and Sirius XM Radio can be selected.

Select a frequency band.

Selecting a radio station

Multimedia system:

- ¬→ Radio
- Navigate up or down.

Calling up the radio station list

Multimedia system:

- ¬→ Radio → 🔎
- Select a station.

Searching for radio stations using station names or direct frequency entry

Multimedia system:

- ¬→ Radio → 🔎
- Enter a station name or frequency.
- Select OK. The search results are displayed.
- Select a station.

Storing radio stations

Multimedia system:

- Radio >> The Presets
- Select Store Current Station in the Presets.

Managing radio station presets

Multimedia system:

¬→ Radio → Presets

Moving stations:

- Highlight a preset entry and navigate to the left.
- Select Move Highlighted Station.
- Select a memory preset.

Deleting stations:

- Highlight a preset entry and navigate to the left.
- Select Delete Highlighted Station.
- Select Yes.

Activating/deactivating radio text

Multimedia system:

- ¬→ Radio → Options
- ▶ Display Radio Text Information
- ▶ Activate or deactivate the function.

Satellite radio

Information on the satellite radio

SIRIUS XM® satellite radio offers more than 175 digital-quality radio channels providing 100% commercial-free music, sports, news and entertainment, for example. SIRIUS XM satellite radio employs a fleet of high-performance satellites to broadcast around the clock throughout the USA and Canada. The satellite radio program is available for a monthly fee. Information about this can be obtained from a Sirius XM® Service Center and at https://www.siriusxm.com (USA) or https://www.siriusxm.ca (Canada).

(i) Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. and its subsidiaries. All other marks, channel names and logos are the property of their respective owners. All rights reserved.

Satellite radio restrictions

Satellite radio mode may be temporarily unavailable or interrupted for a variety of reasons. These include environmental or topographical conditions beyond the control of Mercedes-Benz USA, LLC. Thus, operation at certain locations may not be possible.

Registering satellite radio

Requirements:

- Satellite radio equipment
- · Registration with a satellite radio provider
- If registration is not included when purchasing the system, your credit card details will be required to activate your account.

Multimedia system:

- ¬→ Radio → † Radio Source
- ➤ SiriusXM Radio ➤ Options
- Select Service Information. The service information screen appears showing the radio ID and the current subscription status.
- Establish a telephone connection.
- Follow the service staff's instructions. The activation process may take up to ten minutes.
- (i) You can also have the satellite service activated online. To do so, please visit https://www.siriusxm.com (USA) or https://www.siriusxm.ca (Canada).

Switching on satellite radio

Multimedia system:

- ¬→ Radio → 🕴 Radio Source
- Select SiriusXM Radio.

Overview of the satellite radio



- Active frequency band
- 2 Logo or cover picture for the song (if available)
- Category
- Channel name
- Artist, track and album
- SiriusXM Radio Channels

- Presets
- Radio Source
- Sound
- Playback Control
- Options

Selecting a satellite radio category

Multimedia system:

Radio >> T Radio Source

➤ SiriusXM Radio

▶ SiriusXM Radio Channels **▶** Category

Select a category.

Selecting a satellite radio channel Multimedia system:

¬→ Radio → Radio Source

- >> SiriusXM Radio
- Navigate up or down.

Saving or deleting a satellite radio channel Multimedia system:

Radio >> Radio Source

- ➤ SiriusXM Radio ➤ ★ Presets
- Select Store Current Station in the Presets.

Moving a channel

- Select Options.
- Select Move Highlighted Station.
- Select a memory preset.

Deleting a channel

- Select Options.
- Select Delete Highlighted Station.
- Select a memory preset.

Displaying EPG information for the current channel

Multimedia system:

- ¬→ Radio → Radio Source
- ➤ SiriusXM Radio
 ➤ Options
- Select EPG Information about Current Channel.

Setting parental control for radio

Multimedia system:

- ¬→ Radio → Radio Source
- ➤ SiriusXM Radio ➤ Options
- >> Parental Control
- ▶ Activate the function <a> □.
- Determine a four-digit character sequence and select **ok**.

All channels with adult content are locked.

Unlocking a channel

- Enter the four-digit character sequence and select **ok**.
 - All channels with adult content are unlocked.

Music and sport alerts function

This function enables you to program an alert for your favorite artists, tracks or sporting events. Music alerts can be saved whilst a track is being played and sport alerts can be saved during a live game. You can also specify sport alerts via the menu option. The system then continuously searches through all the channels. If a match is found with a stored alert, you will be informed.

Setting music and sport alerts

Multimedia system:

- Radio >> | Radio Source
- ➤ SiriusXM Radio ➤ Options
- ➤ Alert for Artist, Song & Sporting Event

Setting a music alert

Select Add New Alert.

or

- Select Manage Artist & Song Alerts.
- ➤ Select Options.

The following options are available:

- Mark This Entry
- Unmark This Entry

- Mark All Entries
- Unmark All Entries
- Delete This Entry
- Delete All Entries
- Select an option.
- Activate Artist & Song Alerts . The alert is set for the current artist or track. If a match is found, a prompt appears asking whether you wish to change to the station.

Setting a sport alert

Select Add New Alert.

- Select Manage Sports Alerts.
- Select Select New Alerts.

or

- Select Edit Alerts.
- Select a team from a league.
- Activate Sports Alerts .

Information on Smart Favorites and Tune Start Stations in the station presets can be added as Smart Favorites Smart Favorites stations are

automatically saved to temporary storage in the background. If you change to a Smart Favorites station, you can replay, pause or actively skip forward or back to broadcasts which you have missed. If Tune Start is activated and you change to another Smart Favorites station, the music track currently playing on the station is automatically restarted from the beginning of the track.

Adding a channel to Smart Favorites Multimedia system:

¬→ Radio → 🗍 Radio Source

- >> SiriusXM Radio
- Select the active frequency band.
- Highlight an entry.
- Select .
- Select Add Highlighted Channel to Smart Favorites.

Activating/deactivating TuneStart Multimedia system:

Radio >> Options >> TuneStart

▶ Activate or deactivate the function.

Controlling playback

Multimedia system:

Radio >> | Playback Control

You can pause the playback of the current station or skip forward or backward in the timeline. This leaves live mode to access the internal temporary storage.

- To fast forward/rewind: turn the controller counter-clockwise or clockwise/swipe left or right on the touchpad.
- To jump to the previous/next song: press the controller left or right/swipe left or right on the touchpad.
- To pause playback: select .
- To return to live mode: navigate to the end of the timeline

Displaying satellite radio service information Multimedia system:

Radio >> | Radio Source

- ➤ SiriusXM Radio ➤ Options
- Select Service Information.

Sound

Tone settings

Information about the sound system

The sound system has a total output of 100 W and is equipped with five speakers. It is available for all functions in the radio and media modes.

(i) The call can also be made from other audio sources. Replace Media with, for example, Radio in the menu path.

Calling up the sound menu

Multimedia system:

→ Media → J Sound

The following functions are available:

- Equalizer
- · Balance and Fader
- Automatic Volume Adjustment
- Other Sound Settings
- Select a sound menu.

Adjusting treble, mid-range and bass settings Multimedia system:

- → Media → 📑 Sound → Equalizer
- ► Select Treble, Mid Range or Bass.
- Change the settings.

Activating/deactivating automatic volume adjustment

Multimedia system:

- → Media → 「」 Sound
- ➤ Automatic Volume Adjustment

Automatic volume adjustment compensates for differing volumes when changing between audio sources.

▶ Activate or deactivate the function.

Adjusting the balance/fader

Multimedia system:

- → Media **>>** 📑 Sound
- ▶ Balance and Fader
- Adjust the balance and fader.
- To exit the menu: press the 📥 button.

Burmester® surround sound system

Information about the Burmester® surround sound system

The Burmester[®] surround sound system has a total output of 590 W and is equipped with 13 speakers. It is available for all functions in the radio and media modes.

i The call can also be made from other audio sources. Replace Media with, for example, Radio in the menu path.

Calling up the sound menu in the Burmester® surround sound system

Multimedia system:

→ Media **>>** 📑 Sound

The following functions are available:

- Equalizer
- · Balance and Fader
- Automatic Volume Adjustment
- Surround Sound
- Sound Focus
- Other Sound Settings

Select a function.

Adjusting the treble, mid and bass settings on the Burmester® surround sound system

Multimedia system:

- → Media → T Sound → Equalizer
- Select Treble, Mid Range or Bass.
- Set the desired values.

Activating or deactivating volume adjustment in the Burmester® surround sound system Multimedia system:

→ Media → 「 Sound >> Automatic Volume Adjustment

Automatic volume adjustment compensates for differing volumes when changing between audio sources.

▶ Activate or deactivate the function.

Adjusting the balance/fader in the Burmester® surround sound system

Multimedia system:

- → Media → 「」 Sound
- ▶ Balance and Fader
- Adjust the balance and fader.
- To exit the menu: press the ____ button.

Switching surround sound on or off in the Burmester® surround sound system Multimedia system:

→ Media → 「」 Sound

- >> Surround Sound
- ▶ Activate or deactivate the function.

Adjusting the sound focus in the Burmester® surround sound system

Multimedia system:

- → Media → 📑 Sound → Sound Focus
- Adjust the sound focus.

Advanced sound system

Information about the Advanced sound system

The Advanced sound system has a total output of 225 W and is equipped with nine speakers. It is available for all functions in the radio and media modes.

Calling up the sound menu in the Advanced sound system

Multimedia system:

→ Media → 「」 Sound

The following functions are available:

- Equalizer
- · Balance and Fader
- Automatic Volume Adjustment
- Select a function.

Adjusting treble, mid-range and bass settings in the Advanced sound system

Multimedia system:

- → Media → Sound → Equalizer
- Select Treble, Mid Range or Bass.
- Set the desired values.

Switching the volume adjustment in the Advanced sound system on/off

Multimedia system:

→ Media → J Sound

➤ Automatic Volume Adjustment

Automatic volume adjustment compensates for differing volumes when changing between audio sources.

▶ Activate or deactivate the function.

Setting the balance/fader in the Advanced sound system

Multimedia system:

→ Media → 「 Sound

▶ Balance and Fader

Adjust the balance and fader.

ASSYST PLUS service interval display

Function of the ASSYST PLUS service interval display

The ASSYST PLUS service interval display on the instrument display informs you of the time or distance remaining before the next service due date.

You can hide this service display using the **S** back button on the steering wheel.

Depending on how the vehicle is used, the ASSYST PLUS service interval display may shorten the service interval, e.g. in the following cases:

- · Mainly short-distance driving
- When the engine is often left idling for long periods
- In the event of frequent cold start phases

Mercedes-Benz recommends avoiding such operating conditions.

You can obtain information concerning the servicing of your vehicle from a qualified specialist workshop, e.g. an authorized Mercedes-Benz Center.

Displaying the service due date

On-board computer:

→ Service → ASSYST PLUS

The next service due date is displayed.

To exit the display: press the back button on the steering wheel.

Bear in mind the following related topic:

 Operating the on-board computer (→ page 207).

Information on regular maintenance work

! NOTE Premature wear through failure to observe service due dates

Maintenance work which is not carried out at the right time or incompletely can lead to increased wear and damage to the vehicle.

Adhere to the prescribed service intervals.

Always have the prescribed maintenance work carried out at a qualified specialist workshop.

Notes on special service requirements

The prescribed service interval is based on normal operation of the vehicle. Have the maintenance work carried out more often than prescribed if operating conditions are difficult or the vehicle is subject to increased stress.

The ASSYST PLUS service interval display is only an aid. It is the responsibility of the driver of the vehicle to have maintenance work carried out more often than prescribed due to actual operating conditions and/or stresses.

Examples of arduous operating conditions:

- Regular city driving with frequent intermediate stops
- · Mainly short-distance driving
- Frequent operation in mountainous terrain or on poor road surfaces

322 Maintenance and care

- When the engine is often left idling for long periods
- Operation in particularly dusty conditions and/or if air-recirculation mode is frequently used

In these or similar operating conditions, have the interior air filter, air filter, engine oil and oil filter, for example, changed more frequently. If subject to increased stress, check the tires more. Further information can be obtained at a qualified specialist workshop.

Battery disconnection periods

The ASSYST PLUS service interval display can calculate the service due date only when the battery is connected.

Display and note down the service due date on the instrument display before disconnecting the battery (→ page 321).

Engine compartment

Opening and closing the hood

WARNING Risk of accident due to driving with the hood unlocked

The hood may open and block your view.

- Never release the hood when driving.
- Before every trip, ensure that the hood is locked.

WARNING Risk of accident and injury when opening and closing the hood

The hood may suddenly drop into the end position.

There is a risk of injury for anyone in the hood's range of movement.

Do not open or close the hood if there is a person in the hood's range of movement. **WARNING** Risk of burns when opening the hood

If you open the hood in the event of an overheated engine or fire in the engine compartment, the following situations may occur:

- · You may come into contact with hot gases.
- You may come into contact with other escaping hot operating fluids.
- ▶ Before opening the hood, allow the engine to cool down.
- ▶ In the event of a fire in the engine compartment, keep the hood closed and call the fire service.

WARNING Risk of injury due to moving parts

Components in the engine compartment may continue to run or start unexpectedly even when the drive system is switched off.

Observe the following if you must open the hood:

- Switch off the vehicle
- Never touch the danger zones surrounding moving components, e.g. the rotation area of the fan
- Remove iewelery and watches.
- Keep items of clothing and hair away from moving parts.
- **WARNING** Risk of injury from touching live components

The ignition system and the fuel injection system operate with a high voltage. You could receive an electric shock

Never touch components of the ignition system or fuel injection system when the vehicle is switched on.

The live components include the following, for example:

- Ignition coils
- · Fuel injectors

• Electric lines to the ignition coils and the fuel injectors

WARNING Risk of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment can be very hot, e.g. the engine, the cooler and parts of the exhaust system.


Allow the engine to cool down and only touch component parts described in the following.

WARNING Risk of injury from using the windshield wipers when the hood is open

If the windshield wipers start moving when the hood is open, you could be trapped by the wiper linkage.


► Always switch off the windshield wipers and the vehicle first if you need to open the hood.

Opens the hood

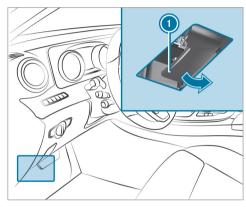

To release the hood, pull on handle 1.

324 Maintenance and care

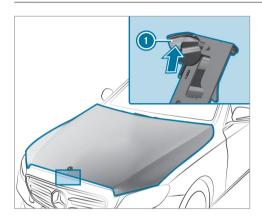

Push hood catch handle 1 upwards and lift the hood until it opens automatically.

Closing the hood

Lower the hood to a height of approximately 8 in (20 cm) and then allow it to fall, applying a little force as you let it go.

If the hood can still be lifted slightly, open the hood again and close it with slightly more force until it engages correctly.

Engine oil

Checking the engine oil level using the oil dipstick

WARNING Risk of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment can be very hot, e.g. the engine, the cooler and parts of the exhaust system.


Allow the engine to cool down and only touch component parts described in the following.

Requirements

 The engine has an oil dipstick. If not, the engine oil level can be checked only with the on-board computer (→ page 325).

Depending on the engine, the oil dipstick may be installed in the engine compartment in different locations.

The waiting time before checking the oil level when the engine is at normal operating temperature is five minutes

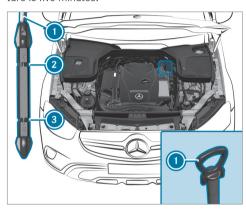

- Park the vehicle on a level surface.
- Pull oil dipstick ① out and wipe off.

- Slowly slide oil dipstick (1) into the guide tube to the stop, and pull it out again after approximately three seconds.
 - Oil level is correct: oil level is between and .
 - Oil level too low: oil level is at (3) or below.
 - Oil level too high: oil level is above 2.
- If the oil level is too low, add 1.1 US qt (1 liter) of engine oil.
- If the oil level is too high, drain off excess engine oil. Visit a qualified specialist workshop.

Checking the engine oil level using the on-board computer

Requirements:

- The engine has an oil level sensor. If not, the engine oil level can be checked only with the oil dipstick (→ page 324).
- The engine has been warmed up.
- The vehicle is parked on a level surface.
- The engine is running at idle speed.
- The hood is closed.

The engine oil level is determined during driving. Determining the engine oil level can take up to 30 minutes with a normal driving style and even longer with an active driving style.

On-board computer:

→ Service → Engine Oil Level

One of the following messages will appear on the instrument display:

- Measuring Engine Oil Level...: measurement of the oil level is not yet possible.
- Repeat the request after a maximum of 30 minutes' driving.
- Engine Oil Level OK and the bar display for indicating the oil level on the instrument display is green and is between "min" and "max": the oil level is correct.
- Engine Oil Level Add 1.0 I and the bar display for indicating the oil level on the instrument display is orange and is below "min":
- Add 1.1 US qt (1 I) of engine oil.

- Reduce Engine Oil Level and the bar display for indicating the oil level on the instrument display is orange and is above "max":
- Drain off any excess engine oil that has been added. To do so, consult a qualified specialist workshop.
- For Engine Oil Level Switch Ignition On
- Switch on the vehicle to check the engine oil level.
- Engine Oil Level System Inoperative: The oil level sensor is defective or not connected.
- Consult a qualified specialist workshop.
- Engine Oil Level System Currently Unavail.
- Close the hood.

Adding engine oil

WARNING Risk of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment can be very hot, e.g. the engine, the cooler and parts of the exhaust system.

326 Maintenance and care

- Allow the engine to cool down and only touch component parts described in the following.
- **WARNING** Risk of fire and injury from engine oil


If engine oil comes into contact with hot component parts in the engine compartment, it may ignite.

- Make sure that no engine oil is spilled next to the filler opening.
- Allow the engine to cool off and thoroughly clean the engine oil from component parts before starting the vehicle.
- I NOTE Engine damage caused by an incorrect oil filter, incorrect oil or additives
- Do not use engine oils or oil filters which do not correspond to the specifications explicitly prescribed for the service intervals.
- Follow the instructions on the service interval display for changing the engine

- oil and observe the prescribed change intervals.
- Do not use additives.
- I NOTE Damage caused by refilling too much engine oil

Too much engine oil can damage the engine or the catalytic converter.

- Have excess engine oil removed at a qualified specialist workshop.
- Depending on driving style, the vehicle consumes up to 0.9 US qt (0.8 liter) of oil per 600 miles (1,000 km). The oil consumption may be higher than this when the vehicle is new or if you frequently drive at high engine speeds.

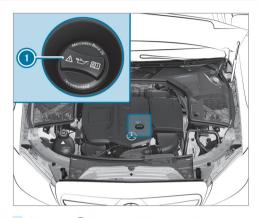

- Turn cap ① counter-clockwise and remove it.
- Add engine oil.
- ► Check the oil level again (\rightarrow page 324).

Checking the coolant level

WARNING Risk of burns from hot component parts in the engine compartment


Certain component parts in the engine compartment can be very hot, e.g. the engine, the cooler and parts of the exhaust system.

Allow the engine to cool down and only touch component parts described in the following.

WARNING Risk of scalding from hot coolant

If you open the cap, you could be scalded.

- Let the motor cool down before opening the cap.
- ▶ When opening the cap, wear protective gloves and safety glasses.
- Open the cap slowly to release pressure.

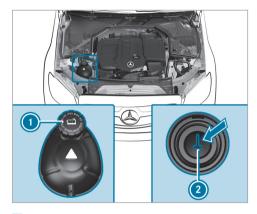

- Park the vehicle on a level surface.
- Check the coolant temperature display on the instrument display.

The coolant temperature must be in the bottom quarter of the temperature indicator.

Slowly turn cap (1) counter-clockwise to release overpressure.

Continue turning cap (1) counter-clockwise and remove it.

The coolant level is correct in the following cases:

- If the engine is cold, the coolant is up to marker bar 2.
- If the engine is warm, the coolant is up to 0.6 in (1.5 cm) over the marker bar 2.
- If necessary, refill with coolant that has been approved for Mercedes-Benz.
- (i) Further information on coolant (→ page 396)

Adding fluid to the windshield washer system

WARNING Risk of burns from hot component parts in the engine compartment

Certain component parts in the engine compartment can be very hot, e.g. the engine, the cooler and parts of the exhaust system.


Allow the engine to cool down and only touch component parts described in the following.

328 Maintenance and care

WARNING - Risk of fire and injury from windshield washer concentrate

Windshield washer concentrate is highly flammable. It could ignite if it comes into contact with hot engine component parts or the exhaust system.

Make sure that no windshield washer concentrate spills out next to the filler opening.

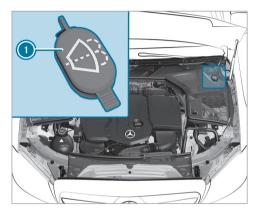

- Remove cap ① using tab.
- Add washer fluid.
- Further information on windshield washer fluid
 (→ page 396)

Keeping the air/water duct free

 Keep the area between the hood and the windshield free of deposits, e.g. ice, snow or leaves.

Cleaning and care

Information on washing the vehicle in a car wash

★ WARNING Risk of accident due to reduced braking effect after washing the vehicle

The braking effect is reduced after washing the vehicle.

After the vehicle has been washed, brake carefully while paying attention to the traffic conditions until the braking effect has been fully restored. NOTE Damage caused by automatic braking

If one of the following functions is activated, the vehicle brakes automatically in certain situations:

- · Active Brake Assist
- Active Distance Assist DISTRONIC
- HOLD function
- Active Parking Assist

To avoid damage to the vehicle, deactivate these systems in the following or similar situations:

- During towing.
- In a car wash.
- ! NOTE Damage due to unsuitable car wash
- Before driving into a car wash make sure that the car wash is suitable for the vehicle dimensions.

- Ensure there is sufficient ground clearance between the underbody and the guide rails of the car wash.
- Ensure that the clearance width of the car wash, in particular the width of the guide rails, is sufficient.

To avoid damage to your vehicle when using a car wash, ensure the following beforehand:

- Active Distance Assist DISTRONIC is deactivated.
- The HOLD function is switched off.
- The 360° Camera or the reversing camera is switched off.
- The side windows and sliding sunroof are completely closed.
- The blower for the ventilation and heating is switched off.
- The windshield wiper switch is in position **o**.
- The key is at a minimum distance of 10 ft (3 m) away from the vehicle. Otherwise the trunk lid could open unintentionally.
- For car washes with a conveyor system:

- Neutral N is engaged.
- If you would like to leave the vehicle while it is being washed, make sure the key is located in the vehicle. Park position P is otherwise automatically engaged.
- (i) If, after the car wash, you remove the wax from the windshield and wiper rubbers, this will prevent smearing and reduce wiper noise.

Information on using a power washer

WARNING Risk of an accident when using power washers with round-spray nozzles

The water jet can cause externally invisible damage.

Components damaged in this way may unexpectedly fail.

- Do not use a power washer with roundspray nozzles.
- Have damaged tires or chassis parts replaced immediately.

330 Maintenance and care

To avoid damage to your vehicle, observe the following when using a power washer:

- The key is at a minimum distance of 10 ft (3 m) away from the vehicle. Otherwise, the trunk lid could open unintentionally.
- Maintain a distance of at least 11.8 in (30 cm) to the vehicle.
- Vehicles with decorative foil: parts of your vehicle are covered with a decorative foil.
 Maintain a distance of at least 27.6 in (70 cm) between the foil-covered parts of the vehicle and the nozzle of the power washer. Move the power washer nozzle around while cleaning. The water temperature of the power washer must not exceed 140 °F (60 °C).
- Observe the information on the correct distance in the equipment manufacturer's operator manual.
- Do not direct the nozzle of the power washer directly at sensitive parts such as tires, gaps, electrical component parts, batteries, illuminants and louvers.

Washing the vehicle by hand

- I NOTE Engine damage due to water ingress
- Take care not to point the water jet directly towards the air inlet grille below the hood.

Observe the relevant legal requirements (e.g. in some countries, washing by hand is permitted only in specially designated wash bays).

- ▶ Use a mild cleaning agent (e.g. car shampoo).
- Wash the vehicle with lukewarm water using a soft car sponge. When doing so, do not expose the vehicle to direct sunlight.
- Carefully hose the vehicle off with water and dry using a chamois.
- (i) Observe the notes on the care of vehicle parts (→ page 332).

Notes on paintwork/matt finish paintwork care

To avoid damaging the paintwork and interfering with the driving assistance systems, please observe the following notes:

Paint

- Insect remains: soak with insect remover and rinse off the treated areas afterwards.
- Bird droppings: soak with water and rinse off afterwards.
- Tree resin, oils, fuels and greases: remove by rubbing gently with a cloth soaked in petroleum ether or lighter fluid.
- Coolant and brake fluid: remove with a damp cloth and clean water.
- Tar stains: use tar remover.
- · Wax: use silicone remover.
- Do not attach stickers, films or similar materials. Have film attached to the bumper only at a qualified specialist workshop.
- Remove dirt immediately, where possible.

Matt finish

- Use only care products approved for Mercedes-Benz.
- Do not attach stickers, films or similar materials. Have film attached to the bumper only at a qualified specialist workshop.

- Do not polish the vehicle and alloy wheels.
- Use only car washes that correspond to the latest engineering standards.
- Do not use any car wash program with a final hot wax treatment.
- Do not use paint cleaners, buffing or polishing products or gloss preservers, e.g. wax.

In the event of paintwork damage:

- Always have paintwork repairs carried out at a qualified specialist workshop.
- · Make sure the radar sensors function $(\rightarrow page 155)$.

Notes on cleaning decorative foils

Observe the notes on matte finish care in the "Notes on paintwork/matte finish paintwork care" chapter (\rightarrow page 330). They also apply to matte decorative foils

Observe the notes on cleaning decorative foils to avoid damage.

Cleaning

- For cleaning, use plenty of water and a mild cleaning agent without additives or abrasive substances (e.g. a car shampoo approved for Mercedes-Benz).
- Remove dirt as soon as possible. Avoid rubbing too hard in order to not irreparably damage the decorative foil.
- If there is dirt on the finish or if the decorative foil is dull: Use the Paint Cleaner recommended and approved for Mercedes-Benz.
- Insect remains: Soak with insect remover and rinse off the treated areas afterwards
- · Bird droppings: Soak with water and rinse off afterwards
- To prevent water stains, dry a foil-wrapped vehicle with a soft, absorbent cloth after every car wash.

Avoiding damage to the decorative foil

- The service life and color of decorative foils are impaired by:
 - Sunlight
 - Temperature (e.g. hot air blower)

- Weather conditions
- Stone chippings and dirt
- Chemical cleaning agents
- Oily products
- Do not use polish on matte decorative foil. Polishing will have the effect of shining the foil-wrapped surface.
- Do not treat matte or structured decorative foils with wax. Permanent stains may occur.

Scratches, corrosive deposits, areas affected by corrosion and damage caused by incorrect care cannot always be completely repaired. In this case, contact a qualified specialist workshop.

You can obtain more information on care and cleaning agents from the manufacturer.

In the case of foil-wrapped surfaces, optical differences may occur between the surfaces that were not protected by a decorative foil after removing a decorative foil.

(i) Have work or repairs to decorative foils carried out at a qualified specialist workshop (e.g. in an authorized Mercedes-Benz Service Center).

Notes on care of vehicle parts

A

WARNING Risk of entrapment if the windshield wipers are switched on while the windshield is being cleaned

If the windshield wipers are set in motion while you are cleaning the windshield or wiper blades, you can be trapped by the wiper arm.

Always switch off the windshield wipers and the vehicle before cleaning the windshield or wiper blades.

WARNING Risk of burns from the tailpipe and tailpipe trims

The exhaust tailpipe and tailpipe trims can become very hot. If you come into contact with these parts of the vehicle, you could burn yourself.

Always be particularly careful around the tailpipe and the tailpipe trims and supervise children especially closely in this area. Allow vehicle parts to cool down before touching them.

To avoid damage to the vehicle, observe the notes on cleaning and care of the following vehicle parts:

Wheels and rims

- Use water and acid-free alloy wheel cleaners.
- Do not use acidic alloy wheel cleaners to remove brake dust. This could damage wheel bolts and brake components.
- To avoid corrosion of the brake disks and brakepads, drive the vehicle for a few minutes after cleaning before parking it. The brake disks and brakepads warm up and dry out.

Windows

- Clean the windows inside and outside with a damp cloth and with a cleaning agent recommended for Mercedes-Benz.
- Do not use dry cloths or abrasive or solventbased cleaning agents to clean the inside of windows.

- (i) After changing the wiper blades or treating the vehicle with wax, clean the windshield thoroughly with cleaning agents recommended for Mercedes-Benz. Failure to observe the application instructions may result in damage, smear marks or glare spots.
- (i) Remove external fogging or dirt on the windshield in front of the multifunction camera. Otherwise, driving systems and driving safety systems may be impaired or not available (→ page 155).

Wiper blades

- Move the wiper arms into the replacement position (→ page 118).
- With the wiper arms folded out, clean the wiper blades with a damp cloth.
- (i) Make sure that the wiper blades are coated. The coating can leave residues on a cloth. Do not rub the wiper blades excessively or clean them too often.

Exterior lighting

• Clean the lenses with a wet sponge and mild cleaning agent (e.g. car shampoo).

Sensors

- Clean the sensors in the front and rear passenger compartment bumpers with a soft cloth and car shampoo (→ page 155).
- When using a power washer, maintain a minimum distance of 11.8 in (30 cm).

Rear view camera and 360° Camera

- Open the camera cover with the multimedia system (→ page 194).
- Use clean water and a soft cloth to clean the camera lens.
- Do not use a power washer.

Tailpipes

- Clean with a cleaning agent recommended for Mercedes-Benz, especially in the winter and after washing the vehicle.
- Do not use acidic cleaning agents.

Notes on care of the interior



WARNING Risk of injury from plastic parts breaking off after the use of solvent-based care products

Care and cleaning products containing solvents can cause surfaces in the cockpit to become porous. When the airbags are deployed, plastic parts may break away.

Do not use any care or cleaning products containing solvents to clean the cockpit.



WARNING Risk of injury or fatal injuries from bleached seat belts

Bleaching or dyeing seat belts can severely weaken them.

This can, for example, cause seat belts to tear or fail in an accident.

Never bleach or dye seat belts.

To avoid damage to the vehicle, observe the following notes on cleaning and care:

Seat belts

- · Clean with lukewarm and soapy water.
- Do not use chemical cleaning agents.
- Do not dry by heating them to over 176 °F (80 °C) or exposing them to direct sunlight.

Display

- Switch off the display and let it cool down.
- Clean the surface carefully with a microfiber cloth and a suitable display care product (TFT-LCD).
- Do not use any other agents.

Head-up display

- · Clean with a soft, non-static, lint-free cloth.
- · Do not use cleaning agents.

Plastic trim

- Clean with a damp microfiber cloth.
- For heavy soiling: Use a cleaning agent recommended for Mercedes-Benz.
- Do not attach stickers, films or similar materials.

334 Maintenance and care

 Do not allow cosmetics, insect repellent or sun cream to come in contact with the plastic trim.

Real wood and trim elements

- Clean with a microfiber cloth.
- Black piano-lacquer look: Clean with a damp cloth and soapy water.
- For heavy soiling: Use a cleaning agent recommended for Mercedes-Benz.
- Do not use solvent-based cleaning agents, polishes or waxes.

Headliner

• Clean with a brush or dry shampoo.

Carpet

 Use a carpet and textile cleaning agent recommended for Mercedes-Benz.

Steering wheel made of genuine leather or DINA-MICA

- NOTE Damage caused by wrong cleaners
- Do not use solvent-based cleaning agents such as tar remover or wheel

cleaner; neither should you use polishes or waxes. Otherwise you may damage the finish.

- Clean with a damp cloth and 1% soapy water solution and then wipe with a dry cloth.
- For heavy soiling: Use a cleaning agent recommended for Mercedes-Benz.
- Leather care: Use a leather care agent that has been recommended for Mercedes-Benz.
- Do not allow the leather to become too damp.
- Do not use a microfiber cloth.
- Leather is a natural product. It exhibits natural surface properties such as differences in structure, marks caused by growth and injury or subtle color differences. These surface properties are characteristics of leather and not material defects. What's more, leather is subject to a natural aging process during which the surface properties change.

Genuine leather seat covers

 Vacuum away dirt (e.g. crumbs or dust) and then clean the seat covers with a damp cotton

- cloth and wipe down with a dry cloth. Regularly clean the seat covers.
- For heavy soiling: use a leather care agent recommended for Mercedes-Benz aftercare.
- Leather care: Use a leather care agent that has been recommended for Mercedes-Benz.
- Do not use a microfiber cloth.
- Do not allow the leather to become too damp.
- Do not use oil-based cleaning and care products.
- (i) Leather is a natural product. It exhibits natural surface properties such as differences in structure, marks caused by growth and injury or subtle color differences. These surface properties are characteristics of leather and not material defects. What's more, leather is subject to a natural aging process during which the surface properties change. Regular cleaning and care of the leather reduces soiling, wear marks and aging damage and thus significantly extends its life span. Clothing that can leave stains (e.g. jeans) can discolor the leather.

- Clean with a damp cloth.
- Do not use a microfiber cloth.

Imitation leather seat covers

- Vacuum up dirt such as crumbs or dust and then use a damp cotton cloth and a 1% soapsuds solution to clean the entire seat cover.
 Do not spot clean.
- Use cleaning and care products recommended for Mercedes-Benz.
- · Do not use a microfiber cloth.
- Do not use oil-based cleaning and care products.

Fabric seat covers


- Vacuum up dirt such as crumbs or dust and then use a damp microfiber cloth and a 1% soapsuds solution to clean the entire seat cover. Do not spot clean.
- Use cleaning and care products recommended for Mercedes-Benz.
- Do not use oil-based cleaning and care products.

Emergency

Removing the safety vest

The safety vests are located in the stowage compartments in the driver and front passenger door.

- ► To remove: pull out safety vest bag by loop.
- Open the safety vest bag and pull out the safety vest.

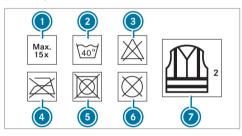

- Maximum number of washes
- Maximum wash temperature
- 3 Do not bleach
- O not iron
- On not tumble dry

- O not dry clean
- Class 2 safety vest


The requirements defined by the legal standard are only fulfilled if the safety vest is the correct size and is fully closed.

The safety vest must be replaced in the following situations:

- The reflective strips are damaged or dirty
- The maximum permissible number of washes is exceeded
- The fluorescence has faded


Warning triangle

Removing the warning triangle

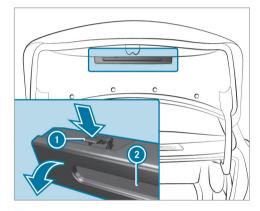


- Push both sides of warning triangle holder
 in the direction of the arrow and open it.
- Remove warning triangle ②.

Setting up the warning triangle

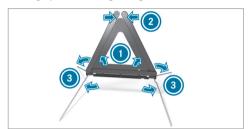

- Fold side reflectors (1) upwards to form a triangle and attach at the top using upper pressstud 2.
- Fold legs (3) down and out to the side.

First-aid kit (soft sided) overview

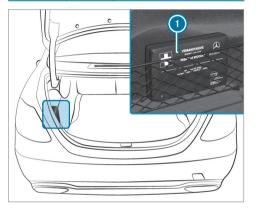

First-aid kit (soft sided) 1 is on the left or right in the trunk, depending on the vehicle version.

Flat tire

Notes on flat tires

WARNING Risk of accident due to a flat tire

A flat tire severely affects the driving characteristics as well as the steering and braking of the vehicle.

Tires without run-flat characteristics:

- Do not drive with a flat tire.
- Change the flat tire immediately with an emergency spare wheel or spare wheel. Alternatively, consult a qualified specialist workshop.

Tires with run-flat characteristics:

Observe the information and warning notes on MOExtended tires (run-flat tires).

In the event of a flat tire, the following options are available depending on your vehicle's equipment:

- Vehicles with MOExtended tires: it is possible to continue the journey for a short period of time. Make sure you observe the notes on MOExtended tires (run-flat tire) (\rightarrow page 338).
- Vehicles with a TIREFIT kit: you can repair the tire so that it is possible to continue the journey for a short period of time. To do this, use the TIREFIT kit (\rightarrow page 339).
- Vehicles with Mercedes me connect: you can make a call for breakdown assistance via the overhead control panel in the case of a breakdown (\rightarrow page 288).
- All vehicles: change the wheel (→ page 380).
- (i) The emergency spare wheel is available only in certain countries.

Notes on MOExtended tires (run-flat tires)

WARNING Risk of accident when driving in limp-home mode

When driving in emergency mode the handling characteristics are impaired.

- ▶ Do not exceed the specified maximum speed of the MOExtended tires.
- Avoid any abrupt steering and driving maneuvers as well as driving over obstacles (curbs, pot holes, off-road). This applies, in particular, to a loaded vehicle.
- Stop driving in the emergency mode if you notice:
- Banging noise
- Vehicle vibration
- Smoke which smells like rubber
- Continuous ESP® intervention
- Cracks in the tire side walls
- After driving in emergency mode, have the rims checked by a qualified specialist

workshop with regard to their further use.

The defective tire must be replaced in every case.

With MOExtended tires (run-flat tires), you can continue to drive your vehicle even if there is a total loss of pressure in one or more tires. However, the affected tire must not show signs of clearly visible damage.

You can recognize MOExtended tires by the MOExtended marking which appears on the side wall of the tire.

Vehicles with a tire pressure loss warning system: MOExtended tires may only be used in conjunction with an activated tire pressure loss warning

Vehicles with a tire pressure monitoring system: MOExtended tires may only be used in conjunction with an activated tire pressure monitoring system.

If a pressure loss warning message appears in the driver's display, proceed as follows:

· Check the tire for damage.

system.

• If driving on, observe the following notes.

Driving distance possible in emergency mode after the pressure loss warning:


Load condition	Driving distance possi- ble in emergency mode
Partially laden	50 miles (80 km)
Fully laden	19 miles (30 km)

The driving distance possible in emergency mode may vary depending on the driving style. Observe the maximum permissible speed of 50 mph (80 km/h).


If a tire has gone flat and cannot be replaced with an MOExtended tire, you can use a standard tire as a temporary measure.

TIREFIT kit storage location

The TIREFIT kit is located under the trunk floor.

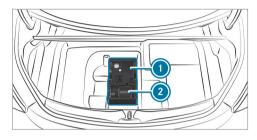

- Tire inflation compressor
- Tire sealant bottle

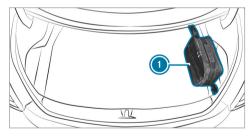

Bag

Depending on the model, the TIREFIT kit may also be located in other places under the cargo floor or in bag 1 in the trunk.

Using the TIREFIT kit

Requirements

- Tire sealant bottle
- TIREFIT sticker
- Tire inflation compressor
- Gloves (depending on the vehicle equipment)

TIREFIT kit storage location: $(\rightarrow page 339)$

You can use TIREFIT tire sealant to seal perforation damage of up to 0.16 in (4 mm), particularly those in the tire contact surface. You can use TIREFIT in outside temperatures down to -4 °F (-20 °C).

WARNING Risk of accident when using tire sealant

The tire sealant may be unable to seal the tire properly, especially in the following cases:

- There are large cuts or punctures in the tire (larger than damage previously mentioned)
- The wheel rims have been damaged
- After journeys with very low tire pressure or with flat tires
- Do not continue driving.
- Consult a qualified specialist workshop.

WARNING Risk of injury and poisoning from tire sealant

The tire sealant is harmful and causes irritation. Do not allow it to come into contact with the skin, eyes or clothing, and do not swallow it. Do not inhale tire sealant fumes. Keep the tire sealant away from children.

If you come into contact with the tire sealant, observe the following:

Rinse off the tire sealant from your skin immediately using water.

- If tire sealant gets into your eyes, thoroughly rinse out the eyes using clean water.
- If tire sealant has been swallowed, immediately rinse out the mouth thoroughly and drink plenty of water. Do not induce vomiting and seek medical attention immediately.
- Change out of any clothes contaminated with tire sealant immediately.
- If allergic reactions occur, seek medical attention immediately.
- I NOTE Overheating due to the tire inflation compressor running too long
- Do not run the tire inflation compressor for longer than ten minutes without interruption.


Comply with the manufacturer's safety notes on the sticker on the tire inflation compressor.

Have the tire sealant bottle replaced in a qualified specialist workshop every five years.

Do not remove any foreign objects that have penetrated the tire.



- Affix part ① of the TIREFIT sticker to the instrument cluster within the driver's field of vision.
- Affix part ② of the TIREFIT sticker near the valve on the wheel with the defective tire.

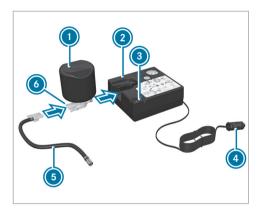

- Pull plug 4 with the cable and hose 5 out of the tire inflation compressor housing.
- Push the plug of hose (5) into flange (6) of tire sealant bottle 1 until the plug engages.
- Place tire sealant bottle

 head downwards into recess **2** of the tire inflation compressor.



- Remove the cap from valve 7 on the faulty tire
- Screw filling hose (3) onto valve (7).
- Insert plug 4 into a 12-V-socket in your vehicle.
- Switch on the vehicle.
- Press on and off switch (3) on the tire inflation compressor.

The tire inflation compressor is switched on. The tire is inflated. First, tire sealant is pumped into the tire. The pressure may briefly rise to approximately 500 kPa (5 bar/73 psi).

Do not switch off the tire inflation compressor during this phase!

Let the tire inflation compressor run for a maximum of ten minutes

The tire should then have attained a tire pressure of at least 200 kPa (2.0 bar/29 psi).

If tire sealant leaks out, make sure you clean the affected area as quickly as possible. It is preferable to use clean water.

If you get tire sealant on your clothing, have it cleaned as soon as possible with perchloroethylene.

If a tire pressure of 200 kPa (2.0 bar/29 psi) has not been attained after ten minutes:

- Switch off the tire inflation compressor.
- Unscrew the filling hose from the valve of the defective tire.

Please note that tire sealant may leak out when unscrewing the filling hose.

Very slowly drive forwards or reverse approximately 33 ft (10 m).

Pump up the tire again. After a maximum of ten minutes the tire pressure must be at least 200 kPa (2.0 bar/29 psi).

WARNING Risk of accident due to the specified tire pressure not being achieved

If the specified tire pressure is not achieved after the specified time, the tire is too badly damaged. The tire sealant cannot repair the tire in this instance.

The braking characteristics as well as the driving characteristics may be greatly impaired.

- Do not continue driving.
- Consult a qualified specialist workshop.

If a tire pressure of 200 kPa (2.0 bar/29 psi) has been attained after ten minutes:

WARNING Risk of accident from driving with sealed tires

A tire temporarily sealed with tire sealant impairs the handling characteristics and is not suitable for higher speeds.

- Adapt your driving style accordingly and drive carefully.
- Do not exceed the maximum speed limit with a tire that has been repaired using tire sealant.
- Observe the maximum permissible speed for a tire sealed with tire sealant 50 mph (80 km/h).
- Affix the upper section of the TIREFIT sticker to the instrument cluster in a location where it will be easily seen by the driver.
- NOTE Staining caused by leaking tire sealant

After use, excess tire sealant may leak out from the filling hose.

 Therefore, place the filling hose in the plastic bag that contained the TIREFIT kit. ENVIRONMENTAL NOTE Environmental pollution caused by environmentally irresponsible disposal

Tire sealant contains pollutants.

- Have the tire sealant bottle disposed of professionally, e.g. at an authorized Mercedes-Benz Center.
- Switch off the tire inflation compressor.
- Unscrew the filling hose from the valve of the defective tire.
- Stow the tire sealant bottle and the tire inflation compressor.
- Pull away immediately.
- Stop driving after approximately ten minutes and check the tire pressure using the tire inflation compressor.

The tire pressure must now be at least 130 kPa (1.3 bar/19 psi).

WARNING Risk of accident due to the specified tire pressure not being attained


If the specified tire pressure is not reached, the tire is too badly damaged. The tire sealant cannot repair the tire in this instance.

The braking and driving characteristics may be greatly impaired.


- Do not continue driving.
- Consult a qualified specialist workshop.

In cases such as the one mentioned above, contact an authorized Mercedes-Benz Center, Or call 1-800-FOR-MERCedes (in the USA) or 1-800-387-0100 (in Canada).

- Correct the tire pressure if it is still at least 130 kPa (1.3 bar/19 psi). See the Tire and Loading Information placard on the B-pillar on the driver's side or the tire pressure table in the fuel filler flap for values.
- To increase the tire pressure: switch on the tire inflation compressor.

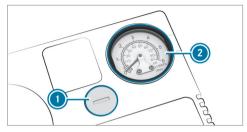

- To reduce the tire pressure: press pressure release button 1 next to manometer 2.
- When the tire pressure is correct, unscrew the filling hose from the valve of the sealed tire.
- Screw the valve cap onto the valve of the sealed tire.

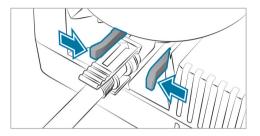

- Pull the tire sealant bottle out of the tire inflation compressor. Press the locking tabs on the yellow cap together to do this.
 - The filling hose stays on the tire sealant bottle.
- Drive to the nearest qualified specialist workshop and have the tire, tire sealant bottle and filling hose replaced there.

Battery (vehicle)

Notes on the 12 V battery

WARNING Risk of an accident due to work carried out incorrectly on the battery

Work carried out incorrectly on the battery can, for example, lead to a short circuit. This can restrict functions relevant for safety systems and impair the operating safety of your vehicle.

You could lose control of the vehicle in the following situations in particular:

- · When braking
- In the event of abrupt steering maneuvers and/or when the vehicle's speed is not adapted to the road conditions
- In the event of a short circuit or a similar incident, contact a qualified specialist workshop immediately.
- ▶ Do not drive on.
- Always have work on the battery carried out at a qualified specialist workshop.

- Further information on ABS (→ page 157)
- Further information on ESP®

For safety reasons, Mercedes-Benz recommends that you only use batteries which have been approved for your vehicle by Mercedes-Benz.

All vehicles except vehicles with a lithium-ion battery

A

WARNING Risk of explosion due to electrostatic charge

Electrostatic charge can ignite the highly explosive gas mixture in the battery.

To discharge any electrostatic charge that may have built up, touch the metal vehicle body before handling the battery.

The highly flammable gas mixture is created while the battery is charging and during starting assistance.

A

WARNING Danger of chemical burns from the battery acid

Battery acid is caustic.

- Avoid contact with the skin, eyes or clothing.
- Do not lean over the battery.
- Do not inhale battery gases.
- Keep children away from the battery.
- Immediately rinse battery acid off thoroughly with plenty of clean water and seek medical attention immediately.

All vehicles

202

ENVIRONMENTAL NOTE Environmental damage due to improper disposal of batteries



Batteries contain pollutants. It is illegal to dispose of them with the household rubbish.

Dispose of batteries in an environmentally responsible manner. Take discharged batteries to a qualified specialist workshop or to a collection point for used batteries.

If you have to disconnect the 12 V battery, contact a qualified specialist workshop.

Comply with safety notes and take protective measures when handling batteries.



Risk of explosion.



Fire, naked flames and smoking are prohibited when handling the battery. Avoid creating sparks.



Electrolyte or battery acid is corrosive. Avoid contact with the skin, eves or clothing. Wear suitable protective clothing, in particular gloves, an apron

and a face mask. Immediately rinse electrolyte or acid splashes off with clean water. Consult a doctor if necessarv.



Wear safety glasses.



Keep children away.



Observe this Operator's Manual.

Observe the following if you do not intend to use the vehicle over an extended period of time:

- · Activate standby mode.
- Alternatively: connect the battery to a battery charger approved by Mercedes-Benz or consult a qualified specialist workshop to disconnect the battery.

Notes on starting assistance and charging the 12 V battery

All vehicles

When charging the battery and during starting assistance, always use the jump-start connection point in the engine compartment.



NOTE Damage to the battery due to overvoltage

When charging using a battery charger without a maximum charging voltage, the battery or the on-board electronics may be damaged.



Only use battery chargers with a maximum charging voltage of 14.8 V.



WARNING Risk of explosion due to the ignition of hydrogen gas

If there is a short circuit or sparks are created. there is a danger of hydrogen gas igniting when you charge the battery.

- Make sure that the POSITIVE terminal of a connected battery does not come into contact with vehicle parts.
- Never place metal objects or tools on a battery.
- When connecting and disconnecting the battery, always observe the sequence of battery terminals described.
- During starting assistance, always take care to connect only battery terminals of identical polarity.
- During starting assistance, observe the sequence described for connecting and disconnecting the jumper cables.
- Do not connect or disconnect the battery terminals with the engine running.
- **WARNING** Risk of explosion due to a mixture of explosive gases

A mixture of explosive gases can escape from the battery during charging and jump starting.

- Fire, open flames, smoking and creating sparks must be avoided.
- Make sure that there is sufficient ventilation.
- Do not stand over the battery.

WARNING Risk of explosion from a frozen battery

A discharged battery may freeze at temperatures slightly above or below freezing point.

During starting assistance or battery charging, battery gas can be released.

Always allow a battery to thaw before charging it or performing starting assistance.

If the indicator/warning lamps in the instrument cluster do not light up at low temperatures, it is very likely that the discharged battery has frozen. In this case you may neither jump-start the vehicle nor charge the battery.

The service life of a battery that has been thawed may be dramatically shortened. The starting char-

acteristics may be impaired, especially at low temperatures.

It is recommended that you have a thawed battery checked at a qualified specialist workshop.

All vehicles

I NOTE Damage caused by numerous or extended attempts to start the engine

Numerous or extended attempts to start the engine may damage the catalytic converter due to non-combusted fuel.

Avoid numerous and extended attempts to start the engine.

Observe the following points during starting assistance and when charging the battery:

- Only use undamaged jumper cable/charging cables with a sufficient cross-section and insulated terminal clamps.
- Non-insulated parts of the terminal clamps must not come into contact with other metal parts while the jumper cable/charging cable

- is connected to the battery/jump-start connection point.
- The jumper cable/charging cable must not come into contact with any parts which may move when the engine is running.
- · Always make sure that neither you nor the battery is electrostatically charged.
- Keep away from fire and naked flames.
- · Do not lean over the battery.

Observe the additional following points when charging the battery:

- Only use battery chargers tested and approved for Mercedes-Benz.
- Read the battery charger's operating instructions before charging the battery.

Observe the additional following points during starting assistance:

- Starting assistance may only be provided using vehicles, batteries or other jump start devices with a nominal voltage of 12 V.
- · The vehicles must not touch.

• Vehicles with a gasoline engine: jump-start the vehicle only when the engine and exhaust system are cold

Starting assistance and charging the 12 V battery


Preparing starting assistance/charging

- Secure the vehicle by applying the electric parking brake.
- Automatic transmission: shift the transmission to position P.
- Manual transmission: shift the transmission to neutral.
- Switch off the vehicle and all electrical consumers.
- Open the hood.



Example illustrations

Open cover ① of the jump-starting connection points.

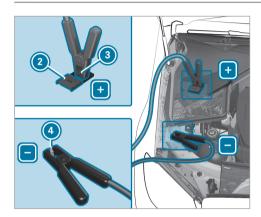

Open cover ② of positive contact ③ of the jump-starting connection points.

Starting assistance

Connect positive contact (3) on your vehicle to the positive terminal of the donor battery using the jumper cable. Always begin with positive clamp (3) on your own vehicle first.

- Start the engine of the donor vehicle and run it at idling speed.
- Connect the negative terminal of the donor battery to ground point of your vehicle using the jumper cable. Begin with the donor battery first.
- Start the engine of your own vehicle.
- Let the engines run for several minutes.
- Before disconnecting the jumper cables, switch on an electrical consumer in your own vehicle, e.g. the rear window heater defroster or the lighting.

When the starting assistance procedure is complete:

- First, remove the jumper cables from ground point and the negative terminal of the donor battery, then from positive contact and the positive terminal of the donor battery. Begin each time with the contacts on your own vehicle first.
- After removing the jumper cables, close cover of positive contact (3).

Close cover ①.

Further information can be obtained at a qualified specialist workshop.

Charging

- Connect positive contact (a) of the vehicle to the positive terminal of the charger using the charging cable. Always begin with positive contact (a) of the vehicle.
- Connect the negative terminal of the charger and ground point on the vehicle with the charging cable. Start with the charger.
- Start the charging process.

When the charging process is complete:

- First, remove the charging cable from ground point (a) and the negative terminal of the charger, then from positive contact (3) and the positive terminal of the charger. Begin each time with the contacts of the vehicle.
- After removing the charging cable, close cover
 of positive contact
 .
- Close cover ①.

Further information can be obtained at a qualified specialist workshop.

Replacing the 12 V battery

Observe the notes on the 12 V battery $(\rightarrow page 344)$.

Mercedes-Benz recommends that you have the 12 V battery replaced at a qualified specialist workshop, e.g. at an authorized Mercedes-Benz Center.

Observe the following notes if you want to replace the battery yourself:

• Always replace a faulty battery with a battery which meets the specific vehicle requirements.

The vehicle is equipped with an AGM technology battery (Absorbent Glass Mat) or a lithium-ion battery. Full vehicle functionality is only guaranteed with an AGM battery or lithium-ion battery. For safety reasons, Mercedes-Benz recommends that you only use batteries which have been tested and approved for your vehicle by Mercedes-Benz.

- Carry over detachable parts, such as vent hoses, elbow installing or terminal covers from the battery being replaced.
- Make sure that the vent hose is always connected to the original opening on the side of the battery.

Install any existing or supplied cell caps. Otherwise, gases or battery acid could escape.

 Make sure that detachable parts are reconnected in the same way.

Tow starting or towing away Permitted towing methods

NOTE Damage from automatic braking

If one of the following functions is activated, the vehicle brakes automatically in certain situations:

- Active Brake Assist
- Active Distance Assist DISTRONIC

- HOLD function
- Active Parking Assist

To avoid damage to the vehicle, deactivate these systems in the following or similar situations:

- During towing
- In a car wash

Mercedes-Benz recommends transporting your vehicle in the case of a breakdown, rather than towing it away.

For towing, use a tow rope or tow bar with both axles on the ground. Do not use tow bar systems.

- NOTE Damage to the vehicle due to towing away incorrectly
- Observe the instructions and notes on towing away.

Vehicles with automatic transmission

Permitted towing methods	
Both axles on the ground	Yes, maximum 31 miles (50 km) at 31 mph (50 km/h)
Front axle raised	No
Rear axle raised	Yes, if the steering wheel is fixed in the center position with a steering wheel lock

4MATIC vehicles

Permitted towing methods	
Both axles on the ground	Yes, maximum 31 miles (50 km) at 31 mph (50 km/h)
Front axle raised	No
Rear axle raised	No

Towing with a raised axle: towing should be performed by a towing company.

Towing the vehicle with both axles on the ground

- Observe the notes on the permitted towing methods.
- Make sure that the battery is connected and charged.

Observe the following points when the battery is discharged:

- · The vehicle cannot be started.
- the electric parking brake cannot be released or applied
- Vehicles with automatic transmission: The transmission cannot be shifted to position N or P.
- Vehicles with automatic transmission: If the transmission cannot be shifted to position N or if the display does not show anything, transport the vehicle (→ page 351). A towing vehicle with lifting equipment is required for vehicle transportation.

NOTE Damage due to towing away at excessively high speeds or over long distances

The drivetrain could be damaged when towing at excessively high speeds or over long distances.

- A towing speed of 30 mph (50 km/h) must not be exceeded.
- A towing distance of 30 miles (50 km) must not be exceeded.

WARNING Risk of accident when towing a vehicle which is too heavy

If the vehicle to be tow-started or towed away is heavier than the permissible gross mass of your vehicle, the following situations can occur:

- The towing eye may become detached.
- The vehicle/trailer combination may swerve or rollover.
- Before tow-starting or towing away, check if the vehicle to be tow-started or

towed away exceeds the permissible gross mass.

If a vehicle must be tow-started or towed away, its permissible gross mass must not exceed the permissible gross mass of the towing vehicle.

- Information on the permissible gross mass of the vehicle can be found on the vehicle identification plate (\rightarrow page 390).
- Vehicles with automatic transmission: Do not open the driver's door or front passenger door: the transmission otherwise automatically shifts to position **P**.
- Install the towing eye (\rightarrow) page 353).
- Fasten the towing device.
- NOTE Damage due to incorrect connection of the tow bar
- Only connect the tow rope or tow bar to the towing eyes.
- Deactivate the automatic locking mechanism $(\rightarrow page 69).$

- Do not activate the HOLD function.
- Deactivate the tow-away alarm (\rightarrow page 84).
- Deactivate Active Brake Assist (\rightarrow page 179).
- Vehicles with automatic transmission: Shift to position N.
- ► Release the electric parking brake.

WARNING Risk of accident due to limited safety-related functions during the towing process

Safety-related functions are limited or no longer available in the following situations:

- The vehicle is switched off.
- The brake system or power steering system is malfunctioning.
- · The energy supply or the on-board electrical system is malfunctioning.

When your vehicle is towed away, significantly more effort may be required to steer and brake than is normally required.

Use a tow bar.

- Make sure that the steering wheel can move freely before towing the vehicle awav.
- **NOTE** Damage due to excessive tractive power

If you pull away sharply, the tractive power may be too high and the vehicles could be damaged.

Pull away slowly and smoothly.

Loading the vehicle for transport

- Observe the notes on towing away $(\rightarrow page 350)$.
- Fasten the towing device to the towing eye in order to load the vehicle
- Vehicles with automatic transmission: shift the automatic transmission to position \mathbb{N} .

- Vehicles with automatic transmission: the automatic transmission may be locked in position P in the event of damage to the electrical system. To shift to N, supply the onboard electrical system with power (→ page 347).
- Load the vehicle onto the transporter.
- **Vehicles with automatic transmission:** shift the automatic transmission to position **P**.
- Use the electric parking brake to secure the vehicle against rolling away.
- Only secure the vehicle by the wheels.


Vehicles with ADS PLUS (Adaptive Damping System PLUS)

▲ WARNING Risk of an accident when transporting vehicles with Adaptive Damping System PLUS

When transporting vehicles with Adaptive Damping System PLUS, the vehicle/trailer combination may begin to rock and start to skid.


- Load the vehicle correctly onto the transporter.
- Secure the vehicle on all four wheels with suitable tensioning straps.
- Do not exceed the maximum permissible speed of 35 mph (60 km/h) when transporting.
- NOTE Damage to the vehicle from securing it incorrectly
- After loading, the vehicle must be secured on all four wheels. Otherwise, the vehicle could be damaged.
- A minimum distance of 8 in (20 cm) upwards and 4 in (10 cm) downwards must be kept to the transport platform.
- Secure the vehicle at all four wheels after loading.

4MATIC vehicles/vehicles with automatic transmission

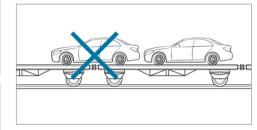


- Make sure that the front and rear axles come to rest on the same transportation vehicle.
- NOTE Damage to the drive train due to incorrect positioning of the vehicle
 - Do not position the vehicle above the connection point of the transport vehicle.

Towing eye storage location

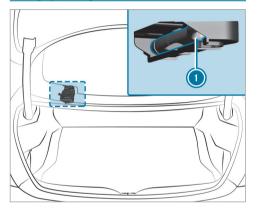

Towing eye 1 is in a bracket under the rear shelf.

Installing and removing the towing eye

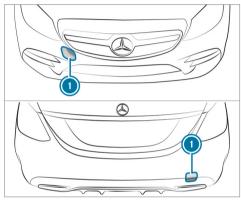

- Press the mark on cover (1) inwards and remove.
- Screw in the towing eye clockwise as far as it will go and tighten.
- Make sure that cover (1) engages in the bumper when you remove the towing eye.

NOTE Damage to the vehicle due to incorrect use of the towing eye or trailer hitch

When a towing eye or trailer hitch is used to recover a vehicle, the vehicle may be damaged in the process.

- Only use the towing eye or trailer hitch to tow away or tow start the vehicle.
- Do not use the towing eye or trailer hitch to tow the vehicle during recovery.

Tow-starting the vehicle

Vehicles with automatic transmission

NOTE Damage to the automatic transmission due to tow starting

The automatic transmission may be damaged in the process of tow starting vehicles with automatic transmission.

Vehicles with automatic transmission. must not be tow started.

Vehicles with automatic transmissions must not be tow-started.

Electrical fuses

Notes on electrical fuses

WARNING Risk of accident and injury due to overloaded lines

If you manipulate or bridge a faulty fuse or if you replace it with a fuse with a higher amperage, the electric line could be overloaded.

This could result in a fire.

- Always replace faulty fuses with specified new fuses containing the correct amperage.
- I NOTE Damage due to incorrect fuses

Using incorrect fuses can result in damage to electrical components or systems or their functions being considerably restricted.

Use only fuses approved for Mercedes-Benz with the respective specified fuse rating.

Blown fuses must be replaced with fuses of the same rating, which you can recognize by the color and the label. The fuse ratings and further information to be observed can be found in the fuse assignment diagram.

Fuse assignment diagram: on the fuse box in the trunk (\rightarrow page 356).

I NOTE Damage or malfunctions caused by moisture

Moisture may cause damage to the electrical system or cause it to malfunction.

- When the fuse box is open, make sure that no moisture can enter the fuse box.
- When closing the fuse box, make sure that the seal of the lid is positioned correctly on the fuse box.

If the newly inserted fuse also blows, have the cause traced and rectified at a qualified specialist workshop.

Ensure the following before replacing a fuse:

- · The vehicle is secured against rolling away.
- All electrical consumers are switched off.
- · The vehicle is switched off.

The electrical fuses are located in various fuse boxes:

- Fuse box in the engine compartment on the driver's side (→ page 355)
- Fuse box on the driver's side of the cockpit (→ page 356)
- Fuse box in the front passenger footwell
 (→ page 356)
- Fuse box in the trunk on the right-hand side of the vehicle, when viewed in the direction of travel (→ page 356)

Opening and closing the fuse box in the engine compartment

Requirements

• A dry cloth and a screwdriver are to hand.


Observe the notes on electrical fuses $(\rightarrow page 354)$.

Opening


WARNING Risk of injury from using the windshield wipers when the hood is open

If the windshield wipers start moving when the hood is open, you could be trapped by the wiper linkage.

Always switch off the windshield wipers and the vehicle first if you need to open the hood.

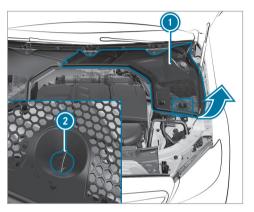

- ► Turn retaining clip ② on cover ① a quarterturn counter-clockwise.
- Fold cover ① up in the direction of the arrow.

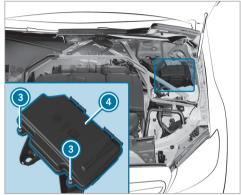

- Remove any moisture present from the fuse box using a dry cloth.
- ► Unscrew screws ③ and remove fuse box lid 4 from the top.

Closing

Check whether the seal is positioned correctly in lid 4.

- Insert lid (a) into the bracket at the rear of the fuse box.
- Fold down lid (a) of the fuse box and tighten screws (3).
- Fold down cover ①.
- Turn retaining clip ② on cover ① a quarterturn clockwise.
- Close the hood.

Opening and closing the fuse box in the cockpit


 Observe the notes on electrical fuses (→ page 354).

The fuse box is on the driver's side on the side of the cockpit under a cover.

To open and close it, consult an authorized Mercedes-Benz Center.

Opening and closing the fuse box in the front passenger footwell

Observe the notes on electrical fuses (\rightarrow page 354).

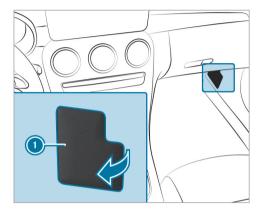


- ➤ To open: open cover **(1)** in the direction of the arrow and remove it.
- ► To close: reinsert cover ①.

Opening and closing the fuse box in the trunk

Observe the notes on electrical fuses $(\rightarrow page 354)$.

Open the trunk floor .

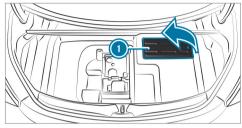

Fold cover 1 up in the direction of the arrow.

The fuse assignment diagram is in a recess on the side of the fuse box.

Make sure there are no vibrations, noises or unusual handling characteristics when the vehicle is in motion. This may indicate that the wheels or tires are damaged. Hidden tire damage could also be causing the unusual handling characteristics.

If you suspect that a tire is defective, reduce your speed immediately and have the tires and wheels checked at a qualified specialist workshop.

Notes on regularly inspecting wheels and tires

WARNING Risk of injury through damaged tires

Damaged tires can cause tire pressure loss.

 Check the tires regularly for signs of damage and replace any damaged tires immediately.

WARNING Risk of hydroplaning due to insufficient tire tread

Insufficient tire tread will result in reduced tire grip.

In heavy rain or slush the risk of hydroplaning is increased, in particular where speed is not adapted to suit the conditions.

Thus, you should regularly check the tread depth and the condition of the tread across the entire width of all tires.

Minimum tread depth for:

• Summer tires: 1/8 in (3 mm)

• M+S tires: 1/6 in (4 mm)

For safety reasons, replace the tires before the legally-prescribed limit for the minimum tread depth is reached.

Carry out the following checks on all wheels regularly, at least once a month or as required, for example, prior to a long journey or driving offroad:

Check the tire pressure (→ page 358).

- · Visually inspect wheels and tires for damage.
- Check the valve caps.
- Visual check of the tire tread depth and the tire contact surface across the entire width.

The minimum tread depth for summer tires is $\frac{1}{8}$ in (3 mm) and for winter tires $\frac{1}{6}$ in (4 mm).



Six marks \odot show where the bar indicators (arrow) are integrated into the tire tread. They are visible once a tire tread depth of approximately V_{16} in (1.6 mm) has been reached.

Notes on snow chains



WARNING Risk of accident due to incorrectly installed snow chains

If you have installed snow chains on the front wheels, they may drag against the vehicle body or chassis components.

- Never install snow chains on the front wheels.
- Only install snow chains on the rear wheels in pairs.
- NOTE Damage to components of the vehicle body or chassis due to mounted snow chains

If you mount snow chains to the front wheels of 4MATIC vehicles, you may damage components of the vehicle body or chassis.

Only mount snow chains to the rear wheels of 4MATIC vehicles. Observe the following notes when using snow chains:

- Snow chains are only permissible for certain wheel/tire combinations. You can obtain information about this from a authorized Mercedes-Benz Service Center.
- For safety reasons, only use snow chains that have been specifically approved for your vehicle by Mercedes-Benz, or snow chains with the same quality standard.
- Comply with the installation instructions of the snow chain manufacturer.
- If snow chains are installed, the maximum permissible speed is 30 mph (50 km/h).
- Vehicles with Active Parking Assist: do not use Active Parking Assist when snow chains are installed.
- Vehicles with level control: if snow chains are installed, only drive at raised vehicle level (→ page 188).
- You can deactivate ESP[®] to pull away
 (→ page 159). This allows the wheels to spin, achieving an increased driving force.

Tire pressure

Notes on tire pressure



WARNING Risk of accident due to insufficient or excessive tire pressure

Underinflated or overinflated tires pose in particular the following risks:

- The tires can burst.
- The tires can wear excessively and/or unevenly.
- The driving characteristics as well as the steering and braking characteristics may be greatly impaired.
- Comply with the recommended tire pressures and check the tire pressure of all tires, including the spare wheel, regularly:
- Monthly
- When the load changes
- Before embarking on a longer journey

- If operating conditions change, e.g. offroad driving
- Adjust the tire pressure, if necessary.

Tire pressure which is too high or too low can:

- Shorten the service life of the tires.
- · Cause increased tire damage.
- · Adversely affect driving characteristics and thus driving safety, e.g. due to hydroplaning.

WARNING Risk of accident due to too low a tire pressure

Tires with pressure that is too low can overheat and burst as a consequence.

In addition, they also suffer from irregular wear, which can significantly impair the braking properties and the handling characteristics.

Avoid excessively low tire pressure.

Tire pressure which is too low can cause:

Tire defects as a result of overheating

- Impaired handling characteristics
- · Irregular wear
- Increased fuel consumption

WARNING Risk of accident due to too high a tire pressure

Tires with excessively high pressure can burst. In addition, they also suffer from irregular wear, which can significantly impair the braking properties and the handling characteristics.

Avoid excessively high tire pressures.

Tire pressure which is too high can cause:

- · Increased braking distance
- Impaired handling characteristics
- Irregular wear
- Impaired driving comfort
- Susceptibility to damage

WARNING Risk of accident due to repeated pressure drop in the tires

The wheels, valves or tires could be damaged.

Too low a tire pressure can lead to the tires bursting.

- Examine the tires for foreign objects.
- Check whether the tire has a puncture or the valve has a leak.
- If you are unable to rectify the damage. contact a qualified specialist workshop.

You can find information on tire pressure for the vehicle's factory-installed tires on the following labels:

- Tire and loading information placard on the B-pillar of your vehicle (\rightarrow page 365).
- Tire pressure table on the inside of the fuel filler flap (\rightarrow page 360).

Observe the maximum tire pressure $(\rightarrow page 371)$.

Use a suitable pressure gauge to check the tire pressure. The outer appearance of a tire does not

permit any reliable conclusion about the tire pressure.

Only correct the tire pressure when the tires are cold. Conditions for cold tires:

- The vehicle has been parked with the tires out of direct sunlight for at least three hours.
- The vehicle has traveled less than 1 mile (1.6 km).

The vehicle's tires heat up when driving. As the temperature of the tires increases, so too does the tire pressure.

Vehicles with a tire pressure monitoring system: you can also check the tire pressure using the onboard computer (\rightarrow page 362).

The tire pressure recommended for increased load/speed in the tire pressure table can affect the ride comfort.

WARNING Risk of accident due to unsuitable accessories on tire valves

If you mount unsuitable accessories onto tire valves, the tire valves may be overloaded and


malfunction, which can cause tire pressure loss.

Only screw standard valve caps or valve caps specifically approved by Mercedes-Benz for your vehicle onto the tire valve.

Tire pressure table

The tire pressure table is on the inside of the fuel filler flap.


i The data shown in the images is example data.

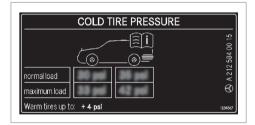

The tire pressure table shows the recommended tire pressure for all tires approved for this vehicle. The recommended tire pressures are valid for cold tires under various operating conditions according to the load and/or speed of the vehicle.

If one or more tire sizes precede a tire pressure, the following tire pressure information is only valid for those tire sizes and their respective load condition.

The load conditions "partially laden" and "fully laden" are defined in the table for different numbers of passengers and amounts of luggage. The actual number of seats may differ from this.

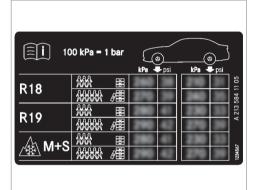

Some tire pressure tables only show the rim diameter instead of the complete tire size, e.g. R18. The rim diameter is part of the tire size and can be found on the tire side wall (\rightarrow page 372).

- Tire and loading information placard $(\rightarrow page 365)$
- Maximum tire pressure (→ page 371)

Checking the tire pressure manually

- Read the tire pressure recommended for the current operating conditions from the tire and loading information placard or the tire pressure table. Observe the notes on tire pressure.
- Remove the valve cap of the tire to be checked.
- Press the tire pressure gauge securely onto the valve
- Read the tire pressure.
- If the tire pressure is lower than the recommended value, increase the tire pressure to the recommended value.
- If the tire pressure is higher than the recommended value, release air. To do so, press down the metal pin in the valve, e.g. using the tip of a pen. Then check the tire pressure again using the tire pressure gauge.
- Screw the valve cap onto the valve.

Further related subjects:

- Notes on tire pressure (→ page 358)
- Tire pressure table (→ page 360)

 Tire and loading information placard $(\rightarrow page 365)$

Tire pressure monitoring system

Function of the tire pressure monitoring system

DANGER Risk of accident due to incorrect tire pressure

Each tire, including the spare (if provided). should be checked monthly when cold and inflated to the inflation pressure recommended by the vehicle manufacturer on the vehicle placard or tire inflation pressure label. (If your vehicle has tires of a different size than the size indicated on the vehicle placard or tire inflation pressure label, you should determine the proper tire inflation pressure for those tires.)

As an added safety feature, your vehicle has been equipped with a tire pressure monitoring system (TPMS) that illuminates a low tire pressure telltale when one or more of your tires is significantly under-inflated. Accordingly, when

the low tire pressure telltale illuminates, you should stop and check your tires as soon as possible, and inflate them to the proper pressure. Driving on a significantly under-inflated tire causes the tire to overheat and can lead to tire failure. Under-inflation also reduces fuel efficiency and tire tread life, and may affect the vehicle's handling and stopping ability. Please note that the TPMS is not a substitute for proper tire maintenance, and it is the driver's responsibility to maintain correct tire pressure, even if under-inflation has not reached the level to trigger illumination of the TPMS low tire pressure telltale.

Your vehicle has also been equipped with a TPMS malfunction indicator to indicate when the system is not operating properly. The TPMS malfunction indicator is combined with the low tire pressure telltale. When the system detects a malfunction, the telltale will flash for approximately one minute and then remain continuously illuminated. This sequence will continue upon subsequent vehicle start-ups as long as the malfunction exists.

When the malfunction indicator is illuminated, the system may not be able to detect or signal low tire pressure as intended. TPMS malfunctions may occur for a variety of reasons, including the installation of replacement or alternate tires or wheels on the vehicle that prevent the TPMS from functioning properly.

The system checks the tire pressure and the tire temperature of the tires fitted to the vehicle by means of a tire pressure sensor.

The tire pressure and the tire temperature appear on the on-board computer (\rightarrow page 362).

If there is a substantial pressure loss or if the tire temperature is excessive, you will be warned with display messages (\rightarrow page 443) or the 1 warning lamp in the instrument cluster (\rightarrow page 464).

The tire pressure monitoring system is only an aid. It is the driver's responsibility to set the tire pressure to the recommended cold tire pressure suitable for the operating situation.

In most cases, the tire pressure monitoring system will automatically update the new reference

values after you have changed the tire pressure. You can, however, also update the reference values by restarting the tire pressure monitoring system manually (\rightarrow page 363).

System limits

The system may be impaired or may not function particularly in the following situations:

- incorrect reference values were taught in
- sudden pressure loss caused by a foreign object penetrating the tire, for example
- there is a malfunction caused by another radio signal source

Checking the tire pressure with the tire pressure monitoring system

Requirements

The vehicle is switched on.

On-board computer:

¬→ Service → Tires

One of the following displays appears:

 Current tire pressure and tire temperature of the individual wheels:



- Tire pressure will be displayed after driving a few minutes
- Tire Pressure Monitor Active: the teach-in process of the system is not yet complete. The tire pressures are already being monitored.
- Compare the tire pressure with the recommended tire pressure for the current operating condition (→ page 360). Additionally, observe the notes on cold tires (\rightarrow page 358).
- The values displayed in the on-board computer may deviate from those of the tire pressure gage as they refer to sea level. At high elevations, the tire pressure value indicated by a pressure gage is higher than that shown

by the on-board computer. Do not reduce the tire pressure in this case.

Restarting the tire pressure monitoring system Requirements

• The recommended tire pressure is correctly set for the respective operating condition in all of the wheels (\rightarrow page 358).

Restart the tire pressure monitoring system in the following situations:

- The tire pressure has been changed.
- The wheels or tires have been changed or newly installed.

On-board computer:

¬→ Service → Tires

Swipe downwards on the Touch Control on the left-hand side of the steering wheel. The Use Current Pressures as New Reference Values? message will be shown on the instrument display.

To restart, press the Touch Control on the lefthand side of the steering wheel. The Tire Press, Monitor Restarted message will be shown on the instrument display. Current warning messages will be deleted and the yellow (!) warning lamp will go out. After you have been driving for a few minutes, the system will check whether the current tire pressures are within the specified range. The current tire pressures will then be accepted as

Be sure to also pay attention to the following related topic:

Notes on tire pressure (→ page 358)

reference values and monitored.

Tire pressure loss warning system

is a severe tire pressure loss.

Function of the tire pressure loss warning system The tire pressure loss warning system warns the driver by means of display messages when there

System limits

The system may be impaired or may not function particularly in the following situations:

- · incorrect reference values were taught in
- sudden pressure loss caused by a foreign object penetrating the tire, for example
- an even pressure loss on more than one tire occurs

The system has a restricted or delayed function particularly in the following situations:

- poor ground conditions, e.g. snow or gravel
- · driving with snow chains
- when adopting a very sporty driving style with high cornering speeds or sudden acceleration
- · driving with a high load

The tire pressure loss warning system is only an aid. It is the driver's responsibility to set the tire pressure to the recommended cold tire pressure suitable for the operating situation and to check it

Be sure to also observe the following further related subjects:

- Notes on tire pressure (→ page 358)
- Display messages about the tires
 (→ page 443)

Restarting the tire pressure loss warning system

Requirements

 The recommended tire pressure is correctly set for the respective operating condition in all wheels.

Restart the tire pressure loss warning system in the following situations:

- The tire pressure has changed.
- The wheels or tires have been changed or newly installed.

On-board computer:

→ Service → Tires

- Swipe downwards on the Touch Control on the left-hand side of the steering wheel. The Tire Pressure Control System Active Restart: Press Touch Control message will be shown on the display.
- To begin the restart, press the Touch Control on the left-hand side of the steering wheel. The Tire Pressure Now OK? message will be shown on the display.
- Select Yes.
- To confirm the restart, press the Touch Control on the left-hand side of the steering wheel.

The Run Flat Indicator Restarted message will be shown on the display.

After you have been driving for a few minutes, the tire pressure loss warning system monitors the set tire pressure of all the tires.

Be sure to also pay attention to the following related topic:

Notes on tire pressure (→ page 358)

Loading the vehicle

Notes on Tire and Loading Information placard

WARNING Risk of accident from overloaded tires


Overloaded tires may overheat and burst as a consequence. Overloaded tires can also impair the steering and handling characteristics and lead to brake failure.

- Observe the load rating of the tires.
- The load rating must be at least half the permissible axle load of the vehicle.
- Never overload the tires by exceeding the maximum load.

The Tire and Loading Information placard is on the B-pillar on the driver's side of the vehicle.



Tire and Loading Information placard

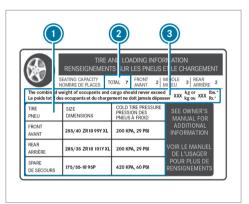

(i) The data shown in the illustration is example data.

The Tire and Loading Information placard shows the following information:

• Maximum number of seats 2 according to the maximum number of people permitted to travel in the vehicle.

- Maximum permissible load (3) comprises the gross weight of all vehicle occupants, load and luggage.
- Recommended tire pressure for cold tires.
 The recommended tire pressures are valid for
 the maximum permissible load and up to the
 maximum permissible vehicle speed.

Please also note:

- Information on permissible weights and loads on the vehicle identification plate (→ page 390).
- Information on tire pressure in the tire pressure table (→ page 360).

Further related subjects:

- Determining the maximum permissible load (→ page 366)
- Notes on tire pressure (→ page 358).

Steps for Determining Correct Load Limit

The following steps have been developed as required of all manufacturers under Title 49, Code of U.S. Federal Regulations, Part 575, pursuant to

the "National Traffic and Motor Vehicle Safety Act of 1966".

- (1): Locate the statement "The combined weight of occupants and cargo should never exceed XXX kg or XXX lbs." on your vehicle's placard.
- (2): Determine the combined weight of the driver and passengers that will be riding in your vehicle.
- (3): Subtract the combined weight of the driver and passengers from XXX kg or XXX lbs.
- (4): The resulting figure equals the available amount of cargo and luggage load capacity. For example, if the "XXX" amount equals 1,400 lbs. and there will be five 150 lb passengers in your vehicle, the amount of available cargo and luggage load capacity is 650 lbs. (1,400 750 (5 x 150) = 650 lbs.)
- (5): Determine the combined weight of luggage and cargo being loaded on the vehicle. That weight may not safely exceed the available cargo and luggage load capacity calculated in Step 4.

- (6): If your vehicle will be towing a trailer, load from your trailer will be transferred to your vehicle. Consult this manual to determine how this reduces the available cargo and luggage load capacity of your vehicle.
- (i) Not all vehicles are permitted to tow a trailer. Towing a trailer is only permitted if a trailer-hitch is installed. Please consult an authorized Mercedes-Benz dealer if you have any questions about towing a trailer with your vehicle.

Even if you have calculated the total load carefully, you should still make sure that the maximum permissible gross weight and the maximum gross axle weight rating of your vehicle are not exceeded. Details can be found on the vehicle identification plate.

Have your loaded vehicle – including driver, occupants and load – weighed on a vehicle weighbridge.

The measured values may not exceed the maximum permissible values stated on the vehicle identification plate.

- Calculation example for determining the maximum load (→ page 367)
- Tire and Loading Information placard (→ page 365)
- Tire pressure table (→ page 360)
- Vehicle identification plate (\rightarrow page 390)

Calculation example for determining the maximum load

The following table shows examples of how to calculate total and load capacities with varying seating configurations and different numbers and sizes of occupants. The following examples use a maximum load of 1500 lbs (680 kg). **This is for**

illustration purposes only. Make sure you are using the actual load limit for your vehicle stated on your vehicle's Tire and Loading Information placard (→ page 365).

The higher the weight of all the occupants, the smaller the maximum load for luggage.

Step 1

	Example 1	Example 2
Combined maximum weight of occupants and load (data from the Tire and Loading Information placard)	1500 lbs (680 kg)	1500 lbs (680 kg)

Step 2


	Example 1	Example 2
Number of people in the vehicle (driver and occupants)	5	1
Distribution of the occupants	Front: 2 Rear: 3	Front: 1
Weight of occupants	Occupant 1: 150 lbs (68 kg) Occupant 2: 180 lbs (82 kg) Occupant 3: 160 lbs (73 kg) Occupant 4: 140 lbs (63 kg) Occupant 5: 120 lbs (54 kg)	Occupant 1: 200 lbs (91 kg)
Total weight of all occupants	750 lbs (340 kg)	200 lbs (91 kg)

Step 3

	Example 1	Example 2
Permissible load (maximum gross vehicle weight rating from the Tire and Loading Information placard minus the gross weight of all occupants)	1500 lbs (680 kg) - 750 lbs (340 kg) = 750 lbs (340 kg)	1500 lbs (680 kg) - 200 lbs (91 kg) = 1300 lbs (589 kg)

Tire labeling

Overview of tire labeling

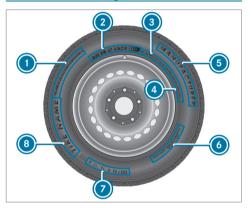


- Uniform Tire Quality Grading Standards
- DOT (Department of Transportation), (TIN)
 Tire Identification Number
- Maximum tire load (→ page 371)
- Maximum tire pressure (→ page 371)

- Manufacturer
- **6** Characteristics of the tire (\rightarrow page 372)
- Tire size designation, load-bearing capacity, speed rating and load index (→ page 372)
- Tire name
- i The data shown in the illustration is example data.

Tire Quality Grading

In accordance with the US Department of Transportation's "Uniform Tire Quality Grading Standards", tire manufacturers are required to grade their tires on the basis of the following three performance factors:

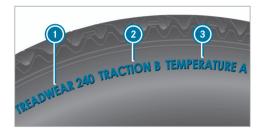

- Tread wear grade
- Traction grade
- Temperature grade
- i The data shown in the illustration is example data.
- (i) The classification is not legally stipulated for Canada, but it is generally stated.

Tread wear grade

The treadwear grade is a comparative rating based on the wear rate of the tire when tested under controlled conditions on a specified government test course. For example, a tire graded 150 would wear one and one-half (1\1/2\) times as

well on the government course as a tire graded 100.

The relative performance of tires depends upon the actual conditions of their use, however, and may depart significantly from the norm due to variations in driving habits, service practices and differences in road characteristics and climate.

Traction grade



DANGER Risk of accident due to inadequate traction

The traction grade assigned to this tire is based on straight-ahead braking traction tests.

- Always adapt your driving style and drive at a speed to suit the prevailing traffic and weather conditions.
- NOTE Damage to the drivetrain from wheelspin
- Avoid wheelspin.

The traction grades, from highest to lowest, are AA, A, B, and C. Those grades represent the tire's ability to stop on wet pavement as measured under controlled conditions on specified government test surfaces of asphalt and concrete. A tire marked C may have poor traction performance.

Temperature grade



WARNING Risk of accident from tire overheating and tire failure

Excessive speed, underinflation, or excessive loading, either separately or in combination, can cause excessive heat build-up and possible tire failure

- Observe the recommended tire pressure.
- Regularly check the pressure of all the tires.
- Adjust the tire pressure, if necessary.

The temperature grades are A (the highest), B, and C, representing the tire's resistance to the generation of heat and its ability to dissipate heat when tested under controlled conditions on a specified indoor laboratory test wheel. Sustained

high temperature can cause the material of the tire to degenerate and reduce tire life, and excessive temperature can lead to sudden tire failure. The grade C corresponds to a level of performance which all passenger car tires must meet under the Federal Motor Safety Standard No. 109. Grades B and A represent higher levels of performance on the laboratory test wheel than the minimum required by law.

DOT, Tire Identification Number (TIN)

US tire regulations stipulate that every tire manufacturer or retreader must imprint a TIN in or on the side wall of each tire produced.



- (i) The data shown in the image is example data. The TIN is a unique identification number to identify tires and comprises the following:
- DOT (Department of Transportation): tire symbol marks (1) indicating that the tire complies with the requirements of the US Department of Transportation.
- Manufacturer identification code: manufacturer identification code 2 contains details of the tire manufacturer. New tires have a code with two symbols. Retreaded tires have a code with four symbols. Further information on retreaded tires (\rightarrow page 376).
- Tire size: identifier (3) describes the tire size.
- Tire type code: tire type code (4) can be used by the manufacturer as a code to describe specific characteristics of the tire.
- Manufacturing date: manufacturing date (5) provides information about the age of a tire. The 1st and 2nd positions represent the calendar week and the 3rd and 4th positions state the year of manufacture (e.g. "3208" represents the 32nd week of 2008).

Information on the maximum tire load



(i) The data shown in the illustration is example data.

Maximum tire load (1) is the maximum permissible weight for which the tire is approved.

Do not overload the tires by exceeding the specified load limit. The maximum permissible load can be found on the vehicle's tire and loading information placard on the B-pillar on the driver's side $(\rightarrow page 365)$.

Specifications for maximum tire pressure



(i) The data shown in the illustration is example data.

Never exceed maximum tire pressure (1) specified for the tire. Always observe the recommended tire pressure for your vehicle when adjusting the tire pressure (\rightarrow page 360).

Information on tire characteristics




(i) The data shown in the image is example data. This information describes the type of tire cord and the number of layers in side wall (i) and under tire tread (ii).

Tire size designation, load-bearing capacity, speed rating and load index

★ WARNING Risk of injury through exceeding the specified tire load-bearing capacity or the permissible speed rating

Exceeding the specified tire load rating or the permissible speed rating may lead to tire damage and to the tires bursting.

- Therefore, only use tire types and sizes approved for your vehicle model.
- Observe the tire load rating and speed rating required for your vehicle.

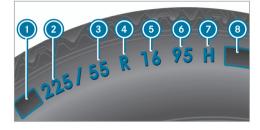

- First letter(s)
- Nominal tire width in millimeters
- 3 Aspect ratio in %
- Tire code
- 6 Rim diameter
- 6 Load-bearing index
- Speed rating
- 8 Load index
- i The data shown in the illustration is example data.

Information about reading tire data can be obtained from any qualified specialist workshop.

First letter(s) (1):

- Without: passenger vehicle tires according to European manufacturing standards.
- "P": passenger vehicle tires according to US manufacturing standards.
- "LT": light truck tires according to US manufacturing standards.
- "T": compact emergency spare wheels with high tire pressure that are only designed for temporary use in an emergency.

Aspect ratio (3):

Ratio between tire height and tire width in percent (tire height divided by tire width).

Tire code (1) (tire type):

- "R": radial tire
- "D": bias ply tire
- "B": bias radial tires
- "ZR": radial tire with a maximum speed above 149 mph (240 km/h) (optional)

Rim diameter (6):

The diameter of the bead seat (not the diameter of the rim flange). The rim diameter is specified in inches (in).

Load-bearing index (a):

Numerical code that specifies the maximum loadbearing capacity of a tire (e.g. "91" corresponds to 1,356 lbs (615 kg)).

The load-bearing capacity of the tire must be at least half the gross axle weight rating of your vehicle. Do not overload the tires by exceeding the specified load limit.

See also:

- Maximum permissible load on the tire and loading information placard (\rightarrow page 365)
- Maximum tire load (→ page 371)
- Load index

Speed rating 7:

Specifies the approved maximum speed of the tire.

(i) An electronic speed limiter prevents your vehicle from exceeding a speed of 130 mph (210 km/h).

Make sure that your tires have the required speed rating. You can obtain information on the required speed rating from an authorized Mercedes-Benz Service Center.

Summer tires

Index	Speed rating
Q	up to 100 mph (160 km/h)
R	up to 106 mph (170 km/h)
S	up to 112 mph (180 km/h)
Т	up to 118 mph (190 km/h)
Н	up to 130 mph (210 km/h)
V	up to 149 mph (240 km/h)
W	up to 168 mph (270 km/h)
Υ	up to 186 mph (300 km/h)

Index	Speed rating
ZRY ¹	up to 186 mph (300 km/h)
ZR(Y) ¹	over 186 mph (300 km/h)
ZR ¹	over 149 mph (240 km/h)

- Specifying the speed rating as the "ZR" index in tire code is optional for tires up to 186 mph (300 km/h).
- If your tire code (a) includes "ZR" and there is no speed rating (7), find out what the maximum speed is from the tire manufacturer.
- If load-bearing index (6) and speed rating (7) are in brackets, the maximum speed rating of your tire is above 186 mph (300 km/h). To find out the maximum speed, ask the tire manufacturer.

All-weather tires and winter tires

Index	Speed rating
Q M+S ²	up to 100 mph (160 km/h)
T M+S ²	up to 118 mph (190 km/h)
H M+S ²	up to 130 mph (210 km/h)
V M+S ²	up to 149 mph (240 km/h)

Winter tires bear the A snowflake symbol and fulfill the requirements of the Rubber Manufacturers Association (RMA) and the Rubber Association of Canada (RAC) regarding the tire traction on snow.

Load index (3):

- . No specification given: standard load (SL) tire
- "XL" or "Extra Load": extra load tire or reinforced tire
- · "Light Load": light load tire

 "C", "D", "E": a load range that depends on the maximum load that the tire can carry at a certain pressure

Definition of terms for tires and loading

Tire structure and characteristics: describes the number of layers or the number of rubber-coated belts in the tire contact surface and the tire wall. These are made of steel, nylon, polyester and other materials.

Bar: metric unit for tire pressure. 14.5038 pounds per square inch (psi) and 100 kilopascal (kPa) is the equivalent of one bar.

DOT (Department of Transportation): DOT-marked tires fulfill the requirements of the U.S. Department of Transportation.

Average weight of the vehicle occupants: the number of vehicle occupants for which the vehicle is designed, multiplied by 150 lb (68 kg).

Uniform Tire Quality Grading Standards: a uniform standard to grade the quality of tires with regard

[&]quot;ZR" stated in the tire code.

² Or "M+S A " for winter tires.

to tread quality, tire traction and temperature characteristics. The quality grading assessment is made by the manufacturer following specifications from the U.S. government. The quality grade of a tire is printed on the side wall of the tire.

Recommended tire pressure: the recommended tire pressure is the tire pressure specified for the tires mounted on the vehicle at the factory.

The tire and information placard contains the recommended tire pressure for cold tires, the maximum permissible load and the maximum permissible vehicle speed.

The tire pressure table contains the recommended tire pressure for cold tires under various operating conditions, i.e. loading and/or speed of the vehicle.

Increased vehicle weight due to optional equipment: the combined weight of all standard and optional equipment available for the vehicle. regardless of whether it is actually installed on the vehicle or not.

Rim: the part of the wheel on which the tire is installed.

GAWR (Gross Axle Weight Rating): the GAWR is the maximum gross axle weight rating. The actual load on an axle must never exceed the gross axle weight rating. The gross axle weight rating can be found on the vehicle identification plate on the B-pillar on the driver's side.

Speed rating: the speed rating is part of the tire identification. It specifies the speed range for which a tire is approved.

GVW (Gross Vehicle Weight): the gross vehicle weight comprises the weight of the vehicle including fuel, tools, the spare wheel, any accessories installed, occupants, luggage and the trailer noseweight, if applicable. The gross vehicle weight must not exceed the gross vehicle weight rating GVWR as specified on the vehicle identification plate on the B-pillar on the driver's side.

GVWR (Gross Vehicle Weight Rating): the GVWR is the maximum permitted gross weight of the fully laden vehicle (weight of the vehicle including all accessories, occupants, fuel, luggage and the trailer drawbar noseweight if applicable). The gross vehicle weight rating is specified on the vehicle identification plate on the B-pillar on the driver's side.

Maximum weight of the laden vehicle: the maximum weight is the sum of the curb weight of the vehicle, the weight of the accessories. the maximum load and the weight of optional equipment installed at the factory.

Kilopascal (kPa): metric unit for tire pressure. 6.9 kPa corresponds to 1 psi. Another unit for tire pressure is bar. 100 kilopascal (kPa) equals 1 bar.

Load index: in addition to the load-bearing index. the load index may also be printed on the side wall of the tire. This specifies the load-bearing capacity of the tire more precisely.

Curb weight: the weight of a vehicle with standard equipment including the maximum capacity of fuel, oil and coolant. It also includes the air conditioning system and optional equipment if these are installed on the vehicle, but does not include passengers or luggage.

Maximum tire load: the maximum tire load is the maximum permissible weight in kilograms or lbs for which a tire is approved.

Maximum permissible tire pressure: maximum permissible tire pressure for one tire.

Maximum load on one tire: maximum load on one tire. This is calculated by dividing the maximum axle load of one axle by two.

PSI (pounds per square inch): standard unit of measurement for tire pressure.

Aspect ratio: ratio between tire height and tire width in percent.

Tire pressure: the pressure inside the tire which applies an outward force to every square inch of the tire. The tire pressure is specified in pounds per square inch (psi), in kilopascals (kPa) or in bar. The tire pressure should only be corrected when the tires are cold

Cold tire pressure: the tires are cold when the vehicle has been parked for at least 3 hours without direct sunlight on the tires or the vehicle has been driven for less than 1 mile (1.6 km).

Tire contact surface: the part of the tire that comes into contact with the road.

Tire bead: the purpose of the tire bead is to ensure that the tire sits securely on the wheel rim. There are several wire cores in the tire bead to prevent the tire from changing length on the wheel rim.

Side wall: the part of the tire between the tread and the tire head

Weight of optional equipment: the combined weight of the optional equipment weighing more than the replaced standard parts and more than 5 lbs (2.3 kg). This optional equipment, such as high-performance brakes, level control system, a roof luggage rack or high-performance batteries, is not included in the curb weight and the weight of the accessories.

TIN (Tire Identification Number): a unique identification number which can be used by a tire manufacturer to identify tires, for example, in a product recall, and thus identify the purchasers. The TIN is made up of the manufacturer's identity code, tire size, tire type code and the manufacturing date.

Load-bearing index: the load-bearing index is a code that contains the maximum load-bearing capacity of a tire.

Traction: traction is the grip resulting from friction between the tires and the road surface

Wear indicator: narrow bars (tread wear bars) that are distributed over the tire contact surface. If the tire tread is level with the bars, the wear limit of 1/16 in (1.6 mm) has been reached.

Distribution of vehicle occupants: distribution of vehicle occupants over designated seat positions in a vehicle

Maximum permissible pavload weight: nominal load and luggage load plus 150 lb (68 kg) multiplied by the number of seats in the vehicle.

Changing a wheel

Notes on selecting, installing and replacing tires



NOTE Mercedes-AMG vehicles



▶ Observe the notes in the Supplement. You could otherwise fail to recognize dangers.



WARNING Risk of accident due to incorrect wheel and tire dimensions

If wheels and tires of the wrong size are installed, the service brakes or components in the

brake system and in the wheel suspension may be damaged.

Always replace wheels and tires with ones that fulfill the specifications of the original part.

For wheels, pay attention to the following:

- Designation
- Type

For tires, pay attention to the following:

- Designation
- Manufacturer
- Type

▲ WARNING Risk of injury through exceeding the specified tire load-bearing capacity or the permissible speed rating

Exceeding the specified tire load rating or the permissible speed rating may lead to tire damage and to the tires bursting.

- Therefore, only use tire types and sizes approved for your vehicle model.
- Observe the tire load rating and speed rating required for your vehicle.

! NOTE Vehicle and tire damage caused by non-approved tire types and sizes

For safety reasons, only use tires, wheels and accessories which have been specially approved by Mercedes-Benz for your vehicle.

These tires are specially adapted to the active safety systems, such as ABS, $\mathsf{ESP}^{\circledcirc}$ and 4MATIC, and marked as follows:

- MO = Mercedes-Benz Original
- MOE = Mercedes-Benz Original Extended (run-flat tires only for certain wheels)
- MO1 = Mercedes-Benz Original (only certain AMG tires)

Otherwise, certain properties, such as handling characteristics, vehicle noise emissions, consumption, etc. could be adversely affected. Furthermore, other tire sizes could result

in the tires rubbing against the body and axle components when loaded. This could result in damage to the tire or the vehicle.

Only use tires, wheels and accessories that have been checked and recommended by Mercedes-Benz.

! NOTE Risk to driving safety from retreaded tires

Retreaded tires are neither tested nor recommended by Mercedes-Benz, since previous damage cannot always be detected on retreaded tires.

For this reason driving safety cannot be guaranteed.

- Do not use used tires if you have no information about their previous usage.
- NOTE Possible wheel and tire damage when driving over obstacles

Large wheels have a smaller section width. As the section width decreases, the risk of

wheels and tires being damaged when driving over obstacles increases

- Avoid obstacles or drive especially carefully.
- Reduce your speed when driving over curbs, speed bumps, manhole covers and potholes.
- Avoid particularly high curbs.
- NOTE Possible wheel and tire damage when parking on curbs or in potholes

Parking on curbs or in potholes can damage the wheels and tires.

- Only park on as level a surface as possible.
- Avoid curbs and potholes when parking.
- I NOTE Damage to electronic component parts due to the use of tire-installing tools

Vehicles with tire pressure monitoring system: There are electronic component parts in the wheel.

If tire-installing tools are positioned in the area of the valve, the electronic components could be damaged.

- Tire-installing tools should not be applied in the area of the valve.
- Always have tires change at a qualified specialist workshop.
- NOTE Damage to summer tires at low ambient temperatures

At low ambient temperatures, tears could form when driving with summer tires, causing permanent damage to the tires.

At temperatures below 45 °F (7 °C) use M+S tires.

Accessory parts which are not approved for your vehicle by Mercedes-Benz, or which are not used correctly, can impair the operating safety.

Before purchasing and using non-approved accessories, visit a qualified specialist workshop and inquire about:

Suitability

- · Legal stipulations
- Factory recommendations
- **WARNING** Risk of accident with high performance tires

The special tire tread in combination with the optimized tire compound means that the risk of skidding and hydroplaning on wet roads is increased.

In addition, the tire grip is greatly reduced at a low outside temperature and tire running temperature.

- Switch on the ESP® and adapt your driving style accordingly.
- Use A M+S tires at outside temperatures of less than 50 °F (10 °C).
- Only use the tires for their intended purpose.

Observe the following when selecting, installing and replacing tires:

- Furthermore, the use of certain tire types in certain regions and areas of operation can be highly beneficial.
- Only use tires and wheels of the same type (summer tires, winter tires, MOExtended tires) and the same make.
- Only install wheels of the same size (left and right) on each axle.

It is only permissible to install a different wheel size in the event of a flat tire in order to drive to the specialist workshop.

- Vehicles with a tire pressure monitoring system: all installed wheels must be equipped with functioning sensors for the tire pressure monitoring system.
- At temperatures below 45°F (7°C) use winter tires or all-season tires marked M+S for all wheels.

Winter tires provide the best possible grip in wintry road conditions.

- For M+S tires, only use tires with the same tread
- Observe the maximum permissible speed for the M+S tire which is installed

If the tire's maximum speed is below that of the vehicle, this must be indicated by an appropriate label in the driver's field of vision.

- Break in new tires at moderate speeds for the first 60 miles (100 km).
- Replace the tires after six years at the latest, regardless of wear.
- When replacing with tires that do not feature run-flat characteristics: vehicles with MOExtended tires are not equipped with a TIREFIT kit at the factory. Equip the vehicle with a TIREFIT kit after replacing with tires that do not feature run-flat characteristics, e.g. winter tires.

For more information on wheels and tires, contact a qualified specialist workshop.

Be sure to also observe the following further related subjects:

Notes on tire pressure (→ page 358)

- Tire and loading information placard (→ page 365)
- Tire size designation, load-bearing capacity, speed rating and load index (→ page 372)
- Tire pressure table (→ page 360)
- Notes on the emergency spare wheel (→ page 386)

Notes on rotating wheels

WARNING Risk of injury through different wheel sizes

Rotating the front and rear wheels can severely impair the driving characteristics.

The wheel brakes or suspension components may also be damaged.

Rotate front and rear wheels only if the wheels and tires are of the same dimensions.

Observe the instructions and safety notes on "Changing a wheel" (\rightarrow page 376)

The wear patterns on the front and rear wheels differ:

- · Front wheels wear more on the tire shoulder
- Rear wheels wear more in the center of the tire

Do not drive with tires that have too little tread depth. This significantly reduces traction on wet roads (hydroplaning).

On vehicles that have the same size front and rear wheels, rotate the wheels according to the intervals in the tire manufacturer's warranty book in your vehicle documents. If this is not available, rotate the tires every 3,000 to 6,000 miles (5,000 to 10,000 km), depending on the wear. Ensure that the direction of rotation is maintained.

Notes on storing wheels

When storing wheels, observe the following notes:

- After removing wheels, store them in a cool, dry and preferably dark place.
- Protect the tires from contact with oil, grease or fuel.

Overview of the tire-change tool kit

- ! NOTE Mercedes-AMG vehicles
- Observe the notes in the Supplement.
 You could otherwise fail to recognize dangers.


Apart from some country-specific variants, vehicles are not equipped with a tire-change tool kit. For more information on which tire-changing tools are required and approved for performing a wheel change on your vehicle, consult a qualified specialist workshop.

You require the following tools, forexample, to change a wheel:

- Jack
- Chock
- · Lug wrench
- Alignment bolt

The tire-change tool kit is located under the trunk floor.

 Depending on the model, the tire-change tool kit may be located at other positions under the trunk floor.

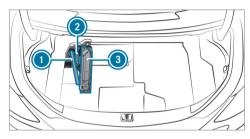

- 1 Lug wrench
- Folding chock
- 3 lack

Preparing the vehicle for a wheel change

Requirements:

- · The vehicle is not on a slope.
- The vehicle is on solid, non-slippery and level ground.

- The required tire-change tool kit is available.
- i If your vehicle is not equipped with the tirechange tool kit, consult a qualified specialist workshop to find out about suitable tools.
- Apply the electric parking brake manually.
- Move the front wheels to the straight-ahead position.
- Shift the transmission to position P.
- Vehicles with level control system: Set the normal vehicle level (→ page 188).
- Switch off the vehicle.
- Make sure that the vehicle cannot be started.
- Place chocks or other suitable items under the front and rear of the wheel that is diagonally opposite the wheel you wish to change.
- If necessary, remove the wheel trim/hub caps (→ page 381).
- Raise the vehicle (→ page 382).

Removing and installing the wheel trim/hub caps


Requirements

 The vehicle is prepared for a wheel change (→ page 380).

Plastic hub cap

- To remove: turn the center cover of the hub cap counter-clockwise and remove the hub cap.
- To install: make sure that the center cover of the hub cap is turned counter-clockwise.
- Position the hub cap and turn the center cover clockwise until the hub cap engages physically and audibly.

Aluminum hub cap

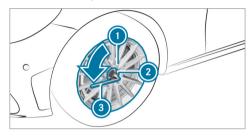

- To remove: position socket ② from the tirechange tool kit on hub cap ①.
- Position wheel wrench (3) on socket (2).
- Using wheel wrench ③, turn hub cap ① counter-clockwise and remove it.
- To install: follow the instructions above in reverse order.
- i Specified tightening torque: 18 lb-ft (25 Nm).


Raising the vehicle when changing a wheel

Requirements:

- There are no persons in the vehicle.
- The vehicle has been prepared for a wheel change (→ page 380).
- The wheel trims and hub caps have been removed (→ page 381).


Important notes on using the jack:

- Use only a vehicle-specific jack that has been approved by Mercedes-Benz to raise the vehicle.
- The jack is only designed for raising and holding the vehicle for a short time while a wheel is being changed and not for maintenance work under the vehicle.
- The jack must be placed on a firm, flat and non-slip surface. If necessary, use a large, flat, load-bearing, non-slip underlay.
- The foot of the jack must be positioned vertically under the jack support point.

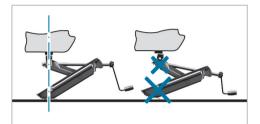


Rules of conduct when the vehicle is raised:

- Never place your hands or feet under the vehicle.
- · Never lie under the vehicle.
- Do not start the vehicle and do not release the electric parking brake.
- Do not open or close any doors or the trunk lid.

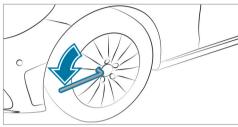

 Using the lug wrench, loosen the wheel bolts on the wheel you wish to change by about one full turn. Do not unscrew the screws completely.

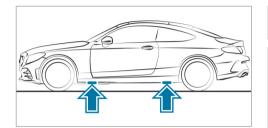

Position of the jack support points

- **NOTE** Mercedes-AMG vehicles
- Observe the notes in the Supplement. You could otherwise fail to recognize dangers.
- WARNING Risk of injury from incorrect positioning of the jack


If you do not position the jack correctly at the appropriate jacking point of the vehicle, the jack could tip with the vehicle raised.

Only position the jack at the appropriate jacking point of the vehicle. The base of

- the jack must be positioned vertically under the jacking point of the vehicle.
- NOTE Damage to the vehicle due to the iack

If you do not position the jack at the jack support points provided for this purpose, you could damage your vehicle.

Only position the jack at the jack support points provided for this purpose.

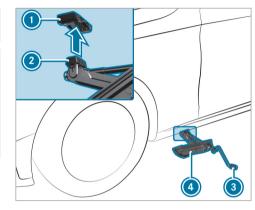

- Position support 2 of jack 4 on jack support point 1.
- Turn crank (3) clockwise until support (2) sits completely on jack support point (1) and the base of the jack lies evenly on the ground.
- Turn crank (3) until the tire is raised a maximum of 1.2 in (3 cm) from the ground.
- Loosen and remove the wheel (\rightarrow page 384).

Removing a wheel

Requirements

- The vehicle is raised (\rightarrow page 382).
- I NOTE Mercedes-AMG vehicles
- Observe the notes in the Supplement. You could otherwise fail to recognize dangers.


When changing a wheel, avoid applying any force to the brake discs, as this could impair the level of comfort when braking.

! NOTE Damage to the wheels' plastic elements when changing a wheel

Plastic elements on wheels may be damaged when removing and repositioning the wheel.

 Do not raise the wheels by the plastic elements when removing and repositioning.

- I NOTE Damage to threading from dirt on wheel bolts
- Do not place wheel bolts in sand or on a dirty surface.
- Unscrew the uppermost wheel bolt completely.

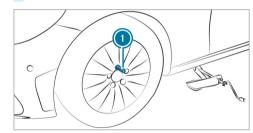

- Screw alignment bolt into the thread instead of the wheel bolt.
- Unscrew the remaining wheel bolts completely.
- Remove the wheel.
- Install the new wheel (\rightarrow page 384).

Installing a new wheel

Requirements

- The wheel to be changed is removed and the alignment bolt is screwed in (→ page 384).
- NOTE Mercedes-AMG vehicles
- Observe the notes in the Supplement. You could otherwise fail to recognize dangers.
- **WARNING** Risk of accident from losing a wheel

Oiled, greased or damaged wheel bolt/wheel nut threads or wheel hub/wheel mounting bolt threads can cause the wheel bolts/wheel nuts to come loose.

- Never oil or grease the threads.
- In the event of damage to the threads, contact a qualified specialist workshop immediately.
- Have the damaged wheel bolts or damaged hub threads replaced.

- ▶ Do not continue driving.
- Observe the information on the choice of tires $(\rightarrow page 376)$.

For tires with a specified direction of rotation, an arrow on the side wall of the tire indicates the correct direction of rotation. Observe the direction of rotation when installing.

Slide the wheel to be mounted onto the alignment bolt and push it on.

WARNING Risk of injury from tightening wheel bolts and nuts

If you tighten the wheel bolts or wheel nuts when the vehicle is raised, the jack could tip.

- Only tighten wheel bolts or wheel nuts when the vehicle is on the ground.
- Be sure to observe the instructions and safety notes on "Changing a wheel" (\rightarrow page 376).
- For safety reasons, only use wheel bolts which have been approved by Mercedes-Benz and for the wheel in question.

NOTE Damage to paintwork of the wheel rim when screwing in the first wheel bolt

If the wheel has too much play when screwing in the first wheel bolt, the wheel rim paint can be damaged.


- Press the wheel firmly against the wheel hub when screwing in the first wheel holt.
- Tighten the wheel bolts evenly in a diagonal pattern in the order indicated until they are finger-tight.
- Unscrew and remove the alignment bolt.
- Tighten the last wheel bolt until it is fingertight.
- Lower the vehicle (\rightarrow page 385).

Lowering the vehicle after a wheel change

Requirements:

 The new wheel has been installed. $(\rightarrow page 384)$.

To lower the vehicle: turn the crank of the jack counter-clockwise until the vehicle is once again standing firmly on the ground.

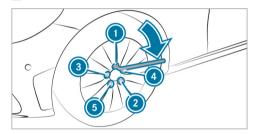

- Tighten the wheel bolts evenly in a diagonal pattern in the order indicated (1) to (5) with an initial maximum force of 59 lb-ft (80 Nm).
- Tighten the wheel bolts evenly in a diagonal pattern in the order indicated 1 to 3 with the specified tightening torque of 96 lb-ft (130 Nm).

WARNING Risk of accident due to incorrect tightening torque

The wheels could come loose if the wheel bolts or wheel nuts are not tightened to the prescribed torque.

- Ensure that the wheel bolts or wheel nuts are tightened to the prescribed tightening torque.
- If you are not sure, do not move the vehicle. Contact a qualified specialist workshop and have the tightening torque checked immediately.
- Check the tire pressure of the newly installed wheel and adjust it if necessary.
- i The following does not apply if the new wheel is an emergency spare wheel.
- Vehicles with tire pressure loss warning system: Restart the tire pressure loss warning system (→ page 364).
- Vehicles with a tire pressure monitoring system: Restart the tire pressure monitoring system (→ page 363).

Emergency spare wheel

Notes on the emergency spare wheel

WARNING Risk of accident caused by incorrect wheel and tire dimensions

The wheel or tire sizes and the tire type of the emergency spare wheel or spare wheel and the wheel to be replaced may differ. The emergency spare wheel or spare wheel can significantly impair driving characteristics of the vehicle.

To prevent hazardous situations:

- Drive carefully.
- Never install more than one emergency spare wheel or spare wheel that differs in size.
- Only use an emergency spare wheel or spare wheel briefly.
- Do not deactivate ESP®.
- Have the emergency spare wheel or spare wheel of a different size replaced at the nearest qualified specialist work-

shop. The new wheel must have the correct dimensions.

i The emergency spare wheel is secured in the emergency spare wheel bag in the trunk.

Observe the following notes on installing an emergency spare wheel:

- The maximum permissible speed with an emergency spare wheel installed is 50 mph (80 km/h).
- Do not install the emergency spare wheel with snow chains.
- Replace the emergency spare wheel after six years at the latest, regardless of wear.
- Use the wheel bolts that are included with the emergency spare wheel.
- Check the tire pressure when the emergency spare wheel is installed. Correct the pressure as necessary.
- (i) The specified tire pressure is stated on the label of the emergency spare wheel.

(i) Vehicles with a tire pressure loss warning system: if an emergency spare wheel is installed, the tire pressure loss warning system cannot function reliably. Only restart the system again when the emergency spare wheel has been replaced with a new wheel.

Vehicles with a tire pressure monitoring system: if an emergency spare wheel is installed, the tire pressure monitoring system cannot function reliably. For a few minutes after an emergency spare wheel is installed, the system may still display the tire pressure of the removed wheel. Only restart the system again when the emergency spare wheel has been replaced with a new wheel.

Be sure to also observe the following further related subjects:

- Notes on tire pressure (→ page 358)
- Tire and loading information placard (→ page 365)
- Tire pressure table (→ page 360)
- Notes on installing tires (→ page 376)
- Installing an emergency spare wheel (→ page 380)

Notes on technical data

- ! NOTE Mercedes-AMG vehicles
- Observe the notes in the Supplement. You could otherwise fail to recognize dangers.

The data stated only applies to vehicles with standard equipment. You can obtain further information from an authorized Mercedes-Benz Center.

Vehicle electronics

Two-way radios

Notes on installing two-way radios

A

WARNING Risk of accident due to improper work on two-way radios

If two-way radios are manipulated or retrofitted incorrectly, the electromagnetic radiation from the two-way radios can interfere with the vehicle electronics and jeopardize the operating safety of the vehicle. You should have all work on electrical and electronic components carried out at a qualified specialist workshop.

WARNING Risk of accident due to improper operation of two-way radios

If you use two-way radios in the vehicle improperly, their electromagnetic radiation can disrupt the vehicle's electronics. This is the case in the following situations, in particular:

- The two-way radio is not connected to an exterior antenna.
- The exterior antenna is installed incorrectly or is not a low-reflection antenna.

This could jeopardize the operating safety of the vehicle.

Have the low-reflection exterior antenna installed at a qualified specialist workshop.

- When operating two-way radios in the vehicle, always connect them to the lowreflection exterior antenna.
- I NOTE Invalidation of the operating permit due to failure to comply with the instructions for installation and use

The operating permit may be invalidated if the instructions for installation and use of two-way radios are not observed.

- Only use approved frequency bands.
- Observe the maximum permissible output power in these frequency bands.
- Only use approved antenna positions.

On vehicles with a panoramic sliding sunroof, installing an antenna in the front or rear roof area is not permitted.

Use Technical Specification ISO/TS 21609 (Road Vehicles – "EMCs for installation of aftermarket radio frequency transmitting equipment") when retrofitting two-way radios. Comply with the legal requirements for detachable parts.

If your vehicle has installing for two-way radio equipment, use the power supply and antenna connectors provided in the pre-installation. Observe the manufacturer's supplements when installing.

Two-way radio transmission output

The maximum transmission output (PEAK) at the base of the antenna must not exceed the values in the following table.

Frequency band and maximum transmission output

Frequency band	Maximum transmis- sion output
Short wave 3 - 54 MHz	100 W
4 m frequency band 74 - 88 MHz	30 W
2 m frequency band 144 - 174 MHz	50 W

Frequency band	Maximum transmis- sion output
Terrestrial Trunked Radio (TETRA) 380 - 460 MHz	10 W
70 cm frequency band 420 - 450 MHz	35 W
Two-way radio (2G/3G/4G)	10 W

The following can be used in the vehicle without restrictions:

- two-way radios with a maximum transmission output of up to 100 mW
- RF transmitters with transmitter frequencies in the 380 - 410 MHz frequency band and a maximum transmission output of up to 2 W (TETRA)
- mobile phones (2G/3G/4G)

There are no restrictions when positioning the antenna on the outside of the vehicle for the following frequency bands:

- · Terrestrial Trunked Radio (TETRA)
- 70 cm frequency band
- 2G/3G/4G

Regulatory radio identification and notes

Regulatory radio identification of small components

Manufacturer information about radio-based vehicle components can be found using the key phrase "Regulatory radio identification" in the Digital Operator's Manual in the vehicle, on the Internet and in the app.

Regulatory radio identification - Indonesia and Israel

Manufacturer information about radio-based vehicle components for Indonesia and Israel can be found using the key phrase "Regulatory radio identification - Indonesia and Israel" in the Digital

390 Technical data

Operator's Manual in the vehicle, on the Internet and in the app.


(i) These are not small components. Information about small components can be found using the key phrase "Regulatory radio identification of small components".


Further component-specific information

Further component-specific information can be found using the key phrase "further component-specific information" in the Digital Operator's Manual in the vehicle, on the Internet and in the app.

Vehicle identification plate, VIN and engine number overview


Vehicle identification plate

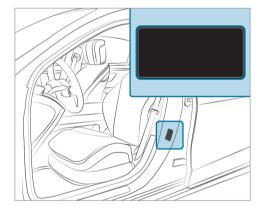

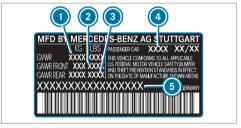

Vehicle identification plate (USA only)

- Maximum permissible gross vehicle weight
- Maximum permissible front axle load
- Maximum permissible rear axle load
- Paint code
- VIN (vehicle identification number)

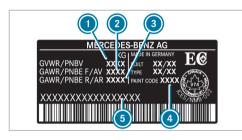


Vehicle identification plate (Canada only)

- Maximum permissible gross vehicle weight
- Maximum permissible front axle load
- Maximum permissible rear axle load
- Paint code
- VIN (vehicle identification number)

The maximum permissible gross vehicle weight is made up of the vehicle weight, all vehicle occupants, the fuel and the load. The maximum gross axle weight rating is the maximum weight that can be carried on one axle (front or rear axle).


Do not exceed the maximum permissible gross vehicle weight or the maximum gross axle weight rating for the front or rear axle.

VIN below the front right-hand seat

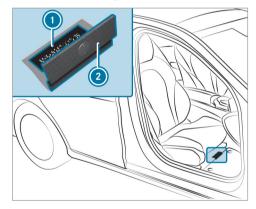

- Imprinted VIN (vehicle identification number)
- Floor covering

Additional plates

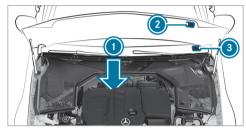

- Engine number stamped into the crankcase
- Plate with information about emissions testing, including confirmation of emissions guidelines at the U.S. federal level as well as for California
- 3 VIN (vehicle identification number) as a label at the lower edge of the windshield

Operating fluids

Notes on operating fluids

- I NOTE Mercedes-AMG vehicles
- Observe the notes in the Supplement. You could otherwise fail to recognize dangers.
- **WARNING** Risk of injury from operating fluids harmful to your health

Operating fluids may be poisonous and harmful to your health.

- Observe the text on the original containers when using, storing or disposing of operating fluids.
- Always store operating fluids sealed in their original containers.
- Always keep children away from operating fluids.



ENVIRONMENTAL NOTE Pollution of the environment due to irresponsible disposal of operating fluids

Incorrect disposal of operating fluids can cause considerable damage to the environment.

 Dispose of operating fluids in an environmentally responsible manner.

Operating fluids include the following:

- fuels
- lubricants
- Coolant
- · Brake fluid
- · Windshield washer fluid
- · climate control system refrigerant

Only use products approved by Mercedes-Benz. Damage caused by the use of products that have not been approved is not covered by the Mercedes-Benz warranty or goodwill gestures.

The operating fluids approved by Mercedes-Benz can be identified by the following inscriptions on the container:

- MB-Freigabe (e.g. MB-Freigabe 229.51)
- MB-Approval (e.g. MB-Approval 229.51)

Further information on approved operating fluids:

- in the Mercedes-Benz Specifications for Operating Fluids by entering the designation
 - at https://bevo.mercedes-benz.com
 - in the Mercedes-Benz BeVo App
- · At a qualified specialist workshop

WARNING Risk of fire or explosion from fuel

Fuels are highly flammable.

- Fire, open flames, smoking and creating sparks must be avoided.
- Before and during refueling, switch off the vehicle and, if installed, the stationary heater.

Fuels are poisonous and hazardous to your health.

- ▶ Do not swallow fuel or let it come into contact with skin, eyes or clothing.
- ▶ Do not inhale fuel vapor.
- ► Keep children away from fuel.
- Keep doors and windows closed during the refueling process.

If you or other people come into contact with fuel, observe the following:

- Immediately rinse fuel off your skin with soap and water.
- If fuel comes into contact with your eyes, immediately rinse them thoroughly with clean water. Seek medical attention immediately.
- If you swallow fuel, seek medical attention immediately. Do not induce vomiting.

Change immediately out of clothing that has come into contact with fuel.

Flexible-fuel vehicles can be refueled with the following fuel types:

- · unleaded gasoline
- F85 fuel
- · a mixture of E85 fuel and unleaded gasoline

Flexible-fuel vehicles can be identified by the **Ethanol up to E85** sticker on the inside of the fuel filler flap.

Depending on the country, the fuels you can use in your vehicle may differ from the information in the Operator's Manual. The fuels that have been approved for your vehicle can be found on the instruction label on the inside of the fuel filler flap.

Fuel

Information on fuel quality for vehicles with gasoline engine

Observe the notes on operating fluids (\rightarrow page 392).

NOTE Damage caused by the wrong fuel

Even small amounts of the wrong fuel could result in damage to the fuel system, the engine and the emission control system.

Only refuel with low-sulfur spark-ignition engine fuel.

This fuel may contain up to 10% ethanol by volume. Your vehicle is suitable for use with E10 fuel.

Never refuel with one of the following fuels:

- diesel
- Gasoline with more than 10% ethanol by volume, e.g. E15, E85, E100
- Gasoline with more than 3% methanol by volume, e.g. M15, M30, M85, M100
- Gasoline with additives containing metal

If you have accidentally refueled with the wrong fuel:

- Do not switch on the vehicle.
- Consult a qualified specialist workshop.

394 Technical data

If the available fuel is not sufficiently low in sulfur, it may produce unpleasant odors.

Refuel using only fuel that has at least the octane number specified on the information label on the fuel filler flap (\rightarrow page 145).

For maximum engine output: refuel using only premium-grade unleaded gasoline with an octane number of at least 91 AKI/95 RON.

Never refuel using gasoline of an even lower RON.

NOTE Premature engine wear through unleaded regular gasoline

Impairment of the longevity and performance of the engine.

If unleaded premium grade gasoline is unavailable and you have to refuel using unleaded regular gasoline:

- Only fill the fuel tank to half full with unleaded regular gasoline and refill as soon as possible with unleaded premium grade gasoline.
- ► Do not drive at the maximum design speed.

Avoid sudden acceleration and engine speeds over 3000 rpm.

Further information on fuel is available at the following locations:

- At a gas station
- At a qualified specialist workshop
- On the https://www.mbusa.com (USA only)

Information on additives in gasoline (vehicles with gasoline engine)

Observe the notes on operating fluids (\rightarrow page 392).

! NOTE Damage from use of unsuitable additives

Even small amounts of the wrong additive may lead to malfunctions occurring.

Only add cleaning additives recommended by Mercedes-Benz to the fuel.

Mercedes-Benz recommends that you use brandname fuels with additives. In some countries, the fuel available may not have sufficient additives. Deposits could build up in the fuel injection system as a result. In this case, in consultation with a Mercedes-Benz Service Center, mix the fuel with the cleaning additive recommended by Mercedes-Benz. Observe the notes and mixing ratios indicated on the tank.

Tank content and fuel reserve

Total fuel tank capacity

Model	
All models	17.4 gal (66.0 liters)

Reserve fuel tank

Model	
All models	1.9 gal (7.0 liters)

Engine oil

Notes on engine oil

Observe the notes on operating fluids (\rightarrow page 392).

- NOTE Engine damage caused by an incorrect oil filter, incorrect oil or additives
- Do not use engine oils or oil filters other than those which meet the specifications necessary for the prescribed service intervals.
- Do not alter the engine oil or oil filter in order to achieve longer change intervals than prescribed.
- Do not use additives.
- Have the engine oil changed after the prescribed intervals.

Mercedes-Benz recommends having the oil changed at a qualified specialist workshop.

Only use engine oils approved for your vehicle by Mercedes-Benz.

Quality and capacity of engine oil

Engine oil specification

Model	MB-Freigabe or MB- Approval
All models	229.51, 229.52, 229.61, 229.71, 229.72 ¹⁾

Recommended for lowest possible fuel consumption (lowest SAE viscosity class in each case; observe possible restrictions of the approved SAE viscosity classes).

To achieve the lowest possible fuel consumption, it is recommended to use the engine oil specifications marked in the table for the lowest SAE viscosity class. Possible restrictions of the approved SAE viscosity classes must be observed.

Engine oil filling capacity

Model Capacity	
C 300	7.0 US qt (6.6 liters)
C 300 4MATIC	6.3 US qt (6.0 liters)

The specified filling capacity refers to an oil change with the oil filter.

Notes on brake fluid

Observe the notes on operating fluids (\rightarrow page 392).

WARNING Risk of an accident due to vapor pockets forming in the brake system

The brake fluid constantly absorbs moisture from the air. This lowers the boiling point of the brake fluid. If the boiling point is too low, vapor pockets may form in the brake system when the brakes are applied hard.

This causes the braking effect to be impaired.

Have the brake fluid renewed at the specified intervals.

396 Technical data

Have the brake fluid regularly replaced at a qualified specialist workshop.

Only use a brake fluid approved by Mercedes-Benz according to MB-Freigabe or MB-Approval 331.0.

Coolant

Notes on coolant

Observe the notes on operating fluids (\rightarrow page 392).



WARNING - Risk of fire and injury from antifreeze

If antifreeze comes into contact with hot component parts in the engine compartment, it may ignite.

- Allow the engine to cool down before adding antifreeze.
- Make sure that no antifreeze spills out next to the filler opening.
- Thoroughly clean off any antifreeze from component parts before starting the vehicle.

- NOTE Damage caused by incorrect coolant
- Only use coolant that has been premixed with the required antifreeze protection.

Information on coolant is available at the following locations:

- In the Mercedes-Benz Specification for Operating Fluids 320.1
 - At https://bevo.mercedes-benz.com
 - In the Mercedes-Benz BeVo app
- · At a qualified specialist workshop

NOTE Overheating at high outside temperatures

If an inappropriate coolant is used, the cooling system is not sufficiently protected against overheating and corrosion at high outside temperatures.

Only use coolant approved for Mercedes-Benz. Observe the instructions in the Mercedes-Benz Specifications for Operating Fluids 320.1.

Have the coolant regularly replaced at a qualified specialist workshop.

Proportion of antifreeze concentrate in the cooling system:

- A minimum of 50% (antifreeze protection down to about -35°F (-37°C))
- A maximum of 55% (antifreeze protection down to -49°F (-45°C))

Coolant filling quantity

Coolant

Model	Capacity
All models	9.5 US qt (9.0 liters)

Notes on windshield washer fluid

Observe the notes on operating fluids (\rightarrow page 392).

Windshield washer concentrate is highly flammable. It could ignite if it comes into contact with hot engine component parts or the exhaust system.

- Make sure that no windshield washer concentrate spills out next to the filler opening.
- I NOTE Damage to the exterior lighting due to unsuitable windshield washer fluid

Unsuitable windshield washer fluid may damage the plastic surface of the exterior lighting.

Only use windshield washer fluid which is also suitable for use on plastic surfaces, e.g. MB SummerFit or MB WinterFit.

- NOTE Blocked spray nozzles caused by mixing windshield washer fluids
- Do not mix MB SummerFit and MB WinterFit with other windshield washer fluids.

Do not use distilled or de-ionised water. Otherwise, the fill level sensor may be triggered erroneously.

Recommended windshield washer fluid:

- · Above freezing point: e.g. MB SummerFit
- Below freezing point: e.g. MB WinterFit

For the correct mixing ratio, refer to the information on the antifreeze container.

Mix washing water with windshield washer fluid all year round.

Refrigerant

Notes on refrigerant

Observe the notes on operating fluids (\rightarrow page 392).

I NOTE Damage due to incorrect refrigerant

If a non-approved refrigerant is used, the climate control system may be damaged.

- ▶ USA: use only R-134a refrigerant.
- Canada: use only R-1234yf refrigerant.
- NOTE Damage to the climate control system due to incorrect refrigerant compressor oil
- Only use refrigerant compressor oil that has been approved by Mercedes-Benz.
- Do not mix the approved refrigerant compressor oil with a different refrigerant compressor oil.

Work on the climate control system may be carried out only at a qualified specialist workshop. All applicable regulations as well as SAE standard J639 must be adhered to.

The information label for the climate control system regarding the refrigerant type and the refrigerant compressor oil (PAG oil) is located on the inside of the hood.

398 Technical data



Information label (example - USA)

- Hazard and service warning symbols
- Refrigerant filling capacity
- Applicable standards
- PAG oil part number
- GWP (global warming potential) of the refrigerant used
- Refrigerant type



Information label (example - Canada)

- Hazard and service warning symbols
- Refrigerant filling capacity
- Applicable standards
- PAG oil part number
- GWP (global warming potential) of the refrigerant used
- Refrigerant type

Symbols 1 indicate the following:

- Possible dangers
- Having maintenance work carried out at a qualified specialist workshop

Filling capacity for refrigerant and PAG oil

Refrigerant filling capacity

Model	
All models	22.2 ± 0.4 oz $(630 \pm 10 \text{ g})$

Filling capacity for PAG oil

Model	
All models	$2.8 \pm 0.4 \text{ oz}$ $(80 \pm 10 \text{ g})$

Vehicle data

Vehicle dimensions

The heights specified may vary as a result of the following factors:

- tires
- load
- · condition of the suspension
- · optional equipment

Vehicle dimensions

All models	
Vehicle length	184.5 in (4686 mm)
Vehicle width including outside mirrors	79.4 in (2016 mm)
Wheelbase	111.8 in (2840 mm)

Vehicle height

Model	
C 300	55.3 in (1405 mm)
C 300 4MATIC	55.6 in (1413 mm)

Turning circle

Model	
C 300	36.81 ft (11.22 m)
C 300 4MATIC	37.57 ft (11.45 m)

Weights and loads

Bear in mind that items of optional equipment increase the curb weight and reduce the payload. Vehicle-specific weight information can be found on the vehicle identification plate.

Maximum design speeds

Not for Mercedes-AMG vehicles:

Missing values were not available at the time of going to press.

Maximum permissible speed

All models

Display messages

Introduction

Information about display messages

Display messages appear on the instrument display.

Display messages with graphic symbols are shown in a simplified form in the Operator's Manual and may differ from the symbols on the instrument display. The instrument display shows high-priority display messages in red. Certain display messages are accompanied by a warning tone.

Please act in accordance with the display messages and follow the additional notes in the Operator's Manual.

For some display messages, symbols will also be shown:

- (i) Further information
- × Hide display message

With the left-hand Touch Control, you can select the respective symbol by swiping to the left or right. Pressing (1) displays further information on the media display. Press the x symbol to hide the display message.

You can hide low-priority display messages by pressing the back button or the left-hand Touch Control. The display messages will then be stored in the message memory.

Rectify the cause of a display message as quickly as possible.

High-priority display messages cannot be hidden. The instrument display will show these display messages permanently until the cause of the display message has been rectified.

Calling up saved display messages

On-board computer:

¬→ Service → 1 Message

If there are no display messages, No Messages will appear on the instrument display.

- Scroll through the display messages by swiping upwards or downwards on the left-hand Touch Control.
- ➤ To exit the message memory: press the back button ← ...

Occupant safety

Display messages



SRS Malfunction Service Required




Front Left Malfunction Service Required (example)



Left Side Curtain Airbag Malfunction Service Required (example)

Possible causes/consequences and ▶ Solutions

* The restraint system is malfunctioning (\rightarrow page 37).

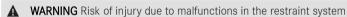

Components in the restraint system may be activated unintentionally or not deploy as planned in an accident.

- ► Have the restraint system checked and repaired immediately at a qualified specialist workshop.
- * The corresponding restraint system is malfunctioning (\rightarrow page 37).
 - WARNING Risk of injury due to malfunctions in the restraint system

Components in the restraint system may be activated unintentionally or not deploy as planned in an accident.

- ▶ Have the restraint system checked and repaired immediately at a qualified specialist workshop.
- * The corresponding restraint system is malfunctioning (\rightarrow page 37).
 - WARNING Risk of injury or fatal injury due to a malfunction in the window curtain airbag

The window curtain airbag might be triggered unintentionally or might not be triggered at all in the event of an accident.

Have the window curtain airbag checked and repaired immediately at a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
Front Passenger Airbag Dis- abled See Operator's Man- ual	* The front passenger airbag and the front passenger knee airbag have been disabled even though an adult or a person of adult build is on the front passenger seat. If additional forces are applied to the seat, the weight the system detects may be too low.
	▲ WARNING Risk of injury or fatal injury due to a disabled front passenger airbag
	If the front passenger airbag is disabled, the front passenger airbag will not be deployed in the event of an accident and cannot perform its intended protective function.
	A person in the front passenger seat could then, for example, come into contact with the vehicle's interior, especially if the person is sitting too close to the cockpit.
	Make sure, both before and during the journey, that the status of the front passenger airbag is correct.
	Stop the vehicle immediately in accordance with the traffic conditions.
	► Make sure that no objects are trapped under the front passenger seat.
	Check the status of automatic front passenger airbag shutoff (→ page 47).
	► If necessary, consult a qualified specialist workshop immediately.
Front Passenger Airbag Enabled See Operator's Manual	* The front passenger airbag and the front passenger knee airbag will be enabled while the vehicle is in motion in the following situations:
	 Even when a child, a person of smaller stature or an object weighing less than the system weight threshold is loca ted on the front passenger seat
	Even when the front passenger seat is not occupied

Display messages	Possible causes/consequences and ▶ Solutions
	The system may detect objects or forces that are adding to the weight applied to the seat.
	WARNING Risk of injury or death when using a child restraint system while the front passenger airbag is enabled
	If you secure a child in a child restraint system on the front passenger seat and the front passenger airbag is enabled, the front passenger airbag can deploy in the event of an accident.
	The child could be struck by the airbag.
	Ensure, both before and during the journey, that the status of the front passenger airbag is correct.
	NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.
	Stop the vehicle immediately in accordance with the traffic conditions.
	Make sure that no objects are trapped under the front passenger seat.
	▶ Check the status of automatic front passenger airbag shutoff (\rightarrow page 47).
	If necessary, consult a qualified specialist workshop immediately.
PRE-SAFE Inoperative See	* The PRE-SAFE® functions are malfunctioning.
Operator's Manual	Consult a qualified specialist workshop.

SmartKey

Display messages	Possible causes/consequences and ▶ Solutions
Obtain a New Key	* Have the SmartKey replaced. Visit a qualified specialist workshop.
Replace Key Battery	* The SmartKey battery is discharged. ▶ Replace the battery (→ page 65).
Key Not Detected (white display message)	 * The SmartKey is currently undetected. ▶ Change the location of the SmartKey in the vehicle. ▶ If the SmartKey is still not recognized, place it in the slot for starting with the SmartKey (→ page 130).

Display messages Possible causes/consequences and ▶ Solutions * The SmartKey cannot be detected and may no longer be in the vehicle. If the SmartKey is no longer in the vehicle and you switch off the vehicle: • You can no longer start the vehicle. Key Not Detected (Red dis-· You cannot centrally lock the vehicle. play message) Ensure that the SmartKey is in the vehicle. If the SmartKey is in the vehicle and still not recognized: Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Place the SmartKey in the slot for starting the engine with the SmartKey (\rightarrow page 130). The SmartKey battery is weak or discharged. \triangleright Check the battery using the indicator lamp (\rightarrow page 63). Replace the SmartKey battery, if necessary (\rightarrow page 65). * The vehicle is processing in order to teach in the new SmartKey. Wait until processing is complete. Key Being Initialized Please Wait

Display messages	Possible causes/consequences and ▶ Solutions
Don't Forget Your Key	* A warning tone will also sound. This message reminds you to take your SmartKey with you when you leave the vehicle.
Place the Key in the Marked Space See Opera- tor's Manual	 * SmartKey detection is malfunctioning. ▶ Change the location of the SmartKey in the vehicle. ▶ Place the SmartKey in the marked space for starting the engine with the SmartKey (→ page 130).

Lights

Display messages	Possible causes/consequences and ▶ Solutions
Check Left Low Beam (example)	 * The corresponding light source is defective. Drive on carefully. Visit a qualified specialist workshop immediately. (i) LED light sources: the display message for the corresponding light appears only when all the light-emitting diodes in the light are faulty.

Display messages	Possible causes/consequences and ▶ Solutions
- <u>;</u> Ö <u>-</u>	 * The exterior lighting is malfunctioning. Consult a qualified specialist workshop.
Malfunction See Operator's Manual	
Automatic Headlamp Mode	 * The light sensor for automatic driving lights is malfunctioning. Consult a qualified specialist workshop.
Inoperative	* The active headlamps are malfunctioning. Consult a qualified specialist workshop.
tive	* You are driving without low-beam headlamps.
Switch On Headlamps	► Turn the light switch to the ☑ or ▲UTO position.

Display messages	Possible causes/consequences and ▶ Solutions
Switch Off Lights	* You are leaving the vehicle and the lights are still switched on. Turn the light switch to the AUTO position.
Intell. Light System Inoperative	* The Intelligent Light System is malfunctioning. The lighting system continues to function properly without the functions of the Intelligent Light System. Consult a qualified specialist workshop.
Adaptive Highbeam Assist Currently Unavailable See Operator's Manual	 * Adaptive Highbeam Assist is temporarily unavailable. The system limits have been reached (→ page 115). Once the cause of the problem is no longer present, the system will be available again. The Adaptive Highbeam Assist Now Available display message will appear. ▶ Drive on. ▶ Operate the high beam manually until Adaptive High Beam Assist is available again.
Adaptive Highbeam Assist Inoperative	* Adaptive Highbeam Assist is malfunctioning. Drive on. or

Display messages	Possible causes/consequences and ▶ Solutions
	 Stop the vehicle in accordance with the traffic conditions and restart the vehicle. If the display message does not disappear: consult a qualified specialist workshop. Until then, operate the high beam manually.
Adaptive Highbeam Assist Camera View Restricted See Operator's Manual	 * The camera view is restricted. Possible causes: • Dirt on the windshield in the camera's field of vision • Heavy rain, snow or fog
	Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. Once the cause of the problem is no longer present, the driving systems and driving safety systems will be available again. If the display message does not disappear: Stop the vehicle in accordance with the traffic conditions. Clean the windshield.
Hazard Warning Flashers Malfunctioning	 * The hazard warning lamp switch is malfunctioning. Consult a qualified specialist workshop.

Vehicle

Display messages	Possible causes/consequences and ▶ Solutions
Vehicle Ready to Drive Switch the Ignition Off Before Exiting	 You are leaving the vehicle in a ready-to-drive state. Get out of the vehicle, secure it against rolling away and take the SmartKey with you. If you do not leave the vehicle, switch off the electrical consumers, e.g. the seat heating. Otherwise, the 12-V battery may discharge and starting the engine may be possible only with the help of a second battery (jump start).
Head-up Display Currently Unavailable See Operator's Manual	 * The Head-up Display is temporarily unavailable. Possible causes: • Malfunctions in the power supply • Signal interference Stop in accordance with the traffic conditions and switch the vehicle off and on again. If the display message still appears, consult a qualified specialist workshop.
Head-up Display Inoperative	 * The Head-up Display has an internal error. ▶ Consult a qualified specialist workshop.

Display messages



Steering Malfunction Increased Physical Effort See Operator's Manual



Steering Malfunction Stop Immediately See Operator's Manual



Possible causes/consequences and ▶ Solutions

* The power steering assistance is malfunctioning.

WARNING Risk of an accident due to altered steering characteristics

If the power assistance of the steering fails partially or completely, you will need to use more force to steer.

- If safe steering is possible, drive on carefully.
- Visit or consult a qualified specialist workshop immediately.
- * The steering is malfunctioning. Steering capability is significantly impaired.
 - **WARNING** Risk of accident if steering capability is impaired

If the steering does not function as intended, the vehicle's operating safety is jeopardized.

- ▶ Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
- Consult a qualified specialist workshop.
- * At least one door is open.
 - Close all doors.

Display messages	Possible causes/consequences and ▶ Solutions
	* The hood is open.
	WARNING Risk of accident due to driving with the hood unlocked
	The hood may open and block your view. Never release the hood when driving. Before every trip, ensure that the hood is locked.
	Stop the vehicle immediately in accordance with the traffic conditions.Close the hood.
€ 5 5	* The trunk lid is open.
	▲ DANGER Risk of exhaust gas poisoning
	Combustion engines emit poisonous exhaust gases such as carbon monoxide. Exhaust gases can enter the vehicle interior if the trunk lid is open when the engine is running, especially if the vehicle is in motion. Always switch off the engine before opening the trunk lid. Never drive with the trunk lid open.
	Close the trunk lid.

Display messages	Possible causes/consequences and ▶ Solutions
	 * The seat backrest of the corresponding seat is not engaged. Fold the seat backrest back until it engages.
Rear Left Backrest Not Latched (example)	
←//>	* The seat backrest of the corresponding front seat is not engaged.
'	Fold the seat backrest back until it engages.
Front Left Seat Backrest Not Locked (example)	
\square	* The washer fluid level in the washer fluid reservoir has dropped below the minimum.
	Add washer fluid (→ page 327).
Check Washer Fluid	
Wiper Malfunctioning	* The windshield wipers are malfunctioning.
	Restart the vehicle.
	If the display message still appears:
	Consult a qualified specialist workshop.

Engine

Display messages	Possible causes/consequences and ➤ Solutions
To switch engine off, press and hold Start/Stop button for at least 3 secs. or press 3 times.	 You have pressed the start/stop button while the vehicle is in motion. ▶ Information about switching off the vehicle while driving (→ page 129).
Cannot Start Engine See Operator's Manual	 * The vehicle cannot be started. Switch the vehicle off and switch it back on If the display message still appears, consult a qualified specialist workshop.
<u>;</u>	* The coolant level is too low.
	NOTE Engine damage due to insufficient coolant
Check Coolant Level See Operator's Manual	Avoid long journeys with insufficient coolant.
	Add coolant (\rightarrow page 327).
	► Have the engine cooling system checked at a qualified specialist workshop.

Display messages



Coolant Too Hot Stop Vehicle Turn Engine Off

Possible causes/consequences and ▶ Solutions

- * The coolant is too hot
 - Stop immediately in accordance with the traffic conditions and switch off the vehicle.

WARNING Risk of burns when opening the hood

If you open the hood in the event of an overheated engine or fire in the engine compartment, the following situations may occur:

- You may come into contact with hot gases.
- You may come into contact with other escaping hot operating fluids.
- ▶ Before opening the hood, allow the engine to cool down.
- In the event of a fire in the engine compartment, keep the hood closed and call the fire service.
- Wait until the engine has cooled down.
- Make sure that the air supply to the radiator is not obstructed.
- Avoiding high loads on the engine, drive to the nearest qualified specialist workshop. In doing so, ensure that the coolant temperature display remains below the red marking.



- * There is a malfunction in the engine cooling system.
 - > Avoiding high loads on the engine, drive to the nearest qualified specialist workshop. In doing so, ensure that the coolant temperature display remains below the red marking.

Display messages	Possible causes/consequences and ▶ Solutions
Fuel Level Low	* The fuel supply has dropped into the reserve range. Refuel.
Gas Cap Loose	* The fuel filler cap is not closed correctly or the fuel system is leaking. Close the fuel filler cap. If the fuel filler cap was already properly closed: consult a qualified specialist workshop.

Transmission

Display messages	Possible causes/consequences and ▶ Solutions
Only Shift to 'P' when Vehi- cle is Stationary	 * It is possible to select the park position P only if the vehicle is stationary. Depress the brake pedal to stop. Shift the transmission to park position P when the vehicle is stationary.
Apply Brake to Shift from 'P'	* You have attempted to shift the transmission out of park position P and into another transmission position. Depress the brake pedal. Select transmission position D, R or neutral N.

Display messages	Possible causes/consequences and ▶ Solutions
To Deselect P or N, Depress Brake and Start Engine	 You have attempted to shift the transmission out of park position P or neutral N and into another transmission position. Depress the brake pedal. Start the vehicle. Change the transmission position.
Apply Brake to Shift to 'R'	 You have attempted to select transmission position R. Depress the brake pedal. Select transmission position R.
Driver's Door Open & Transmission Not in P Risk of Vehicle Rolling Away	 * The driver's door is not fully closed and transmission position D, R or neutral N is selected. The vehicle may roll away. ▶ Select park position P when switching off the vehicle.
N Permanently Active Risk of Rolling Away	 * While the vehicle is rolling or while you are driving, neutral N has been engaged. Depress the brake pedal to stop. Shift the transmission to park position P when the vehicle is stationary. To continue driving, select transmission position D or R.
Service Required Do Not Shift Gears Visit Dealer	* The transmission is malfunctioning. It is no longer possible to change the transmission position. If transmission position

Display messages	Possible causes/consequences and ▶ Solutions
	For all other transmission positions, park the vehicle safely.Consult a qualified specialist workshop or breakdown service.
Reversing Not Possible Service Required	 * The transmission is malfunctioning. It is not possible to select transmission position ▶ Consult a qualified specialist workshop.
Transmission Malfunction Stop	 * The transmission is malfunctioning. The transmission shifts to neutral N automatically. Stop the vehicle immediately in accordance with the traffic conditions. Depress the brake pedal. Engage park position P. Consult a qualified specialist workshop.
Stop Vehicle Leave Engine Running Wait Transmission Cooling	 * The transmission is overheating. Pulling away may be temporarily impaired or not possible. Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving. Leave the engine running. Wait until the display message disappears before pulling away.
Auxiliary Battery Malfunction (white display message)	 * The auxiliary battery for the automatic transmission is no longer being charged. Visit a qualified specialist workshop. Until then, always select park position P manually before you switch off the vehicle. Before leaving the vehicle, apply the electric parking brake.

Possible causes/consequences and ▶ Solutions Display messages Auxiliary Battery Malfunc-* The auxiliary battery for the transmission is no longer being charged. tion (red display message) Consult a qualified specialist workshop. Until then, always select park position **P** manually before you switch off the vehicle. Before leaving the vehicle, apply the electric parking brake.

Brakes

Display messages



(USA only)



(Canada only)

Parking Brake See Operator's Manual

Possible causes/consequences and ▶ Solutions

* The yellow place indicator lamp is lit. The electric parking brake is malfunctioning.

To apply:

- Switch the vehicle off and switch it back on.
- Apply the electric parking brake manually (\rightarrow page 153).

If it is not possible to apply the electric parking brake:

- Visit a qualified specialist workshop.
- Where necessary, also secure the parked vehicle against rolling away.
- * The yellow ((Canada only) indicator lamp and the red ((USA only) or ((Canada only)) indicator lamp are lit. The electric parking brake is malfunctioning.

To release:

Display messages	Possible causes/consequences and ▶ Solutions
	Switch the vehicle off and switch it back on
	Release the electric parking brake manually (\rightarrow page 153).
	or
	Release the electric parking brake automatically (\rightarrow page 152). If it is still not possible to release the electric parking brake:
	Do not continue driving. Consult a qualified specialist workshop.
	* The yellow [indicator lamp is lit and the red [PARK] (USA only) or [(Canada only) indicator lamp is flashing. The electric parking brake is malfunctioning.
	The electric parking brake could not be applied or released.
	Switch the vehicle off and switch it back on
	To apply:
	Release and then apply the electric parking brake manually (\rightarrow page 153).
	To release:
	Apply and then release the electric parking brake manually.
	If the electric parking brake cannot be applied or the red PARK (USA only) or (Canada only) indicator lamp con tinues to flash:
	Do not continue driving. Consult a qualified specialist workshop.
	▶ Where necessary, also secure the parked vehicle against rolling away.

Display messages Possible causes/consequences and > Solutions * The yellow () indicator lamp is lit and the red (USA only) or () (Canada only) indicator lamp flashes for approximately ten seconds after the electric parking brake has been applied or released. It then remains lit or goes out. The electric parking brake is malfunctioning. If the condition of charge is too low: Charge the 12 V battery. To apply: Switch off the vehicle The electric parking brake will be applied automatically. If you do not want the electric parking brake to be applied, e.g. at an automatic car wash or when the vehicle is being towed. leave the vehicle switched on. This does not include having the vehicle towed with the rear axle raised. If the electric parking brake is not applied automatically: Switch the vehicle off and switch it back on Release and then apply the electric parking brake manually (\rightarrow page 153). If it is still not possible to apply the electric parking brake: Visit a qualified specialist workshop. Where necessary, also secure the parked vehicle against rolling away.

To release:

Display messages	Possible causes/consequences and ▶ Solutions
	If the conditions for automatic release are fulfilled and the electric parking brake is not released automatically, release the electric parking brake manually (→ page 153).
	If it is still not possible to release the electric parking brake:
	Do not continue driving. Consult a qualified specialist workshop.
PARK (USA only)	 * The red PARK indicator lamp (USA only) or (only) indicator lamp (Canada only) is flashing. The electric parking brake is applied while you are driving: • A condition for automatic release of the electric parking brake has not been fulfilled (→ page 152). • You are performing emergency braking using the electric parking brake (→ page 153).
(P)	Check the conditions for automatic release of the electric parking brake.Release the electric parking brake manually.
(Canada only)	
Please Release Parking Brake	

Display messages

PARK

(USA only)



(Canada only)

Turn On the Ignition to Release the Parking Brake

Possible causes/consequences and ▶ Solutions

- * The red PARK (USA only) or (P) (Canada only) indicator lamp is lit. You have attempted to release the electric parking brake with the vehicle switched off.
 - Switch on the vehicle.

BRAKE

(USA only)



(Canada only)

Check Brake Fluid Level

* There is insufficient brake fluid in the brake fluid reservoir.

WARNING Risk of an accident due to low brake fluid level

If the brake fluid level is too low, the braking effect and the braking characteristics may be impaired.

- > Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
- Consult a qualified specialist workshop.
- Do not add brake fluid.

Display messages	Possible causes/consequences and ▶ Solutions
Check Brake Pads See	* The brakepads have reached the wear limit.
Operator's Manual	Consult a qualified specialist workshop.

Driving systems

Display messages	Possible causes/consequences and ▶ Solutions
HOLD	* The HOLD function is deactivated because the vehicle is slipping or a condition for activation is not fulfilled. ▶ Reactivate the HOLD function later or check the activation conditions for the HOLD function (→ page 159).
ATTENTION ASSIST Inoperative	 * ATTENTION ASSIST is malfunctioning. ▶ Visit a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
	* ATTENTION ASSIST has detected fatigue or an increasing lack of concentration on the part of the driver $(\rightarrow$ page 161).
ATTENTION ASSIST: Take a Break!	If necessary, take a break.
1	* Cruise control cannot be activated as not all activation conditions are fulfilled.
(•)	ightharpoonup Observe the activation conditions for cruise control ($ ightharpoonup$ page 163).
mph	
Cruise Control Inoperative	* Cruise control is malfunctioning.
	Visit a qualified specialist workshop.
Cruise Control Off	* Cruise control has been deactivated.
	If there is an additional warning tone, cruise control has been deactivated automatically (\rightarrow page 162).
mph	 * Active Distance Assist DISTRONIC cannot be activated as not all activation conditions are fulfilled. ▶ Comply with the activation conditions of Active Distance Assist DISTRONIC (→ page 167).

Display messages	Possible causes/consequences and ▶ Solutions
Suspended	* If you depress the accelerator pedal beyond the setting of Active Distance Assist DISTRONIC, the system will switch to passive mode (→ page 164).
Off	* Active Distance Assist DISTRONIC was deactivated. If a warning tone also sounds, Active Distance Assist DISTRONIC has deactivated automatically (→ page 167).
Active Distance Assist Currently Unavailable See Operator's Manual	 * Active Distance Assist DISTRONIC is temporarily unavailable. The ambient conditions are outside the system limits (→ page 164). As soon as the ambient conditions are within the system limits, the system will become available again. Drive on carefully. or If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle.
Active Distance Assist Inoperative	 * Active Distance Assist DISTRONIC is malfunctioning. Other driving systems and driving safety systems may also be malfunctioning. Drive on carefully.

Display messages	Possible causes / consequences and ▶ Solutions
Active Steering Assist Cur- rently Unavailable Due to Multiple Emergency Stops	 * Active Steering Assist is temporarily unavailable due to multiple emergency stops. Take over the steering and stop in accordance with the traffic conditions. Switch the vehicle off and switch it back on Active Steering Assist is available once more.
Beginning Emergency Stop	 * Your hands are not on the steering wheel. An emergency stop is being initiated (→ page 173). ▶ Put your hands back on the steering wheel. You can cancel the deceleration at any time by performing one of the following actions: • Steering • Braking or accelerating • Deactivating Active Distance Assist DISTRONIC
	 * Active Steering Assist has reached the system limits (→ page 170). You have not steered independently for a considerable period of time. ▶ Take over the steering and drive on in accordance with the traffic conditions.
Traffic Sign Assist Cur- rently Unavailable See Operator's Manual	 * Traffic Sign Assist is temporarily unavailable. Once the cause of the problem is no longer present, the system will be available again. It is possible to continue driving in compliance with the traffic regulations. If the display message does not disappear, stop the vehicle safely and clean the windshield.

Display messages	Possible causes/consequences and ▶ Solutions
Traffic Sign Assist Inoperative	 * Traffic Sign Assist is malfunctioning. It is possible to continue driving in compliance with the traffic regulations. or Stop the vehicle in accordance with the traffic conditions and restart the vehicle. If the display message does not disappear: consult a qualified specialist workshop.
Traffic Sign Assist Camera View Restricted See Opera- tor's Manual	 * The camera view is restricted. Possible causes: Dirt on the windshield in the camera's field of vision Heavy rain, snow or fog Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. Once the cause of the problem is no longer present, the driving systems and driving safety systems will be available again. If the display message does not disappear: Stop the vehicle in accordance with the traffic conditions. Clean the windshield.
Blind Spot Assist Currently Unavailable See Operator's Manual	 * Blind Spot Assist is temporarily unavailable. The system limits have been reached (→ page 181). Once the cause of the problem is no longer present, the system will be available again. ▶ Drive on

Display messages	Possible causes/consequences and ▶ Solutions
	or
	If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle.
	If necessary, clean the rear bumper. If the bumper is especially dirty, the sensors in the bumper may be malfunctioning.
Blind Spot Assist Inopera-	* Blind Spot Assist is malfunctioning.
tive	▶ Drive on
	or
	Stop the vehicle in accordance with the traffic conditions and restart the vehicle.If the display message does not disappear: consult a qualified specialist workshop.
Active Blind Spot Assist	* Active Blind Spot Assist is temporarily unavailable.
Currently Unavailable See	The system limits have been reached (\rightarrow page 181).
Operator's Manual	Once the cause of the problem is no longer present, the system will be available again.
	▶ Drive on
	or
	If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle.
Active Blind Spot Assist	* Active Blind Spot Assist is malfunctioning.
Inoperative	▶ Drive on

Display messages	Possible causes/consequences and ▶ Solutions
	 Stop the vehicle in accordance with the traffic conditions and restart the vehicle. If the display message does not disappear: consult a qualified specialist workshop.
Active Lane Keeping Assist Currently Unavailable See Operator's Manual	 * Active Lane Keeping Assist is temporarily unavailable. The ambient conditions are outside the system limits (→ page 184). As soon as the ambient conditions are within the system limits, the system will become available again. Vehicles with Active Steering Assist: The camera view may be limited by the windshield. Drive on Vehicles with Active Steering Assist: If the display message does not disappear: Stop the vehicle in accordance with the traffic conditions. Clean the windshield.
Active Lane Keeping Assist Inoperative	 * Active Lane Keeping Assist is malfunctioning. Drive on or Stop the vehicle in accordance with the traffic conditions and restart the vehicle. If the display message does not disappear: consult a qualified specialist workshop.

Display messages Possible causes/consequences and ▶ Solutions Active Lane Keeping Assist * Vehicles without Active Steering Assist: the camera view is restricted. Camera View Restricted Possible causes: See Operator's Manual • Dirt on the windshield in the camera's field of vision · Heavy rain, snow or fog Driving systems and driving safety systems may be malfunctioning or temporarily unavailable. Once the cause of the problem is no longer present, the driving systems and driving safety systems will be available again. If the display message does not disappear: Stop the vehicle in accordance with the traffic conditions. Clean the windshield. * AIRMATIC is functioning only to a limited extent. The vehicle's handling characteristics may be affected. NOTE The tires on the front axle or the fenders could be damaged by large steering movements Malfunction Drive at Max. Avoid large steering movements while driving and listen for scraping sounds. 50 mph If you hear scraping sounds, pull over and stop the vehicle in accordance with the traffic conditions, and set a higher vehicle level if possible. Drive in a manner appropriate for the current level, but do not exceed 50 mph (80 km/h). Visit a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
	* DYNAMIC BODY CONTROL is malfunctioning. The vehicle's handling characteristics may be affected. Do not drive at speeds greater than 50 mph (80 km/h). Visit a qualified specialist workshop.
Stop Vehicle Vehicle Too Low	 * You have pulled away despite the vehicle level being too low. Stop the vehicle in accordance with the traffic conditions. The vehicle will be raised to the selected vehicle level. Wait until the display message disappears before pulling away. If the display message does not disappear and a warning tone also sounds, AIRMATIC is malfunctioning: Do not drive at speeds greater than 50 mph (80 km/h) and consult a qualified specialist workshop immediately.
	NOTE The tires on the front axle or the fenders could be damaged by large steering movements Avoid large steering movements while driving and listen for scraping sounds. If you hear scraping sounds, pull over and stop the vehicle in accordance with the traffic conditions, and set a higher vehicle level if possible. Set a higher vehicle level (→ page 188). Depending on the malfunction, the vehicle will be raised.

Display messages	Possible causes/consequences and ▶ Solutions
Lowering	 * The vehicle level will lower for the following reasons: You have selected a different drive program. You have exceeded the speed limit. You have changed the vehicle level by pressing the button.
Vehicle Rising	* Your vehicle is adjusting to the level you have selected.
Vehicle Rising Please Wait	* The vehicle level is too low. The vehicle will be raised to the selected vehicle level. Nait until the display message disappears before pulling away.
Drive More Slowly	* You are driving too fast for the selected vehicle level. To adjust the vehicle level, you must not drive at speeds greater than 37 mph (60 km/h).

Display messages	Possible causes/consequences and ▶ Solutions
Parking Assist Maneuver- ing Assistance Restricted See Operator's Manual	 * The Parking Assist maneuvering assistant is temporarily unavailable or only partially available. ▶ Clean all sensors of the parking and camera system (→ page 332). ▶ If the display message still appears, consult a qualified specialist workshop.
Parking Assist and PARKTRONIC Inoperative See Operator's Manual	 * Vehicles with Active Parking Assist: Active Parking Assist and Parking Assist PARKTRONIC are malfunctioning. Vehicles without Active Parking Assist: Parking Assist PARKTRONIC is malfunctioning. Stop the vehicle in accordance with the traffic conditions and restart the vehicle. If the display message still appears, consult a qualified specialist workshop.

Driving safety systems



Possible causes/consequences and ▶ Solutions

* ABS and ESP® are temporarily unavailable. Other driving systems and driving safety systems (e.g. BAS) may also be temporarily unavailable. The brake system will continue to operate normally. Braking distance may increase in an emergency braking situation.



The wheels may lock during braking and ESP® does not perform any vehicle stabilization.

Display messages	Possible causes/consequences and ▶ Solutions
	The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off.
	Drive carefully on a suitable stretch of road, making slight steering movements at a speed above 19 mph (30 km/h).
	If the display message does not disappear, consult a qualified specialist workshop immediately. Drive carefully.
(ABS)	* ABS and ESP® are malfunctioning. Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning. The brake system will continue to operate normally. Braking distance may increase in an emergency braking situation.
	★ WARNING Risk of skidding if ABS and ESP [®] are malfunctioning
Inoperative See Operator's Manual	The wheels may block during braking and ESP® does not perform any vehicle stabilization. The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off. Drive on carefully.
	► Have ABS and ESP® checked immediately at a qualified specialist workshop.

Display messages

Currently Unavailable See Operator's Manual

Possible causes/consequences and ▶ Solutions

* ESP® is temporarily unavailable.

Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning.

▲ WARNING Risk of skidding if ESP is malfunctioning®

If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilization. In addition, other driving safety systems are switched off.

- Drive carefully on a suitable stretch of road, making slight steering movements at a speed above 19 mph (30 km/h).
- If the display message does not disappear, consult a qualified specialist workshop immediately. Drive carefully.



Inoperative See Operator's Manual

* ESP® is malfunctioning.

Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning.

The brake system will continue to operate normally. Braking distance may increase in an emergency braking situation.

A WARNING Risk of skidding if ESP® is malfunctioning

If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilization. In addition, other driving safety systems are switched off.

- Drive on carefully.
- ► Have ESP® checked at a qualified specialist workshop.

Display messages



Inoperative See Operator's Manual

Active Brake Assist Functions Currently Limited See Operator's Manual

Possible causes/consequences and ▶ Solutions

* EBD, ABS and ESP® are malfunctioning.

Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning.

WARNING Risk of skidding if EBD, ABS and ESP® are malfunctioning

The wheels may block during braking and ESP® does not perform any vehicle stabilization.

The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off.

- Drive on carefully.
- ▶ Have the brake system checked immediately at a qualified specialist workshop.
- * Vehicles with the Driving Assistance Package: Active Brake Assist with cross-traffic function, Evasive Steering Assist or PRE-SAFE® PLUS are temporarily unavailable or only partially available.

Vehicles without the Driving Assistance Package: Active Brake Assist is temporarily unavailable.

- Drive on carefully.
 - As soon as the ambient conditions are within the system limits, the system will become available again.

10

 If the display message does not disappear, stop the vehicle in accordance with the traffic conditions and restart the vehicle.

Display messages	Possible causes/consequences and ▶ Solutions
Active Brake Assist Functions Limited See Operator's Manual	 * For vehicles with the Driving Assistance Package, the following functions may be temporarily unavailable or only partially available: Active Brake Assist with cross-traffic function Evasive Steering Assist PRE-SAFE® PLUS
	Vehicles without the Driving Assistance Package: Active Brake Assist is temporarily unavailable or only partially available.
	▶ Drive on carefully.
	or
	Stop the vehicle in accordance with the traffic conditions and restart the vehicle.If the display message does not disappear: consult a qualified specialist workshop.
Radar Sensors Dirty See	* The radar sensor system is malfunctioning. Possible causes:
Operator's Manual	Dirt on the sensors
	Heavy rain or snow
	Extended country driving without other traffic, e.g. in the desert
	Driving systems and driving safety systems may be malfunctioning or temporarily unavailable.
	Once the cause of the problem is no longer present, the driving systems and driving safety systems will be available again.
	If the display message does not disappear:

Display messages	Possible causes/consequences and ▶ Solutions
	Stop the vehicle in accordance with the traffic conditions.
	Clean all sensors (→ page 332).
	Restart the vehicle.

Mercedes-Benz emergency call system

Display messages	Possible causes/consequences and ▶ Solutions
SOS Inoperative	 * The Mercedes-Benz emergency call system is malfunctioning. The Mercedes me connect system is also malfunctioning. Consult a qualified specialist workshop.
Mercedes me connect Services Limited See Oper- ator's Manual	 * The vehicle functions for malfunction detection are restricted. At least one of the main functions of the Mercedes me connect system is malfunctioning. ▶ Observe the notes on the diagnostics connection (→ page 26). ▶ Consult a qualified specialist workshop.

Battery

Display messages



12 V Battery See Operator's Manual



See Operator's Manual

Possible causes/consequences and ▶ Solutions

- * The vehicle is off and the condition of charge of the 12 V battery is too low.
 - Switch off electrical consumers that are not required.
 - Drive for 30-60 mins.

or

- \triangleright Charge the 12 V battery when stationary (\rightarrow page 347).
- * If the message appears while the vehicle is switched on, this indicates an on-board electrical system malfunction.
 - Visit a qualified specialist workshop.
- * The 12 V battery is not being charged.
 - I NOTE Possible engine damage if you continue driving
 - Do not continue driving under any circumstances.
 - Consult a qualified specialist workshop.
 - Stop immediately in accordance with the traffic conditions and switch off the vehicle.
 - Consult a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
رمــــــــــــــــــــــــــــــــــــ	* The 12 V battery is no longer being charged and the state of charge is too low.
[]	I NOTE Possible engine damage if you continue driving
Stop Vehicle See Opera-	▶ Do not continue driving under any circumstances.
tor's Manual	Consult a qualified specialist workshop.
	Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving.
	> Switch off the vehicle.
	Consult a qualified specialist workshop.
	* The 12 V battery condition of charge is too low.
<u> </u>	Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving.
Stop Vehicle Leave Engine	➤ Leave the engine running.
Running	➤ If the display message disappears: drive on.
	If the display message does not disappear: consult a qualified specialist workshop.

Tire pressure monitor

Display messages	Possible causes/consequences and ▶ Solutions
Tire Press. Monitor Currently Unavailable	* There is interference from a powerful radio signal source As a result, no signals from the tire pressure sensors are being received. The tire pressure monitoring system is temporarily unavailable. The tire pressure monitoring system will restart automatically as soon as the cause has been rectified. Drive on.
Tire Press. Monitor Inoperative	* The tire pressure monitoring system is malfunctioning.
uve	WARNING There is a risk of an accident if the tire pressure monitoring system is malfunctioning
	The tire pressure monitoring system cannot issue a warning if there is pressure loss in one or more of the tires. Tires with insufficient tire pressure may impair the driving characteristics as well as steering and braking. Have the tire pressure monitoring system checked at a qualified specialist workshop.
Tire Pressure Monitor Inoperative No Wheel Sensors	* The wheels installed do not have suitable tire pressure sensors. The tire pressure monitoring system is deactivated. Install wheels with suitable tire pressure sensors.
Wheel Sensor(s) Missing	 * There is no signal from the tire pressure sensor of one or more wheels. No pressure value is displayed for the affected tire. Have the faulty tire pressure sensor replaced at a qualified specialist workshop.

Display messages	Possible causes/consequences and ▶ Solutions
715	* The tire pressure in one or more tires has dropped significantly. The wheel position is displayed. A warning tone will also sound.
Check Tires	WARNING Risk of an accident due to insufficient tire pressure
	 The tires can burst. The tires can wear excessively and/or unevenly. The driving characteristics as well as the steering and braking may be greatly impaired.
	You could then lose control of the vehicle. Observe the recommended tire pressures. Adjust the tire pressure if necessary.
	 Stop the vehicle in accordance with the traffic conditions. Check the tire pressure (→ page 358) and the tires.
<u>(!)</u>	 * The tire pressure is too low in at least one of the tires, or the difference in tire pressure between the individual wheels is too great. Check the tire pressure and add air, if necessary.
Please Correct Tire Pressure	When the tire pressure is correct, restart the tire pressure monitor (\rightarrow page 363).

Display messages	Possible causes/consequences and ▶ Solutions
7.5	* The tire pressure in one or more tires has dropped suddenly. The wheel position will be displayed.
	WARNING Risk of an accident from driving with a flat tire
Warning Tire Malfunction	 The tires can overheat and be damaged. The driving characteristics as well as the steering and braking characteristics may be greatly impaired.
	You could then lose control of the vehicle.
	Do not drive with a flat tire.
	Do not exceed the maximum permissible driving distance in emergency mode and the maximum permissible speed with a flat MOExtended tire.
	▶ Observe the notes on flat tires.
	Notes in the event of a flat tire (\rightarrow page 337).
	Stop the vehicle in accordance with the traffic conditions.
	► Check the tires.
Tires Overheated	* At least one tire is overheating. The affected tires are displayed in red. At temperatures close to the limit value, the tires are displayed in yellow.
	WARNING Risk of an accident from driving with overheated tires
	Overheated tires can burst.

Display messages	Possible causes/consequences and ▶ Solutions				
	▶ Reduce speed so that the tires cool down.				
Decrease Speed	* At least one tire is overheating. The affected tires are displayed in red. At temperatures close to the limit value, the tires are displayed in yellow.				
	★ WARNING Risk of an accident from driving with overheated tires				
	Overheated tires can burst.				
	Reduce speed so that the tires cool down.				

Tire pressure loss warning system

Display messages	Possible causes/consequences and ▶ Solutions
Check Tire Pressure Soon	* Canada only: The tire pressure loss warning system has detected a significant loss of pressure.
	▲ WARNING Risk of an accident due to insufficient tire pressure
	The tires can burst.
	The tires can wear excessively and/or unevenly.
	The driving characteristics as well as the steering and braking may be greatly impaired.

Display messages	Possible causes/consequences and ▶ Solutions
	You could then lose control of the vehicle. Observe the recommended tire pressures. Adjust the tire pressure if necessary.
	 Stop the vehicle in accordance with the traffic conditions. Check the tire pressure (→ page 358) and the tires. When the tire pressure is correct, restart the tire pressure loss warning system (→ page 363).
Check Tire Pressure Then Restart Run Flat Indicator	 * Canada only: The tire pressure loss warning system generated a display message and has not been restarted since. ▶ When the tire pressure is correct, restart the tire pressure loss warning system (→ page 363).
Run Flat Indicator Inoperative	 * Canada only: The tire pressure loss warning system is malfunctioning. ▶ Consult a qualified specialist workshop.

Engine oil

Display messages Possible causes/consequences and ▶ Solutions * The engine oil level has dropped to the minimum level. NOTE Engine damage caused by driving with insufficient engine oil Check Engine Oil At Next Avoid long journeys with insufficient engine oil. Refueling Check the engine oil level when next refueling. Add engine oil (\rightarrow page 325). Notes on engine oil (\rightarrow page 394). * Display message only for certain engines: The engine oil level has dropped to the minimum level. **NOTE** Engine damage caused by driving with insufficient engine oil Check Engine Oil Level (Add 1 quart) Avoid long journeys with insufficient engine oil. When next refueling, add 1.1 US qt (1 I) of engine oil (→ page 325). Notes on engine oil (\rightarrow page 394).

Display messages * Display message only for certain engines: The oil pressure is too low. INOTE Engine damage caused by driving with insufficient oil pressure Avoid driving with insufficient oil pressure. Stop the vehicle immediately in accordance with the traffic conditions. Do not continue driving. Switch off the vehicle. Consult a qualified specialist workshop. * The electrical connection to the oil level sensor has been interrupted or the oil level sensor is faulty. Consult a qualified specialist workshop.

Warning and indicator lamps

Overview of indicator and warning lamps

Some systems will perform a self-test when the vehicle is switched on. Some indicator and warn-

ing lamps may briefly light up or flash. This behavior is non-critical. These indicator and warning lamps indicate a malfunction only if they light up or flash after the vehicle has been started or during a journey.

Standard instrument display



Widescreen cockpit instrument display



Depending on the display setting, the positions of the indicator lamps on the instrument display may differ from the example shown.

Indicator and warning lamps:

⊕!

<u>- +</u>

(P)

PARK

(P)

RBS

₽i Restraint system (\rightarrow page 452)

Ä Seat belt (\rightarrow page 452)

Power steering (\rightarrow page 453) ₫.

Coolant temperature (\rightarrow page 454)

Engine diagnostics (\rightarrow page 454) Electrical malfunction (\rightarrow page 454)

Reserve fuel with fuel filler flap location indicator (\rightarrow page 454)

Electric parking brake (yellow)

 $(\rightarrow page 458)$

USA: electric parking brake (red)

 $(\rightarrow page 458)$

Canada: electric parking brake (red)

 $(\rightarrow page 458)$

USA: Recuperative Brake System

 $(\rightarrow page 458)$

(!)) Canada: brakes (vellow)

 $(\rightarrow page 458)$

USA: brakes (red) (\rightarrow page 458) BRAKE

(I) Canada: brakes (red) (\rightarrow page 458)

Distance warning (\rightarrow page 461) **a**!a

Active Brake Assist (→ page 461) OFF ≫!æ Active Brake Assist (→ page 461)

٩ AIRMATIC (\rightarrow page 461)

9))) DYNAMIC BODY CONTROL

 $(\rightarrow page 461)$ (ABS) ABS (\rightarrow page 462)

2 5 ESP^{\otimes} (\rightarrow page 462)

ÖFF $ESP^{\otimes} OFF (\rightarrow page 462)$

(i) Tire pressure monitoring system

 $(\rightarrow page 464)$

-300€ Standing lights (\rightarrow page 112)

■D Low beam (\rightarrow page 112)

≣D High beam (\rightarrow page 113)

4 4 Turn signal lights (\rightarrow page 113)

0≑ Rear fog light (\rightarrow page 112)

Symbols on the central display:

Drive Away Assist (→ page 202)

 \triangle Cross Traffic Alert (\rightarrow page 203)

Occupant safety

Warning/indicator lamp



Restraint system warning lamp

Possible causes/consequences and ▶ Solutions

* The restraint system red warning lamp is lit while the vehicle is on. The restraint system is malfunctioning (→ page 37).

WARNING Risk of injury due to malfunctions in the restraint system

Components in the restraint system may be activated unintentionally or not deploy as planned in an accident.

- Have the restraint system checked and repaired immediately at a qualified specialist workshop.
- Drive on carefully.
- Note the messages on the instrument display.
- Consult a qualified specialist workshop immediately.



Seat belt warning lamp

* The red seat belt warning lamp flashes and an intermittent warning tone sounds.

or

The red seat belt warning lamp lights up for six seconds once the vehicle has started.

In addition, an intermittent warning tone may sound.

The red seat belt warning lamp flashes and an intermittent warning tone sounds:

Vehicle

Possible causes/consequences and ➤ Solutions * The red power steering warning lamp is lit while the vehicle is running. The power assistance or the steering itself is malfunctioning. • WARNING Risk of accident if steering capability is impaired If the steering does not function as intended, the vehicle's operating safety is jeopardized.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
	 Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances. Consult a qualified specialist workshop.
	Note the messages on the instrument display.

Engine

Warning/indicator lamp



Coolant warning lamp

Possible causes/consequences and ▶ Solutions

* The red coolant warning lamp is lit while the engine is running.

Possible causes:

- The temperature sensor is malfunctioning
- The coolant level is too low
- The air supply to the radiator is obstructed
- The radiator fan is faulty
- The coolant pump is faulty

If there is an additional warning tone, the coolant temperature has exceeded the maximum permissible temperature.

Warning/indicator lamp

Possible causes/consequences and ▶ Solutions

WARNING Risk of burns when opening the hood

If you open the hood in the event of an overheated engine or fire in the engine compartment, the following situations may occur:

- · You may come into contact with hot gases.
- You may come into contact with other escaping hot operating fluids.
- ▶ Before opening the hood, allow the engine to cool down.
- ▶ In the event of a fire in the engine compartment, keep the hood closed and call the fire service.
- Stop immediately in accordance with the traffic conditions and switch off the vehicle. Do not continue driving.
- Note the messages on the instrument display.

If the coolant temperature display is at the lower end of the temperature scale:

Consult a qualified specialist workshop.

If the coolant temperature display is at the upper end of the temperature scale:

- Exit the vehicle and keep a safe distance from it until the engine has cooled down.
- Check the coolant level (\rightarrow page 327).
- Make sure that the air supply to the radiator is not obstructed.
- Consult a qualified specialist workshop.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
	Avoiding high loads on the engine, drive to the nearest qualified specialist workshop. In doing so, ensure that the coolant temperature display remains below the red area.
HP	* The yellow Check Engine warning lamp is lit while the engine is running. A malfunction has occurred in the engine, the exhaust system or the fuel system.
<u>'`</u>	The emission limit values may be exceeded and the engine may be in emergency mode.
Engine diagnosis warning lamp	In some states, legal requirements stipulate that you must immediately consult a qualified specialist workshop as soon as the yellow Check Engine warning lamp lights up.
	► Have the vehicle checked as soon as possible at a qualified specialist workshop.
- +	* The red electrical malfunction warning lamp is lit. There is a malfunction in the electrics.
	Note the messages on the instrument display.
Electrical malfunction warning lamp	
	* The yellow fuel reserve warning lamp lights up while you are driving. or
Fuel reserve warning lamp	The yellow fuel reserve warning lamp lights up while the engine is running. The yellow fuel reserve warning lamp lights up while you are driving:
	There has been pressure loss in the fuel system. The fuel filler cap is not closed correctly or the fuel system is leaking. Close the fuel filler cap.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
	If the fuel filler cap has already been closed correctly:
	Consult a qualified specialist workshop. The yellow fuel reserve warning lamp lights up while the engine is running:
	The fuel supply has dropped into the reserve range.
	► Refuel.

Brakes

Warning/indicator lamp



Electric parking brake indicator lamp (red) (USA only)



Electric parking brake indicator lamp (red) (Canada only)



The electric parking brake (yellow) indicator lamp

Possible causes/consequences and ▶ Solutions

* The red electric parking brake indicator lamp flashes or is lit.

The yellow electric parking brake indicator lamp is also lit in the event of a malfunction.

Note the messages on the instrument display.

Warning/indicator lamp

RBS

Recuperative Brake System warning lamp (USA only)



Brakes warning lamp (yellow) (Canada only)

Possible causes/consequences and ▶ Solutions

*The yellow RBS warning lamp (USA only) or the yellow (1) brake warning lamp (Canada only) is lit while the vehicle is running.

WARNING Risk of an accident due to a brake system malfunction

If the brake system is malfunctioning, braking characteristics may be impaired.

- Drive on carefully.
- ► Have the brake system checked immediately at a qualified specialist workshop.
- Adjust your speed and drive on carefully, leaving a suitable distance to the vehicle in front.
- If the instrument display shows a display message, observe it.
- Consult a qualified specialist workshop.

Warning/indicator lamp



Brake warning lamp (USA only)



Brake system warning lamp (Canada only)

Possible causes/consequences and ▶ Solutions

- * The red brake warning lamp is lit while the vehicle is running. Possible causes:
 - The brake force boosting is malfunctioning and the braking characteristics may be affected.
 - There is insufficient brake fluid in the brake fluid reservoir.
- Note the messages on the instrument display.
- **WARNING** Risk of accident and injury if brake force boosting is malfunctioning

If brake force boosting is malfunctioning, increased brake pedal force may be necessary for braking. The braking characteristics may be impaired. The braking distance can increase in emergency braking situations.

- ▶ Stop in a safe location immediately. Do not continue driving.
- Consult a qualified specialist workshop.
- **WARNING** Risk of an accident due to low brake fluid level

If the brake fluid level is too low, the braking effect and the braking characteristics may be impaired.

- Pull over and stop the vehicle safely as soon as possible, paying attention to road and traffic conditions. Do not continue driving under any circumstances.
- Consult a qualified specialist workshop.
- Do not add brake fluid.

Driving systems

Warning/indicator lamp



Warning lamp for distance warning function



Suspension warning lamp (yellow)

Possible causes/consequences and ▶ Solutions

* The red distance warning lamp lights up while the vehicle is in motion.

The distance to the vehicle in front is too small for the speed selected. If there is an additional warning tone, you are approaching an obstacle at too high a speed.

- Be prepared to brake immediately.
- Increase the distance.

Function of Active Brake Assist (\rightarrow page 175).

* The yellow AIRMATIC warning lamp is lit.

The yellow DYNAMIC BODY CONTROL warning lamp is lit.

A malfunction has occurred in AIRMATIC.

A malfunction has occurred in the DYNAMIC BODY CONTROL.

Note the messages on the instrument display.

Driving safety systems

Warning/indicator lamp



ABS warning lamp

Possible causes/consequences and ▶ Solutions

* The yellow ABS warning lamp is lit while the vehicle is running. ABS is malfunctioning.

If an additional warning tone sounds, EBD is malfunctioning.

Other driving systems and driving safety systems may also be malfunctioning.

Note the messages on the instrument display.



WARNING There is a risk of skidding if EBD or ABS is malfunctioning

The wheels may lock during braking.

The steerability and braking characteristics are heavily impaired and the braking distance may increase. In addition, other driving safety systems are switched off.

- Drive on carefully.
- ► Have the brake system checked immediately at a qualified specialist workshop.



ESP® warning lamp

* The yellow ESP® warning lamp flashes while the vehicle is in motion.

The yellow ESP® warning lamp is lit while the vehicle is running.

The yellow ESP® warning lamp flashes while the vehicle is in motion:

One or more wheels have reached their grip limit (\rightarrow page 157).

Adapt your driving style to suit the road and weather conditions.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
	The yellow ESP® warning lamp is lit while the vehicle is running. ESP® is malfunctioning. Other driving systems and driving safety systems (e.g. BAS) may also be malfunctioning. ▶ Note the messages on the instrument display.
	★ WARNING Risk of skidding if ESP [®] is malfunctioning
	If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilization. In addition, other driving safety systems are switched off. Drive on carefully. Have ESP® checked at a qualified specialist workshop.
OFF ESP® OFF warning lamp	* The yellow ESP® OFF warning lamp is lit while the vehicle is running. ESP® is deactivated. Other driving systems and driving safety systems may also be inoperative.
	★ WARNING Risk of skidding when driving with ESP [®] deactivated
	ESP® does not act to stabilize the vehicle. The availability of further driving safety systems is also limited. Drive on carefully. Deactivate ESP® only for as long as the situation requires.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
	If ESP® cannot be activated, ESP® is malfunctioning. ► Have ESP® checked immediately at a qualified specialist workshop.
	▶ Observe the notes on deactivating ESP $^{\otimes}$ (\rightarrow page 157).

Tire pressure monitor

Warning/indicator lamp



Tire pressure monitoring system warning lamp

Possible causes/consequences and ▶ Solutions

*The yellow tire pressure monitor warning lamp (pressure loss/malfunction) flashes for approximately one minute and then remains lit.

٥ı

The yellow tire pressure monitoring system warning lamp (pressure loss/malfunction) is lit.

The yellow tire pressure monitor warning lamp (pressure loss/malfunction) flashes for approximately one minute and then remains lit:

The tire pressure monitor is malfunctioning.

WARNING There is a risk of an accident if the tire pressure monitoring system is malfunctioning

The tire pressure monitoring system cannot issue a warning if there is pressure loss in one or more of the tires.

Tires with insufficient tire pressure may impair the driving characteristics as well as steering and braking.

Warning/indicator lamp	Possible causes/consequences and ▶ Solutions
	▶ Have the tire pressure monitoring system checked at a qualified specialist workshop.
	The yellow tire pressure monitoring system warning lamp (pressure loss/malfunction) is lit: The tire pressure monitoring system has detected tire pressure loss in at least one of the tires.
	WARNING Risk of an accident due to insufficient tire pressure
	The tires can burst.
	The tires can wear excessively and/or unevenly.
	The driving characteristics as well as the steering and braking may be greatly impaired.
	You could then lose control of the vehicle.
	▶ Observe the recommended tire pressures.
	Adjust the tire pressure if necessary.
	Stop the vehicle in accordance with the traffic conditions.
	➤ Check the tire pressure and the tires.

Index

1, 2, 3 (SmartKey) battery	Active Blind Spot Assist Brake application	183	Active Lane Keeping Assist Activating/deactivating Activating/deactivating the warning Function Active Parking Assist, Parking assistance syst	187 184
Setting favorites	4 Active Brake Assist Function		Exiting a parking spaceParking assistance syst	201
A A/C function Activating/deactivating (operating	Setting Active Distance Assist DISTRONIC		Active Service System PLUS, ASSYST PLUS	321
Activating deactivating (operating unit)	Active Emergency Stop Assist	173 174	Active Speed Limit Assist Active Steering Assist Activating/deactivating	172
Acceleration Kickdown	Deactivating4	167 164		
Accident and Breakdown Management Mercedes me connect	Route-based speed adaptation	169	Adaptive cruise control, Active Distance Assist DISTRONIC	169
Accident, emergency call	Active Emergency Stop Assist, Driving system	173 115 175	Adaptive Highbeam Assist, High beam Activating/deactivating Function Additives Engine oil Fuel.	115394

Adjusting bass, mid-range and treble set- tings		Adjusting treble, mid-range and bass settings	319	Front airbag (driver, front passenger) Installation locations	
Advanced sound system 3	319	Calling up the sound menu	319	Knee airbag	. 43
Adjusting mid-range, treble and bass settings		Information Switching loudness normalization	319	OverviewPASSENGER AIR BAG indicator lamps	. 43 . 47
Advanced sound system 3	319	on/off	320	Protection	
Adjusting the balance/fader		After-sales service, ASSYST PLUS	321	Side airbag Window curtain airbag	. 43 . 43
,	320	Air bag	0.7	Airflow	
,	319	Deployment	3/	Setting	124
Adjusting the bass, mid-range and treble	240	Reduced protection	43	AIRMATIC	
,	319	lonization	125	Air suspension	187
Adjusting the mid-range, treble and bass			125	Vehicle level	
Burmester [®] surround sound system 3	319	Air distribution	194	Alarm system, ATA	. 83
Adjusting the sound focus		Setting		All-wheel drive, 4MATIC	
Burmester® surround sound system 3	319	•	126		
Adjusting treble, mid-range and bass set-		Air inlet	328	Alternative route	256
tings		Air pressure	358	Ambient lighting	117
Advanced sound system 3	319	Air vents		Android Auto	
Burmester® surround sound system 3	319	Setting	127	Connecting a mobile phone (wireless)	286
ADS PLUS damping system, AIRMATIC		Air/water duct		Ending	287
	187	Airbag, Occupant safety		Information	286
Advanced sound system Adjusting the balance/fader	320	Automatic front passenger airbag shut off	46	Sound settings Transferred vehicle data	

Android smartphone, Android Auto	285	Interior protection	. 85	Automatic climate control	125
Animals Pets in the vehicle	62	Tow-away alarm Tow-away protection		Automatic distance control, Active Distance Assist DISTRONIC, DISTRONIC	164
Anti-lock braking system, ABS		ATA (anti-theft alarm system)	0.4	Automatic driving lights	113
Anti-theft alarm system, ATA	83	Interior protection function	. 84	Automatic engine start/stop	
Anti-theft protection, ATA		ATTENTION ASSIST, Attention assistant Function	161	ECO start/stop function	136
Immobilizer	82	Setting		Automatic front passenger air bag deacti-	
Apple CarPlay®		Audio mode		vation system	16
Connecting an iPhone® (cable)	285	Activating media mode	300	Function	40
Ending		Connecting USB devices	302	Automatic front passenger airbag shutoff,	
Notes		Copyright		PASSENGER AIR BAG status display	47
Overview		Information	298	PASSENGER AIR BAG indicator lamps	
Sound settings		Inserting/removing an SD card	300	Automatic mirror folding function	123
Transferred vehicle data	287	Media search	306	Automatic transmission	
Approval numbers	389	Overview		Changing gears	140
Assistance systems	156	Pause and playback function		DIRECT SELECT lever	140
ASSYST PLUS		Selecting a track		Drive programs	138
Battery disconnection periods	322	Selecting playback options		DYNAMIC SELECT switch	
	321	Track list		Engaging drive position	142
Service requirements		Authorized Mercedes-Benz Service Center	27	Kickdown	144
ATA	02.	Authorized workshop	. 27	0 0	143
Deactivating the alarm	83	Automatic car wash		Steering wheel paddle shifters Transmission position display	
Function	83	Automatic car wash mode	328	Transmission positions	

Autonomous braking	175	OverviewSearching for a track		Limited braking effect (salt-treated roads)	133
B Bag hook	105	Searching for and authorizing the device	309	New/replaced brake linings/brake discs	
BAS, Brake Assist System		Selecting a media player Switching device via NFC		Braking assistance, Brake Assist System	15
Battery (12 V battery) Charging Notes	344	Bluetooth® Audio (multimedia system) Information		Breakdown Changing a wheel Flat tire	337
Replacing Starting assistance		Active Brake Assist	175 157	Overview of the help functions	350
Battery (starter battery) charging, Remote Online	130	Brake Assist System (BAS) Brake Assist System, BAS		Towing away Transporting the vehicle	35
Belt		Brake fittings	131	Breakdown (Roadside Assistance)	
Blind Spot Assist, Active Blind Spot Assist		Brake fluid	395	Breaking-in notes	13
Activating/deactivatingFunction		Brake force distribution, EBD	159	Burmester® surround sound system Adjusting the balance/fader	
Bluetooth®, System settings Activating/deactivating Information		ABS (Anti-lock Braking System)ABS, BAS, EBDActive Brake Assist	156 175	Adjusting the sound focus Adjusting treble, mid-range and bass settings Automatic volume adjustment	319
Bluetooth® audio Activating De-authorizing (de-registering) the device		Breaking-in notes Driving tips HOLD function		Calls up the sound menu	318

Car wash	328	Central locking system	
Care			
Air/water duct	328		
Automatic car wasn		Change of address	24
Decorative foil		Change of ownership	24
Display			
LATERIOR REPUBLICA		Preparation	380
		Removing a wheel	384
Plastic trim	333	Character entry	
Power washers	329	Using the controller	233
		Charging	
		12 V battery	347
		G	02,
			51
•			
Cargo tie-down rings	104	Installing ISOFIX	56
Caring for plastic trim	333	Risks/dangers	52
	333		
Carina for rises		Securing on the rear seat with the	
-		seat belt	59
,			
Caring for trim elements	333	with the seat belt	61
	Care Air/water duct	Air/water duct	Care Air/water duct

Top Tether	. 58	Control panel for 3-zone automatic climate control	124	COC papers, CERTIFICATE OF CONFORM-	388
Avoiding dangers in the vehicle		Control panel for dual-zone automatic climate control	124	Cockpit Dashboard	6
Special seat belt retractor		Defrosting the windshield	124		
•		Filling capacity for refrigerant and		Coffee cup symbol, ATTENTION ASSIST	101
Chock		PAG oil		Collision detection (parked vehicle)	. = 0
Clean varnish	330	Fragrance system	126	Information	153
Cleaning		Front air vents	127	COMAND Touch	
Air/water duct		Inserting/removing the flacon (fra-	407	Managing devices	238
Automatic car wash		grance system)		Combination switch	
Decorative foil		lonization	125	Lights	113
Paint	330	Notes Rear passenger compartment air vents	127		118
Power washers		Refrigerant	397	Compass	270
Vehicle interior		Removing condensation from the win-	377	Component-specific information	
Vehicle parts		dows	125	•	
Cleaning carpets	333	Setting the air distribution		Connecting the parcel net	100
Cleaning seat covers	333	Setting the airflow	124	Connection status	
Climate control		Setting the vehicle interior tempera-		Displaying	
Activating/deactivating	124	ture	124	Overview	296
Activating/deactivating the A/C func-		Switching air-recirculation mode		Contacts	
tion (control panel)	125	on/off	125	Calling up	279
Activating/deactivating the synchro-		Switching the rear window heater		Deleting	281
\ 1 /		on/off		8 ()	279
Automatic control	125	Ventilating with convenience opening	. //	Importing	280

Information	227 77 77	Cruise control 163 Activating	Multimedia system / Mercedes me connect	32 34 17 83
Coolant	396	D	Dealership	2/
Coolant (engine) Capacity	396	Dashboard Cockpit	Declaration of conformity Wireless vehicle components	26
Copyright License	34	Data import/export, System settings Function/notes	Decorative foil	
Copyrights	0.4	Importing/exporting240	Tires and loading 37	74
Trademarks Cornering light Correct use Cover, Roller sunblind Cross Traffic Alert, Cross traffic warning	115 28 79 203	Data processing in the vehicle30Data protection rights33Data storage33Data protection rights33Electronic control units30Event Data Recorder33	Destination Editing intermediate destinations	62 62 62 62

Storing a map position Destination entry	262	Manual gearshifting Selecting park position	143 142	BRAKE Check Brake Fluid Level	423
Entering a 3 word address Entering a POI or address	247	Display Care	333	ator's Manual	414
Entering an intermediate destination Entering geo-coordinates Selecting a contact	252	Display (multimedia system) Settings	234	eling	448
Selecting from the map Selecting previous destinations	253	Display (on-board computer) Displays on the instrument display	208	quart)	
Destination entry (multimedia system) Selecting a POI	250	Display message Calling up in the on-board computer	400	☼ Check Left Low Beam (example)☼ Check Tires	444
Detecting inattentiveness, ATTENTION ASSIST	161	Display messages mph		Check Washer Fluid Coolant Too Hot Stop Vehicle	413
Diagnostics connection		下 12 V Battery See Operator's	425	Turn Engine Off	415
Digital Operator's Manual Dinghy towing, Tow bar system		Manual	441	Currently Unavailable See Operator's Manual	435
Pulling/towing DIRECT SELECT lever		Active Headlamps Inoperative		Currently Unavailable See Operator's Manual	437
Automatic transmission Engaging neutral Engaging park position automatically	141	ATTENTION ASSIST: Take a Break!	425	Don't Forget Your Key	
Engaging reverse gear Function Gearshift recommendation	141 140	Automatic Headlamp Mode Inoperative	407	Engine Oil Level Cannot Be Measured	

Engine Oil Level Low Stop Vehi-		Key Not Detected (Red display		Replace Key Battery	404
cle Turn Engine Off	449	message)	405	See Operator's Manual	441
Engine Oil Pressure Stop Switch		Key Not Detected (white dis-		SRS Malfunction Service	
Off Engine	450	play message)	404	Required	401
Engine Oil Reduce Oil Level	449	Left Side Curtain Airbag Mal-		9 ! Steering Malfunction Increased	
★ Front Left Malfunction Service		function Service Required (example)	401	Physical Effort See Operator's Manual	411
Required (example)	401	Lowering	434	9 ! Steering Malfunction Stop	
Front Left Seat Backrest Not		Malfunction Drive at Max. 50		Immediately See Operator's Manual	411
Locked (example)	413	mph	432	Stop Vehicle Leave Engine Run-	
Fuel Level Low	416	Malfunction See Operator's		ning	442
Gas Cap Loose	416	Manual	407	Stop Vehicle See Operator's	
(a) Inoperative See Operator's		Obtain a New Key	404	Manual	442
Manual	436	₱ ₹₹ Off	426	Stop Vehicle Vehicle Too Low	433
[] Inoperative See Operator's		HOLD Off	424	Suspended	426
Manual	437	PARK Parking Brake See Operator's		Switch Off Lights	408
EBD Inoperative See Operator's		Manual	419	Switch On Headlamps	407
Manual	438	(!) Please Correct Tire Pressure	444	PARK Turn On the Ignition to Release	
§sos Inoperative	440	PARK Please Release Parking Brake	422	the Parking Brake	423
🌣 Intell. Light System Inoperative	408	Rear Left Backrest Not		★ Vehicle Ready to Drive Switch	
Key Being Initialized Please Wait	405	Latched (example)	413	the Ignition Off Before Exiting	410

Vehicle Rising Please Wait Vehicle Rising Warning Tire Malfunction	434 434 445	Active Lane Keeping Assist Inoperative Active Steering Assist Currently Unavailable Due to Multiple Emer-	431	Blind Spot Assist Currently Unavailable See Operator's Manual Blind Spot Assist Inoperative	429 430
(!) Wheel Sensor(s) Missing	443	gency Stops	428	Cannot Start Engine See Operator's	
Active Blind Spot Assist Currently		Active Steering Assist Currently		Manual	414
Unavailable See Operator's Manual	430	Unavailable See Operator's Manual	427	Check Brake Pads See Operator's	
Active Blind Spot Assist Inoperative	430	Active Steering Assist Inoperative	427	Manual	424
Active Brake Assist Functions Cur-		Adaptive Highbeam Assist Camera		Check Tire Pressure Soon	446
rently Limited See Operator's Manual	438	View Restricted See Operator's Man-		Check Tire Pressure Then Restart Run	
Active Brake Assist Functions Limited		ual	409	Flat Indicator	447
See Operator's Manual	439	Adaptive Highbeam Assist Currently		Cruise Control Inoperative	425
Active Distance Assist Currently		Unavailable See Operator's Manual	408	Cruise Control Off	425
Unavailable See Operator's Manual	426	Adaptive Highbeam Assist Inoperative	408	Decrease Speed	446
Active Distance Assist Inoperative	426	Apply Brake to Shift from 'P'	416	Driver's Door Open & Transmission	
Active Distance Assist Now Available	427	Apply Brake to Shift to 'R'	417	Not in P Risk of Vehicle Rolling Away	417
Active Lane Keeping Assist Camera		Auxiliary Battery Malfunction (red dis-		Front Passenger Airbag Disabled See	
View Restricted See Operator's Man-		play message)	419	Operator's Manual	402
ual	432	Auxiliary Battery Malfunction (white		Front Passenger Airbag Enabled See	
Active Lane Keeping Assist Currently		display message)	418	Operator's Manual	402
Unavailable See Operator's Manual	431	Beginning Emergency Stop	428		

Hazard Warning Flashers Malfunction- ing Head-up Display Currently Unavaila-	409	Radar Sensors Dirty See Operator's Manual Reversing Not Possible Service	439	Traffic Sign Assist Camera View Restricted See Operator's Manual
ble See Operator's Manual	410	Required	418	ble See Operator's Manual
Head-up Display Inoperative	410	Run Flat Indicator Inoperative	447	Traffic Sign Assist Inoperative
Mercedes me connect Services Limi-		Service Required Do Not Shift Gears		Transmission Malfunction Stop 418
ted See Operator's Manual	440	Visit Dealer	417	Wiper Malfunctioning 413
N Permanently Active Risk of Rolling Away	417	Stop Vehicle Leave Engine Running Wait Transmission Cooling	418	Distance control, Active Distance Assist DISTRONIC, DISTRONIC
Only Shift to 'P' when Vehicle is Sta-		Tire Press. Monitor Currently Unavail-		Distance warning, Active Brake Assist 175
tionary	416	able	443	DISTRONIC
Parking Assist and PARKTRONIC Inop-		Tire Press. Monitor Inoperative	443	Activating
erative See Operator's Manual	435	Tire Pressure Monitor Inoperative No		Active Distance Assist
Parking Assist Maneuvering Assis-		Wheel Sensors	443	Door
tance Restricted See Operator's Man-		Tires Overheated	445	Emergency key 69
ual	435	To Deselect P or N, Depress Brake		Opening (from the inside)
Place the Key in the Marked Space		and Start Engine	417	Unlocking (inside)
See Operator's Manual	406	To switch engine off, press and hold		Door operating unit
PRE-SAFE Inoperative See Operator's		Start/Stop button for at least 3 secs.		Function seat
Manual	403	or press 3 times	414	DOT, Tire Identification Number (TIN) 370

Double pulse Accelerator pedal	144	EBD (Electronic Brakeforce Distribution)	159	Drive program display
Drinking and driving		ESP® (Electronic Stability Program)		Function138
Drive Away Assist, Drive Away Assist	202	Hill start assistHOLD function	160 159	Operating (button)
Drive position DIRECT SELECT lever	142	OverviewRadar and ultrasonic sensors	156	Showing operation feedback
Engaging		STEER CONTROL	159	E
Drive program display	139	Traffic Sign Assist	180	E10
Driver's display Head-up display	208	Driving system DYNAMIC BODY CONTROL	187	Easy entry feature 97, 98 Easy exit feature 97, 98
Driver's seat Adjusting electrically Easy entry and exit feature		Driving tips Drinking and driving Optimized acceleration	133 132	EBD, Electronic Brakeforce Distribution 159 ECO display
Manual and electrical adjustment Seat heating	87	Drowsiness detection, ATTENTION ASSIST Duplicate key		ECO start/stop button Automatic engine start/stop
BASCameras	1 <i>7</i> 5 1 <i>6</i> 1 1 <i>5</i> 7	DYNAMIC BODY CONTROL Suspension Dynamic handling control system, ESP® DYNAMIC SELECT Configuring drive program I Displaying engine data Displaying vehicle data	187 157 140 140	ECO start/stop function 136 Automatic engine start 136 Automatic engine stop 136 Function 136 Switching off/on 137 Electric parking brake 4 Automatic 151 Emergency braking 153

Manual	153	Engine		Environmental protection	21
Electrical fuses	354	Emergency operation mode		Environmentally friendly driving	. 21
Electronic Stability Program, ESP®	157	Emergency start Engine number		Error message	
Emergency		Starting assistance	345	Instrument cluster	400
First-aid kit (soft sided)	337	Switching off, start/stop button		ESC, Electronic Stability Control	157
Overview of the help functions Reflective safety vest Warning triangle	336	Engine data Displaying DYNAMIC SELECT	140	ESP®, Electronic Stability Program Activating/deactivating Crosswind Assist	159 158
Emergency braking Electric parking brake/hand brake	151	Engine number	390	Function	157
. •	131	Engine oil		Event Data Recorder	
Emergency key Door	69	Additives		Exiting a parking space	194
Emergency operation mode Starting the vehicle		Capacity Checking the oil level using the oil dipstick		Exterior lighting Care	332
Emergency release Trunk lid (from inside)		Checking the oil level using the onboard computer	325	Exterior mirrors Parking position	122
Emergency stop assistant, Active Emergency Stop Assist	173	MB-Freigabe or MB-Approval Quality Refilling	395	F Factory settings	
Emergency Tensioning Devices Deployment	37	Entering characters, MBUX multimedia system		MBUX	244
ENERGIZING COMFORT Overview of programs Starting the program		Function/notes On the touchpad		Calling up Deleting	

Moving	230229337	Free software, Open Source Software Frequencies Two-way radio Front airbag (driver, front passenger) Front fog lights Front headlamps	389 . 43 113	Fuses Cockpit Engine compartment Front passenger footwell Fuse assignment diagram Notes Trunk	355 356 354 354
Flacon		Front passenger air bag deactivation system, PASSENGER AIR BAG OFF	. 46	G	
Flat tire Changing a wheel	338 337 339	Front passenger seat Adjusting electrically	. 89 87	Garage door opener Clearing the memory Opening/closing a door Garage door openers Programming buttons Resolving problems Synchronizing the rolling code	15°
Floor mats Foil covering On camera/sensors Radar and ultrasonic sensors	110155155	Gasoline quality	393	Gas station search Starting automatic search Switching the automatic search on/off Using automatic search Gasoline	250 250
Fragrance system Inserting/removing the flacon Perfume vial	126	Fuel filler cap / flap Fuel reserve Function seat	394	Gearshift Automatic transmission	143

133	Adjusting display elements (on-board		Hood	
21	computer)	209	Opening/closing	322
144	Function	208	Hotspot Setting up (Wi-Fi)	237
151	puter)	209		300
			Refrigerant	397
357	Headlamp flashing	113	Vehicle	390
. 73	Headlamps	440	Immobilizer	. 82
114		–	Indicator/warning lamps	450
114		333	Individual drive program	
		104	Configuring	140
	Seat	94	Inside rearview mirror, Rearview mirror	121
. 90	Help call		Installing Snow chains Tires	384
209	Hill start assist HOLD function, Roll away protection	160	Instrument cluster Function/notes	206
	21 144 102 151 357 73 114 114 91 90	21 computer)	21 computer)	21 computer)

Function/notes	Internet connection Communication module function Displaying the connection status Information Overview of connection status Restrictions Ionization	295 296 295 296 295	Locking/unlocking the vehicle	6
Active Headiamps	Activating/deactivating (multimedia system) iPhone® Smartphone integration		Lamp Interior lighting Lane change assist, Active Lane Change Assist Lane Keeping Assist, Active Lane	
Interior protection	J Jack	380	Keeping Assist Lane recognition Active Lane Change Assist	
Calculating a route with intermediate destinations	K Key Acoustic locking verification signal KEYLESS-GO Deactivating	64	Lane recognition (automatic) Active Lane Keeping Assist Language, System settings Notes	18 23 23 18

Lig	nting		Load index		Low beam	
	Interior lighting	117	Tires	372	Activating/deactivating	112
Lig	nts		Load-bearing capacity		lubricants	392
	Active headlamps		Tires	372	Luggage	
	Adaptive Highbeam Assist		Loading		Parcel net	106
	Automatic driving lights		Bag hook	105	Securing	
	Combination switch		Cargo tie-down rings	104	Luggage rack	
	Cornering light		Definitions	374		
	Hazard warning lights		Roof luggage rack	106	Lumbar support, Lumbar support	90
	High beam	113	Loading guidelines	99	М	
	Low beam		Loading information table			
	Parking lights		-	303	Maintaining a safe distance	
	Rear fog light		Loads	0.0	Active Distance Assist DISTRONIC	167
	Setting the surround lighting		Securing	. 99	Maintenance, ASSYST PLUS	
	Standing lights		Locking an external device (child safety		Vehicle	. 24
	Switch-off delay time		lock)	239	Malfunction	
	Turn signal light		Locking/unlocking		Restraint system	37
ı i			automatic locking	. 69	Maneuvering assistance	
	ited Warranty	30	Doors (from the inside)	67	Activating/deactivating	203
Live	Traffic Information	0.40	Emergency key	. 69		200
	Displaying subscription information		KEYLESS-GO	. 67	Maneuvering assistant, Cross traffic	
	Displaying the traffic map		Loud sound		(warning), Shunting support	202
	Displaying traffic incidents		PRE-SAFE® Sound	50	Cross Traffic Alert Drive Away Assist	
	Extending a subscription			_	Drive Away Assist	202
	Issuing hazard alerts	205				

				Index	483
Map Avoiding an area	268	Maximum full-stop braking, Brake Assist System	157	Information Overview	
Avoiding an area (overview) Changing an area Deleting an area	269	Maximum load rating Maximum permissible load		Media mode Activating	300
Displaying online map contents		Calculation example Determining	366	Media search Starting	
Displaying the map version		Maximum speeds	399	Medical aids	28
Displaying the next intersecting street Displaying the satellite map Displaying the traffic map Displaying weather information	271 264	Maximum tire pressure MBUX, Multimedia system Configuring drive program I		Memory function Head-up display Outside mirrors	99
	270	MBUX multimedia system Calling up applications	229	SeatSteering wheel	
OverviewSelecting POI symbols	265	Factory setting	244 230	Menu (on-board computer) Head-up display Overview	
Selecting the map orientation	267	Mechanical key Inserting/removing	. 65	Mercedes me App Activating on-demand features	23
Setting the map scale automatically Updating		Media Searching		Mercedes me calls Arranging a service appointment	290
Map and compass Overview	265	Media display Notes		Calling the Mercedes-Benz Customer Center Calling the Mercedes-Benz Customer	289
Massage program	92	Media Interface Activating	307	Center after automatic accident or breakdown detection	289

Information	288 288 290	Using Message memory Messages Voice commands (Voice Control System)	400	ENERGIZING COMFORT program (overview) Overview Starting the ENERGIZING COMFORT program	225
Accident and Breakdown Management Information Transferred data Mercedes-AMG vehicles		Mirrors Mirror folding function Outside mirrors	123 120	N Navigation Activating	246
Notes Mercedes-Benz Apps Calling up	296	Rearview mirror Mobile phone Notes on wireless charging Mobile phone voice recognition		Displaying/hiding the menu	247 269
Using with voice control	293 292 294	Starting	277 390	Navigation announcements Activating/deactivating Repeating Switching audio fadeout on/off To adjust the volume	260 261 260
Manual emergency call Overview Mercedes-Benz GenuineParts Mercedes-Benz Link Connecting Ending Overview	293 . 21 283	Multifunction steering wheel Operation Multimedia system Activating/deactivating standby mode Central control elements Display settings	154 226	Near Field Communication (NFC), NFC Connecting the mobile phone to the multimedia system Information Switching Bluetooth® audio equipment Switching mobile phones Using a mobile phone	276 276 311 276

Neutral Engaging	Opening/closing a door Opening/closing a garage door Operating fluids Additives Brake fluid	151	Warning lamp Overhead control panel Overview	
Occupant safety	Coolant Engine oil	396 394	Paddle shifters Steering wheel paddle shifters	143
On-board computer, Computer, Operating system Displaying the service due date		393 397 396	Paint code Panic alarm, Alarm	
Menu overview	Operating safety Declaration of conformity (wireless vehicle components)		Arming/disarming Park position DIRECT SELECT lever Engaging	140
tics connection	Information Operator's manual Operator's Manual digital	22	Parking, PARKTRONIC Electric parking brake	
On-demand feature	Optimized acceleration		Parking aid, Active Parking Assist, PARKTRONIC	194
Online services 32 Open Source Software, Free software 34	Outside mirrors Automatic anti-glare mode Automatic mirror folding function	121 123	Parking Assist, Active Parking Assist Parking Assist PARKTRONIC	198
Opening the tailgate using your foot HANDS-FREE ACCESS		181 120 99	Activating Adjusting warning tones Function Side impact protection	198 194

Switching off	197	POI		a	
Parking assistance systems, PARKTRONIC	194	Selecting	250	QR code rescue card	. 30
Parking brake, Electric parking brake Electric	151	POI symbols Selecting	267	Qualified specialist workshop	
Parking for an extended period		Point of resistance Accelerator pedal	144	R	
Parking lights	112	Power supply		Radar and ultrasonic sensors	155
Parking position Exterior mirrors Storing the position of the front-	122	Start/stop button		Radio Activating Activating/deactivating radio text	
passenger outside mirror using		Power washers	329	Calling up the station list	
reverse gear	123	PRE-SAFE®, Anticipatory occupant pro-		Deleting stations	313
PARKTRONIC Adjusting warning tones	198	tection, Occupant safety, Preventative occupant protection system		Direct frequency entry Displaying information	314
Payload Calculation example Determining the maximum		Function PRE-SAFE® Sound Reverting measures	. 50	Displaying radio text	313 313
Permitted towing methods		PRE-SAFE® PLUS Function	. 50	OverviewSetting a channel	312
Pets in the vehicle, Occupant safety	. 62	Previous destinations		Sotting the wavehand	212
PIN protection System PIN protection	240	Selecting	250	Setting the waveband	313
Playback options Selecting	303	Pulling away Optimized acceleration	132	Switching the HD Radio® function on/off	

Voice commands (Voice Control System)	218	Refueling Fuel	145	FunctionalityLimited protection	37 36
Radio equipment approval numbers	389	Refueling the vehicle Regulatory radio identification Indonesia Israel Small components		Malfunction Protection Self-test Warning lamp Reverse gear DIRECT SELECT lever	37 36 37 37
Windshield wiper Reading lamp Interior lighting Rear fog light	117	Cooling/heating the vehicle interior Starting the vehicle	131	Roadside Assistance (breakdown) Roll away protection, HOLD function	141 24
Rear view camera 360° Camera		Removing/installing wheel trim Replacement key, Duplicate key		Roller sunblind Sliding sunroof	79
Care Function Opening the camera cover Setting favorites (360° Camera)	332 189 194	Reporting safety defects		Roof luggage rack LoadingSecuring	106 106
Rear window heater	124	Resetting MBUX reset function Responsibility Driving safety systems		Alternative route	254 256
Reflective safety vest	336	Restraint system, Occupant safety Basic instructions for children Function in the event of an accident	51	Planning	254 256

Changing direction Destination reached From an off-road location Lane recommendations Notes Off-road To an off-road destination. Route-based speed adaptation DISTRONIC	252 261 258 259 261 259 257 261 261	Satellite map. Satellite radio Activating/deactivating TuneStart™ Adding a channel to Smart Favorites Deleting a channel Displaying EPG information Displaying service information Information Information about Smart Favorites and TuneStart Logging in Moving a channel Music and sport alerts function Overview Pause and playback function Restrictions Selecting a category Selecting a channel	317 317 316 316 317 314 317 314 316 315 317 314 315	Adjusting electrically	2 3 4 0 7 9 2
Route-based speed adjustment Setting		Setting music and sport alerts Setting the parental control	316 316	Automatic tightening	
Run-flat characteristics, MOExtended tires S Safety systems Overview		Storing a channel	316 314	Fastening	1 8 2

Seat belt adjustment Activating/deactivating Function Seat belt extender Seat belt warning Seat belts	. 42 41	Self-test Automatic front passenger airbag shut off Sensors Service center Service interval display, ASSYST PLUS	332 27	Side windows Convenience closing	. 77 77 75 77
Activating/deactivating seat belt adjustment Reduced protection Seat belt extender	39	Service station search Starting automatic search	257	Size designation Tires Skid chains	372
Seat heating	. 94 . 89	Setting a speed	235 235 240	Sliding sunroof Automatic functions	79 77 79 77
passenger compartment)	275 275 143	Gearshift recommendation	143 143 143 157 43	Rain closing function SmartKey Battery Deactivating a function Function Key ring attachment Mechanical key	. 65 64 63 65

Panic alarm	Spare wheel Emergency spare wheel		Starting assistance	130
Snow chains	Specialist workshop Speed	27	Remote Online	
12 V (front center console)	Storing, cruise control	167	Starting-off aid Hill start assist Optimized acceleration	
Software update Performing	Speed rating Tires Standing lights	372	Station Deleting Direct frequency entry Moving	313
Sound PRE-SAFE® Sound	Start-off assist, Optimized acceleration Start/stop button	132	SettingStoring	313
Wheels/tires	Parking the vehicle Starting the vehicle Switching on the power supply/vehicle		Station list Calling up Station presets	
Adjusting treble, mid-range and bass settings	Start/stop function, ECO start/stop function		ManagingStation search	
Calls up the sound menu	Starter battery charging, Remote Online	130	Steer Assist, STEER CONTROLSTEER CONTROL, Steer Assist	
Spare parts, Mercedes-Benz GenuineParts 21	Remote OnlineStart/stop button	131 129	Steering wheel Adjusting electrically	. 96

				Index	49
Buttons	95 99 96 96	Surround view camera Care	188 187	MBUX reset function Setting the distance unit Setting the time and date automatically Setting the time zone Setting the time/date format Transmission of the vehicle position	234 234 235 235
Steering-wheel buttons	140	AIRMATIC	188	Т	
Overview	211	Switch-off delay time		Tailpipes	
Stop and go		From outside		Care	332
ECO start/stop function	137	Switching air-recirculation mode on/off		Tank content	
Stopping Parking the vehicle	147	Switching loudness normalization on/off		Fuel Reserve	
Stowage spaces		Advanced sound system	320	Technical data	
Armrest		Switching the surround sound on/off Burmester® surround sound system	319	Component-specific information Information	
Center console (front) Door	102	Synchronization function	017	Regulatory radio identification	
Glove box		Activating/deactivating (control panel)	125	Regulatory radio identification - Indo-	
Substances hazardous to health	. 24	System PIN protection		nesia and Israel	
Sulfur content	393	Activating/deactivating	240	Vehicle dimensions	390
Surround lighting, Locator lighting Setting	117	System settings Activating/deactivating system PIN protection	240	Telephone Activating functions during a call Call and ringtone volume	

Traction grade Tread wear grade Tire pressure Checking Checking manually Maximum Restarting the tire pressure loss warning system Tire pressure loss warning system, function Tire pressure table TIREFIT kit Tire pressure loss warning system Function Restarting	369 362 361 371 364 363 360 339 363	Tire-change tool kit Overview	339 337 372 357 362 361 374 370 384	Size designation Snow chains Speed rating Storing Temperature grade Tire and Loading Information placard Tire pressure loss warning system,	364 379 370 372 358 369 369 369 369 369
Tire pressure monitor Function	361	Load index Load-bearing capacity	372 372 371	Traction grade Tread wear grade	369 369
Tire pressure monitoring system Restarting	363	Maximum pressure	371	Unusual handling characteristics Top Tether	
Tire pressure table	360 369 339	MOExtended Noise Notes on installing Removing Removing/installing hub cap Removing/installing wheel trim	357 376 384 381	Touch Control MBUX On-board computer Setting the sensitivity	22 20

Touchpad Activating/deactivating haptic opera-		Displaying traffic incidents Extending a Live Traffic Information		Transmission positions DIRECT SELECT lever	140
tion feedback Operating Reading the handwriting recognition	228 227	subscription Issuing hazard warnings Live Traffic Information	265	Transporting Vehicle	351
aloudSelecting a station and track		Overview	263	Tread wear grade Trunk lid	369
Setting the sensitivity		Traffic Sign Assist Function	180	Activating/deactivating the tailgate opening height restriction	
Tow bar system Towing away		Setting Trailer drawbar, Pulling/towing, Tow		Emergency release (from inside) HANDS-FREE ACCESS	. 75 73
Tow-away protection		bar system Transferred vehicle data		Opening/closing Switching the separate locking fea-	
Towing methods		Android Auto Apple CarPlay [®]		ture on/off	
Towing away Towing eye Towing methods	353	Transmission Automatic transmission (problem) Engaging drive position	142	Logging out	298
Track Selecting (audio mode)		Engaging neutral Engaging reverse gear Selecting park position	141	Tuneln, Internet radio Calling up	297
Traction grade Traffic information Displaying the traffic map		Transmission position display	140		298 297 298

Selecting and connecting a station Turn signal indicator Turn signal light Two-way radios Frequencies Installation Transmission output	113 113 389 388 389	User profile 242 Creating 242 Importing/exporting 242 Options 242 Setting 241 V Vehicle Activating, Remote Online 131 Activating/deactivating standby mode 154	QR code rescue card
Units of measurement Setting	240 . 64 242 243 243 243	Automatic locking. 69 Collision detection. 153 Correct use. 28 Data storage. 30 Diagnostics connection. 26 Emergency key. 69 Equipment. 22 KEYLESS-GO. 67 Limited Warranty. 30 Locking/unlocking (from inside). 67 Locking/unlocking emergency key. 69 Lowering. 385 Maintenance. 24 Medical aids. 26 Parking for an extended period. 154	Voice commands for the Voice Control System

Weights Wheelbase	399 398	Vehicle tool kit TIREFIT kit		Audible help functions
Vehicle dimensions	398	Towing eye		Improving voice quality
Vehicle emergency start	353	Ventilating, Convenience opening	. 77	Language setting
Vehicle equipment	22	Ventilation		Message voice commands
Vehicle identification number, VIN	390	Vents	127	Multifunction steering wheel (opera-
Vehicle identification plate Model type Paint code VIN Vehicle interior Cooling/heating (Remote Online) Vehicle key	390130	Video mode Activating Activating/deactivating full-screen mode Overview Settings VIN, Vehicle identification number Engine compartment	305 305 306	tion) 211 Navigation voice commands 214 Operable functions 212 Operating safety 211 Radio voice commands 218 Switch voice commands 213 Telephone voice controls 218 Text message voice commands 221
Vehicle location Switching transmission on/off Vehicle operation outside the USA or Can-	235	Identification plate	390	Types of voice commands
ada	. 23	Removing condensation from the win-		W
Vehicle sensors	155	dows	125	Warning system, ATA 83
Vehicle start Emergency operation mode Remote Online Start/stop button	131	Voice command types (Voice Control System) Voice Control System Application specific voice commands		Warning triangle

Removing/installing hub cap Removing/installing wheel trim		Widescreen cockpit instrument display Instrument cluster	. 11
Replacing		Window curtain airbag 43 Overview	. 10
Rotating Selection Size designation	376	Windows Care	
Snow chainsSpeed rating	358 372	Defrosting	2
Storing Temperature grade Tire and Loading Information placard	369	Windshield, Windshield Defrosting	
Tire characteristics Tire labeling Tire pressure	372 369	Windshield washer fluid	
Tire pressure monitor Tire Quality Grading	361 369	Windshield wiper Activating/deactivating	
TIREFIT kit Traction grade Tread wear grade	369	Windshield wipers Replacing the wiper blades	
Unusual handling characteristics		Winter operation Snow chains	
Vi-Fi, System settings, Wi-Fi Overview Setting Setting up a hotspot	236	Wiper blades 332 Care	



