

MODEL 207, 212, 218

Shows model 212.002

A1p13 Multifunction display


S110s1 Scroll forward/back button

S110s3 System selection button

S110s4 "Back" and voice control system OFF button

S110s6 OK button

S111s3 Accept/terminate phone call button

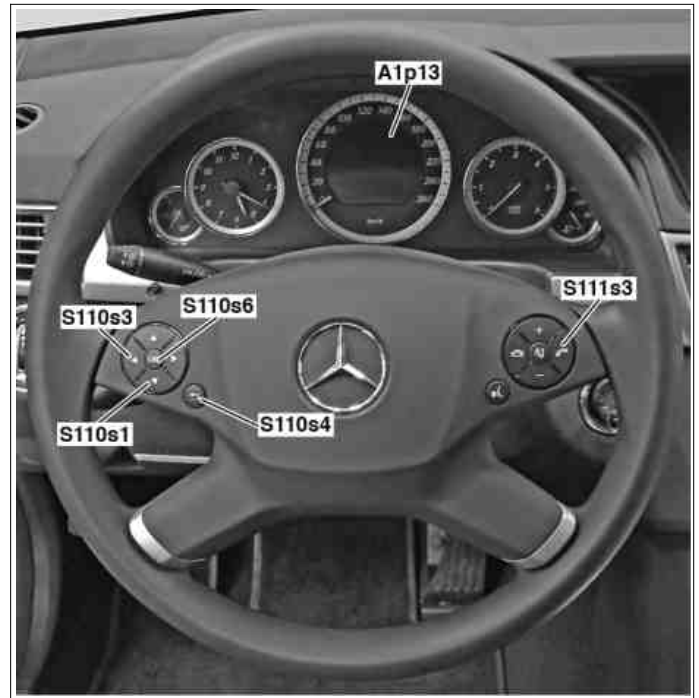

P54.30-9911-12

	Resetting		
1	Close engine hood	Model 207, 212 Model 218	AR88.40-P-1000EW
2	Close doors and trunk lid or liftgate		
3	Turn transmitter key in electronic ignition lock control unit to position "1"	i The standard display (kilometer counter) must appear in the multifunction display (A1p13); if necessary, repeatedly press the scroll forward/back button (S110s1).	
4	Press the system selection button (S110s3) repeatedly until the menu item "trip" with highlighter is stored in the multifunction display (A1p13)	i "Trip" remains selected for approx. 5 s. Operation step 5 must be carried out within this time.	
5	First press and hold down Accept and end phone call button (S111s3), then within 1 s also press OK button (S110s6) and hold down for approx. 5 s	i The Workshop menu with the tabs "Vehicle data", "Dynamometer test" and "ASSYST PLUS" appears in the multifunction display (A1p13).	
6	Press scroll forward/back button (S110s1) repeatedly until "ASSYST PLUS" is highlighted and confirm selection by pressing OK button (S110s6)	i The indexes "Service data" and "Full service" (A1p13) appear in the multifunction display.	
7	Press scroll forward/back button (S110s1) to highlight "Full Service" and confirm selection by pressing OK button (S110s6)	i The current service items appear in the multifunction display (A1p13).	
8	Repeatedly press scroll forward/back button (S110s1) until "Confirm Serv." is highlighted in multifunction display (A1p13) and confirm selection by pressing OK button (S110s6)	i The oil selection or "Service carried out?" appears in the multifunction display (A1p13).	
9	Select specification of used engine oil using scroll forward button of scroll forward/back button (S110s1) and confirm selection by pressing OK button (S110s6)	Vehicles with spark ignition engine and oil selection. i To achieve the maximum service interval, engine oil which complies with Specifications for Operating Fluids, Sheet 229.5 must be used and confirmed.	
10	Press scroll forwards and backwards button (S110s1) repeatedly until "Yes" is highlighted and confirm selection with the n/ (S110s6) button	i "No take-back possible" appears in the multifunction display (A1p13).	
11	Press scroll forwards and backwards button (S110s1) repeatedly until "Configuration" is highlighted and confirm selection with the n/ (S110s6) button	i "Full service carried out" appears in the multifunction display (A1p13).	

12	Press the n/ (S110s6) and repeatedly press "Back" and VCS OFF (S110s4) button until the multifunction display (A1p13) shows the standard display (kilometer counter)		
13	Turn transmitter key in electronic ignition lock control unit to position "0"		